



Visualisation; Diagnostics

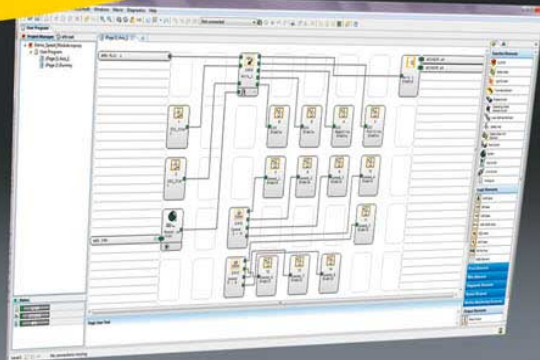

Easy to Configure

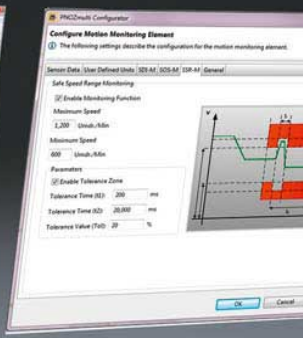

Programming IEC



## Technical Catalogue PNOZmulti

Version 2015-11

**PILZ**  
THE SPIRIT OF SAFETY

- ▶ Configurable safety systems PNOZmulti
- ▶ Configurable small control systems PNOZmulti Mini
- ▶ Configurable control systems PNOZmulti 2



<b>Introduction</b>	
<b>Basics</b>	
System description	4
Installation	17
System expansion	29
<b>Selection guide</b>	
Configurable safety systems PNOZmulti	55
Configurable small control systems PNOZmulti Mini	60
Configurable control systems PNOZmulti 2	63
<b>PNOZmulti products</b>	
Base units	69
Input modules	155
Output modules	172
Analogue input module	237
Link modules	247
Speed monitors	272
Fieldbus modules	384
<b>PNOZmulti Mini products</b>	
Base units	497
Link modules	566
Communication modules	589
Fieldbus modules	605
<b>PNOZmulti 2 products</b>	
Base units	665
Input module	703
Input and output modules	710
Motion monitoring modules	733
Link modules	795
Communication modules	817
Fieldbus modules	830
<b>Software tool</b>	
PNOZmulti Configurator	903
<b>Accessories</b>	
Software, chip card	910
Cable, adapter	912
Connectors, terminals	916



Many functions, one solution – the configurable systems PNOZmulti bridge the gap between classic safety relays and programmable control systems. The configurable systems PNOZmulti are convincing, with numerous benefits. The software tool PNOZmulti Configurator, for example, impresses with its simple handling: install, open, work intuitively. You also have the widest range of diagnostic options – for high plant availability and low downtimes. The variety of fieldbus and communication options is a huge benefit with PNOZmulti. It means the system can be used independently from the higher level operational control system. Various expansion modules offer maximum flexibility of application.

This technical catalogue describes the structure of the three configurable systems PNOZmulti:

- ▶ **Configurable safety systems PNOZmulti**
- ▶ **Configurable small control systems PNOZmulti Mini**
- ▶ **Configurable control systems PNOZmulti 2.**

The units in the PNOZmulti systems are described in a detailed data sheet, which will help you with module selection and enable project configuration.

**Please refer to the units' operating manual for information on installation and operation.**

Further information on the systems can be found in the following documents:

- ▶ Installation Manual PNOZmulti
- ▶ Safety manual PNOZmulti
- ▶ Communications interfaces PNOZmulti/PNOZmulti 2
- ▶ Special Applications PNOZmulti

## System description

---

## System description

---

---

<b>Contents</b>	<b>Page</b>
Overview	6
Hardware	9
Software	13
Diagnostics	14

## System description

### Overview

---

#### Configurable systems PNOZmulti

The configurable systems PNOZmulti are suitable for implementing multiple safety functions on a plant or machine. Thanks to its modular structure, PNOZmulti can be adapted to the size of the plant and machinery. With a large number of the most diverse modules and a variety of base units, you can design your application with the utmost flexibility. 3 different PNOZmulti systems are available, depending on your requirement.

▶ **Configurable safety systems PNOZmulti**

The configurable safety systems PNOZmulti are the classic units among the configurable systems. They are suitable for use from four safety functions upwards. The systems are characterised by a comprehensive range of module and communication options.


▶ **Configurable small control systems PNOZmulti Mini**

The configurable small control systems PNOZmulti Mini are mainly used from three safety functions upwards. The small control systems have a lower number of expansion modules than PNOZmulti and PNOZmulti 2.

▶ **Configurable control systems PNOZmulti 2**

The configurable control systems PNOZmulti 2 are suitable for use from four safety functions upwards. They accommodate the full function range of the "classic" PNOZmulti on 45 mm width. The base unit has an illuminated display - for even faster diagnostics.

#### Modular structure

- ▶ The configurable systems PNOZmulti consist of a base unit and various expansion modules. The expansion modules that can be connected depend on the type of base unit (see section entitled [System expansion](#)  29).

The units from the three systems **Configurable safety systems PNOZmulti**, **Configurable small control systems PNOZmulti Mini** and **Configurable control systems PNOZmulti 2** are not interchangeable.

- ▶ The base unit has various inputs and outputs and is also fully functional without expansion modules.
- ▶ The expansion modules supplement the base unit with additional inputs or outputs.

#### Configuration in the PNOZmulti Configurator

- ▶ The system's function is defined via the PNOZmulti Configurator.
- ▶ The PNOZmulti Configurator is a graphic tool which is used to define the functions of the units. Various safety functions are available, such as emergency stop, two-hand monitoring, safety gate monitoring and drive monitoring. With the correct circuitry it is possible to achieve categories up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061.



## System description

### Overview

---

- ▶ Using predefined symbols, a simple circuit diagram shows how the units' inputs and outputs should be connected. This circuit diagram is then downloaded to the base unit.
- ▶ The system can be expanded or the functions modified at any time.
- ▶ Frequently used parts of the circuit diagram can be combined into macro elements, stored in the macro library and reused.

#### Inputs


- ▶ The configurable systems PNOZmulti have semiconductor inputs for safety-related and standard applications.
- ▶ The inputs for standard applications can also be set via the integrated interface or via fieldbus modules (e.g. PROFIBUS-DP, CANopen, ...).
- ▶ Decentralised input modules provide safe inputs for use up to IP67.
- ▶ Analogue input modules can be connected to the base units of the configurable safety system PNOZmulti, thereby providing safe analogue inputs. The input signals are converted into digital signals.  
For standard applications, the exact analogue values are made available to the base unit to forward to a fieldbus.

#### Outputs

- ▶ The configurable systems PNOZmulti have various outputs.
  - Relay safety outputs
  - Semiconductor safety outputs
  - Semiconductor outputs for standard applications
- ▶ The safety outputs use semiconductor technology, require no maintenance and are non-wearing; they are therefore suitable for applications with frequent operations or cyclical functions. They can be used for 24 VDC applications.
- ▶ Safe semiconductor outputs with advanced fault detection can also be configured for the base units PNOZmulti Mini. These single-channel semiconductor outputs can be used to achieve a higher level of safety.
- ▶ The relay safety outputs are suitable for less frequent operations, but they have a higher breaking capacity and can be used for AC applications.
- ▶ The outputs for standard applications can also be evaluated via the integrated interface or via fieldbus modules (e.g. PROFIBUS-DP, CANopen, ...).

## System description Overview

---

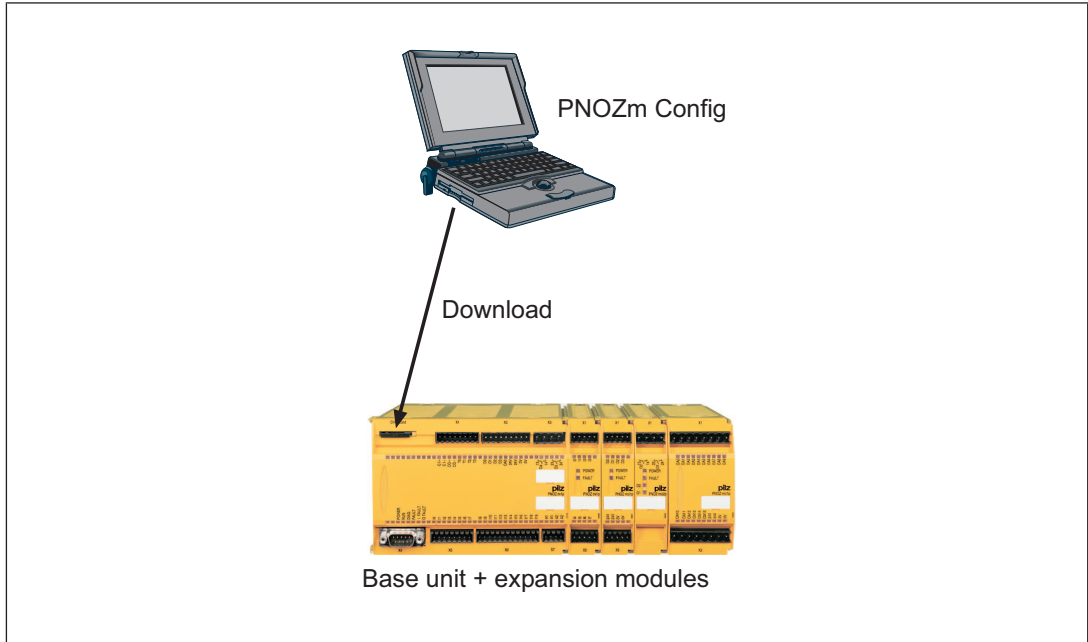

## System description

### Hardware

---

#### Structure of the configurable control system

The configurable control system consists of the base unit and expansion modules. Depending on the unit type, a base unit will have:

- ▶ Inputs
- ▶ Relay outputs
- ▶ Safe semiconductor outputs
- ▶ Outputs for standard applications
- ▶ Cascading input
- ▶ Cascading output

The number of inputs and outputs can be increased at any time using the expansion modules. The modules are linked via a jumper. The system is configured using the PNOZmulti Configurator. Special expansion modules enable data to be exchanged via a fieldbus (non-safety-related) or safe speed monitoring, for example.

# System description

## Hardware


### Operation of the units

The PNOZmulti Configurator generates a project file which is downloaded to the base unit; there it defines

- ▶ Which safety functions the inputs are to carry out, e.g. E-STOP monitoring, safety gate monitoring
- ▶ How the inputs are connected to the outputs via logic functions
- ▶ Which output is configured (semiconductor, relay)

The units react the same, irrespective of these functions:

If the start-up condition of the specific safety function is met, there will be a high signal at the output “Out1”. The output signal can be linked via a logic function and is then present as the “Out2” signal at the output on the PNOZmulti unit.

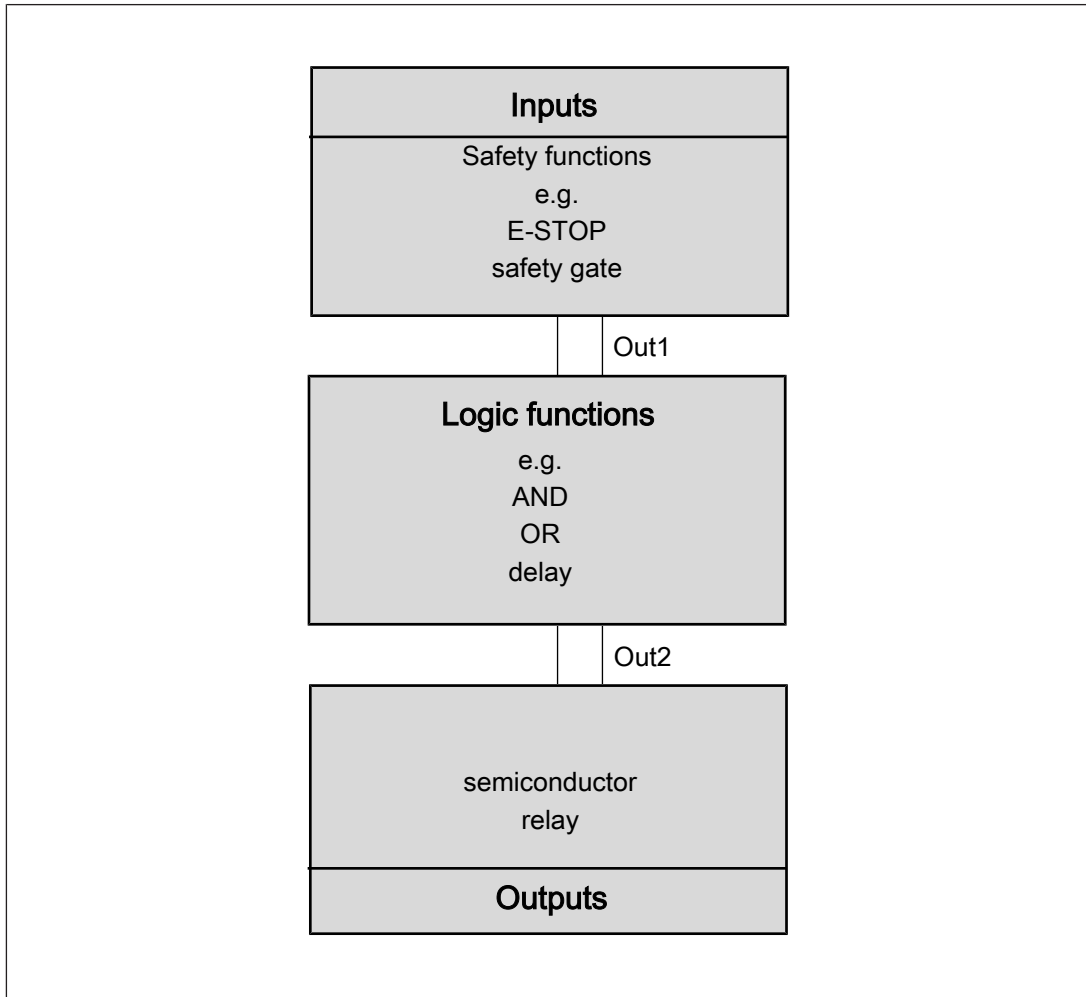



## System description

### Hardware

---

#### Fieldbus modules

The fieldbus modules are used to

- ▶ Read the diagnostic data
- ▶ Set virtual inputs for standard functions
- ▶ Read virtual outputs for standard functions

#### Interfaces

The base units have an interface to

- ▶ Download the project
- ▶ Read the diagnostic data
- ▶ Set virtual inputs for standard functions
- ▶ Read virtual outputs for standard functions
- ▶ Read the error stack.

#### Safety Functions

The PNOZmulti systems have inputs and outputs, which can be used for various safety functions, depending on the system. Special base units and modules may be needed to implement safety functions (see selection guide).

Configurable safety systems PNOZmulti

Monitoring of

- ▶ E-STOP pushbuttons
- ▶ Operating mode selector switches
- ▶ Enabling switches
- ▶ Two-hand pushbuttons
- ▶ Safety gates
- ▶ Light curtains
- ▶ Light beam devices
- ▶ Speeds (modules PNOZ ms... see selection guide)
- ▶ Standstill
- ▶ Muting
- ▶ Analogue input signals (analogue input module PNOZ ma1p)
- ▶ Safety mats
- ▶ Mechanical presses (with base unit PNOZ m2p)
- ▶ Furnaces (with base unit PNOZ m3p)

## System description

### Hardware

---

Configurable small control systems PNOZmulti Mini

Monitoring of

- ▶ E-STOP pushbuttons
- ▶ Operating mode selector switches
- ▶ Enabling switches
- ▶ Two-hand pushbuttons
- ▶ Safety gates
- ▶ Light curtains
- ▶ Light beam devices
- ▶ Muting
- ▶ Safety mats

Configurable control systems PNOZmulti 2

Monitoring of

- ▶ E-STOP pushbuttons
- ▶ Operating mode selector switches
- ▶ Enabling switches
- ▶ Two-hand pushbuttons
- ▶ Safety gates
- ▶ Light curtains
- ▶ Light beam devices
- ▶ Muting
- ▶ Safety mats
- ▶ Drives (speed/speed range monitoring, direction of movement monitoring, operating stop monitoring)

Various switch types are available for the required safety-related applications. With some switch types it is possible to monitor for simultaneity (see online help for the PNOZmulti Configurator).

## System description

### Software

---

The functions of the PNOZmulti system are defined in the PNOZmulti Configurator software.

#### Procedure

- ▶ First, the required hardware is selected in the PNOZmulti Configurator via drag and drop. Each unit is given a resource label.
- ▶ When all the units are selected, the circuit diagram is created in the user program. The circuit diagram describes the application for which the safety system is to be used. It is here that you determine which inputs are assigned to which safety-related or standard functions.
- ▶ The inputs and/or the results of the safety-related or standard functions can be linked through logic functions. The results of the logic functions or the results of the safety-related or standard functions are channelled to the outputs on the PNOZmulti units.
- ▶ The circuit diagram is generated on a graphical interface. Symbols are provided for the safety-related or standard functions, logic functions and the various output types. These are simply dragged on to a workspace, configured and interconnected.
- ▶ Frequently used parts of the circuit diagram can be combined into macro elements, stored in the macro library and reused.
- ▶ Once the circuit diagram is complete, the data must be saved and downloaded to the base unit. The circuit diagram, unit configuration and all the data that has been entered are stored within a project.
- ▶ When the project is saved, various passwords can be used to protect it from unauthorised access.
- ▶ Once it is saved, the project has to be downloaded to the base unit. To do this, the project data is downloaded on to a chip card. It is either downloaded directly via the communications interface or via a chip card reader.
- ▶ After downloading, a test must be performed to check that the safety devices function correctly.
- ▶ A project or diagnostic configuration can be created in multiple languages.

## System description

### Diagnostics

The PNOZmulti has many options for diagnostics and fault detection:

- ▶ LEDs on the base unit and expansion modules
- ▶ Diagnostic data via the communication interface and via a fieldbus
- ▶ Error stack
- ▶ Diagnostic word in the PNOZmulti Configurator
- ▶ Expanded diagnostic options using a visualisation system, e.g. PMLmicro diag

Only for base units PNOZmulti Mini and PNOZmulti 2

- ▶ Display messages can be configured in the PNOZmulti Configurator

Detailed information on the diagnostic options are available in the document "PNOZmulti communication interfaces".

#### LEDs on the base unit and expansion modules

The LEDs signal

- ▶ Operating states (e.g. "RUN")
- ▶ External and internal errors

The key to the LEDs can be found in the operating instructions supplied with the units.

#### RS232/Ethernet interface

The RS232/Ethernet interface on the configurable control system PNOZmulti is used to transfer diagnostic data to an user program.

#### Diagnostic data

The diagnostic data can be called up via the RS232/Ethernet interface or via a connected fieldbus. All base units that have an Ethernet interface also support Modbus/TCP.

The diagnostic data may only be used for non-safety purposes, e.g. visualisation.

The diagnostic data on PNOZmulti systems is:

- ▶ Version:
  - Product number, device version,
  - Serial number
- ▶ Status of inputs/outputs:
  - Indicates whether inputs and outputs are active or inactive (open/closed)
- ▶ LED status:
  - Indicates the status of the LEDs on the base unit and expansion modules (on/off/ flashes), plus the operating mode (start up, RUN, STOP)
- ▶ Simplified status scan:
  - Shows group messages relating to the safety system: Signal changes, LED status, operating statuses



## System description

### Diagnostics

- ▶ Virtual inputs and outputs:  
Virtual inputs can be set. The status of the virtual inputs and outputs can be scanned.
- ▶ Diagnostic word:  
The diagnostic word contains the status of elements from the user program within the PNOZmulti.
- ▶ Test data:  
To check communication.
- ▶ Data in table form:  
This is structured data (arranged in tables and segments) from the PNOZmulti, as it could also be read via a fieldbus module:
  - Configuration
  - Status of the inputs and outputs
  - Status of LED
  - Diagnostic word
  - Element types

Expanded diagnostic options using a diagnostic terminal, e.g. PMImicro diag. An expanded diagnostic configuration can be created in the PNOZmulti Configurator. The diagnostic configuration enables appropriate event messages to be displayed in the case of:

- ▶ Errors in or on the PNOZmulti:  
Includes the event messages that are triggered when there are errors in or on the PNOZmulti (error stack)
- ▶ Changes in the operating status of the PNOZmulti; messages are triggered when safeguards, inputs, outputs and connection points reach a defined state

PNOZmulti event messages can also be supplemented through additional information, which is helpful during diagnostics. With expanded diagnostics, a display unit (e.g. PMImicro diag) is connected to a PNOZmulti. If an event occurs in or on the PNOZmulti, an event telegram is sent to the display unit. The event telegram is evaluated in the display unit. In most cases, the event message that corresponds to the event is displayed and is entered in the event list. The event message contains a description of the event. A remedy can be displayed for each event message. The remedy describes how to react to the event, in other words, what "actions" to take.

The diagnostic configuration is project-related, i.e. a separate diagnostic configuration is created for each PNOZmulti project. Then the diagnostic configuration is downloaded to the PNOZmulti and to the display unit. The diagnostic configuration is described in detail in the PNOZmulti Configurator's online help.

## System description

### Diagnostics

---

#### Error stack

The error stack on the PNOZmulti contains important information for diagnostics and troubleshooting. The error stack can be read out by the PNOZmulti Configurator. It contains messages and help texts, for example

- ▶ Hardware errors
- ▶ Wiring error
- ▶ Configuration errors
- ▶ Errors in the operation of the interface or fieldbus
- ▶ Errors in the project's user program
- ▶ Messages relating to differences between the programs stored on the PNOZmulti and chip card

#### Diagnostic word

A diagnostic word can be called up for those elements of the PNOZmulti Configurator interface that have the ability to store a status:

- ▶ Online in the PNOZmulti Configurator
- ▶ Via the Ethernet or serial interface on the base unit
- ▶ Via a connected fieldbus

The diagnostic word contains information about a certain element, e.g.

- ▶ Operating states (e.g. switch operated)
- ▶ Error messages (e.g. monitoring time elapsed)

An individual bit from a diagnostic word can be evaluated in the user program of the PNOZmulti Configurator.


## Installation

### General guidelines

---

For detailed information about the installation of the PNOZmulti systems, please read the installation manual for the PNOZmulti.

The position of the expansion modules is defined in the PNOZmulti Configurator. The expansion modules are connected to the left or right of the base unit, depending on the type.

Please refer to the section entitled [System expansion](#) [ 29] for details of the number of modules that can be connected to the base unit and the module types.

Install the expansion modules in the position in which it is configured in the PNOZmulti Configurator. For module selection please refer to the online help for the PNOZmulti Configurator.


## Installation

### Install configurable safety systems PNOZmulti

---

#### Control cabinet installation

- ▶ The control system should be installed in a control cabinet with a protection type of at least IP54. Fit the control system to a horizontal mounting rail. The venting slots must face upward and downward. Other mounting positions could destroy the control system.
- ▶ Use the notches on the rear of the unit to attach it to a mounting rail. Connect the control system to the mounting rail in an upright position, so that the earthing springs on the control system are pressed on to the mounting rail.
- ▶ The ambient temperature of the PNOZmulti units in the control cabinet must not exceed the figure stated in the technical details, otherwise air conditioning will be required.
- ▶ To comply with EMC requirements, the mounting rail must have a low impedance connection to the control cabinet housing.

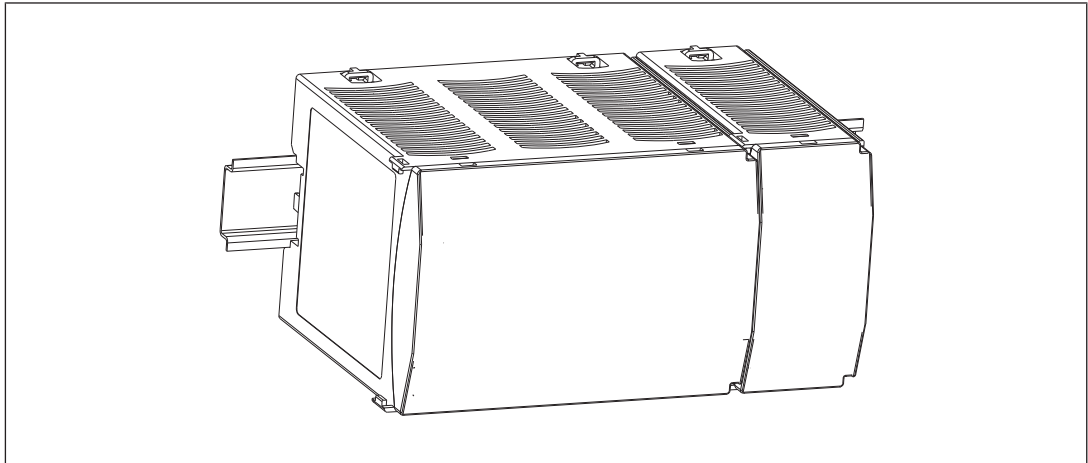




## Installation

### Install configurable safety systems PNOZmulti

#### Install base unit without expansion module

- ▶ The terminator must be fitted to the side of the base unit marked "Termination/Link".
- ▶ Do not fit a terminator on the left hand side of the base unit.

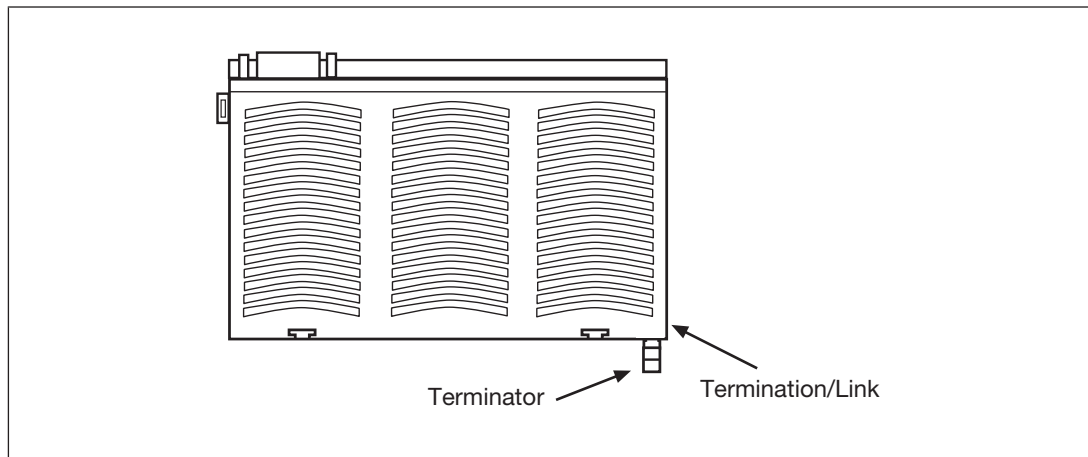

## Installation

### Install configurable safety systems PNOZmulti

#### Connecting the base unit and expansion modules

The position of the expansion modules is defined in the PNOZmulti Configurator. The expansion modules are connected to the left or right of the base unit, depending on the type.


Please refer to the document "PNOZmulti System Expansion" for details of the number of modules that can be connected to the base unit and the module types.

The modules are linked via jumpers.

There are 2 pin connectors on the rear of the base unit.

A max. of 12 expansion modules plus one fieldbus module may be connected to one base unit.

- ▶ Ensure that no terminator is connected.
- ▶ Connect the base unit, the expansion modules and the fieldbus module using the jumpers supplied.
- ▶ The terminator must be fitted to the last expansion module to the right of the base unit.
- ▶ A terminator must not be fitted to the last expansion module to the left of the base unit.

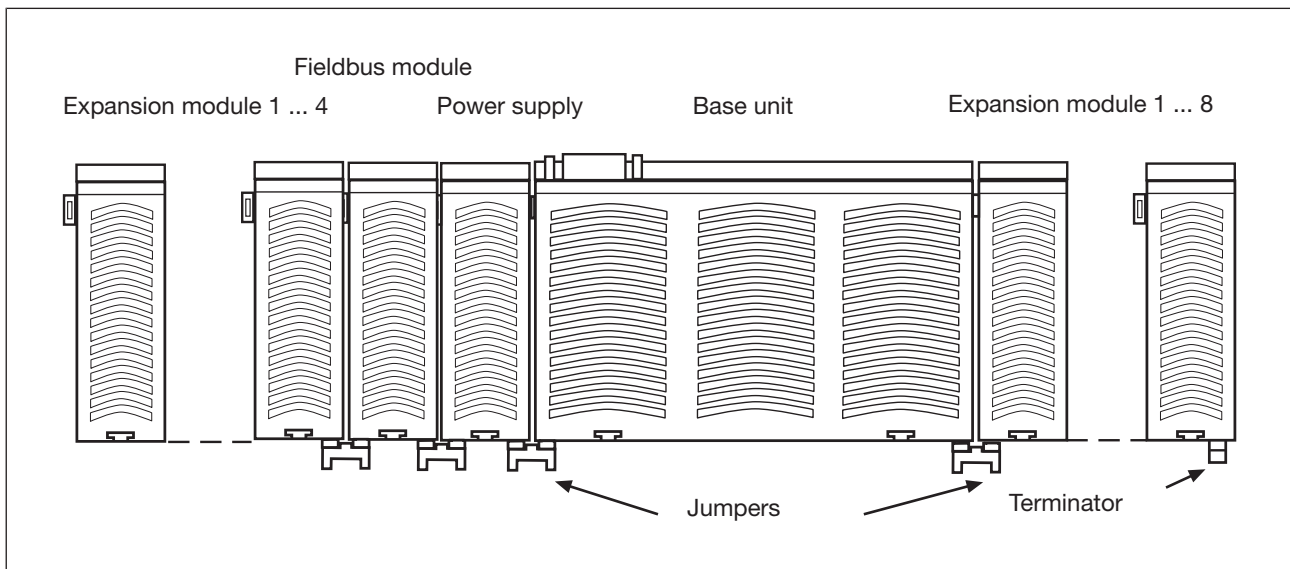

## Installation

### Install configurable small control systems PNOZmulti Mini

---

#### Control cabinet installation

- ▶ The unit should be installed in a control cabinet with a protection type of at least IP54.
- ▶ Fit the safety system to a horizontal mounting rail. The venting slots must face upwards and downwards. Other mounting positions could destroy the safety system.
- ▶ Use the notch on the rear of the unit to attach it to a mounting rail.
- ▶ In environments exposed to heavy vibration, the unit should be secured using a fixing element (e.g. retaining bracket or end angle).
- ▶ Push the unit upwards or downwards before lifting it from the mounting rail.
- ▶ To comply with EMC requirements, the mounting rail must have a low impedance connection to the control cabinet housing.

## Installation


### Install configurable small control systems PNOZmulti Mini

#### Mounting distances

With control cabinet installation it is essential to maintain a certain distance from the top and bottom, as well as to other heat-producing devices (see diagram). The values stated for the mounting distances are minimum specifications.

The ambient temperature in the control cabinet must not exceed the figure stated in the technical details. Air conditioning may otherwise be required.

Mounting distances:

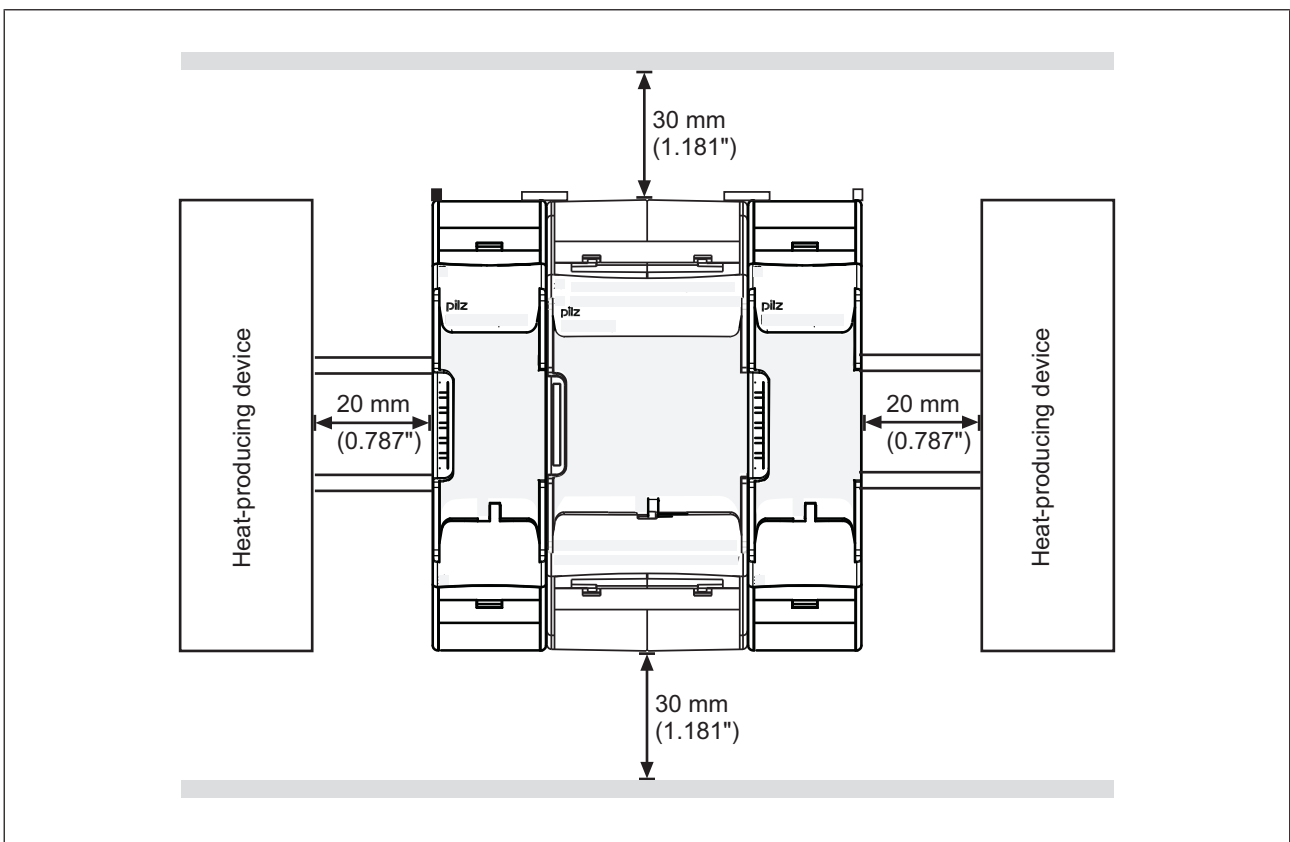


## Installation

### Install configurable small control systems PNOZmulti Mini

#### Install base unit without expansion module

Make sure that the terminators are inserted on the top left and right of the unit :

- ▶ Left: Black/yellow terminator
- ▶ Right: Yellow terminator

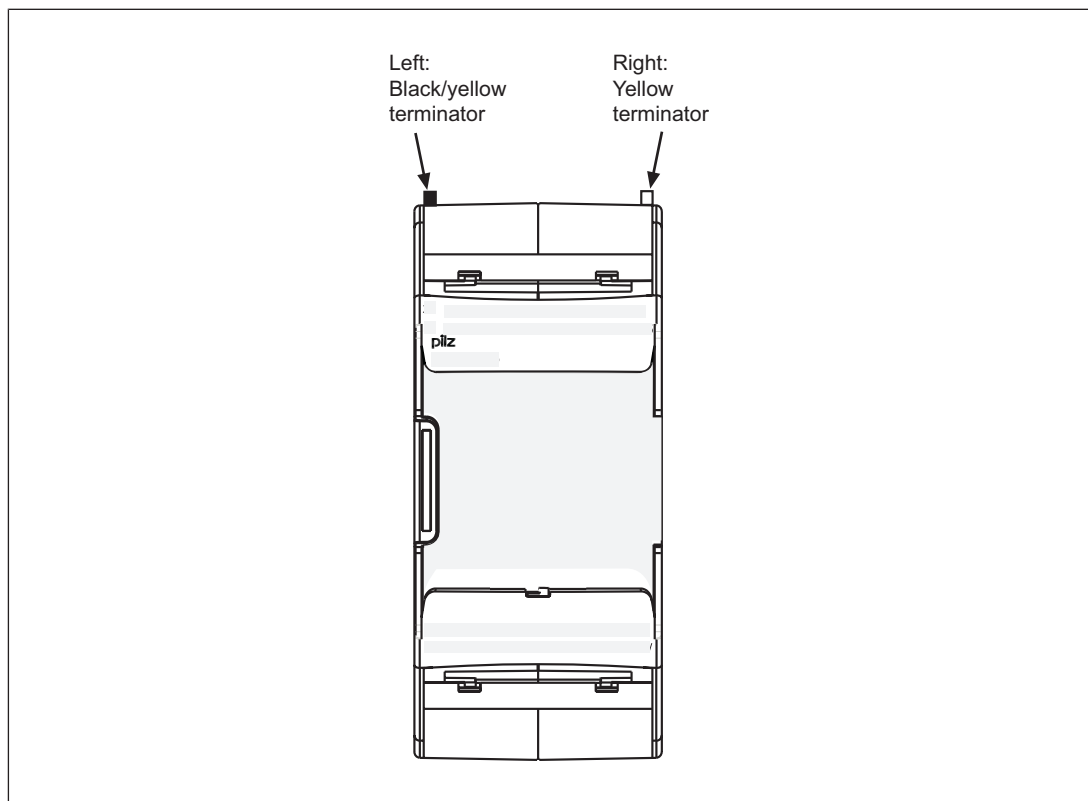

## Installation

### Install configurable small control systems PNOZmulti Mini


#### Connecting the base unit and expansion modules

The position of the expansion modules is defined in the PNOZmulti Configurator. The expansion modules are connected to the left or right of the base unit, depending on the type.

Please refer to the document "PNOZmulti System Expansion" for details of the number of modules that can be connected to the base unit and the module types.

The modules are linked via jumpers.

- ▶ Remove the terminator on the side of the base unit and on the expansion module.
- ▶ Before installing the units on the mounting rail, connect the base unit to the expansion module using the jumper supplied .
- ▶ Fit the appropriate terminator to the unconnected interfaces on the base unit and expansion module.
  - Left-hand side on the base unit and expansion modules to the left of the base unit: Black/yellow terminator
  - Right-hand side on the base unit and expansion modules to the right of the base unit: Yellow terminator

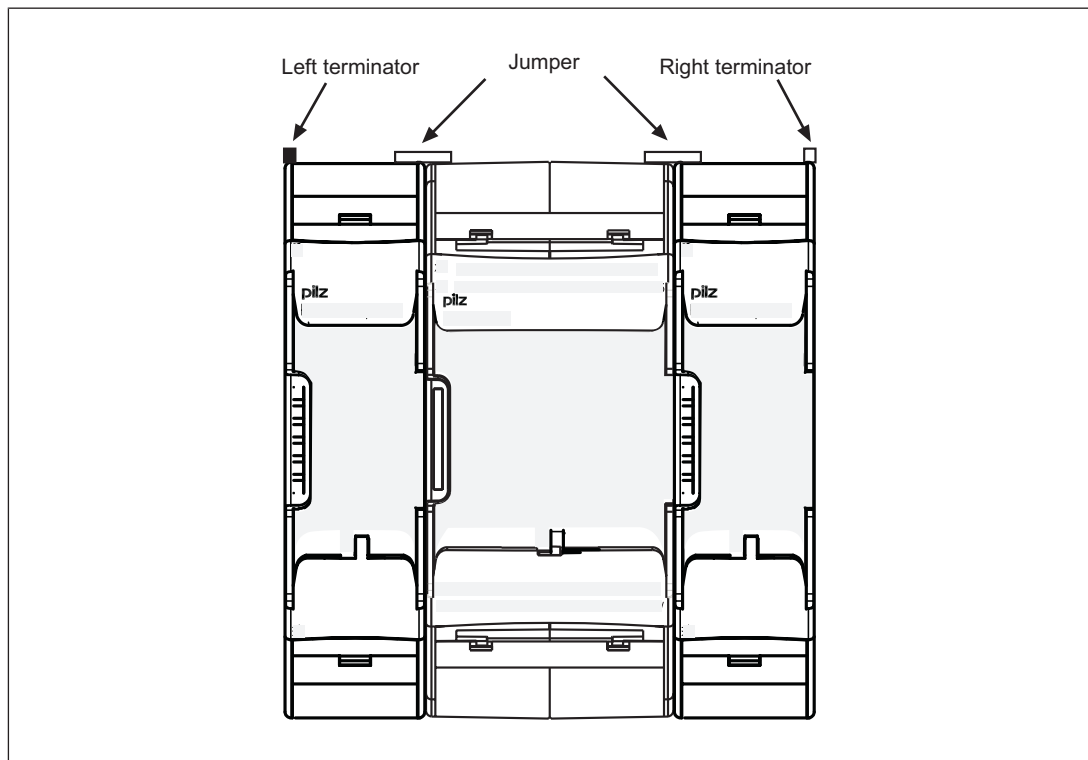

## Installation

### Install configurable control systems PNOZmulti 2

---

#### Control cabinet installation

- ▶ The unit should be installed in a control cabinet with a protection type of at least IP54.
- ▶ Install the system vertically on to a horizontal mounting rail. The venting slots must face upward and downward. Other mounting positions could damage the safety system.
- ▶ Use the locking elements on the rear of the unit to attach it to a mounting rail.
- ▶ In environments exposed to heavy vibration, the unit should be secured using a fixing element (e.g. retaining bracket or end angle).
- ▶ Open the locking slide before lifting the unit from the mounting rail.
- ▶ To comply with EMC requirements, the mounting rail must have a low impedance connection to the control cabinet housing.

## Installation


### Install configurable control systems PNOZmulti 2

#### Mounting distances

With control cabinet installation it is essential to maintain a certain distance from the top and bottom, as well as to other heat-producing devices (see diagram). The values stated for the mounting distances are minimum specifications.

The ambient temperature in the control cabinet must not exceed the figure stated in the technical details. Air conditioning may otherwise be required.

Mounting distances:

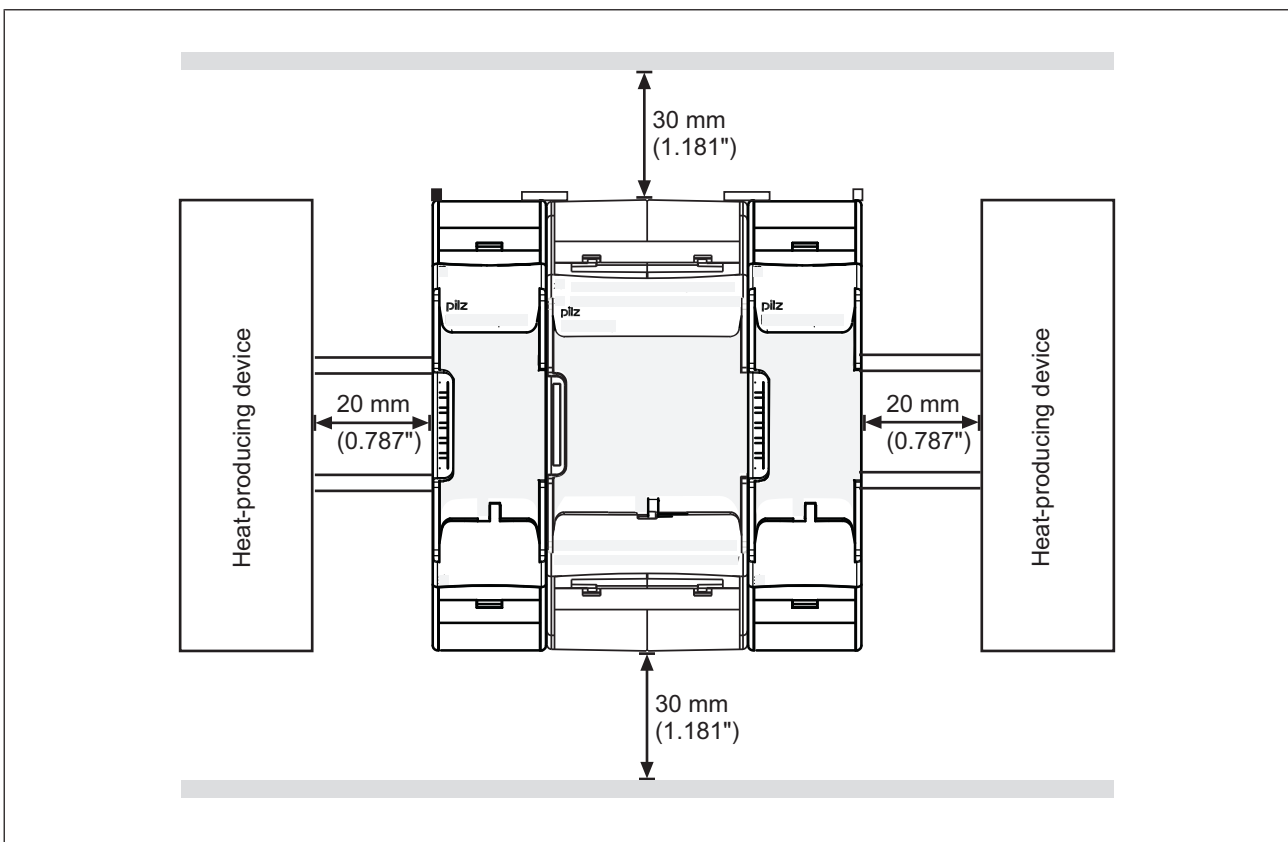




## Installation

### Install configurable control systems PNOZmulti 2

#### Install base unit without expansion module

Make sure that the terminators are inserted on the top left and right of the unit.

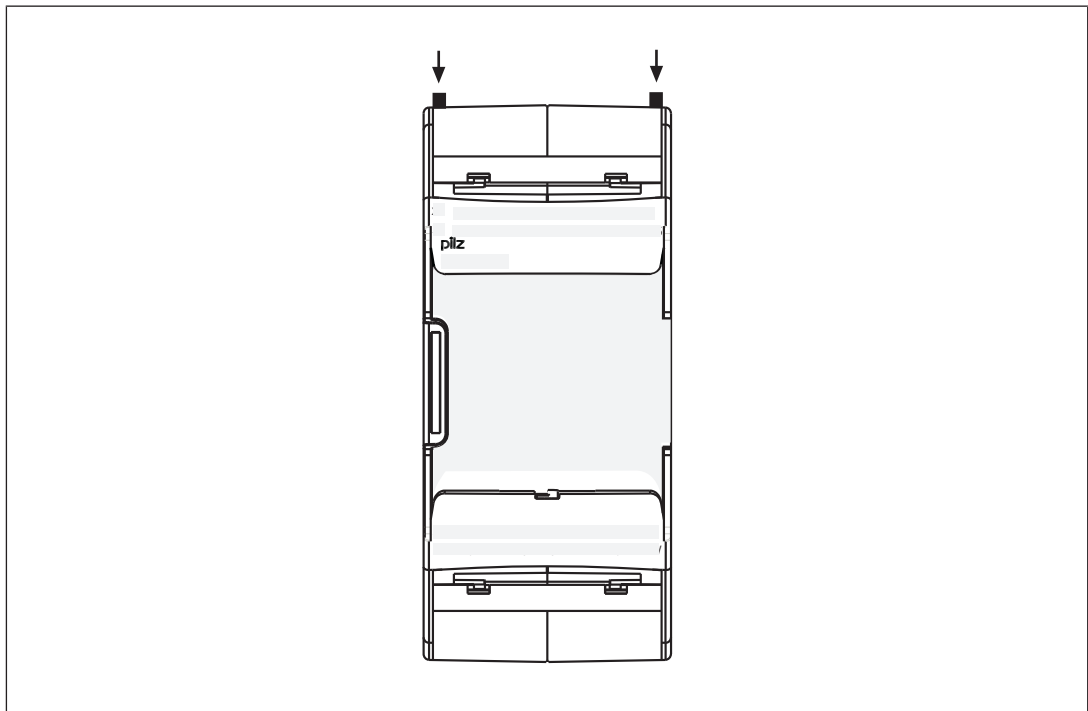

## Installation

### Install configurable control systems PNOZmulti 2


#### Connecting the base unit and expansion modules

The position of the expansion modules is defined in the PNOZmulti Configurator. The expansion modules are connected to the left or right of the base unit, depending on the type.

Please refer to the document "PNOZmulti System Expansion" for details of the number of modules that can be connected to the base unit and the module types.

The modules are linked via jumpers.

- ▶ Remove the terminator on the side of the base unit and on the expansion module.
- ▶ Install the base unit and expansion modules on the mounting rail in the order configured in the PNOZmulti Configurator and connect the units using the jumper supplied.
- ▶ Fit the terminator to the unconnected interfaces on the base unit and expansion module.

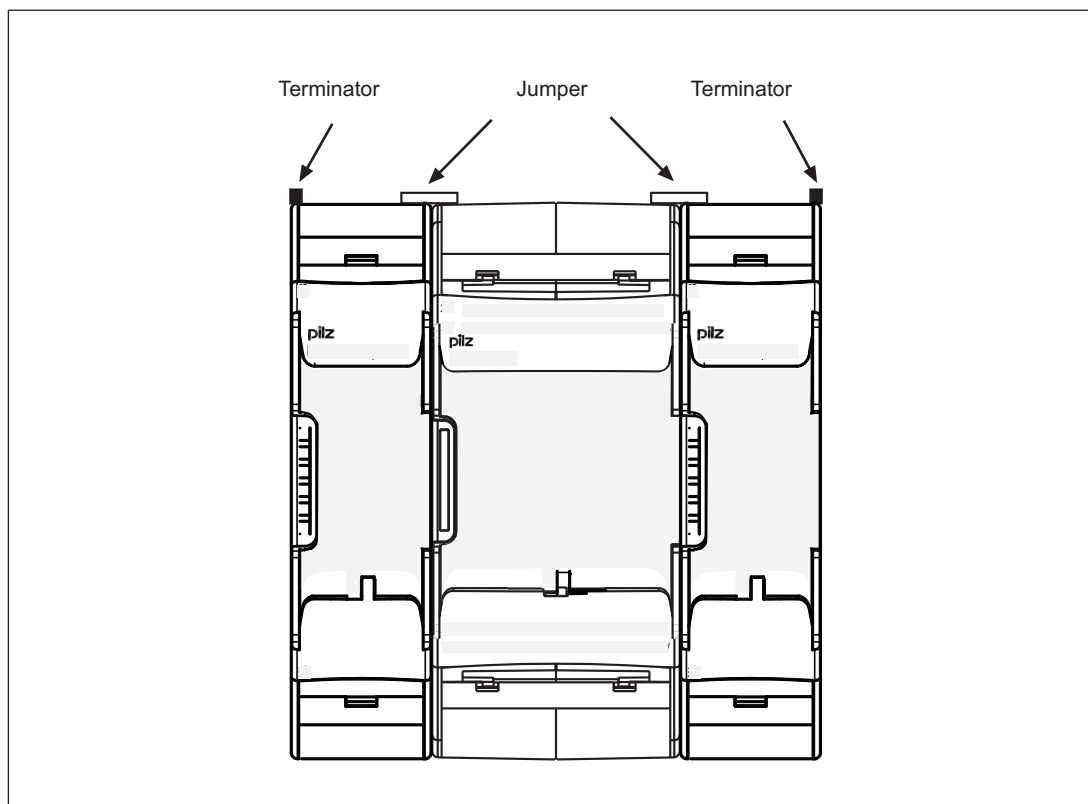


## System expansion

### Configurable safety systems PNOZmulti

#### Maximum system expansion:

- ▶ Right of the base unit:
  - 8 expansion modules
- ▶ Left of the base unit
  - 4 expansion modules
  - and
  - 1 fieldbus module
- ▶ Connectable to the link module PNOZ m12p:
  - 4 decentralised modules per link module (max. 16 decentralised modules)

**Example of a control system PNOZmulti: Base unit PNOZ m1p ETH with expansion modules**

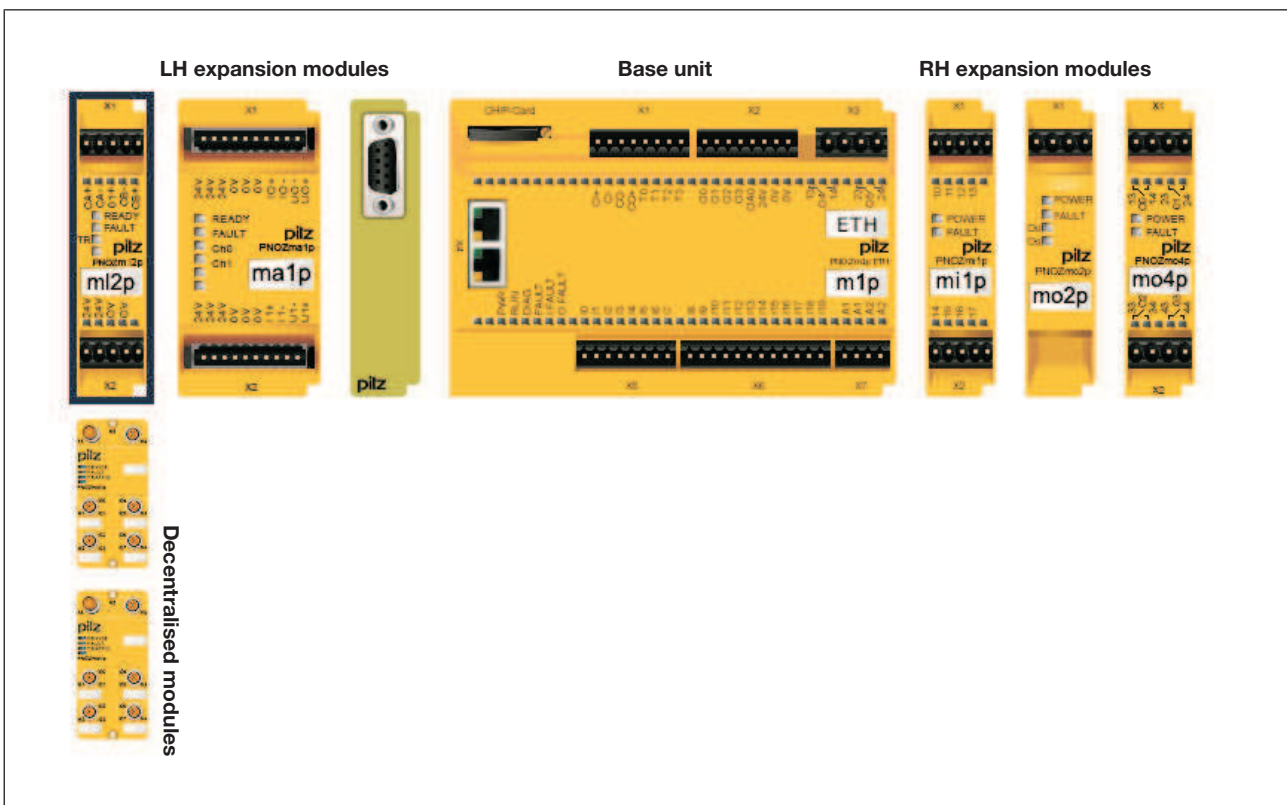

## System expansion

### Configurable safety systems PNOZmulti

System expansion depends on the base units:

Expansion modules		Slot	PNOZ m0p (ETH)	PNOZ m1p (ETH)	PNOZ m2p (ETH)	PNOZ m3p (ETH)
<b>Number of connectable modules</b>						
<b>Analogue input modules</b>		<b>Left</b>	-	4	4	4
PNOZ ma1p	Analogue input module					
<b>Link modules</b>		<b>Left</b>	4	4	4	4
PNOZ ml1p	To connect 2 base units					
PNOZ ml2p	To connect a base unit to up to 4 decentralised modules PDP67 (see below)					
<b>Decentralised modules (connectable to the link module PNOZ ml2p)</b>		<b>Left</b>	16	16	16	16
PDP67 F 8DI ION	IP67, 8 safe inputs					
PDP67 F 8DI ION HP	IP67, 8 safe inputs					
<b>Input modules</b>		<b>Right</b>	-	8	8	8
PNOZ mi1p	8 safe inputs					
PNOZ mi2p	8 inputs for standard applications					
<b>Output modules</b>		<b>Right</b>	-	6	6	6
PNOZ mo1p	4 safe semiconductor outputs					
PNOZ mo2p	2 safe relay outputs					
PNOZ mo3p	2 safe 2-pole semiconductor outputs					
PNOZ mo4p	4 safe relay outputs					
PNOZ mo5p	4 safe, diverse relay outputs					
<b>Output modules for standard applications</b>		<b>Right</b>	-	8	8	8
PNOZ mc1p	16 semiconductor outputs for standard applications					

## System expansion

### Configurable safety systems PNOZmulti

Expansion modules		Slot	PNOZ m0p (ETH)	PNOZ m1p (ETH)	PNOZ m2p (ETH)	PNOZ m3p (ETH)
<b>Speed monitor</b>		<b>Right</b>	-	4	4	4
PNOZ ms1p	Monitoring of 2 axes Connectable encoders: Proximity switch, incremental encoder Sin/Cos, TTL					
PNOZ ms2p HTL	Monitoring of 2 axes Connectable encoders: Proximity switch, incremental encoder HTL					
PNOZ ms2p TTL	Monitoring of 2 axes Connectable encoders: Proximity switch, incremental encoder Sin/Cos, TTL					
PNOZ ms3p HTL	Monitoring of 2 axes Connectable encoders: Incremental encoder HTL					
PNOZ ms3p TTL	Monitoring of 2 axes Connectable encoders: Incremental encoder Sin/Cos, TTL					
PNOZ ms4p	Monitoring of 1 axis Connectable encoders: Incremental encoder Sin/Cos, TTL, HTL					

## System expansion Configurable safety systems PNOZmulti


Expansion modules		Slot	PNOZ m0p (ETH)	PNOZ m1p (ETH)	PNOZ m2p (ETH)	PNOZ m3p (ETH)
<b>Fieldbus modules</b>		<b>Left</b>	<b>1</b>	<b>1</b>	<b>1</b>	<b>1</b>
PNOZ mc0p	Power supply to supply voltage to fieldbus modules					
PNOZ mc2p	EtherCAT					
PNOZ mc2.1p	EtherCAT (DS301 V4.02 compliant)					
PNOZ mc3p	PROFIBUS-DP					
PNOZ mc4p	DeviceNet					
PNOZ mc5p	Interbus					
PNOZ mc5.1p	Interbus fibre-optic cable					
PNOZ mc6p	CANopen					
PNOZ mc6.1p	CANopen					
PNOZ mc7p	CC-Link					
PNOZ mc8p	Ethernet IP/Modbus TCP					
PNOZ mc9p	Profinet					
PNOZ mc10p	sercos III					
PNOZ mc12p	Ethernet POWERLINK					

## System expansion

### Configurable safety systems PNOZmulti

#### System reaction times

The reaction time between an input switching off and a linked output in the system switching off depends on the delay time at the input and the delay time at the output. The times vary depending on which input/output is used by which device.

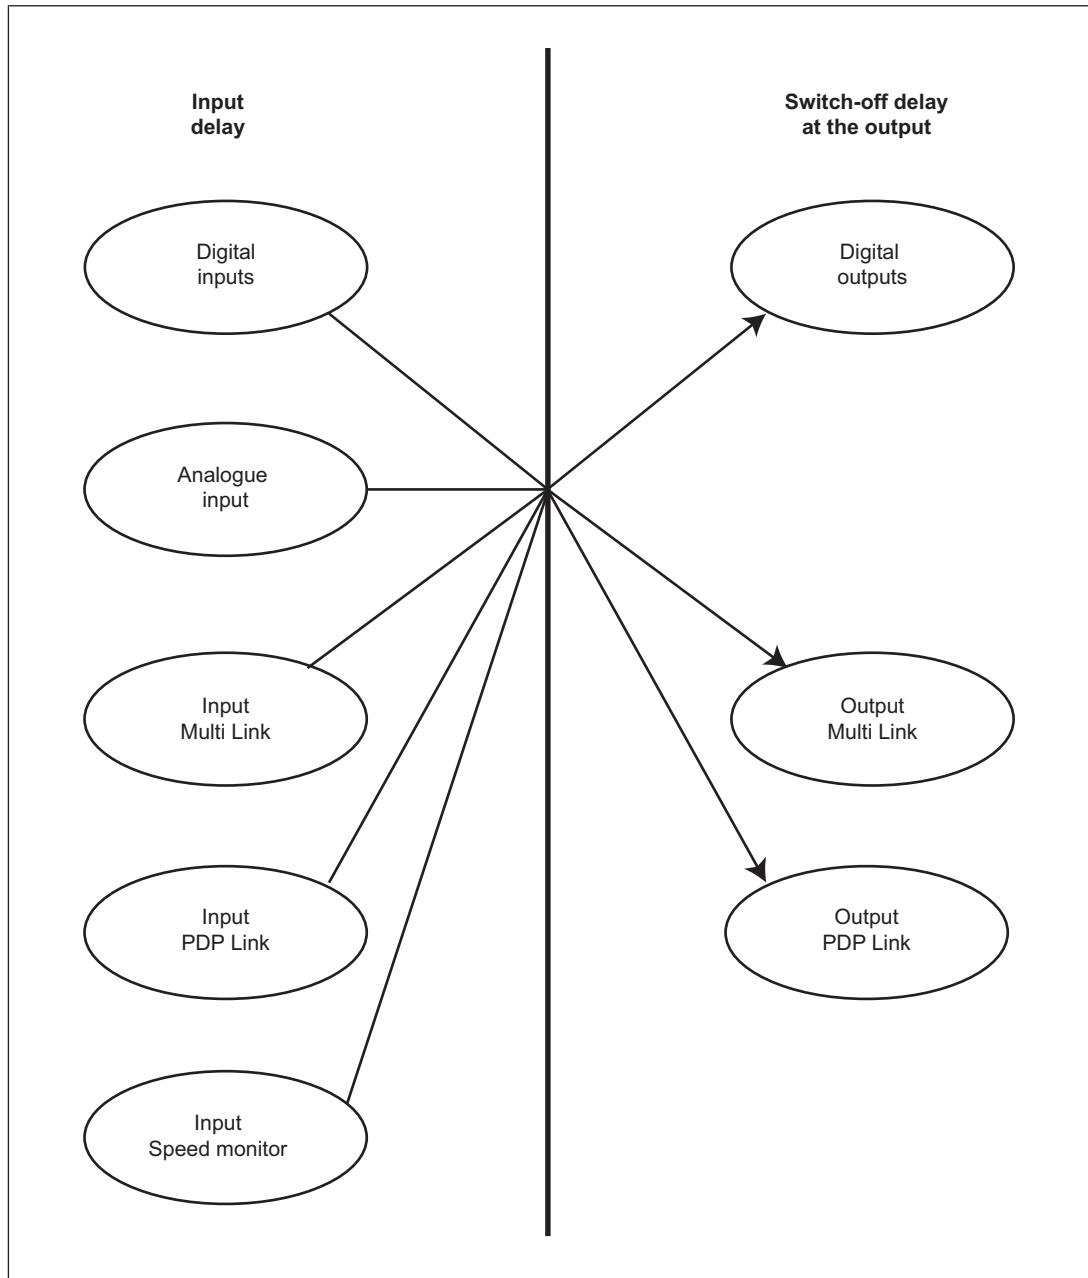

## System expansion

### Configurable safety systems PNOZmulti

Calculation of the max. reaction time:

$$t_{\text{ReactionMax}} = t_{\text{Max. input delay}} + t_{\text{Max. switch-off delay at the output}}$$

Please note that the reaction time is also increased by

- ▶ Delay times configured in the user program
- ▶ Delay on the sensor that is used
- ▶ Delay on the actuator that is used
- ▶ Delay due to periphery devices or control systems

Reaction times of the base units and expansion modules

Modules	Max. input delay	Max. switch-off delay Output (incl. processing time)
PNOZ m0p ... PNOZ m3p	4 ms	30 ms (semiconductor output) 50 ms (relay output)
PNOZ mi1p ... PNOZ mi2p	4 ms	-
PNOZ mo1p, PNOZ mo3p	-	30 ms
PNOZ mo2p, PNOZ mo4p, PNOZ mo5p	-	50 ms
PNOZ ml1p	0 ms <sup>(1)</sup>	35 ms (connection's transmission delay)
PNOZ ml2p	15 ms + Max. processing time of the input PDP67 <sup>(2)</sup>	35 ms
PNOZ ma1p	100 ms	-
PNOZ ms1p ... PNOZ ms4p	10 ms [+1/f] (+conf.switch-off delay)	-

(1) An input delay is not considered because it is already considered in the output delay of the communication partner.

(2) See technical details in the operating manual

To simplify the calculation, the stated times include various times that need to be considered within the system. As a result, transmission times, for example, do not need to be included separately in the calculation. The processing time in the base unit is already considered in the max. switch off delay at the output.



## System expansion

### Configurable safety systems PNOZmulti

#### Examples

Configuration: Input from PNOZ mi2p, output from PNOZ mo3p

Input PNOZ mi2p tInput Delay.Max	Output PNOZ mo3p tSwitch-offDelay.Max
4 ms	30 ms

$$t_{\text{ReactionMax}} = 4 \text{ ms} + 30 \text{ ms}$$

$$t_{\text{ReactionMax}} = 34 \text{ ms}$$

Configuration: Input from base unit PNOZ m1p, output from PNOZ mo4p

Input PNOZ m1p Input Delay.Max	Output PNOZ mo4p Switch-off Delay.Max
4 ms	50 ms

$$t_{\text{ReactionMax}} = 4 \text{ ms} + 50 \text{ ms}$$

$$t_{\text{ReactionMax}} = 54 \text{ ms}$$


## System expansion

### Configurable small control systems PNOZmulti Mini

**Maximum system expansion:**

- ▶ Right of the base unit:
  - 1 PNOZsigma expansion module (+1 contact expansion)
- ▶ Left of the base unit
  - 1 fieldbus module
  - and
  - 1 communication module
  - and
  - 4 link modules
- ▶ Connectable to the link module PNOZ mml2p:
  - 4 decentralised modules per link module (max. 16 decentralised modules)

**Example of a control system PNOZmulti Mini: Base unit PNOZ mm0.1p with expansion modules**

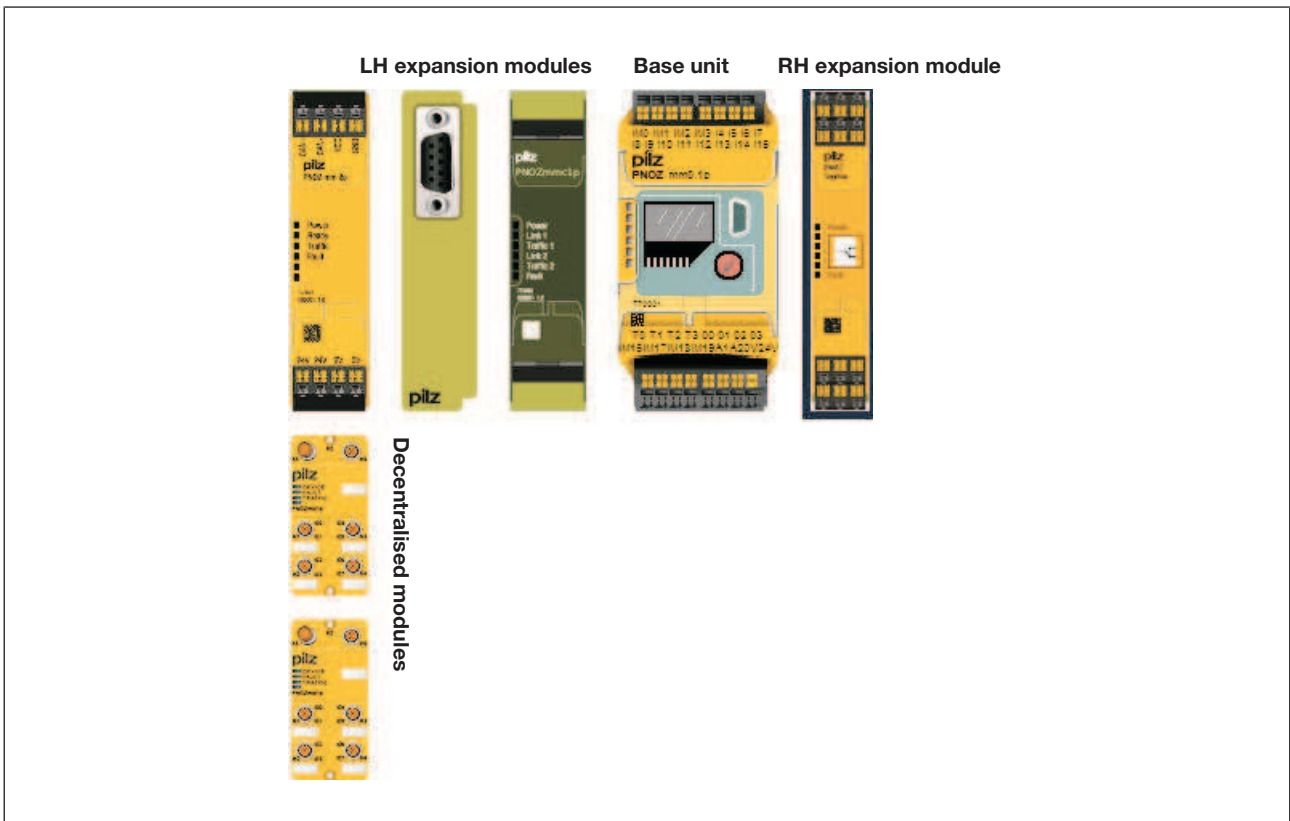

## System expansion

### Configurable small control systems PNOZmulti Mini

System expansion depends on the base units:


Expansion modules		Slot	PNOZ mm0p	PNOZ mm0.1p	PNOZ mm0.2p
			<b>Number of connectable modules</b>		
<b>Link modules</b>		<b>Left</b>	-	4	4
PNOZ mml1p	To connect 2 base units				
PNOZ mml2p	To connect a base unit to up to 4 decentralised modules PDP67 (see below)				
<b>Decentralised modules (connectable to the link module PNOZ mml2p)</b>		<b>Left</b>	-	16	16
PDP67 F 8DI ION	IP67, 8 safe inputs				
PDP67 F 8DI ION HP	IP67, 8 safe inputs				
<b>Communication modules</b>		<b>Left</b>	-	1	1
PNOZ mmc1p	Ethernet interface				
PNOZ mmc2p	Serial interface RS232				
<b>Fieldbus modules</b>		<b>Left</b>	-	1	1
PNOZ mmc3p	PROFIBUS DP				
PNOZ mmc4p	DeviceNet				
PNOZ mmc6p	CANopen				
PNOZ mmc7p	CC-Link				
PNOZ mmc11p	EtherCAT				
PNOZ mmc12p	Ethernet POWERLINK				
<b>PNOZsigma output modules</b>		<b>Right</b>	-	1	1
PNOZ s7	1 safe relay output				
PNOZ s7.1	1 safe relay output (+ 1 PNOZ s7, PNOZ s10 or PNOZ s11 can be connected as a contact expansion module)				
PNOZ s7.2	1 safe relay output (+ 1 expansion module PNOZ s7, PNOZ s10 or PNOZ s11 can be connected)				
PNOZ s10	1 safe relay output				
PNOZ s11	1 safe relay output				
PNOZ s22	2 safe relay outputs				

## System expansion

### Configurable small control systems PNOZmulti Mini

#### System reaction times

The reaction time between an input switching off and a linked output in the system switching off depends on the delay time at the input and the delay time at the output. The times vary depending on which input/output is used by which device.

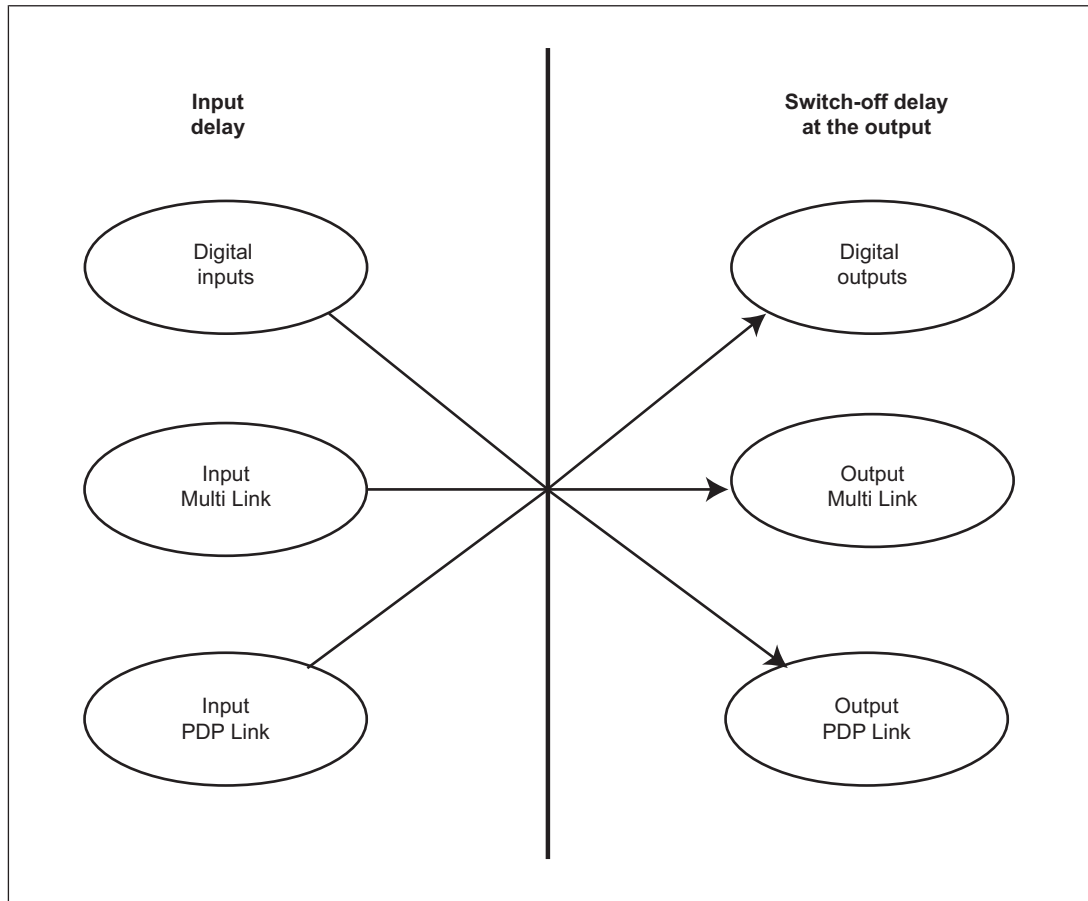

Calculation of the max. reaction time:

$$t_{\text{ReactionMax}} = t_{\text{Max. input delay}} + t_{\text{Max. switch-off delay at the output}}$$

Please note that the reaction time is also increased by

- ▶ Delay times configured in the user program
- ▶ Delay on the sensor that is used
- ▶ Delay on the actuator that is used
- ▶ Delay due to periphery devices or control systems

## System expansion

### Configurable small control systems PNOZmulti Mini

Reaction times of the base units and expansion modules

Modules	Max. input delay	t Max. switch-off delay Output (incl. processing time)
PNOZ mm0p ... PNOZ mm0.2p	4 ms	30 ms (semiconductor output)
PNOZ mm0.2p	4 ms	35 ms (virtual outputs for data transfer when 2 base units are connected)
PNOZ s7, PNOZ s7.1, PNOZ s7.2, PNOZ s10, PNOZ s11, PNOZ s22	-	30 ms + delay-on de-energisation of expansion module
PNOZ mml1p	0 ms <sup>(1)</sup>	35 ms (connection's transmission delay)
PNOZ mml2p	15 ms + input delay PDP67 <sup>(2)</sup>	35 ms

(1) An input delay is not considered because it is already considered in the output delay of the communication partner.

(2) See technical details in the operating manual

To simplify the calculation, the stated times include various times that need to be considered within the system. As a result, transmission times, for example, do not need to be included separately in the calculation. The processing time in the base unit is already considered in the max. switch off delay at the output.

#### Example

Configuration: Input from base unit PNOZ mm0.1p, output from PNOZ s7

Input PNOZ mm0.1p Input Delay.Max	Output PNOZ mo4p Switch-off Delay.Max
4 ms	30 ms + delay-on de-energisation 30 ms

$$t_{\text{ReactionMax}} = 4 \text{ ms} + 30 \text{ ms} + 30 \text{ ms}$$

$$t_{\text{ReactionMax}} = 64 \text{ ms}$$


## System expansion

### Configurable control systems PNOZmulti 2

**Maximum system expansion:**

- ▶ Right of the base unit:
  - PNOZ m B0: 6 expansion modules
  - PNOZ m B1: 8 expansion modules
- ▶ Left of the base unit
  - 4 expansion modules
  - PNOZ m B0: 1 communication module
  - 1 fieldbus module

**Example of a control system PNOZmulti 2: Base unit PNOZ m B0 with expansion modules**

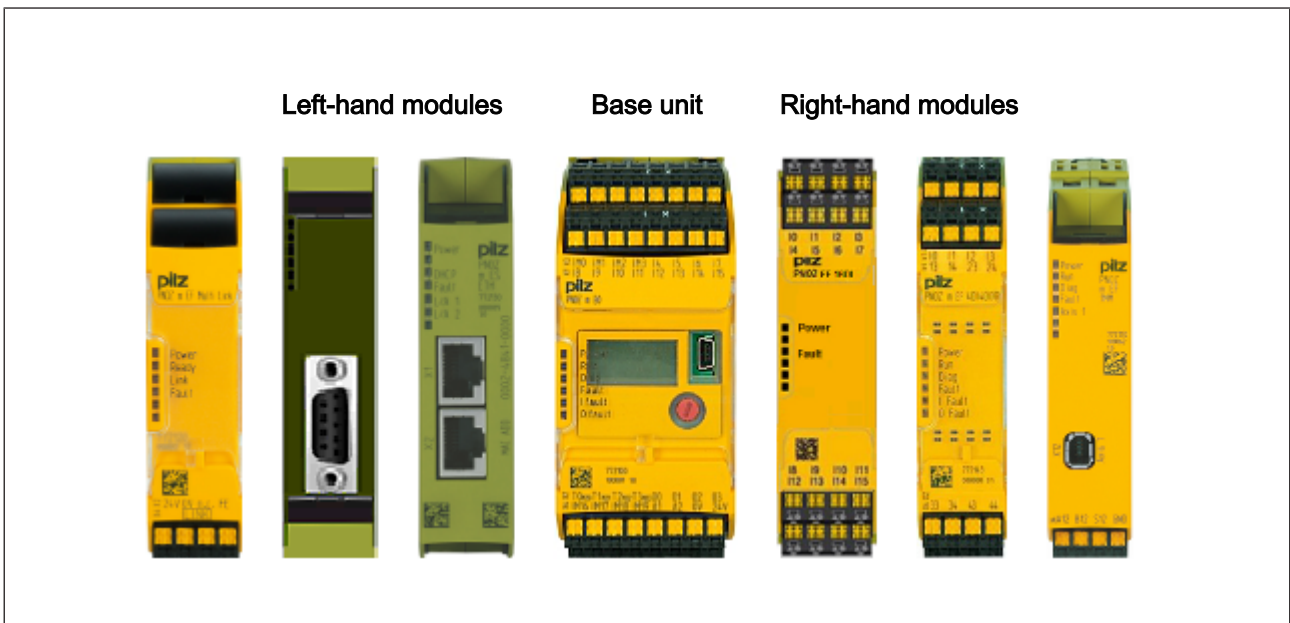

**System expansion depends on the base units:**

Expansion modules		Slot	PNOZ m B0	PNOZ m B1
			<b>Number of connectable modules</b>	
<b>Link modules</b>		<b>Left</b>	<b>4</b>	<b>4</b>
PNOZ m EF Multi Link	To connect 2 base units			
PNOZ m EF PDP Link	To connect a base unit to up to 4 decentralised modules PDP67			

## System expansion

### Configurable control systems PNOZmulti 2


Expansion modules		Slot	PNOZ m B0	PNOZ m B1
<b>Input module</b>		Right	6	8
PNOZ EF 16DI	16 safe inputs			
<b>Input and output modules</b>		Right	6	8
PNOZ EF 8DI4DO	8 safe inputs, 4 safe semi-conductor outputs			
PNOZ EF 4DI4DOR	4 safe inputs, 4 safe relay outputs			
<b>Motion monitoring modules</b>		Right	6	8
PNOZ m EF 1MM	Monitoring of 1 axis			
PNOZ m EF 2MM	Monitoring of 2 axes			
<b>Fieldbus modules</b>		Left	1	
PNOZ m ES Profibus	Profibus			1
PNOZ m ES CANopen	CANopen			-
PNOZ m ES CC-Link	CC-Link			-
PNOZ m ES EtherCAT	EtherCAT			1
PNOZ m ES Powerlink	Powerlink			-
PNOZ m ES EtherNet/IP	EtherNet/IP			-
PNOZ m ES Profinet	Profinet			-
<b>Communication modules</b>				Left
PNOZ m ES ETH	Ethernet interface			
PNOZ m ES RS232	Serial interface RS232			

## System expansion

### Configurable control systems PNOZmulti 2

#### System reaction times

The reaction time between an input switching off and a linked output in the system switching off depends on the delay time at the input, the delay time at the output and the processing time. The times vary depending on which input/output is used by which device.

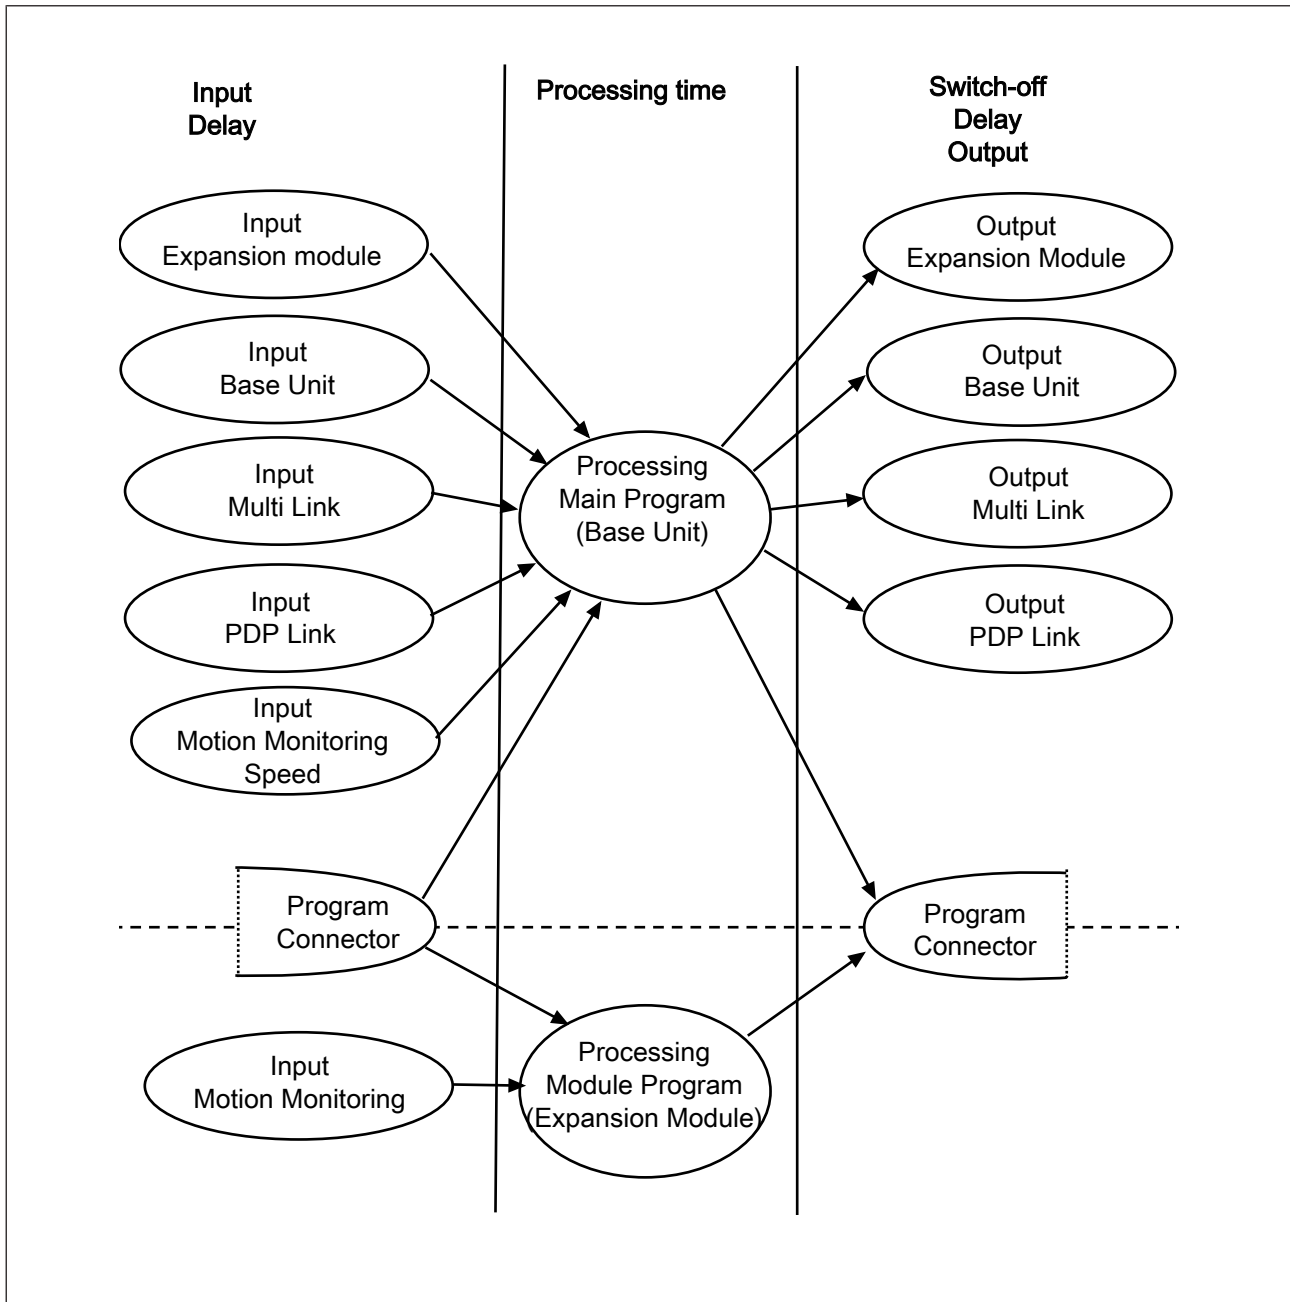

Calculation of the max. reaction time:

$$t_{\text{ReactionMax}} = t_{\text{Max input delay}} + t_{\text{Max processing time}} + t_{\text{Max switch-off delay at the output}}$$



## System expansion

### Configurable control systems PNOZmulti 2

Please note that the reaction time is also increased by

- ▶ Delay times configured in the user program
- ▶ Delay on the sensor that is used
- ▶ Delay on the actuator that is used

Maximum reaction times of the base units and expansion modules

Modules	Max. input delay	Max. processing time	Max. switch-off delay Output
PNOZ m B0	2 ms	30 ms	1 ms
PNOZ m B1	-	30 ms	-
PNOZ m EF 16DI	8 ms	-	-
PNOZ m EF 8DI4DO	8 ms	-	3 ms
PNOZ m EF 4DI4DOR	8 ms	-	22 ms
PNOZ m EF Multi Link	0 ms <sup>(1)</sup>	-	35 ms (connection's transmission delay)
PNOZ m EF PDP Link	15 ms + Max. processing time of the input PDP67 <sup>(2)</sup>	-	5 ms
PNOZ m EF 1MM, PNOZ m EF 2MM (configuration in the main program)	1/f_ist + 16 ms <sup>(3)</sup>	-	-
PNOZ m EF 1MM, PNOZ m EF 2MM (configuration in the module program)	1/f_ist + 8 ms <sup>(3)</sup>	8 ms	-
Program connector	0 ms <sup>(4)</sup>	-	0 ms

(1) An input delay does not need to be considered because it is already considered in the output delay of the communication partner.

(2) See technical details in the operating manual

(3) 1/f\_ist corresponds to the period length T of the measured frequency. The maximum input delay 1/f\_ist + 16 ms or 1/f\_ist + 8 ms is the reaction time at the input after a limit value is exceeded.

(4) No additional time needs to be added for data exchange between main program processing and module program processing via the program connectors. This delay is already included in the processing times.

To simplify the calculation, the stated times include various times that need to be considered within the system. As a result, transmission times, for example, do not need to be included separately in the calculation.

## System expansion

### Configurable control systems PNOZmulti 2

**Example configuration: Input from PNOZ m EF 8DI4DO, output from PNOZ m EF 8DI4DO**

Input PNOZ m EF 8DI4DO Max. input delay	Processing in the main program Processing time	Output PNOZ m EF 8DI4DO Switch-off delay
8 ms	30 ms	3 ms

$$t_{\text{ReactionMax}} = 8 \text{ ms} + 30 \text{ ms} + 3 \text{ ms}$$

$$t_{\text{ReactionMax}} = 41 \text{ ms}$$

**Example configuration: Input from base unit, output from PNOZ m EF 4DI4DOR**

Input PNOZ m B0 Max. input delay	Processing in the main program Processing time	Output PNOZ m EF 8DI4DOR Switch-off delay
2 ms	30 ms	22 ms

$$t_{\text{ReactionMax}} = 2 \text{ ms} + 30 \text{ ms} + 22 \text{ ms}$$

$$t_{\text{ReactionMax}} = 54 \text{ ms}$$

**Example configuration: Input from base unit, output from base unit**

Base unit input Max. input delay	Processing in the main program Processing time	Base unit output Switch-off delay
2 ms	30 ms	1 ms

$$t_{\text{ReactionMax}} = 2 \text{ ms} + 30 \text{ ms} + 1 \text{ ms}$$

$$t_{\text{ReactionMax}} = 33 \text{ ms}$$

**Example configuration: Input from PNOZ m EF 1MM (configured in the main program), output from base unit**

$$f_{\text{ist}} = 100 \text{ ms}$$

Input PNOZ m EF 1MM Max. input delay	Processing in the main program Processing time	Base unit output Switch-off delay
26 ms	30 ms	1 ms

$$1/f_{\text{ist}} = 1/100 \text{ Hz} = 10 \text{ ms}$$

$$1/f_{\text{ist}} + 16 \text{ ms} = 26 \text{ ms}$$

$$t_{\text{ReactionMax}} = 26 \text{ ms} + 30 \text{ ms} + 1 \text{ ms}$$

$$t_{\text{ReactionMax}} = 57 \text{ ms}$$


# System expansion

## Configurable control systems PNOZmulti 2

Example configuration: Input from PNOZ m EF 1MM (configured in the module program), output from PNOZ m EF 8DI4DO

$f_{ist} = 100 \text{ ms}$

Input PNOZ m EF 1MM Input-Delay.Max	Processing in module pro- gram Processing Max	Program connectors (output sig- nal from the module program to the main program)	Processing in the main pro- gram Processing Max	Output PNOZ m EF 8DI4DO Output delay
18 ms	8 ms	0 ms	30 ms	3 ms

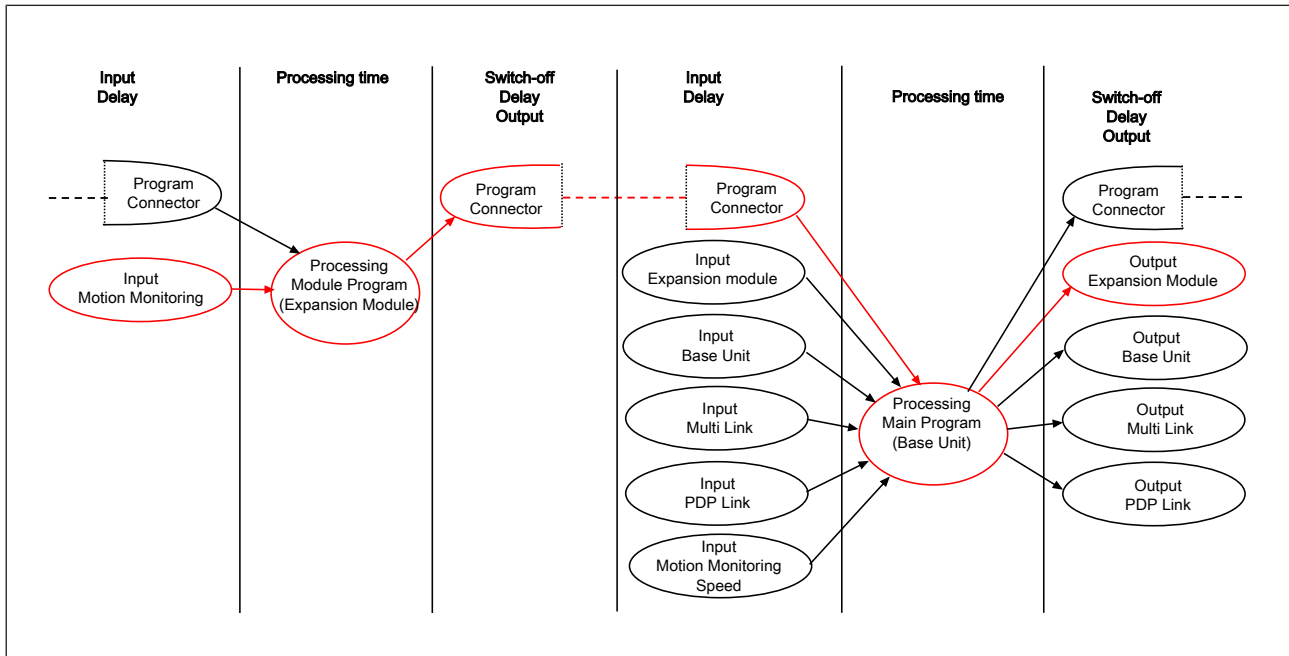

$$1/f_{ist} = 1/100 \text{ Hz} = 10 \text{ ms}$$

$$1/f_{ist} + 8 \text{ ms} = 18 \text{ ms}$$

$$t_{ReactionMax} = 18 \text{ ms} + 8 \text{ ms} + 30 \text{ ms} + 1 \text{ ms}$$

$$t_{ReactionMax} = 57 \text{ ms}$$

### Test pulse suppression at the inputs

On function elements with switch type 3 (see online help for the PNOZmulti Configurator) a test pulse suppression on the inputs can be activated. This function can be used when self-monitored switches are used that create switch-off pulses > 300  $\mu\text{s}$ .

When test pulse suppression is activated please note that the reaction time can increase by up to 15 ms!

## System expansion

### Connection of multiple PNOZmulti systems


For safe data exchange two or more configurable control systems PNOZmulti can be connected to each other.

The connection is created via two connection modules and/or connection interfaces that are assigned to one base unit each.

Any number of base units can be connected via link modules.

However, only a max. of 4 link modules can be connected to a base unit.

#### Example: Connecting 4 base units

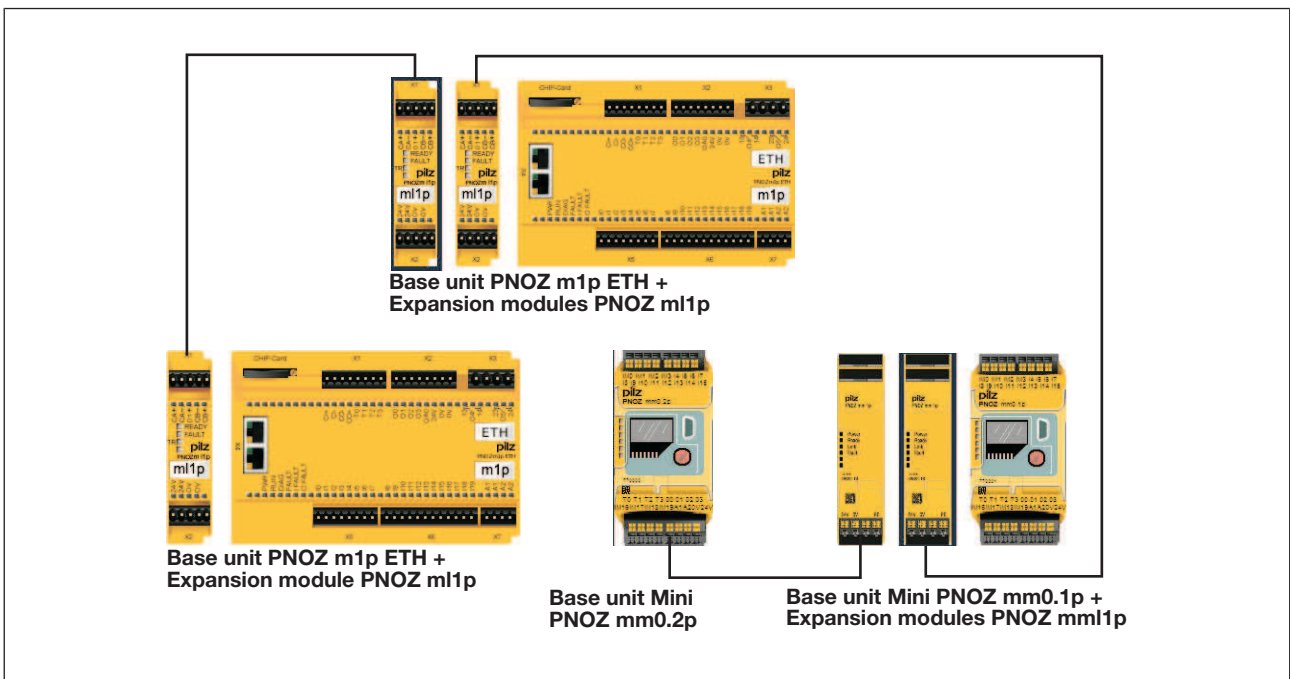

#### Connection options

The following base units can be interconnected:

	PNOZ m B0, PNOZ m B1 +PNOZ m EF Multi Link	PNOZ m0p/1p/2p/3p (ETH) +PNOZ ml1p	PNOZ mm0p	PNOZ mm0.1p +PNOZ mml1p	PNOZ mm0.2p
PNOZ m B0, PNOZ m B1 +PNOZ m EF Multi Link	x	x		x	x
PNOZ m0p/1p/2p/3p (ETH) +PNOZ ml1p	x	x		x	x
PNOZ mm0p					

## System expansion

### Connection of multiple PNOZmulti systems

PNOZ mm0.1p + PNOZ mm1p	x	x		x	x
PNOZ mm0.2p	x	x		x	x

## System expansion

### Connection of multiple PNOZmulti systems



#### Connection's reaction times

The reaction time when connecting two or more base units is calculated from the transmission delay of the connection at the link module of a communication partner and the input delay at the link module of the connected communication partner.

#### Example: Connecting 3 base units PNOZmulti

The maximum reaction time  $t_{\text{ReactionMax}}$  includes the following times:

- ▶ Max. input delay PNOZ m1p (Base 1): 4 ms
- ▶ Data transfer time of the connection at the PNOZ ml1p (Base 1): 35 ms
- ▶ Max. input delay PNOZ ml1p (Base 2): 0 ms
- ▶ Data transfer time of the connection at the PNOZ ml1p (Base 2): 35 ms
- ▶ Max. input delay PNOZ ml1p (Base 3): 0 ms
- ▶ Max. switch-off delay at the output PNOZ m1p: 30 ms

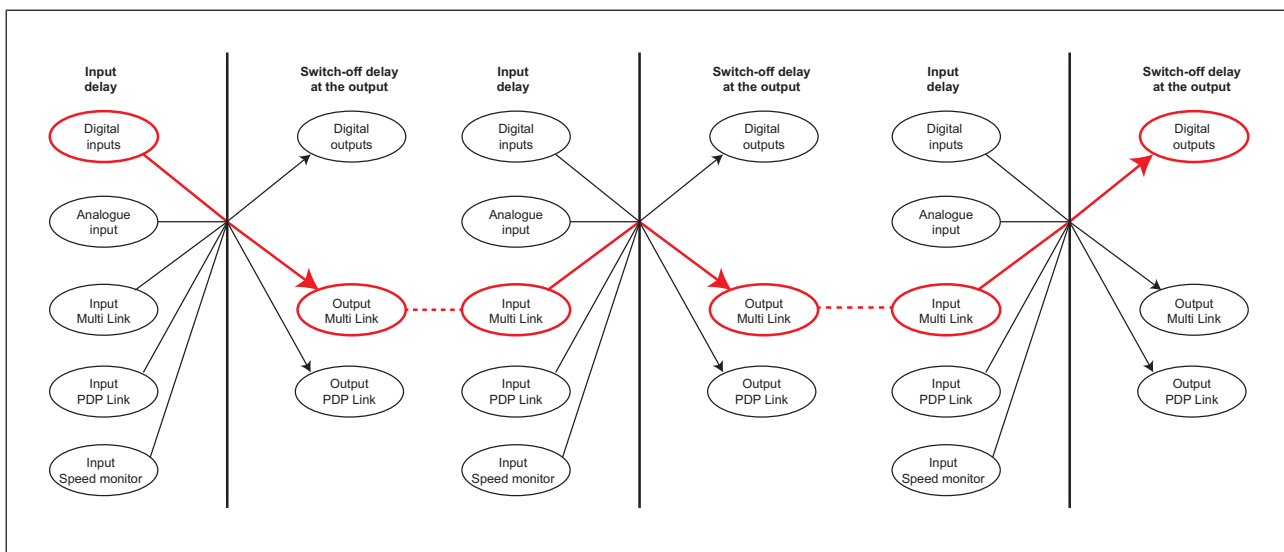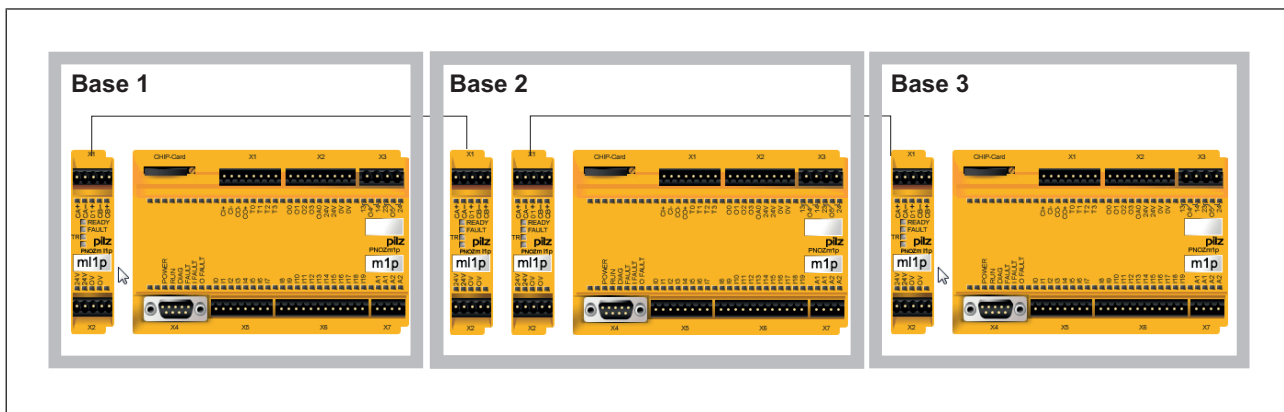

$$t_{\text{ReactionMax}} = 4 \text{ ms} + 35 \text{ ms} + 0 \text{ ms} + 35 \text{ ms} + 0 \text{ ms} + 30 \text{ ms}$$

## System expansion

### Connection of multiple PNOZmulti systems

---

$t_{\text{ReactionMax}} = 104 \text{ ms}$


## System expansion

### Connection of multiple PNOZmulti systems

#### Example: Connecting 5 base units PNOZmulti

The maximum reaction time  $t_{\text{ReactionMax}}$  includes the following times:


- ▶ Based max. input delay PNOZ mm0.1p (Base 1): 4 ms
- ▶ Data transfer time of the connection at the PNOZ mml1p (Base 1): 35 ms
- ▶ Max. input delay PNOZ mml1p (Base 2): 0 ms
- ▶ Data transfer time of the connection at the PNOZ mml1p (Base 2): 35 ms
- ▶ Max. input delay PNOZ mml1p (Base 2): 0 ms
- ▶ Data transfer time of the connection at the PNOZ ml1p (Base 4): 35 ms
- ▶ Max. input delay PNOZ m EF Multi Link (Base 5): 0 ms
- ▶ Max. processing time PNOZ m B0 (Base 5): 30 ms
- ▶ Max. switch-off delay at the output PNOZ mB0 (Base 5): 1 ms

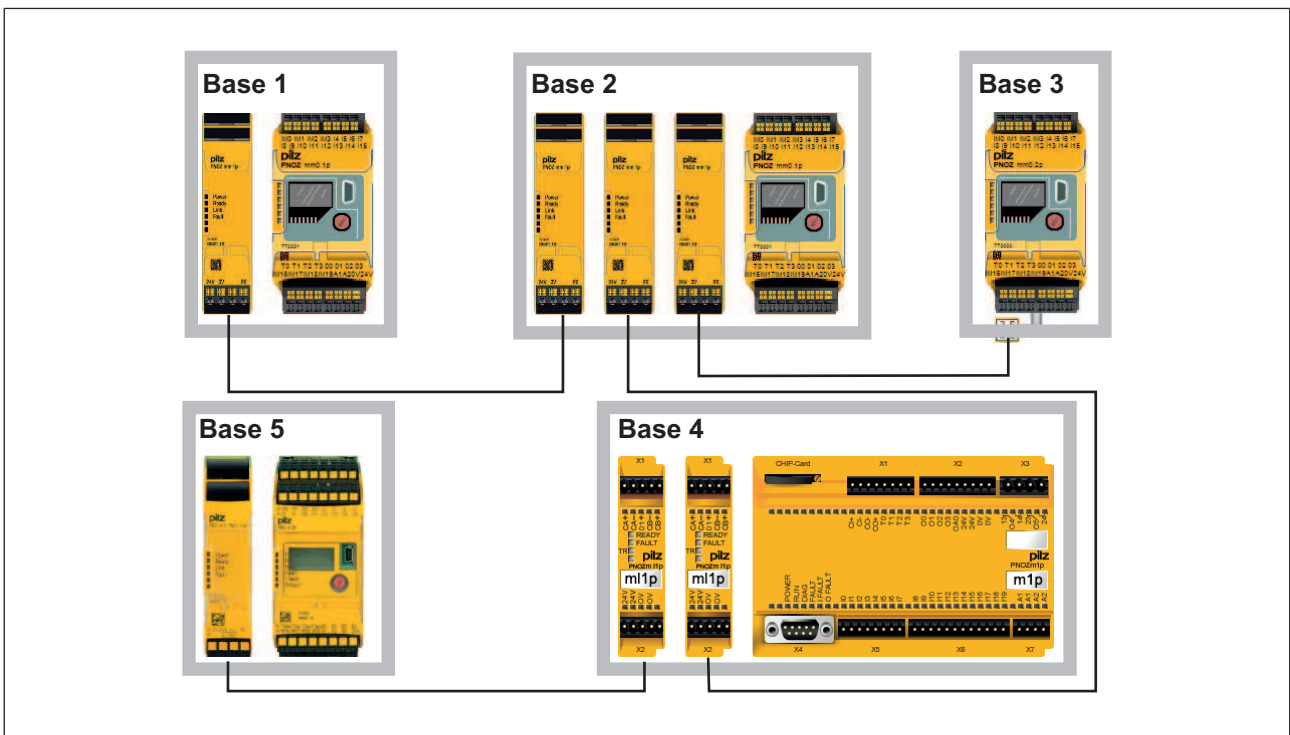



# System expansion

## Connection of multiple PNOZmulti systems

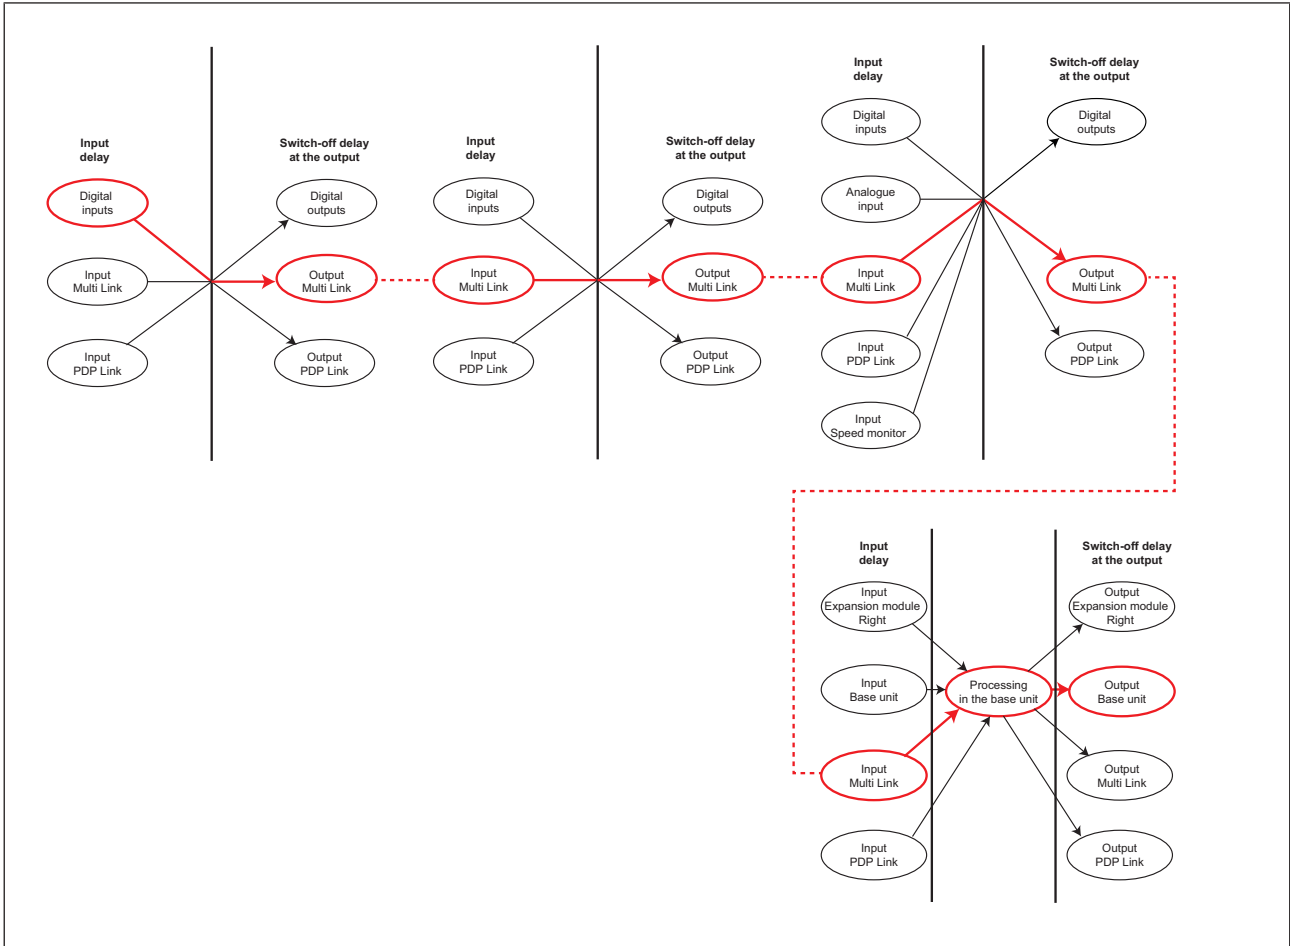

$$t_{\text{ReactionMax}} = 4 \text{ ms} + 35 \text{ ms} + 0 \text{ ms} + 35 \text{ ms} + 0 \text{ ms} + 35 \text{ ms} + 0 \text{ ms} + 1 \text{ ms}$$

$$t_{\text{ReactionMax}} = 140 \text{ ms}$$

## System expansion

### Connection via the cascading inputs and outputs

---

To connect base units from the safety systems PNOZmulti via the cascading inputs and outputs, please refer to the PNOZmulti Installation Manual.



---

---





<b>Contents</b>	<b>Page</b>
Configurable safety systems PNOZmulti	55
Configurable small control systems PNOZmulti Mini	60
Configurable control systems PNOZmulti 2	63

## Configurable safety systems PNOZmulti Base units









Type	Order number	Features	Common features
<a href="#">PNOZ m0p [71]</a> <a href="#">PNOZ m0p ETH [71]</a>	773 110 773 113	<b>Base unit</b> From 3 ... 6 safety functions Only 1 link module and fieldbus module each can be connected, no other expansion modules can be used, From 3 ... 6 safety functions	<ul style="list-style-type: none"> <li>▶ To connect emergency stop devices, two-hand pushbuttons, safety gate limit switches, light beam devices, scanners, enabling switches, safety gate switches PSEN, operating mode selector switches, muting, safety mats, sensors, for example</li> <li>▶ Can be configured in the PNOZmulti Configurator</li> <li>▶ Exchangeable program memory</li> <li>▶ Diagnostic interface</li> <li>▶ 1 fieldbus module can be connected</li> <li>▶ PNOZ m1p, PNOZ m2p, PNOZ m3p: Max. 8 expansion modules can be connected</li> <li>▶ 20 safe inputs</li> <li>▶ Semiconductor outputs:                             <ul style="list-style-type: none"> <li>– 4 safety outputs Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061</li> <li>– 1 output for standard applications</li> </ul> </li> <li>▶ Positive-guided relay outputs:                             <ul style="list-style-type: none"> <li>– 2 safety outputs Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061</li> </ul> </li> <li>▶ 4 test pulse outputs</li> <li>▶ 1 cascading input and output; can also be used as a standard output</li> <li>▶ LED for fault, diagnostics, supply voltage, input and output circuits</li> <li>▶ Plug-in connection terminals: either spring-loaded or screw terminals (available as accessory)</li> <li>▶ Dimensions (H x B x T): 94 x 135 x 121 mm</li> </ul>
<a href="#">PNOZ m1p [91]</a> <a href="#">PNOZ m1p ETH [91]</a> <a href="#">PNOZ m1p coated version [91]</a> <a href="#">PNOZ m1p ETH coated version [91]</a>	772 001	<b>Base unit</b> Modular and expandable, max. 8 expansion modules and 1 fieldbus module can be connected From 4 safety functions and automation functions	
<a href="#">PNOZ m2p [113]</a> <a href="#">PNOZ m2p ETH [113]</a>	772 002	<b>Base unit - specifically for press applications</b> Monitoring of operating modes such as set-up mode, single-stroke and automatic, safety light curtains in single-break and double-break mode, rotary cam arrangement with run monitoring, press safety valves Modular and expandable as PNOZ m1p	
<a href="#">PNOZ m3p [134]</a> <a href="#">PNOZ m3p ETH [134]</a>	773 125 773 126	<b>Base unit - specifically for burner management:</b> Control and monitoring of furnaces, e.g. monitoring of safety sequences, combustion air pressure, ignition, flame, external compound controller and tightness control; plus control of safety valves, ignition valves, exhaust valves, ignition, external compound controller and combustion air blower Modular and expandable as PNOZ m1p	

Please refer to the section entitled [System expansion \[29\]](#) for details of the number and type of connectable expansion modules for the expandable base units.





**Configurable safety systems PNOZmulti**  
Expansion modules

Type	Order number	Application area	Features
<b>Analogue input modules</b>			
PNOZ ma1p  [237] PNOZ ma1p coated version  [237]	773 812 773 813	Safe analogue input module	<ul style="list-style-type: none"> <li>▶ 2 safe analogue inputs for current or voltage measurement</li> <li>▶ Each input can be configured separately</li> <li>▶ Voltage range: -10.24 ... +10.2375 V</li> <li>▶ Current range: 0 ... 25.59 mA</li> <li>▶ Resolution                             <ul style="list-style-type: none"> <li>– Voltage measurement: 13 Bit (signed 12 Bit)</li> <li>– Current measurement: 12 Bit</li> </ul> </li> <li>▶ Range monitoring to monitor for wiring errors or errors in the sensor (4 range limits can be configured)</li> <li>▶ Threshold value monitoring to monitor process variables (8 threshold values can be configured)</li> <li>▶ Exact analogue value can be passed to a fieldbus for diagnostic purposes</li> <li>▶ Status indicators</li> <li>▶ Coated version: for increased environmental requirements</li> </ul>
<b>Link modules</b>			
PNOZ ml1p  [247] PNOZ ml1p coated version  [247]	773 540 773 545	For safe connection of two PNOZmulti base units	<ul style="list-style-type: none"> <li>▶ Point-to-point connection via 4-core shielded and twisted-pair cable</li> <li>▶ 32 virtual inputs and 32 virtual outputs</li> <li>▶ Status indicators</li> <li>▶ Coated version: for increased environmental requirements</li> </ul>
PNOZ ml2p	773 602	For safe connection of one base unit with up to 4 decentralised modules PDP67 (see below)	<ul style="list-style-type: none"> <li>▶ Max. 4 decentralised modules PDP67 F 8DI ION can be connected to the link module PNOZ ml2p</li> <li>▶ Status indicators</li> </ul>
<b>Decentralised modules (not included in this catalogue)</b>			
PDP67 F 8DI ION	773 600	Decentralised safe input module IP67	<ul style="list-style-type: none"> <li>▶ Protection type IP67</li> <li>▶ 8 inputs for connecting 8 single-channel or 4 dual-channel sensors</li> <li>▶ 8 outputs, which can be configured as                             <ul style="list-style-type: none"> <li>– Standard outputs</li> <li>– Test pulse outputs</li> <li>– 24 V outputs</li> </ul> </li> <li>▶ Status indicators</li> </ul>

## Configurable safety systems PNOZmulti Expansion modules









Type	Order number	Application area	Features
PDP67 F 8DI ION HP	773 601	Decentralised safe input module IP67	<ul style="list-style-type: none"> <li>▶ Protection type IP67</li> <li>▶ 8 inputs for connecting 8 single-channel or 4 dual-channel sensors</li> <li>▶ 8 outputs, which can be configured as                             <ul style="list-style-type: none"> <li>– Standard outputs</li> <li>– Test pulse outputs</li> <li>– 24 V outputs</li> </ul> </li> <li>▶ Separate output supply for applications with higher current consumption</li> <li>▶ Module is galvanically isolated from CAN bus</li> <li>▶ Status indicators</li> </ul>
<b>Input modules</b>			
PNOZ mi1p  [155] PNOZ mi1p coated version  [155]	773 400 773 405	Safe input module	<ul style="list-style-type: none"> <li>▶ 8 safe inputs</li> <li>▶ Status indicators</li> <li>▶ Test pulse outputs used to monitor shorts across the inputs</li> <li>▶ Coated version: for increased environmental requirements</li> </ul>
PNOZ mi2p	773 410	Input module	<ul style="list-style-type: none"> <li>▶ 8 inputs for standard applications</li> <li>▶ Status indicators</li> </ul>
<b>Output modules</b>			
PNOZ mo1p  [172] PNOZ mo1p coated version  [172]	773 500 773 505	Safe semiconductor output module	<ul style="list-style-type: none"> <li>▶ 4 safe semiconductor outputs up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application</li> <li>▶ Status indicators</li> <li>▶ Coated version: for increased environmental requirements</li> </ul>
PNOZ mo2p  [182] PNOZ mo2p coated version  [182]	773 520 773 525	Safe relay output module	<ul style="list-style-type: none"> <li>▶ 2 safe relay outputs, positive-guided up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application</li> <li>▶ Status indicators</li> <li>▶ Coated version: for increased environmental requirements</li> </ul>
PNOZ mo3p	773 510	Safe semiconductor output module, 2-pole	<ul style="list-style-type: none"> <li>▶ 4 safe semiconductor outputs, 2-pole, up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application</li> <li>▶ Status indicators</li> </ul>
PNOZ mo4p  [204] PNOZ mo4p coated version  [204]	773 536 773 537	Safe relay output module, volt-free switching of actuators	<ul style="list-style-type: none"> <li>▶ 4 safe relay outputs, positive-guided up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application</li> <li>▶ Status indicators</li> <li>▶ Coated version: for increased environmental requirements</li> </ul>
PNOZ mo5p	773 534	Safe relay output module to control the safety valves on a burner in accordance with EN 50156	<ul style="list-style-type: none"> <li>▶ 4 safe relay outputs, positive-guided, diverse</li> <li>▶ Up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application</li> <li>▶ Status indicators</li> </ul>

**Configurable safety systems PNOZmulti**  
Expansion modules

Type	Order number	Application area	Features
<b>Output modules for standard applications</b>			
PNOZ mc1p  [229] PNOZ mc1p coated version  [229]	773 700 773 705	Semiconductor output module for standard applications	<ul style="list-style-type: none"> <li>▶ 16 semiconductor outputs for standard applications</li> <li>▶ Status indicators</li> <li>▶ Coated version: for increased environmental requirements</li> <li>▶ Status indicators</li> </ul>
<b>Speed monitors</b>			
PNOZ ms1p	773 800	To connect <ul style="list-style-type: none"> <li>▶ Proximity switches</li> <li>▶ Incremental encoders Sin/Cos, TTL (5V)</li> </ul>	<ul style="list-style-type: none"> <li>▶ Monitoring of 2 independent axes (8 cutoff frequencies can be set)</li> <li>▶ Connection per axis: 1 incremental encoder or 2 proximity switches or one of each</li> <li>▶ Measured variables:               <ul style="list-style-type: none"> <li>– Standstill</li> <li>– Speed (8 values can be set)</li> <li>– Direction of rotation</li> </ul> </li> <li>▶ Encoder types can be selected in the PNOZmulti Configurator</li> <li>▶ Proximity detectors are connected directly to the terminals</li> <li>▶ Status indicators</li> </ul>
PNOZ ms2p HTL	773 815	To connect <ul style="list-style-type: none"> <li>▶ Proximity switches</li> <li>▶ Incremental encoders HTL (24 V)</li> </ul>	
PNOZ ms2p TTL  [310] PNOZ ms2p TTL coated version  [310]	773 816 773 811	To connect <ul style="list-style-type: none"> <li>▶ Proximity switches</li> <li>▶ Incremental encoders Sin/Cos, TTL (5V)</li> </ul>	
PNOZ ms3p	773 820	To connect <ul style="list-style-type: none"> <li>▶ Incremental encoders Sin/Cos, TTL (5V), HTL (24 V)</li> </ul>	
PNOZ ms3p HTL	773 825	To connect Incremental encoders HTL (24 V)	
PNOZ ms3p TTL	773 826	To connect <ul style="list-style-type: none"> <li>▶ Incremental encoders Sin/Cos, TTL (5V)</li> </ul>	
PNOZ ms4p	773 830	To connect <ul style="list-style-type: none"> <li>▶ Incremental encoders Sin/Cos, TTL (5V), HTL (24 V)</li> </ul>	






## Configurable safety systems PNOZmulti Expansion modules

Type	Order number	Application area	Features
<b>Fieldbus modules</b>			
PNOZ mc0p	773 720	Power supply to supply voltage to fieldbus modules	
PNOZ mc2.1p	773 713	EtherCAT (DS301 V4.02 compliant)	
PNOZ mc3p	773 732	PROFIBUS-DP	
PNOZ mc4p  416]	773 711	DeviceNet	
PNOZ mc4p coated version  416]	773 729		
PNOZ mc5p	773 723	Interbus	
PNOZ mc5.1p	773 728	Interbus fibre-optic cable	
PNOZ mc6p  442]	773 712	CANopen	
PNOZ mc6p coated version  442]	773 727		
PNOZ mc6.1p	773 733	CANopen	
PNOZ mc7p  452]	773 726	CC-Link	
PNOZ mc7p coated version  452]	773 725		
PNOZ mc8p  460]	773 730	Ethernet IP/Modbus TCP	
PNOZ mc8p coated version  460]	773 734		
PNOZ mc9p	773 731	Profinet	
PNOZ mc10p	773 715	sercos III	
PNOZ mc12p	773 710	Ethernet POWERLINK	



Please refer to the section entitled [System expansion !\[\]\(c3d993ca47bfe2a953c700506ce31fa0\_img.jpg\) 29](#) for details of the number of connectable expansion modules and the slot.

## Configurable small control systems PNOZmulti Mini Base units

Type	Order number	Features	Common features
<a href="#">PNOZ mm0p</a>  497] <a href="#">PNOZ mm0p-T</a>  497]	772 000 772 010	<b>Base unit</b> From 3 ... 6 safety functions Not modular and expandable	<ul style="list-style-type: none"> <li>▶ To connect emergency stop devices, two-hand pushbuttons, safety gate limit switches, light beam devices, scanners, enabling switches, safety gate switches PSEN, operating mode selector switches, muting, safety mats, sensors, for example</li> <li>▶ Can be configured in the PNOZmulti Configurator</li> <li>▶ Exchangeable program memory</li> <li>▶ 20 safe inputs, up to 8 of which can be configured as outputs for standard applications</li> <li>▶ 4 safe semiconductor outputs up to PL e, SIL CL 3</li> <li>▶ 4 semiconductor outputs, can be configured as outputs for standard applications or as test pulses</li> <li>▶ Display for error messages, state of the supply voltage, state of the inputs and outputs, status and device information. Customised texts can be displayed</li> <li>▶ Rotary knob for menu control</li> <li>▶ Plug-in connection terminals: either spring-loaded or screw terminals (available as accessory)</li> <li>▶ Dimensions (H x B x T): 100 x 45 x 120 mm</li> </ul>
<a href="#">PNOZ mm0.1p</a>	772 001	<b>Base unit</b> From 4 safety functions and for standard control functions <ul style="list-style-type: none"> <li>▶ Expansion modules PNOZsigma can be connected</li> <li>▶ 1 link module or communication module can be connected</li> <li>▶ 1 fieldbus module can be connected</li> <li>▶ Decentralisation: PDP67 modules can be connected to connect sensor technology</li> <li>▶ Expanded diagnostics PVIS</li> </ul> From 4 safety functions and for standard control functions	
<a href="#">PNOZ mm0.2p</a>	772 002	<b>Base unit</b> As PNOZ mm0.1p, with additional integrated Multi-Link interface	

Please refer to the section entitled [System expansion](#)  29] for details of the number and type of connectable expansion modules for the expandable base units.

**Configurable small control systems PNOZmulti Mini**  
Expansion modules

Type	Order number	Application area	Features
<b>Link modules</b>			
<a href="#">PNOZ mml1p</a> [  566]	772 020	For safe connection of two PNOZmulti base units	<ul style="list-style-type: none"> <li>▶ Point-to-point connection via 4-core shielded and twisted-pair cable</li> <li>▶ 32 virtual inputs and 32 virtual outputs</li> <li>▶ Status indicators</li> </ul>
<a href="#">PNOZ mml2p</a>	772 020	For safe connection of one base unit with up to 4 decentralised modules PDP67 (see below)	<ul style="list-style-type: none"> <li>▶ Max. 4 decentralised modules PDP67 F 8DI ION can be connected to the link module PNOZ mml2p</li> <li>▶ Status indicators</li> </ul>
<b>Decentralised modules (not included in this catalogue)</b>			
PDP67 F 8DI ION	773 600	Decentralised safe input module IP67	<ul style="list-style-type: none"> <li>▶ Protection type IP67</li> <li>▶ 8 inputs for connecting 8 single-channel or 4 dual-channel sensors</li> <li>▶ 8 outputs, which can be configured as                             <ul style="list-style-type: none"> <li>– Standard outputs</li> <li>– Test pulse outputs</li> <li>– 24 V outputs</li> </ul> </li> <li>▶ Status indicators</li> </ul>
PDP67 F 8DI ION HP	773 601	Decentralised safe input module IP67	<ul style="list-style-type: none"> <li>▶ Protection type IP67</li> <li>▶ 8 inputs for connecting 8 single-channel or 4 dual-channel sensors</li> <li>▶ 8 outputs, which can be configured as                             <ul style="list-style-type: none"> <li>– Standard outputs</li> <li>– Test pulse outputs</li> <li>– 24 V outputs</li> </ul> </li> <li>▶ Separate output supply for applications with higher current consumption</li> <li>▶ Module is galvanically isolated from CAN bus</li> <li>▶ Status indicators</li> </ul>
<b>Communication modules</b>			
<a href="#">PNOZ mmc1p</a> [  589]	772 030	Communication module with Ethernet interfaces (TCP/IP, Modbus/TCP)	<ul style="list-style-type: none"> <li>▶ 2 Ethernet interfaces</li> <li>▶ Status indicators</li> </ul>
<a href="#">PNOZ mmc2p</a>	772 031	Communication module with serial interface RS232	<ul style="list-style-type: none"> <li>▶ 1 serial interface RS232</li> <li>▶ Status indicators</li> </ul>
<b>Fieldbus modules</b>			
<a href="#">PNOZ mmc3p</a>	772 032	Fieldbus module PROFIBUS DP	<ul style="list-style-type: none"> <li>▶ Connection for PROFIBUS DP</li> <li>▶ Station addresses from 0 ... 99, selected via rotary switch</li> <li>▶ Status indicators</li> </ul>

**Configurable small control systems PNOZmulti Mini**  
Expansion modules

Type	Order number	Application area	Features
PNOZ mmc4p	772 033	Fieldbus module DeviceNet	<ul style="list-style-type: none"> <li>▶ Connection for DeviceNet</li> <li>▶ Station addresses from 0 ... 63 using DIP switch(es)</li> <li>▶ Status indicators</li> </ul>
PNOZ mmc6p	772 034	Fieldbus module CANopen	<ul style="list-style-type: none"> <li>▶ Connection for CANopen</li> <li>▶ Station addresses from 0 ... 99, selected via rotary switch</li> <li>▶ Transmission rate selected via rotary switch (1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s)</li> <li>▶ Status indicators</li> </ul>
PNOZ mmc7p	772 035	Fieldbus module CC-Link	<ul style="list-style-type: none"> <li>▶ Connection for CC-Link</li> <li>▶ Station addresses from 1 ... 63, selected via rotary switch</li> <li>▶ Station type: Remote Device</li> <li>▶ Occupied stations: 2</li> <li>▶ Status indicators</li> </ul>
PNOZ mmc11p	772 036	Fieldbus module EtherCAT	<ul style="list-style-type: none"> <li>▶ Connection for EtherCAT</li> <li>▶ Network protocols: EtherCAT</li> <li>▶ Supports CANopen over EtherCAT (DS301 V4.02 compliant)</li> <li>▶ Status indicators</li> </ul>
PNOZ mmc12p	772 019	Fieldbus module Ethernet POWERLINK	<ul style="list-style-type: none"> <li>▶ Connection for Ethernet POWERLINK (Ethernet POWERLINK V 2 protocol)</li> <li>▶ Station addresses from 1 ... 239, selected via rotary switch</li> <li>▶ The minimum cycle time for an application of 20 Byte Output and 20 Byte Input is 250µs. The minimum cycle time is 450 µs at the maximum PDO size of 254 Byte Input and 20 Byte Output (the inputs and outputs in this case are viewed from the Managing Node).</li> <li>▶ Status indicators</li> </ul>
<b>PNOZsigma output modules (not included in this catalogue)</b>			
PNOZ s7	773 720	1 safe relay output	Relay output modules for PNOZsigma product range (see Technical Catalogue PNOZ)
PNOZ s7.1	773 710	1 safe relay output (+ 1 PNOZ s7, PNOZ s10 or PNOZ s11 can be connected as a contact expansion module)	
PNOZ s7.2	773 713	1 safe relay output (+ 1 expansion module PNOZ s7, PNOZ s10 or PNOZ s11 can be connected)	
PNOZ s10	773 732	1 safe relay output	
PNOZ s11	773 711 773 729	1 safe relay output	
PNOZ s22	773 723	2 safe relay outputs	

Please refer to the section entitled [System expansion](#) [29] for details of the number of connectable expansion modules and the slot.

**Configurable control systems PNOZmulti 2**  
Base units

Type	Order number	Features	Common features
PNOZ m B0	772 100	<b>Base unit</b> <ul style="list-style-type: none"> <li>▶ Efficient from 4 safety functions upwards</li> <li>▶ 20 safe inputs, up to 8 of which can be configured as outputs for standard applications</li> <li>▶ 4 safe semiconductor outputs up to PL e, SIL CL 3</li> <li>▶ 4 semiconductor outputs, can be configured as outputs for standard applications or as test pulses</li> <li>▶ Display for error messages, state of the supply voltage, state of the inputs and outputs, status and device information. Customised texts can be displayed</li> <li>▶ Rotary knob for menu control</li> <li>▶ Max. 6 expansion modules can be connected</li> <li>▶ 1 link module or communication module can be connected</li> <li>▶ LED for fault, diagnostics, supply voltage, input and output circuits</li> <li>▶ Dimensions (H x B x T): 100 x 45 x 120 mm</li> </ul>	<ul style="list-style-type: none"> <li>▶ To connect emergency stop devices, two-hand pushbuttons, safety gate limit switches, light beam devices, scanners, enabling switches, safety gate switches PSEN, operating mode selector switches, muting, safety mats, sensors, for example</li> <li>▶ 1 fieldbus module can be connected</li> <li>▶ Can be configured in the PNOZmulti Configurator</li> <li>▶ Exchangeable program memory</li> <li>▶ Diagnostic interface</li> <li>▶ Plug-in connection terminals: either spring-loaded or screw terminals (available as accessory)</li> </ul>
PNOZ m B1	772 100	<b>Base unit</b> <ul style="list-style-type: none"> <li>▶ Efficient from 4 safety functions upwards</li> <li>▶ Support for module programs (mIQ)</li> <li>▶ 4 test pulse outputs to detect shorts between the inputs</li> <li>▶ Display for error messages, state of the supply voltage, state of the inputs and outputs, status and device information, Ethernet settings, system date and time, stop and start device</li> <li>▶ Multifunction switch for menu control</li> <li>▶ Max. 8 expansion modules can be connected</li> <li>▶ LED display for fault, diagnostics, supply voltage</li> <li>▶ Dimensions (H x B x T): 98 x 45 x 120.2 mm</li> </ul>	

Please refer to the section entitled [System expansion \[29\]](#) for details of expansion modules that can be connected for the expandable base units.

**Configurable control systems PNOZmulti 2**  
Expansion modules

Type	Order number	Application area	Features
<b>Link modules</b>			
<a href="#">PNOZ m EF Multi Link</a>	772 120	For safe connection of two PNOZmulti base units	<ul style="list-style-type: none"> <li>▶ Point-to-point connection via 4-core shielded and twisted-pair cable</li> <li>▶ 32 virtual inputs and 32 virtual outputs</li> <li>▶ Status indicators</li> </ul>
<a href="#">PNOZ m EF PDP Link</a>	772 121	For safe connection of one base unit with up to 4 decentralised modules PDP67 (see below)	<ul style="list-style-type: none"> <li>▶ Max. 4 decentralised modules PDP67 F 8DI ION can be connected to the link module PNOZ mml2p</li> <li>▶ Status indicators</li> </ul>
<b>Decentralised modules (not included in this catalogue)</b>			
PDP67 F 8DI ION	773 600	Decentralised safe input module IP67	<ul style="list-style-type: none"> <li>▶ Protection type IP67</li> <li>▶ 8 inputs for connecting 8 single-channel or 4 dual-channel sensors</li> <li>▶ 8 outputs, which can be configured as                             <ul style="list-style-type: none"> <li>– Standard outputs</li> <li>– Test pulse outputs</li> <li>– 24 V outputs</li> </ul> </li> <li>▶ Status indicators</li> </ul>
PDP67 F 8DI ION HP	773 601	Decentralised safe input module IP67	<ul style="list-style-type: none"> <li>▶ Protection type IP67</li> <li>▶ 8 inputs for connecting 8 single-channel or 4 dual-channel sensors</li> <li>▶ 8 outputs, which can be configured as                             <ul style="list-style-type: none"> <li>– Standard outputs</li> <li>– Test pulse outputs</li> <li>– 24 V outputs</li> </ul> </li> <li>▶ Separate output supply for applications with higher current consumption</li> <li>▶ Module is galvanically isolated from CAN bus</li> <li>▶ Status indicators</li> </ul>
<b>Input module</b>			
<a href="#">PNOZ EF 16DI</a>	772 140	Safe input module	<ul style="list-style-type: none"> <li>▶ 16 safe inputs</li> <li>▶ Test pulse outputs used to monitor shorts across the inputs</li> <li>▶ Status indicators</li> </ul>
<b>Input and output modules</b>			
<a href="#">PNOZ EF 8DI4DO</a>	772 142	Safe input and output module	<ul style="list-style-type: none"> <li>▶ 8 safe inputs</li> <li>▶ 4 safe semiconductor outputs up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application</li> <li>▶ Status indicators</li> </ul>

**Configurable control systems PNOZmulti 2**  
Expansion modules

Type	Order number	Application area	Features
PNOZ EF 4DI4DOR	772 143	Safe input and output module	<ul style="list-style-type: none"> <li>▶ 8 safe inputs</li> <li>▶ 2 safe relay outputs, positive-guided up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application</li> <li>▶ Status indicators</li> </ul>
<b>Motion monitoring modules</b>			
PNOZ m EF 1MM	772 170	Monitoring of 1 axis	<ul style="list-style-type: none"> <li>▶ Monitoring of 1 axis</li> <li>▶ Measured value recorded by proximity switch and encoder</li> <li>▶ Monitoring Functions                             <ul style="list-style-type: none"> <li>– Safe speed monitoring (SSM)</li> <li>– Safe speed range monitoring (SSR-M)</li> <li>– Safe direction of movement monitoring (SDI-M)</li> <li>– Safe operating stop monitoring (SOS-M)</li> <li>– Analogue voltage (track S)</li> </ul> </li> <li>▶ Status indicators</li> </ul>
PNOZ m EF 2MM	772 171	Monitoring of 2 axes	<ul style="list-style-type: none"> <li>▶ Monitoring of 2 independent axes</li> <li>▶ Measured value recorded by proximity switch and encoder</li> <li>▶ Monitoring functions                             <ul style="list-style-type: none"> <li>– Safe speed monitoring (SSM)</li> <li>– Safe speed range monitoring (SSR-M)</li> <li>– Safe direction of movement monitoring (SDI-M)</li> <li>– Safe operating stop monitoring (SOS-M)</li> <li>– Analogue voltage (track S)</li> </ul> </li> <li>▶ Status indicators</li> </ul>
<b>Communication modules</b>			
PNOZ m ES ETH	772 130	Communication module with Ethernet interfaces (TCP/IP, Modbus/TCP)	<ul style="list-style-type: none"> <li>▶ 2 Ethernet interfaces</li> <li>▶ Status indicators</li> </ul>
PNOZ m ES RS232	772 131	Communication module with serial interface RS232	<ul style="list-style-type: none"> <li>▶ 1 serial interface RS232</li> <li>▶ Status indicators</li> </ul>
<b>Fieldbus modules</b>			
PNOZ m ES Profibus	772 132	Fieldbus module PROFIBUS DP	<ul style="list-style-type: none"> <li>▶ Connection for PROFIBUS DP</li> <li>▶ Station addresses from 0 ... 99, selected via rotary switch</li> <li>▶ Status indicators</li> </ul>

**Configurable control systems PNOZmulti 2**  
Expansion modules

Type	Order number	Application area	Features
<a href="#">PNOZ m ES CANopen</a>	772 134	Fieldbus module CANopen	<ul style="list-style-type: none"> <li>▶ Connection for CANopen</li> <li>▶ Station addresses from 0 ... 99, selected via rotary switch</li> <li>▶ Transmission rate selected via rotary switch (1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s)</li> <li>▶ Status indicators</li> </ul>
<a href="#">PNOZ m ES EtherCAT</a>	772 136	Fieldbus module EtherCAT	<ul style="list-style-type: none"> <li>▶ Connection for EtherCAT</li> <li>▶ Network protocols: EtherCAT</li> <li>▶ Supports CANopen over EtherCAT (DS301 V4.02 compliant)</li> <li>▶ Status indicators</li> </ul>
<a href="#">PNOZ m ES Powerlink</a>	772 119	Fieldbus module Ethernet POWERLINK	<ul style="list-style-type: none"> <li>▶ Connection for Ethernet POWERLINK (Ethernet POWERLINK V 2 protocol)</li> <li>▶ Station addresses from 1 ... 239, selected via rotary switch</li> <li>▶ The minimum cycle time for an application of 20 Byte Output and 20 Byte Input is 250µs. The minimum cycle time is 450 µs at the maximum PDO size of 254 Byte Input and 20 Byte Output (the inputs and outputs in this case are viewed from the Managing Node).</li> <li>▶ Status indicators</li> </ul>
<a href="#">PNOZ m ES EtherNet/IP</a>	772 137	Fieldbus module EtherNet/IP	<ul style="list-style-type: none"> <li>▶ Connection for EtherNet/IP</li> <li>▶ Connection for EtherNet/IP as adapter</li> <li>▶ Transmission rate 10 MBit/s (10BaseT) and 100 MBit/s (100BaseTX)</li> <li>▶ Status indicators</li> </ul>
<a href="#">PNOZ m ES Profinet</a>	772 138	Fieldbus module PROFINET	<ul style="list-style-type: none"> <li>▶ Connection for PROFINET</li> <li>▶ Transmission rate 100 MBit/s (100BaseTX), full and half duplex</li> <li>▶ Two RJ45 ports</li> <li>▶ Profinet IO device (V2.2) functions in accordance with Conformance Class C</li> <li>▶ Supported functions:                             <ul style="list-style-type: none"> <li>– RT</li> <li>– IRT</li> <li>– MRP</li> <li>– LLDP</li> </ul> </li> <li>▶ Status indicators</li> </ul>
<a href="#">PNOZ m ES CC-Link</a>	772 135	Fieldbus module CC-Link	<ul style="list-style-type: none"> <li>▶ CC-Link connection</li> <li>▶ Station addresses from 1 ... 63, selected via rotary switch</li> <li>▶ Station type: Remote Device</li> <li>▶ Occupied stations: 3</li> <li>▶ Status indicators</li> </ul>

Please refer to the section entitled [System expansion \[29\]](#) for details of the number of connectable expansion modules and the slot.





---

<b>Contents</b>	<b>Page</b>
Base units	69
Input modules	155
Output modules	172
Analogue input module	237
Link modules	247
Speed monitors	272
Fieldbus modules	384

## Base units


---

## Base units

---

<b>Contents</b>	<b>Page</b>
PNOZ m0p	71
PNOZ m1p	91
PNOZ m2p	113
PNOZ m3p	134

## Base units PNOZ m0p

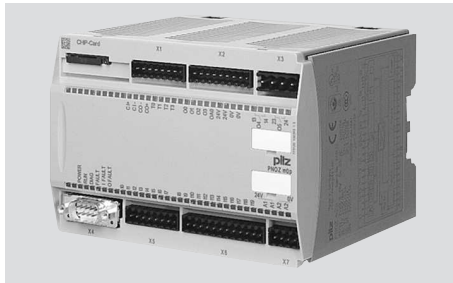

### Overview

#### Unit features

Using the product PNOZ m0p:

Base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Positive-guided relay outputs:
  - 2 safety outputs  
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Semiconductor outputs:
  - 4 safety outputs  
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
  - 1 output for standard applications
- ▶ 4 test pulse outputs
- ▶ 1 cascading input and output;  
can also be used as a standard output
- ▶ 20 inputs for connecting, for example:
  - E-STOP pushbuttons
  - Two-hand pushbuttons
  - Safety gate limit switches
  - Start buttons
  - Light beam devices
  - Scanners
  - Enabling switches
  - PSEN
  - Operating mode selector switches

## Base units PNOZ m0p

---

- Safety mats
- ▶ Muting function
- ▶ LED indicator for:
  - Diagnostics
  - Supply voltage
  - Output circuits
  - Input circuits
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Integrated interfaces:
  - PNOZ m0p: Serial interface RS232
  - PNOZ m0p **ETH**: 2 Ethernet interfaces
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)

### Chip card


To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

## Base units PNOZ m0p


### Front view

### PNOZ m0p

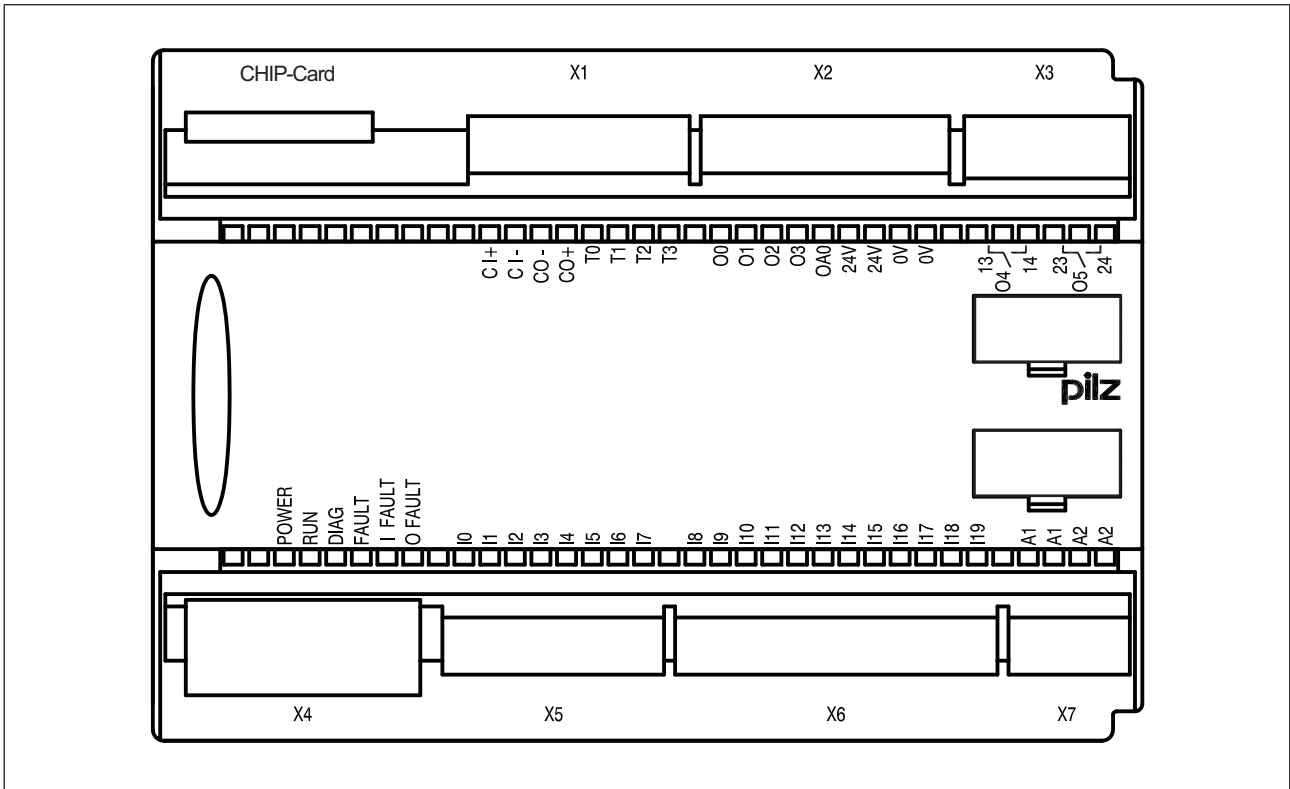

## Base units PNOZ m0p

### PNOZ m0p ETH

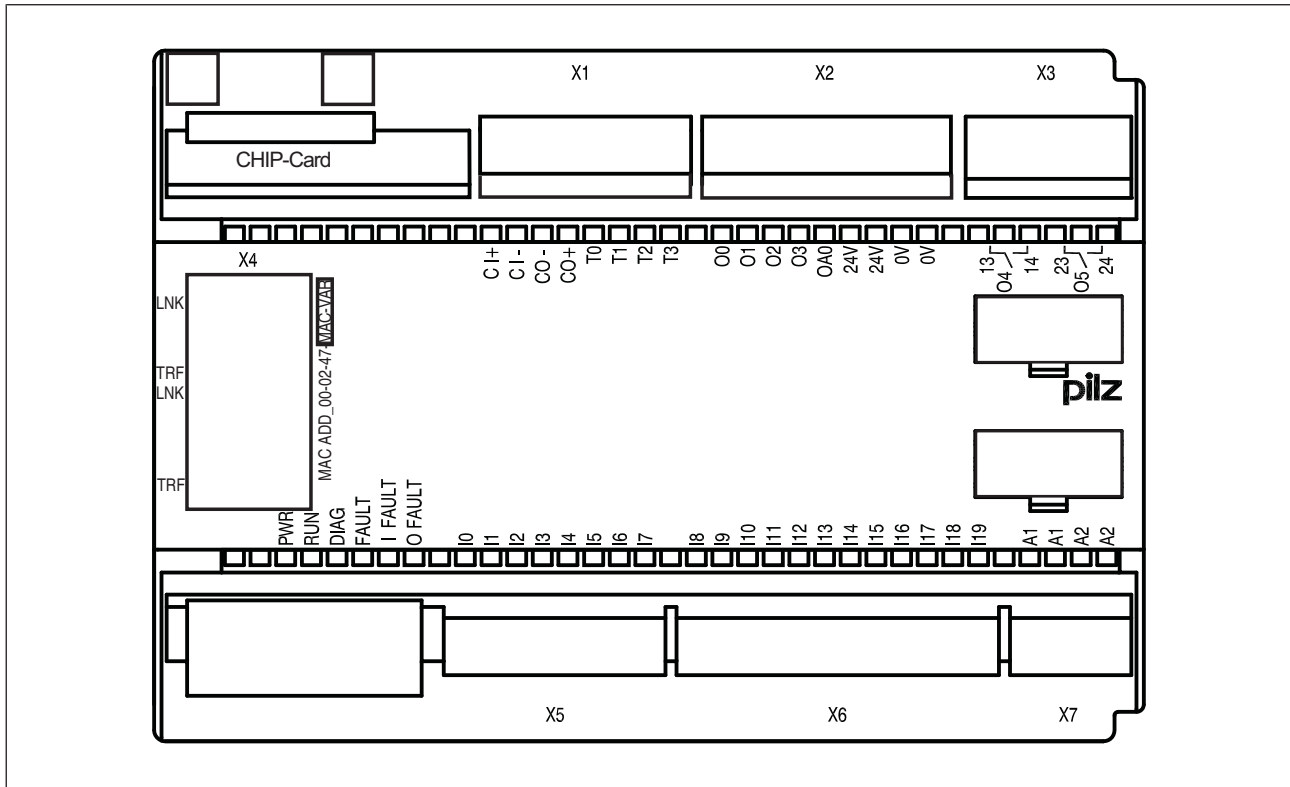

#### Legend:

CHIP card	Chipkarte interface
X1	Cascading inputs and outputs CI and CO, Test pulse outputs T0 ... T3
X2	Semiconductor outputs O0 ... O3, Auxiliary output OA0, Supply connections
X3	Relay outputs O4 and O5
X4	RS232 interface / Ethernet interface
X5, X6	Inputs I0 ... I19
X7	Power supply
LEDs:	PWR RUN DIAG FAULT I FAULT O FAULT



## Base units PNOZ m0p

### Function description


#### Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

### Block diagram

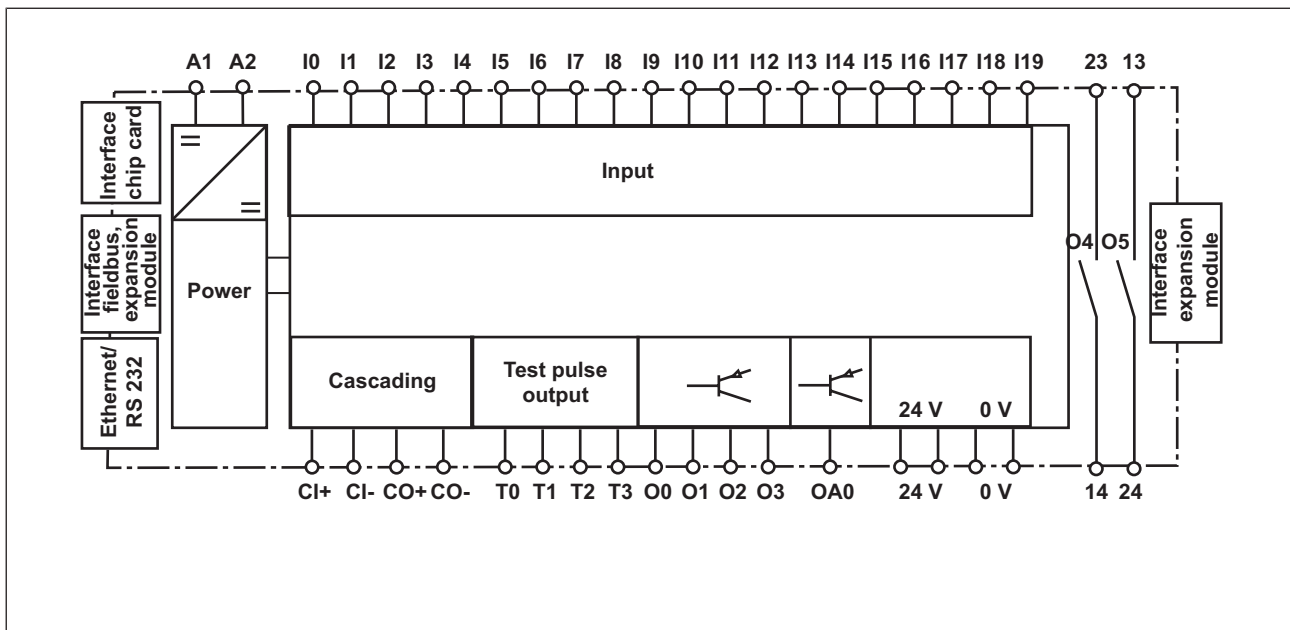


## Base units

### PNOZ m0p

## Installation

### Dimensions

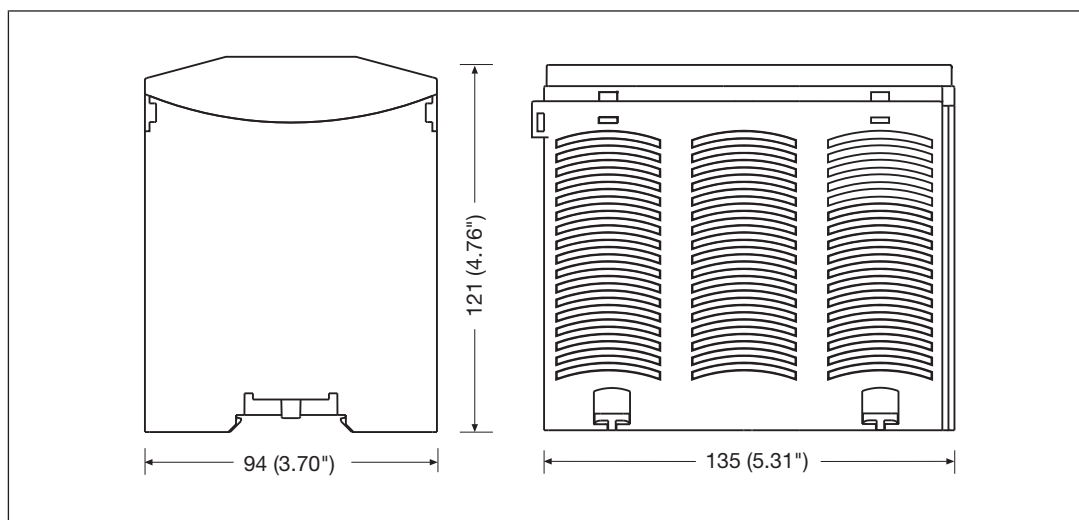

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[81\]](#) must be followed.
- ▶ Outputs:
  - O0 to O5 are safety outputs
  - O4 and O5 are relay outputs
  - O0 to O3 are semiconductor outputs
  - OA0 is an output to delete a project from the base unit (see online help for the PNOZmulti Configurator).
- ▶ To prevent contact welding, a fuse should be connected before the output contacts (see technical details).
- ▶ Use copper wiring with a temperature stability of 75°C.
- ▶ Sufficient fuse protection must be provided on all output contacts with inductive loads.
- ▶ The control system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.

## Base units PNOZ m0p

- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.  
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.  
Test pulses that are used for the safety mat may not be reused for other purposes.

### Connection

Supply voltage	AC	DC
For the safety system (connector X7)		
For the semiconductor outputs (connector X2) Must always be present, even if the semiconductor outputs are not used		

Supply voltage

Input circuit	Single-channel	Dual-channel
E-STOP <b>without</b> detection of shorts across contacts		
E-STOP <b>with</b> detection of shorts across contacts		

Connection examples for the input circuit

## Base units PNOZ m0p

Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts

Connection examples for start circuit

Redundant output		
Single output		

Connection examples for semiconductor outputs

## Base units PNOZ m0p

<p>Redundant output</p>		
<p>Single output</p>		

Connection examples for relay outputs


<p>Feedback loop</p>	<p>Redundant output</p>
<p>Contacts from external contactors</p>	

Connection examples for feedback loop

## Base units PNOZ m0p

### Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (I17), feedback loop (I14), cascading output as auxiliary output (CO+/A2)

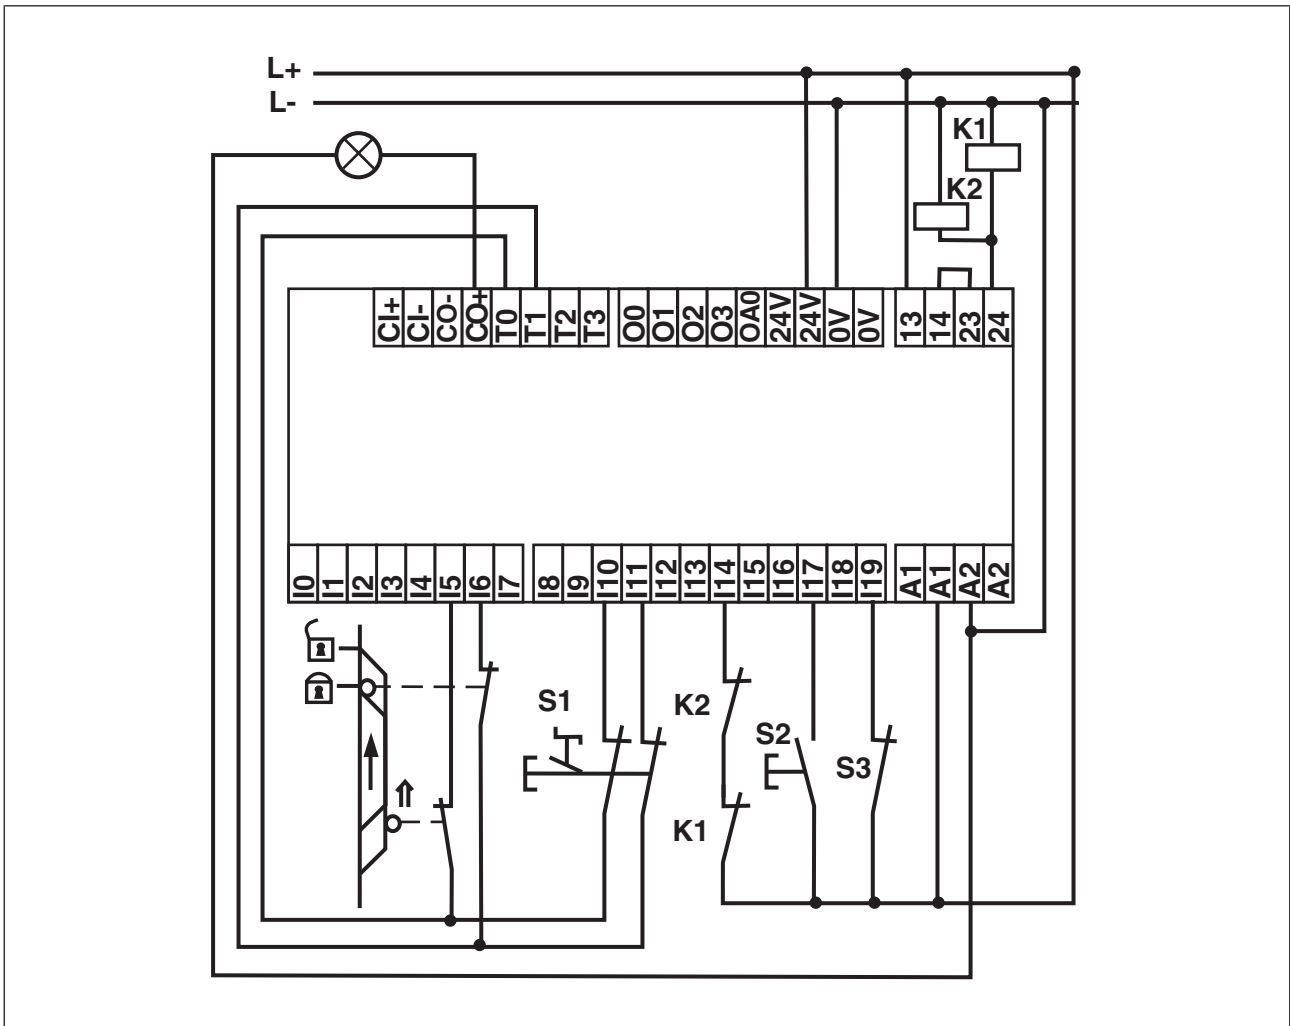

## Base units PNOZ m0p

### Technical Details

General	773110	773113
Approvals	BG, CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), KCC, TÜV, cULus Listed
Electrical data	773110	773113
Supply voltage		
for	<b>Supply to the system</b>	<b>Supply to the system</b>
Voltage	<b>24,0 V</b>	<b>24,0 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>	<b>-15 %/+20 %</b>
Output of external power supply (DC) at no load	<b>8,0 W</b>	<b>9,0 W</b>
Residual ripple DC	<b>5 %</b>	<b>5 %</b>
Supply voltage		
for	<b>Supply to the SC outputs</b>	<b>Supply to the SC outputs</b>
Voltage	<b>24 V</b>	<b>24 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>192,0 W</b>	<b>192,0 W</b>
Residual ripple DC	<b>5 %</b>	<b>5 %</b>
Potential isolation	<b>yes</b>	<b>yes</b>
Status indicator	<b>LED</b>	<b>LED</b>
Inputs	773110	773113
Number	<b>20</b>	<b>20</b>
Max. number of live inputs within the max. permitted ambient tem- perature (see "Environmental data")	<b>U<sub>B</sub> ≤ 26,4 V : 20, U<sub>B</sub> &gt; 26,4 V : 15</b>	<b>U<sub>B</sub> ≤ 26,4 V : 20, U<sub>B</sub> &gt; 26,4 V : 15</b>
Signal level at "0"	<b>-3 - +5 V DC</b>	<b>-3 - +5 V DC</b>
Signal level at "1"	<b>15 - 30 V DC</b>	<b>15 - 30 V DC</b>
Input voltage in accordance with EN 61131-2 Type 1	<b>24 V DC</b>	<b>24 V DC</b>
Input current at rated voltage	<b>8 mA</b>	<b>8 mA</b>
Min. pulse duration	<b>18 ms</b>	<b>18 ms</b>
Pulse suppression	<b>0,6 ms</b>	<b>0,6 ms</b>
Maximum input delay	<b>4 ms</b>	<b>4 ms</b>
Potential isolation	<b>No</b>	<b>No</b>
Semiconductor outputs	773110	773113
Number	<b>4</b>	<b>4</b>

## Base units PNOZ m0p

<b>Semiconductor outputs</b>	<b>773110</b>	<b>773113</b>
Switching capability		
Voltage	<b>24 V</b>	<b>24 V</b>
Current	<b>2,0 A</b>	<b>2,0 A</b>
Power	<b>48 W</b>	<b>48 W</b>
Signal level at "1"	<b>UB - 0.5 VDC at 2 A</b>	<b>UB - 0.5 VDC at 2 A</b>
Residual current at "0"	<b>0,5 mA</b>	<b>0,5 mA</b>
Max. capacitive load	<b>1 µF</b>	<b>1 µF</b>
Max. duration of off time during self test	<b>300 µs</b>	<b>300 µs</b>
Switch-off delay	<b>30 ms</b>	<b>30 ms</b>
Potential isolation	<b>yes</b>	<b>yes</b>
Short circuit-proof	<b>yes</b>	<b>yes</b>
<b>Semiconductor outputs (standard)</b>	<b>773110</b>	<b>773113</b>
Number	<b>1</b>	<b>1</b>
Switching capability		
Voltage	<b>24 V</b>	<b>24 V</b>
Current	<b>0,50 A</b>	<b>0,50 A</b>
Power	<b>12,0 W</b>	<b>12,0 W</b>
Galvanic isolation	<b>yes</b>	<b>yes</b>
Short circuit-proof	<b>yes</b>	<b>yes</b>
Residual current at "0"	<b>0,5 mA</b>	<b>0,5 mA</b>
Signal level at "1"	<b>UB - 0.5 VDC at 0.5 A</b>	<b>UB - 0.5 VDC at 0.5 A</b>
<b>Test pulse outputs</b>	<b>773110</b>	<b>773113</b>
Number of test pulse outputs	<b>4</b>	<b>4</b>
Voltage	<b>24 V</b>	<b>24 V</b>
Current	<b>0,5 A</b>	<b>0,5 A</b>
Max. duration of off time during self test	<b>5 ms</b>	<b>5 ms</b>
Short circuit-proof	<b>yes</b>	<b>yes</b>
Potential isolation	<b>No</b>	<b>No</b>
<b>Relay outputs</b>	<b>773110</b>	<b>773113</b>
Utilisation category		
In accordance with the standard	<b>EN 60947-4-1</b>	<b>EN 60947-4-1</b>
Utilisation category of safety contacts		
AC1 at	<b>240 V</b>	<b>240 V</b>
Max. current	<b>6,0 A</b>	<b>6,0 A</b>
Max. power	<b>1440 VA</b>	<b>1440 VA</b>
DC1 at	<b>24 V</b>	<b>24 V</b>
Max. current	<b>6,0 A</b>	<b>6,0 A</b>
Max. power	<b>144 W</b>	<b>144 W</b>



## Base units PNOZ m0p

<b>Relay outputs</b>	<b>773110</b>	<b>773113</b>
Utilisation category		
In accordance with the standard	<b>EN 60947-5-1</b>	<b>EN 60947-5-1</b>
Utilisation category of safety contacts		
AC15 at	<b>230 V</b>	<b>230 V</b>
Max. current	<b>3,0 A</b>	<b>3,0 A</b>
Max. power	<b>690 W</b>	<b>690 W</b>
DC13 (6 cycles/min) at	<b>24 V</b>	<b>24 V</b>
Max. current	<b>3,0 A</b>	<b>3,0 A</b>
Max. power	<b>72 W</b>	<b>72 W</b>
Airgap creepage between		
Relay contacts	<b>3 mm</b>	<b>3 mm</b>
Relay contacts and other circuits	<b>5,5 mm</b>	<b>5,5 mm</b>
External contact fuse protection, safety contacts		
In accordance with the standard	<b>EN 60947-5-1</b>	<b>EN 60947-5-1</b>
Blow-out fuse, quick	<b>6 A</b>	<b>6 A</b>
Blow-out fuse, slow	<b>6,00 A</b>	<b>6,00 A</b>
Circuit breaker 24V AC/DC, characteristic B/C	<b>6 A</b>	<b>6 A</b>
Switch-off delay	<b>50 ms</b>	<b>50 ms</b>
Potential isolation	<b>yes</b>	<b>yes</b>
<b>Cascading output as standard output</b>	<b>773110</b>	<b>773113</b>
Number	<b>1</b>	<b>1</b>
Switching capability		
Voltage	<b>24 V</b>	<b>24 V</b>
Current	<b>0,2 A</b>	<b>0,2 A</b>
Power	<b>4,8 W</b>	<b>4,8 W</b>
Galvanic isolation	<b>No</b>	<b>No</b>
Short circuit-proof	<b>yes</b>	<b>yes</b>
Residual current at "0"	<b>0,5 mA</b>	<b>0,5 mA</b>
<b>Ethernet interface</b>	<b>773110</b>	<b>773113</b>
Number	<b>–</b>	<b>2</b>
<b>Serial interface</b>	<b>773110</b>	<b>773113</b>
Number of RS232 interfaces	<b>1</b>	<b>–</b>
<b>Times</b>	<b>773110</b>	<b>773113</b>
Switch-on delay	<b>5,00 s</b>	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>	<b>20 ms</b>
Simultaneity, channel 1 and 2 max.	<b>3 s</b>	<b>3 s</b>
Simultaneity in the two-hand circuit	<b>0,5 s</b>	<b>0,5 s</b>

## Base units PNOZ m0p

<b>Times</b>	<b>773110</b>	<b>773113</b>
Max. cycle time of the device	<b>15 ms</b>	<b>15 ms</b>
Max. processing time for data communication	–	<b>50 ms</b>
<b>Environmental data</b>	<b>773110</b>	<b>773113</b>
Ambient temperature		
In accordance with the standard	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>	<b>55 °C</b>
Storage temperature		
In accordance with the standard	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>	<b>-25 - 70 °C</b>
Climatic suitability		
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Vibration		
In accordance with the standard	<b>EN 60068-2-6</b>	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>	<b>1g</b>
Shock stress		
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>
Airgap creepage		
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>250 V</b>	<b>250 V</b>
Rated impulse withstand voltage	<b>6,00 kV</b>	<b>6,00 kV</b>
Protection type		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>
<b>Potential isolation</b>	<b>773110</b>	<b>773113</b>
Potential isolation between	<b>SC output and system voltage</b>	<b>SC output and system voltage</b>
Type of potential isolation	<b>Protective separation</b>	<b>Protective separation</b>

## Base units PNOZ m0p

<b>Potential isolation</b>	<b>773110</b>	<b>773113</b>
Rated surge voltage	<b>2500 V</b>	<b>2500 V</b>
Potential isolation between	<b>RL output and system voltage</b>	<b>RL output and system voltage</b>
Type of potential isolation	<b>Protective separation</b>	<b>Protective separation</b>
Rated surge voltage	<b>6000 V</b>	<b>6000 V</b>
<b>Mechanical data</b>	<b>773110</b>	<b>773113</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>
DIN rail		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
Max. cable length		
Max. cable length per input	<b>1,0 km</b>	<b>1,0 km</b>
Sum of individual cable lengths at the test pulse output	<b>40 km</b>	<b>40 km</b>
Material		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals		
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Conductor cross section with screw terminals (relay outputs)		
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>	<b>0,25 Nm</b>
Torque setting with screw terminals (relay outputs)	<b>0,50 Nm</b>	<b>0,50 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>	<b>7 mm</b>
Stripping length with screw terminals (relay outputs)	<b>8 mm</b>	<b>8 mm</b>

## Base units PNOZ m0p

Mechanical data	773110	773113
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG
Conductor cross section with spring-loaded terminals (relay outputs)		
1 core flexible without crimp connector	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
1 core flexible with crimp connector	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm
Stripping length with spring-loaded terminals (relay outputs)	10 mm	10 mm
Dimensions		
Height	94,0 mm	94,0 mm
Width	135,0 mm	135,0 mm
Depth	121,0 mm	121,0 mm
Weight	499 g	518 g

Where standards are undated, the 2010-10 latest editions shall apply.

## Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
<b>Logic</b>						
CPU	2-channel	PL e	Cat. 4	SIL CL 3	4,90E-09	20
<b>Input</b>						
SC inputs	1-channel	PL d	Cat. 2	SIL CL 2	2,50E-09	20
SC inputs	2-channel	PL e	Cat. 4	SIL CL 3	2,90E-10	20
SC inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,81E-09	20
SC inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	2,50E-10	20

## Base units PNOZ m0p

Input						
Cascad. inputs	–	<b>PL e</b>	<b>Cat. 4</b>	<b>SIL CL 3</b>	<b>3,10E-10</b>	<b>20</b>
Output						
SC outputs	<b>1-channel</b>	<b>PL d</b>	<b>Cat. 2</b>	<b>SIL CL 2</b>	<b>7,00E-09</b>	<b>20</b>
SC outputs	<b>2-channel</b>	<b>PL e</b>	<b>Cat. 4</b>	<b>SIL CL 3</b>	<b>8,60E-10</b>	<b>20</b>
Cascad. outputs	–	<b>PL e</b>	<b>Cat. 4</b>	<b>SIL CL 3</b>	<b>4,91E-10</b>	<b>20</b>
Relay outputs	<b>1-channel</b>	<b>PL c</b>	<b>Cat. 1</b>	<b>-</b>	<b>2,90E-08</b>	<b>20</b>
Relay outputs	<b>2-channel</b>	<b>PL e</b>	<b>Cat. 4</b>	<b>SIL CL 3</b>	<b>3,00E-10</b>	<b>20</b>

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switching frequency and the load on the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

**Base units**  
PNOZ m0p

**Supplementary data**

**Service life graph for the relay contacts**

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

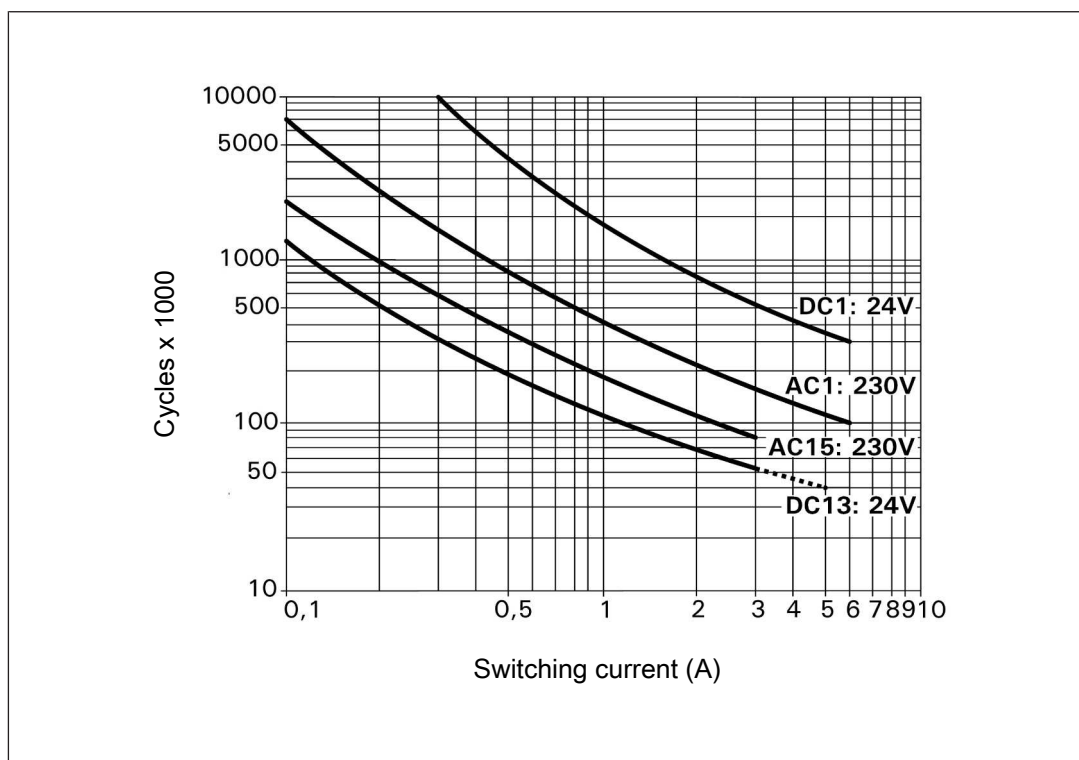


Fig.: Service life graphs at 24 VDC and 230 VAC

## Base units PNOZ m0p

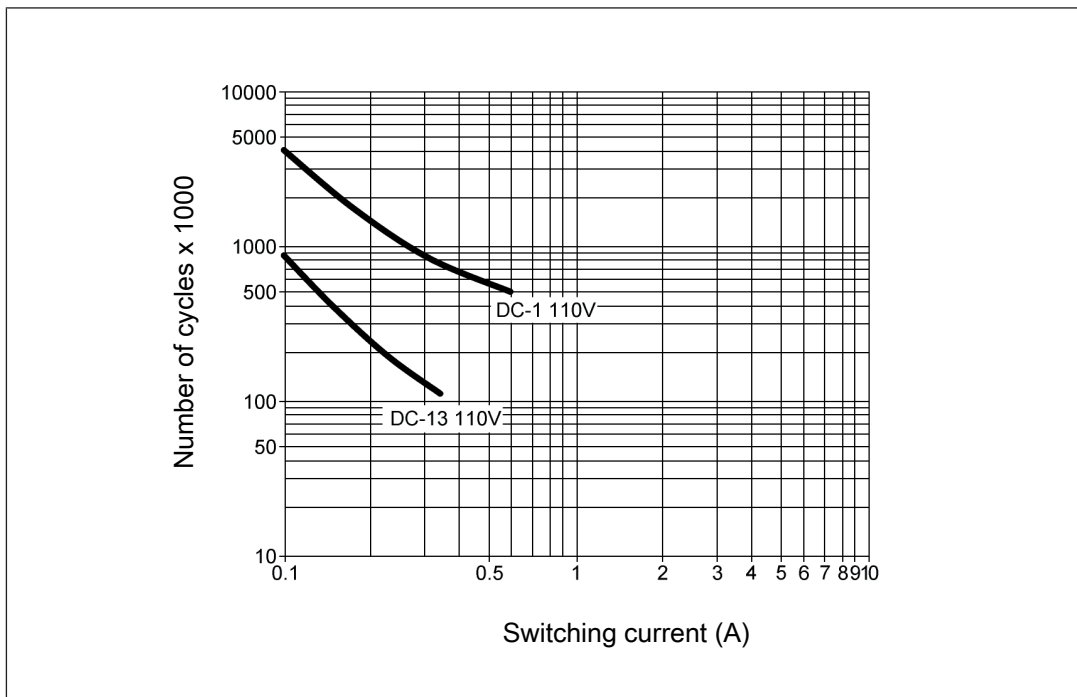


Fig.: Service life graphs at 110 VDC

### Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[81\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

## Base units PNOZ m0p

### Order reference

#### Product

Product type	Features	Order No.
PNOZ m0p	Base unit	773 110
PNOZ m0p ETH	Base unit, Ethernet interface	773 113

#### Accessories

##### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 100
Set screw terminals	1 set of screw terminals	793 100

##### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639



## Base units PNOZ m1p

---



### Overview

#### Unit features

Using the product PNOZ m1p:


Base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Positive-guided relay outputs:
  - 2 safety outputs  
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Semiconductor outputs:
  - 4 safety outputs  
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
  - 1 output for standard applications
- ▶ 4 test pulse outputs
- ▶ 1 cascading input and output;  
can also be used as a standard output
- ▶ 20 inputs for connecting, for example:
  - E-STOP pushbuttons
  - Two-hand pushbuttons
  - Safety gate limit switches
  - Start buttons
  - Light beam devices
  - Scanners
  - Enabling switches
  - PSEN
  - Operating mode selector switches

## Base units PNOZ m1p

---

- Safety mats
- ▶ Muting function
- ▶ LED indicator for:
  - Diagnostics
  - Supply voltage
  - Output circuits
  - Input circuits
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Expansion modules can be connected  
(please refer to the document "PNOZmulti System Expansion" for details of the type and number that can be connected)
- ▶ Integrated interfaces:
  - PNOZ m1p: Serial interface RS232
  - PNOZ m1p **ETH**: 2 Ethernet interfaces
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Coated version:  
Increased environmental requirements (see [Technical details](#)  101)

### Chip card


To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

## Base units PNOZ m1p


### Front view

### PNOZ m1p

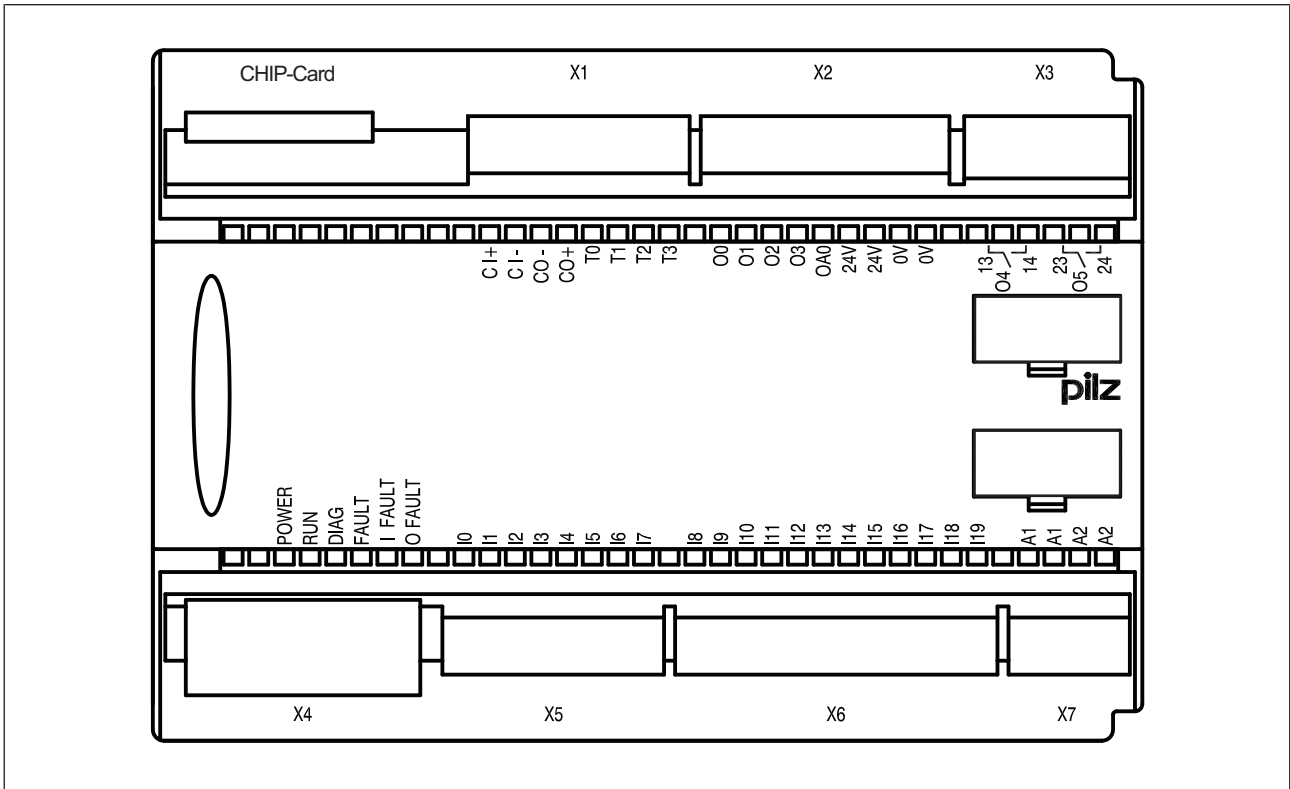

## Base units PNOZ m1p

### PNOZ m1p ETH

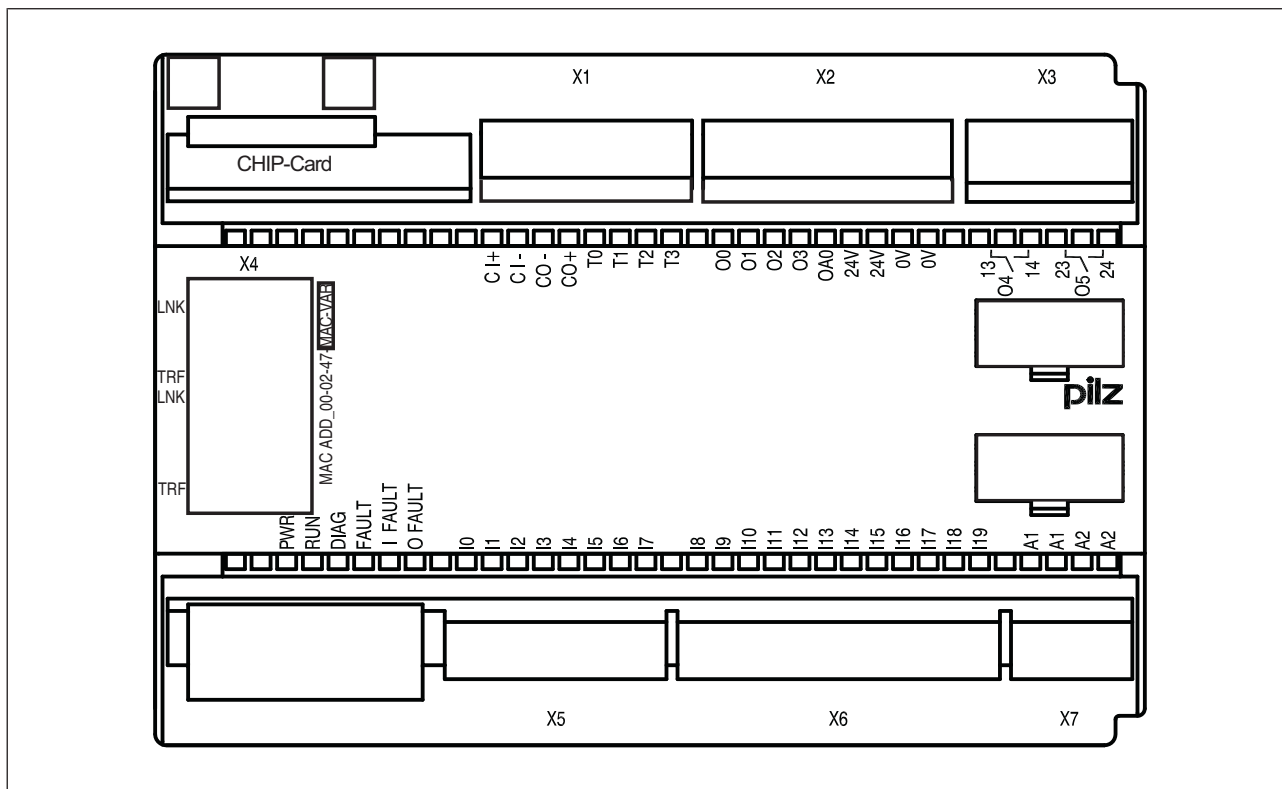

#### Legend:

CHIP card	Chipkarte interface
X1	Cascading inputs and outputs CI and CO, Test pulse outputs T0 ... T3
X2	Semiconductor outputs O0 ... O3, Auxiliary output OA0, Supply connections
X3	Relay outputs O4 and O5
X4	RS232 interface / Ethernet interface
X5, X6	Inputs I0 ... I19
X7	Power supply
LEDs:	PWR RUN DIAG FAULT I FAULT O FAULT

## Base units PNOZ m1p

### Function description


#### Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

#### Block diagram

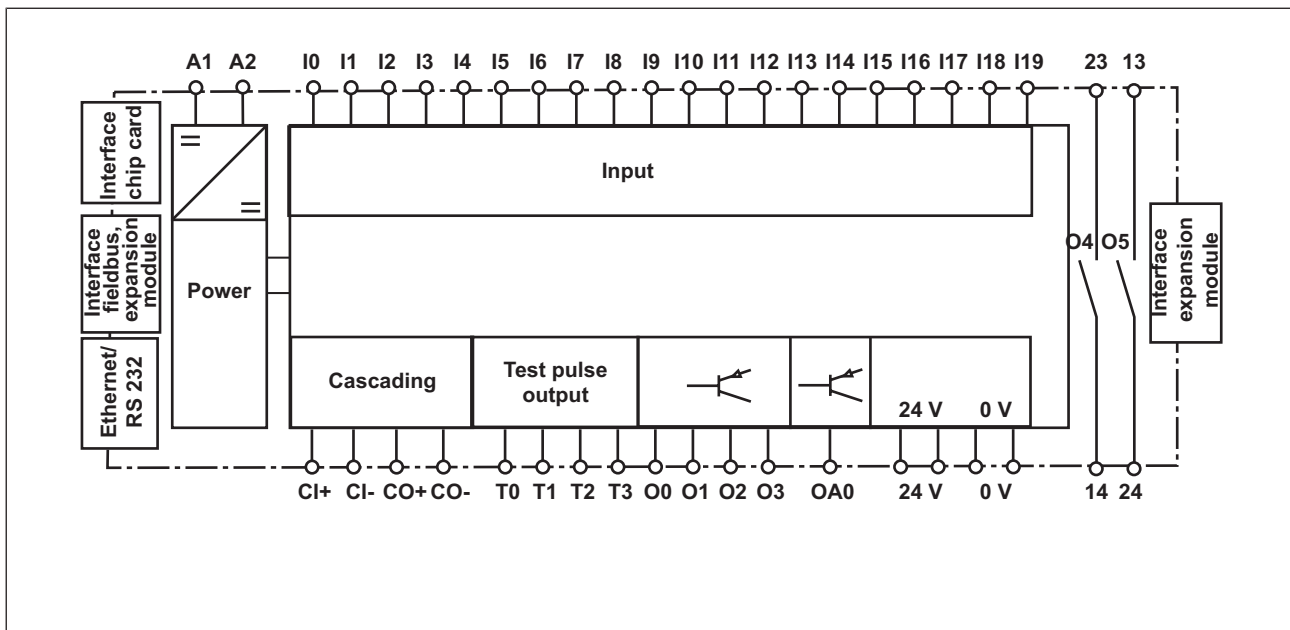


## Base units

### PNOZ m1p

## Installation

### Dimensions

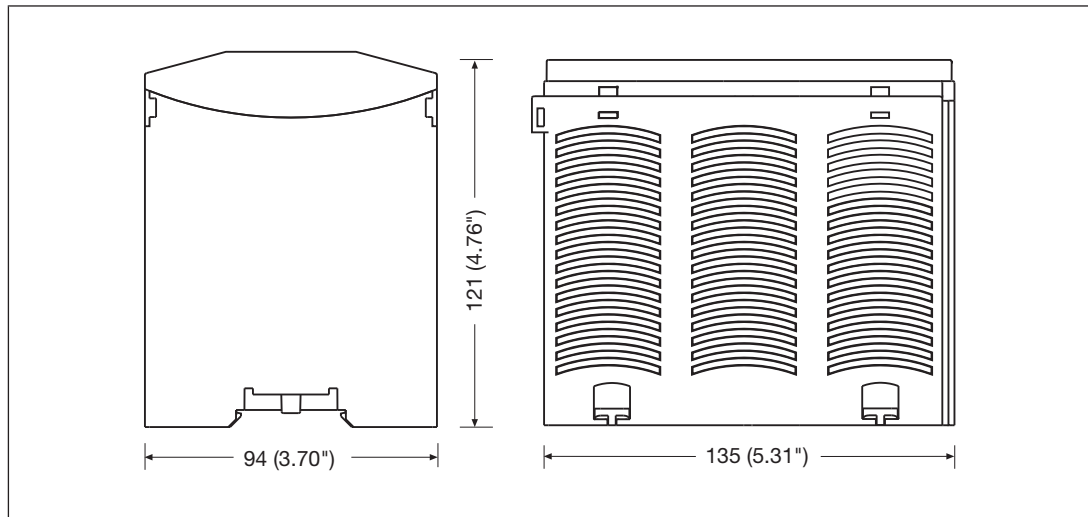

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[101\]](#) must be followed.
- ▶ Outputs:
  - O0 to O5 are safety outputs
  - O4 and O5 are relay outputs
  - O0 to O3 are semiconductor outputs
  - OA0 is an output to delete a project from the base unit (see online help for the PNOZmulti Configurator).
- ▶ To prevent contact welding, a fuse should be connected before the output contacts (see technical details).
- ▶ Use copper wiring with a temperature stability of 75°C.
- ▶ Sufficient fuse protection must be provided on all output contacts with inductive loads.
- ▶ The control system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.

## Base units PNOZ m1p

- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.  
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.  
Test pulses that are used for the safety mat may not be reused for other purposes.

### Connection

Supply voltage	AC	DC
For the safety system (connector X7)		
For the semiconductor outputs (connector X2) Must always be present, even if the semiconductor outputs are not used		

Supply voltage

Input circuit	Single-channel	Dual-channel
E-STOP <b>without</b> detection of shorts across contacts		
E-STOP <b>with</b> detection of shorts across contacts		

Connection examples for the input circuit

## Base units PNOZ m1p

Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts

Connection examples for start circuit

Redundant output		
Single output		

Connection examples for semiconductor outputs



## Base units PNOZ m1p

<p>Redundant output</p>		
<p>Single output</p>		

Connection examples for relay outputs


<p>Feedback loop</p>	<p>Redundant output</p>
<p>Contacts from external contactors</p>	

Connection examples for feedback loop

## Base units PNOZ m1p

### Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (I17), feedback loop (I14), cascading output as auxiliary output (CO+/A2)

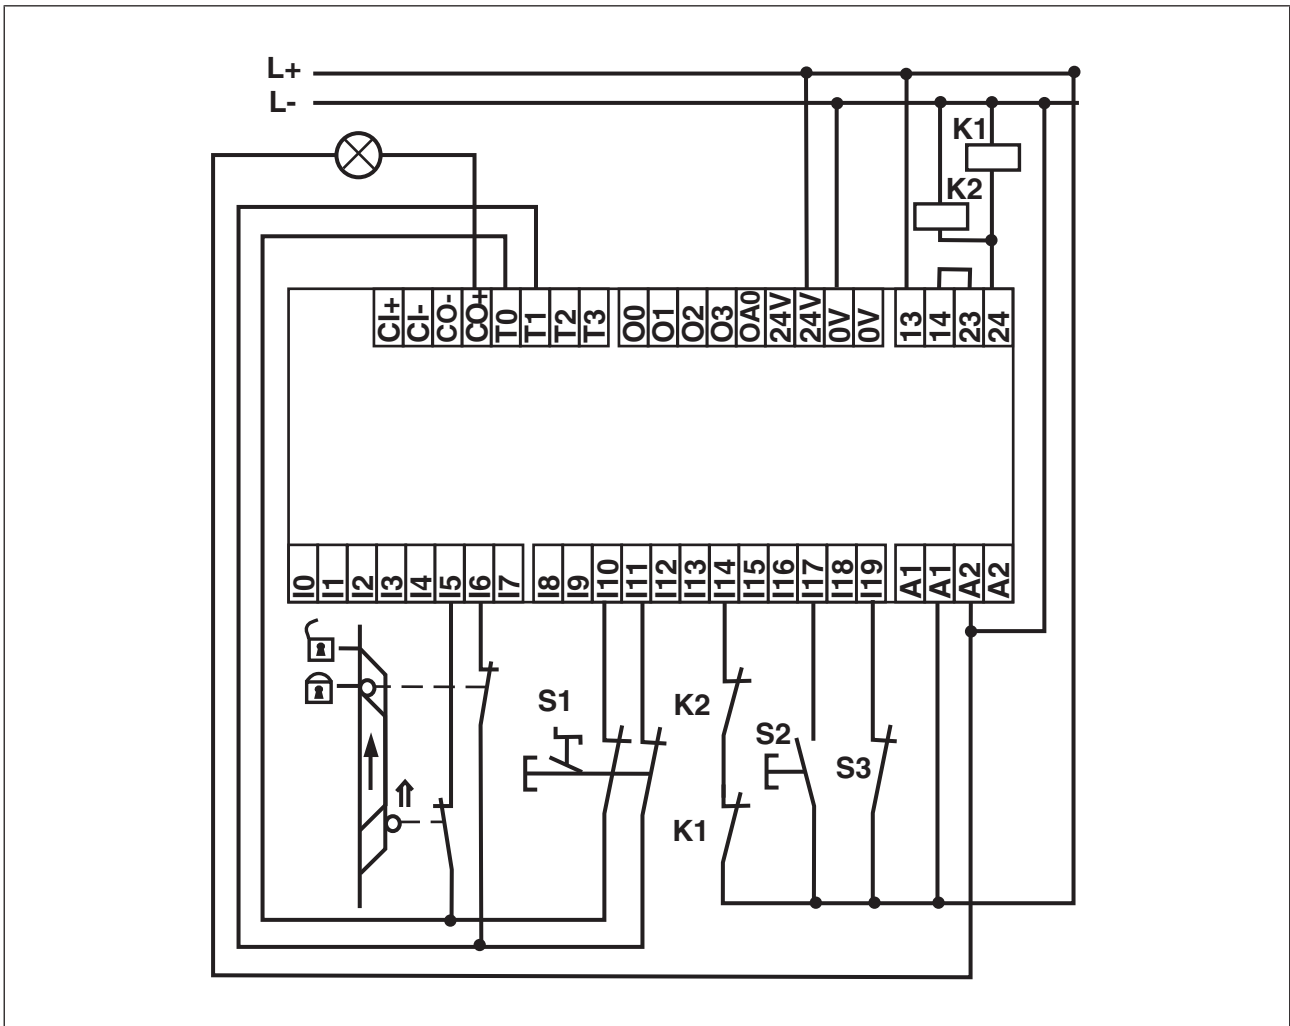

## Base units PNOZ m1p

### Technical Details

General	773100	773103	773104	773105
Approvals	BG, CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), KCC, TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed
Electrical data	773100	773103	773104	773105
Supply voltage for	Supply to the system	Supply to the system	Supply to the system	Supply to the system
Voltage	24,0 V	24,0 V	24,0 V	24,0 V
Kind	DC	DC	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC) at no load	8,0 W	9,0 W	9,0 W	8,0 W
Residual ripple DC	5 %	5 %	5 %	5 %
Supply voltage for	Supply to the SC outputs	Supply to the SC outputs	Supply to the SC outputs	Supply to the SC outputs
Voltage	24 V	24 V	24 V	24 V
Kind	DC	DC	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC)	192,0 W	192,0 W	192,0 W	192,0 W
Residual ripple DC	5 %	5 %	5 %	5 %
Potential isolation	yes	yes	yes	yes
Supply voltage				
Power consumption per expansion module	2,50 W	2,50 W	2,50 W	2,50 W
Status indicator	LED	LED	LED	LED
Inputs	773100	773103	773104	773105
Number	20	20	20	20
Max. number of live inputs within the max. permitted ambient temperature (see "Environmental data")	U <sub>B</sub> ≤ 26,4 V : 20, U <sub>B</sub> > 26,4 V : 15	U <sub>B</sub> ≤ 26,4 V : 20, U <sub>B</sub> > 26,4 V : 15	U <sub>B</sub> ≤ 26,4 V : 20, U <sub>B</sub> > 26,4 V : 15	U <sub>B</sub> ≤ 26,4 V : 20, U <sub>B</sub> > 26,4 V : 15
Signal level at "0"	-3 - +5 V DC	-3 - +5 V DC	-3 - +5 V DC	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC	15 - 30 V DC	15 - 30 V DC	15 - 30 V DC

## Base units PNOZ m1p

<b>Inputs</b>	<b>773100</b>	<b>773103</b>	<b>773104</b>	<b>773105</b>
Input voltage in accordance with EN 61131-2 Type 1	<b>24 V DC</b>	<b>24 V DC</b>	<b>24 V DC</b>	<b>24 V DC</b>
Input current at rated voltage	<b>8 mA</b>	<b>8 mA</b>	<b>8 mA</b>	<b>8 mA</b>
Min. pulse duration	<b>18 ms</b>	<b>18 ms</b>	<b>18 ms</b>	<b>18 ms</b>
Pulse suppression	<b>0,6 ms</b>	<b>0,6 ms</b>	<b>0,6 ms</b>	<b>0,6 ms</b>
Maximum input delay	<b>4 ms</b>	<b>4 ms</b>	<b>4 ms</b>	<b>4 ms</b>
Potential isolation	<b>No</b>	<b>No</b>	<b>No</b>	<b>No</b>
<b>Semiconductor outputs</b>	<b>773100</b>	<b>773103</b>	<b>773104</b>	<b>773105</b>
Number	<b>4</b>	<b>4</b>	<b>4</b>	<b>4</b>
Switching capability				
Voltage	<b>24 V</b>	<b>24 V</b>	<b>24 V</b>	<b>24 V</b>
Current	<b>2,0 A</b>	<b>2,0 A</b>	<b>2,0 A</b>	<b>2,0 A</b>
Power	<b>48 W</b>	<b>48 W</b>	<b>48 W</b>	<b>48 W</b>
Voltage	–	–	<b>24 V</b>	<b>24 V</b>
Current	–	–	<b>1 A</b>	<b>1 A</b>
Power	–	–	<b>24 W</b>	<b>24 W</b>
Signal level at "1"	<b>UB - 0.5 VDC at 2 A</b>	<b>UB - 0.5 VDC at 2 A</b>	<b>UB - 0.5 VDC at 2 A</b>	<b>UB - 0.5 VDC at 2 A</b>
Residual current at "0"	<b>0,5 mA</b>	<b>0,5 mA</b>	<b>0,5 mA</b>	<b>0,5 mA</b>
Max. capacitive load	<b>1 µF</b>	<b>1 µF</b>	<b>1 µF</b>	<b>1 µF</b>
Max. duration of off time during self test	<b>300 µs</b>	<b>300 µs</b>	<b>300 µs</b>	<b>300 µs</b>
Switch-off delay	<b>30 ms</b>	<b>30 ms</b>	<b>30 ms</b>	<b>30 ms</b>
Potential isolation	<b>yes</b>	<b>yes</b>	<b>yes</b>	<b>yes</b>
Short circuit-proof	<b>yes</b>	<b>yes</b>	<b>yes</b>	<b>yes</b>
<b>Semiconductor outputs (standard)</b>	<b>773100</b>	<b>773103</b>	<b>773104</b>	<b>773105</b>
Number	<b>1</b>	<b>1</b>	<b>1</b>	<b>1</b>
Switching capability				
Voltage	<b>24 V</b>	<b>24 V</b>	<b>24 V</b>	<b>24 V</b>
Current	<b>0,50 A</b>	<b>0,50 A</b>	<b>0,50 A</b>	<b>0,50 A</b>
Power	<b>12,0 W</b>	<b>12,0 W</b>	<b>12,0 W</b>	<b>12,0 W</b>
Galvanic isolation	<b>yes</b>	<b>yes</b>	<b>yes</b>	<b>yes</b>
Short circuit-proof	<b>yes</b>	<b>yes</b>	<b>yes</b>	<b>yes</b>
Residual current at "0"	<b>0,5 mA</b>	<b>0,5 mA</b>	<b>0,5 mA</b>	<b>0,5 mA</b>
Signal level at "1"	<b>UB - 0.5 VDC at 0.5 A</b>	<b>UB - 0.5 VDC at 0.5 A</b>	<b>UB - 0.5 VDC at 0.5 A</b>	<b>UB - 0.5 VDC at 0.5 A</b>

## Base units PNOZ m1p

Test pulse outputs	773100	773103	773104	773105
Number of test pulse outputs	4	4	4	4
Voltage	24 V	24 V	24 V	24 V
Current	0,5 A	0,5 A	0,5 A	0,5 A
Max. duration of off time during self test	5 ms	5 ms	5 ms	5 ms
Short circuit-proof	yes	yes	yes	yes
Potential isolation	No	No	No	No
Relay outputs	773100	773103	773104	773105
Utilisation category				
In accordance with the standard	EN 60947-4-1	EN 60947-4-1	EN 60947-4-1	EN 60947-4-1
Utilisation category of safety contacts				
AC1 at	240 V	240 V	240 V	240 V
Max. current	6,0 A	6,0 A	6,0 A	6,0 A
Max. power	1440 VA	1440 VA	1440 VA	1440 VA
DC1 at	24 V	24 V	24 V	24 V
Max. current	6,0 A	6,0 A	6,0 A	6,0 A
Max. power	144 W	144 W	144 W	144 W
Safety contacts, AC1 at				
	–	–	240 V	240 V
Max. current	–	–	4 A	4 A
Max. power	–	–	960 W	960 W
Safety contacts, DC 1 at				
	–	–	24 V	24 V
Max. current	–	–	4 A	4 A
Max. power	–	–	96 W	96 W
Utilisation category				
In accordance with the standard	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1
Utilisation category of safety contacts				
AC15 at	230 V	230 V	230 V	230 V
Max. current	3,0 A	3,0 A	3,0 A	3,0 A
Max. power	690 W	690 W	690 W	690 W
DC13 (6 cycles/min) at	24 V	24 V	24 V	24 V
Max. current	3,0 A	3,0 A	3,0 A	3,0 A
Max. power	72 W	72 W	72 W	72 W

## Base units PNOZ m1p

<b>Relay outputs</b>	<b>773100</b>	<b>773103</b>	<b>773104</b>	<b>773105</b>
Airgap creepage between				
Relay contacts	3 mm	3 mm	3 mm	3 mm
Relay contacts and other circuits	5,5 mm	5,5 mm	5,5 mm	5,5 mm
External contact fuse protection, safety contacts				
In accordance with the standard	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1
Blow-out fuse, quick	6 A	6 A	6 A	6 A
Blow-out fuse, slow	6,00 A	6,00 A	6,00 A	6,00 A
Circuit breaker 24V AC/DC, characteristic B/C	6 A	6 A	6 A	6 A
Switch-off delay	50 ms	50 ms	50 ms	50 ms
Potential isolation	yes	yes	yes	yes
<b>Cascading output as standard output</b>	<b>773100</b>	<b>773103</b>	<b>773104</b>	<b>773105</b>
Number	1	1	1	1
Switching capability				
Voltage	24 V	24 V	24 V	24 V
Current	0,2 A	0,2 A	0,2 A	0,2 A
Power	4,8 W	4,8 W	4,8 W	4,8 W
Galvanic isolation	No	No	No	No
Short circuit-proof	yes	yes	yes	yes
Residual current at "0"	0,5 mA	0,5 mA	0,5 mA	0,5 mA
<b>Ethernet interface</b>	<b>773100</b>	<b>773103</b>	<b>773104</b>	<b>773105</b>
Number	–	2	2	–
<b>Serial interface</b>	<b>773100</b>	<b>773103</b>	<b>773104</b>	<b>773105</b>
Number of RS232 interfaces	1	–	–	1
<b>Times</b>	<b>773100</b>	<b>773103</b>	<b>773104</b>	<b>773105</b>
Switch-on delay	5,00 s	5,00 s	5,00 s	5,00 s
Supply interruption before de-energisation	20 ms	20 ms	20 ms	20 ms
Simultaneity, channel 1 and 2 max.	3 s	3 s	3 s	3 s
Simultaneity in the two-hand circuit	0,5 s	0,5 s	0,5 s	0,5 s

## Base units PNOZ m1p

Times	773100	773103	773104	773105
Max. cycle time of the device	15 ms	15 ms	15 ms	15 ms
Max. processing time for data communication	–	50 ms	50 ms	–
<b>Environmental data</b>	<b>773100</b>	<b>773103</b>	<b>773104</b>	<b>773105</b>
Ambient temperature				
In accordance with the standard	EN 60068-2-14	EN 60068-2-14	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	0 - 60 °C	-25 - 60 °C	-25 - 60 °C
Forced convection in control cabinet off	55 °C	55 °C	–	–
Storage temperature				
In accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C	-25 - 70 °C	-25 - 70 °C
Climatic suitability				
In accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Not permitted	Short-term (only with separated extra low voltage)	Short-term (only with separated extra low voltage)
EMC	EN 61131-2	EN 61131-2	EN 61131-2	EN 61131-2
Vibration				
In accordance with the standard	EN 60068-2-6	EN 60068-2-6	EN 60068-2-6	EN 60068-2-6
Frequency	10,0 - 150,0 Hz	10,0 - 150,0 Hz	5,0 - 500,0 Hz	5,0 - 500,0 Hz
Acceleration	1g	1g	1g	1g
Broadband noise				
In accordance with the standard	–	–	EN 60068-2-64	EN 60068-2-64
Frequency	–	–	5 - 500 Hz	5 - 500 Hz
Acceleration	–	–	19 m/s <sup>2</sup> rms	19 m/s <sup>2</sup> rms

## Base units PNOZ m1p

<b>Environmental data</b>	<b>773100</b>	<b>773103</b>	<b>773104</b>	<b>773105</b>
<b>Corrosive gas check</b>				
SO <sub>2</sub> : Concentration 10 ppm, duration 10 days, passive	–	–	<b>DIN V 40046-36</b>	<b>DIN V 40046-36</b>
H <sub>2</sub> S: Concentration 1 ppm, duration 10 days, passive	–	–	<b>DIN V 40046-37</b>	<b>DIN V 40046-37</b>
<b>Shock stress</b>				
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>	<b>2000 m</b>	<b>2000 m</b>
<b>Airgap creepage</b>				
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>250 V</b>	<b>250 V</b>	<b>250 V</b>	<b>250 V</b>
Rated impulse withstand voltage	<b>6,00 kV</b>	<b>6,00 kV</b>	<b>6,00 kV</b>	<b>6,00 kV</b>
<b>Protection type</b>				
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>	<b>IP20</b>	<b>IP20</b>
<b>Potential isolation</b>	<b>773100</b>	<b>773103</b>	<b>773104</b>	<b>773105</b>
Potential isolation between	<b>SC output and system voltage</b>	<b>SC output and system voltage</b>	<b>SC output and system voltage</b>	<b>SC output and system voltage</b>
Type of potential isolation	<b>Protective separation</b>	<b>Protective separation</b>	<b>Protective separation</b>	<b>Protective separation</b>
Rated surge voltage	<b>2500 V</b>	<b>2500 V</b>	<b>2500 V</b>	<b>2500 V</b>
Potential isolation between	<b>RL output and system voltage</b>	<b>RL output and system voltage</b>	<b>RL output and system voltage</b>	<b>RL output and system voltage</b>
Type of potential isolation	<b>Protective separation</b>	<b>Protective separation</b>	<b>Protective separation</b>	<b>Protective separation</b>



## Base units PNOZ m1p

Potential isolation	773100	773103	773104	773105
Rated surge voltage	6000 V	6000 V	6000 V	6000 V
Mechanical data	773100	773103	773104	773105
Mounting position	Horizontal on top hat rail	Horizontal on top hat rail	Horizontal on top hat rail	Horizontal on top hat rail
DIN rail				
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm	27 mm	27 mm
Max. cable length				
Max. cable length per input	1,0 km	1,0 km	1,0 km	1,0 km
Sum of individual cable lengths at the test pulse output	40 km	40 km	40 km	40 km
Material				
Bottom	PPO UL 94 V0	PPO UL 94 V0	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals				
1 core flexible	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG
Conductor cross section with screw terminals (relay outputs)				
1 core flexible	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
Torque setting with screw terminals	0,25 Nm	0,25 Nm	0,25 Nm	0,25 Nm

## Base units PNOZ m1p

Mechanical data	773100	773103	773104	773105
Torque setting with screw terminals (relay outputs)	0,50 Nm	0,50 Nm	0,50 Nm	0,50 Nm
Stripping length with screw terminals	7 mm	7 mm	7 mm	7 mm
Stripping length with screw terminals (relay outputs)	8 mm	8 mm	8 mm	8 mm
Conductor cross section with spring-loaded terminals				
1 core flexible without crimp connector	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG
Conductor cross section with spring-loaded terminals (relay outputs)				
1 core flexible without crimp connector	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
1 core flexible with crimp connector	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
Spring-loaded terminals: Terminal points per connection	1	1	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm	9 mm	9 mm
Stripping length with spring-loaded terminals (relay outputs)	10 mm	10 mm	10 mm	10 mm
Dimensions				
Height	94,0 mm	94,0 mm	94,0 mm	94,0 mm
Width	135,0 mm	135,0 mm	135,0 mm	135,0 mm
Depth	121,0 mm	121,0 mm	121,0 mm	121,0 mm
Weight	499 g	518 g	538 g	519 g

Where standards are undated, the 2010-10 latest editions shall apply.

## Base units PNOZ m1p

### Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
<b>Logic</b>						
CPU	2-channel	PL e	Cat. 4	SIL CL 3	4,90E-09	20
Expansion	–	PL e	Cat. 4	SIL CL 3	9,20E-09	20
<b>Input</b>						
SC inputs	1-channel	PL d	Cat. 2	SIL CL 2	2,50E-09	20
SC inputs	2-channel	PL e	Cat. 4	SIL CL 3	2,90E-10	20
SC inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,81E-09	20
SC inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	2,50E-10	20
Cascad. inputs	–	PL e	Cat. 4	SIL CL 3	3,10E-10	20
<b>Output</b>						
SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	7,00E-09	20
SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	8,60E-10	20
Cascad. outputs	–	PL e	Cat. 4	SIL CL 3	4,91E-10	20
Relay outputs	1-channel	PL c	Cat. 1	-	2,90E-08	20
Relay outputs	2-channel	PL e	Cat. 4	SIL CL 3	3,00E-10	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switching frequency and the load on the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

**Base units**  
PNOZ m1p

**Supplementary data**

**Service life graph for the relay contacts**

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

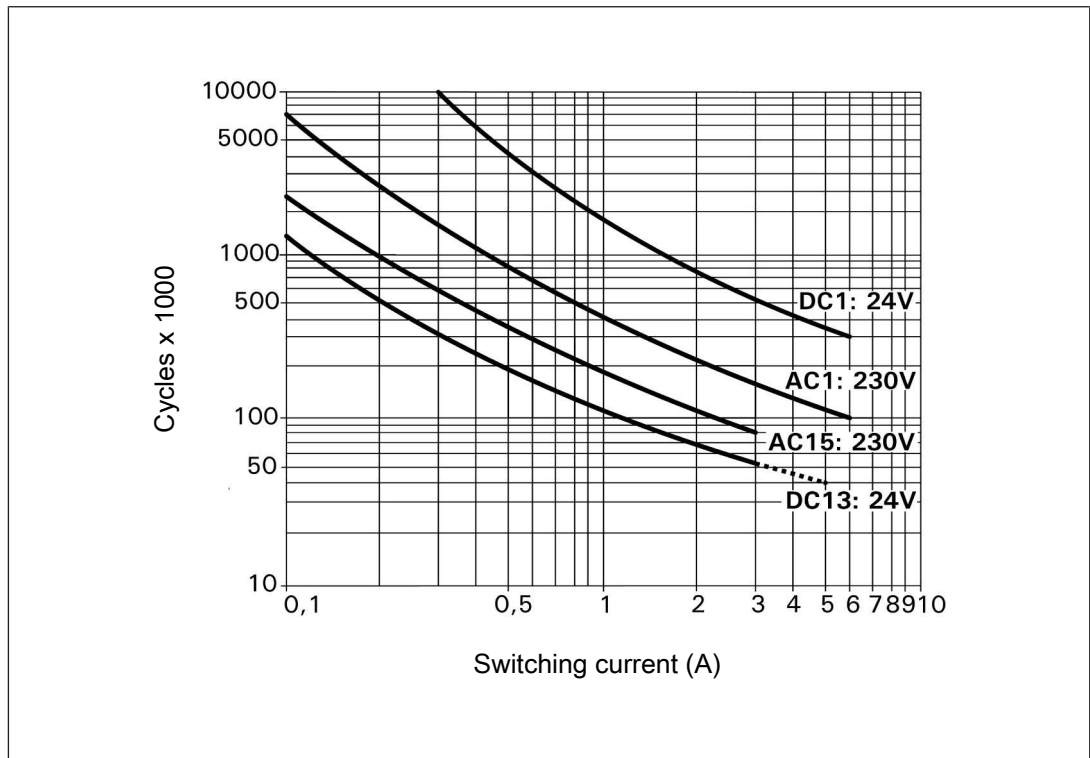


Fig.: Service life graphs at 24 VDC and 230 VAC

## Base units

### PNOZ m1p

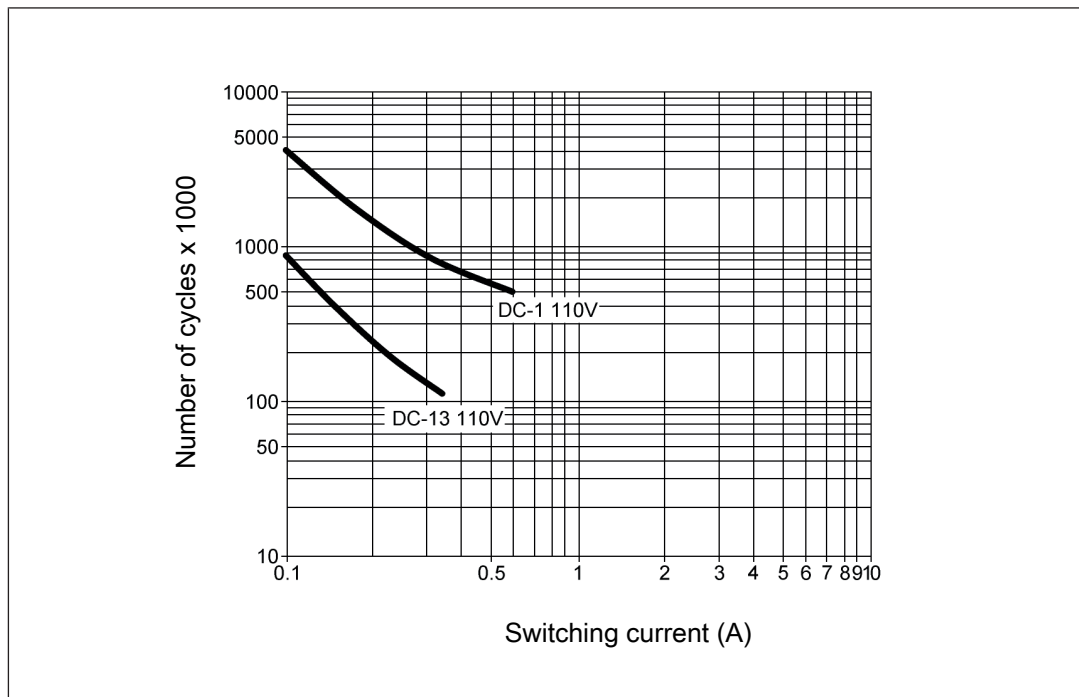


Fig.: Service life graphs at 110 VDC

#### Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[101\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

## Base units PNOZ m1p

### Order reference

#### Product

Product type	Features	Order no.
PNOZ m1p	Base unit	773 100
PNOZ m1p coated version	Base unit, coated version	773 105
PNOZ m1p ETH	Base unit, Ethernet interface	773 103
PNOZ m1p ETH coated version	Base unit, Ethernet interface, coated version	773 104

#### Accessories


##### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 100
Set screw terminals	1 set of screw terminals	793 100

##### Terminator, jumper

Product type	Features	Order No.
PNOZmulti bus terminator	Terminator	779 110
PNOZmulti bus terminator coated	Terminator, coated version	779 112
KOP-XE	Jumper	774 639
KOP-XE coated	Jumper, coated version	774 640

## Base units PNOZ m2p

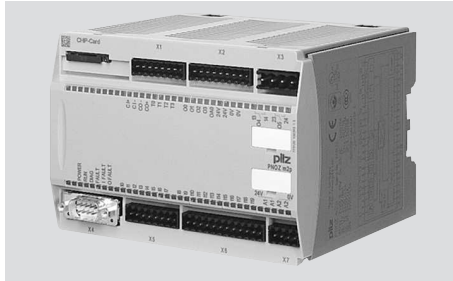

### Overview

#### Unit features

Using the product PNOZ m2p:

Base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ For applications on mechanical presses
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Positive-guided relay outputs:
  - 2 safety outputs  
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Semiconductor outputs:
  - 4 safety outputs  
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
  - 1 output for standard applications
- ▶ 4 test pulse outputs
- ▶ 1 cascading input and output;  
can also be used as a standard output
- ▶ 20 inputs for connecting, for example:
  - E-STOP pushbuttons
  - Two-hand pushbuttons
  - Safety gate limit switches
  - Start buttons
  - Light beam devices
  - Scanners
  - Enabling switches
  - PSEN

## Base units PNOZ m2p

---

- Operating mode selector switches
- Safety mats
- ▶ Muting function
- ▶ LED indicator for:
  - Diagnostics
  - Supply voltage
  - Output circuits
  - Input circuits
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Expansion modules can be connected  
(please refer to the document "PNOZmulti System Expansion" for details of the type and number that can be connected)
- ▶ Integrated interfaces:
  - PNOZ m2p: Serial interface RS232
  - PNOZ m2p **ETH**: 2 Ethernet interfaces
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)

### Chip card

To be able to use the product you will need a chip card.


Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).



## Base units PNOZ m2p


### Front view

### PNOZ m2p

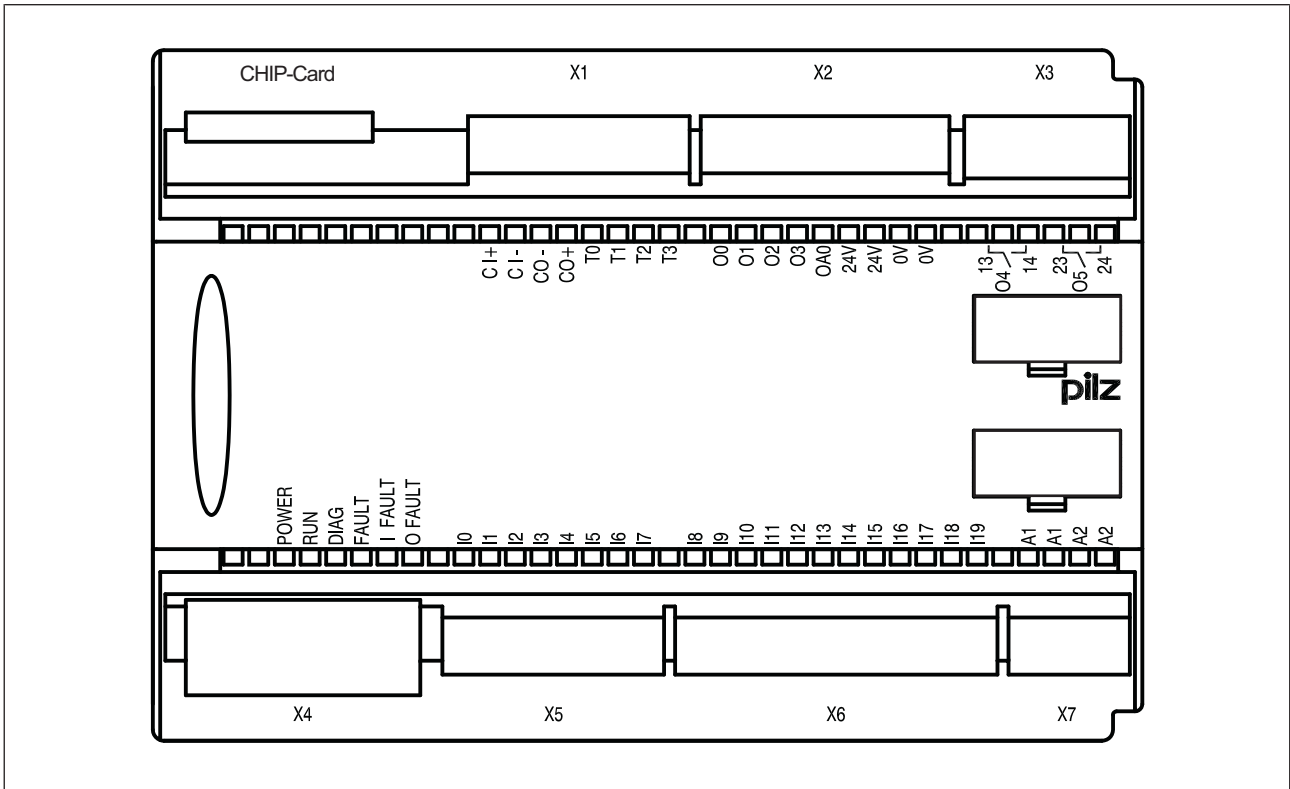

## Base units PNOZ m2p

### PNOZ m2p ETH

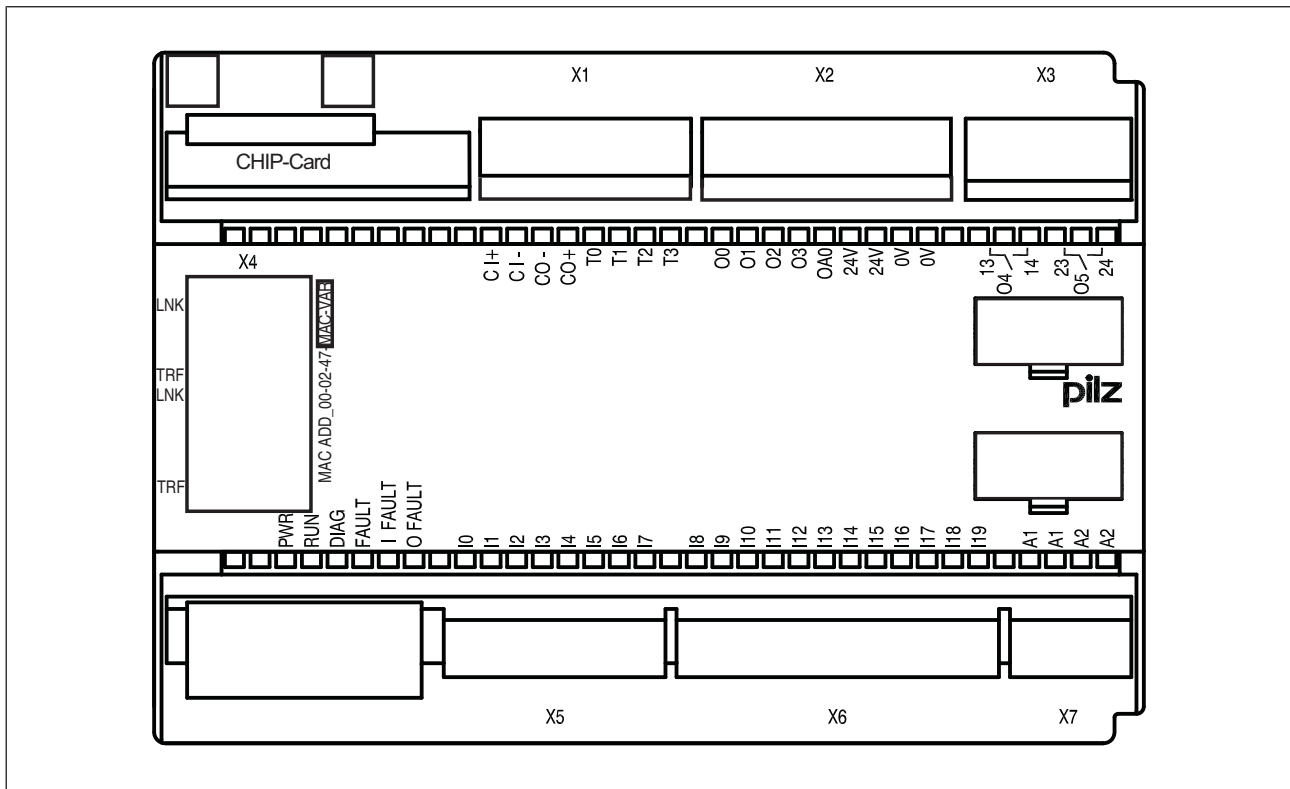

#### Legend:

- |           |   |
|-----------|---|
| CHIP card | Chipkarte interface   |
| X1        | Cascading inputs and outputs CI and CO,<br>Test pulse outputs T0 ... T3         |
| X2        | Semiconductor outputs O0 ... O3,<br>Auxiliary output OA0,<br>Supply connections |
| X3        | Relay outputs O4 and O5   |
| X4        | RS232 interface / Ethernet interface  |
| X5, X6    | Inputs I0 ... I19   |
| X7        | Power supply  |
| LEDs:     | PWR<br>RUN<br>DIAG<br>FAULT<br>I FAULT<br>O FAULT                               |

## Base units PNOZ m2p

---

### Function description

#### Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

#### Application on mechanical presses


The base unit PNOZ m2p is designed for applications on mechanical presses (see online help for the PNOZmulti Configurator).

Functions:

- ▶ Operating modes
  - Set-up mode
  - Single stroke
  - Automatic
- ▶ Monitoring a mechanical rotary cam arrangement
- ▶ Run monitoring
- ▶ Monitoring of electrosensitive protective equipment (cycle mode)
- ▶ Driving and monitoring a press safety valve


## Base units PNOZ m2p

### Block diagram

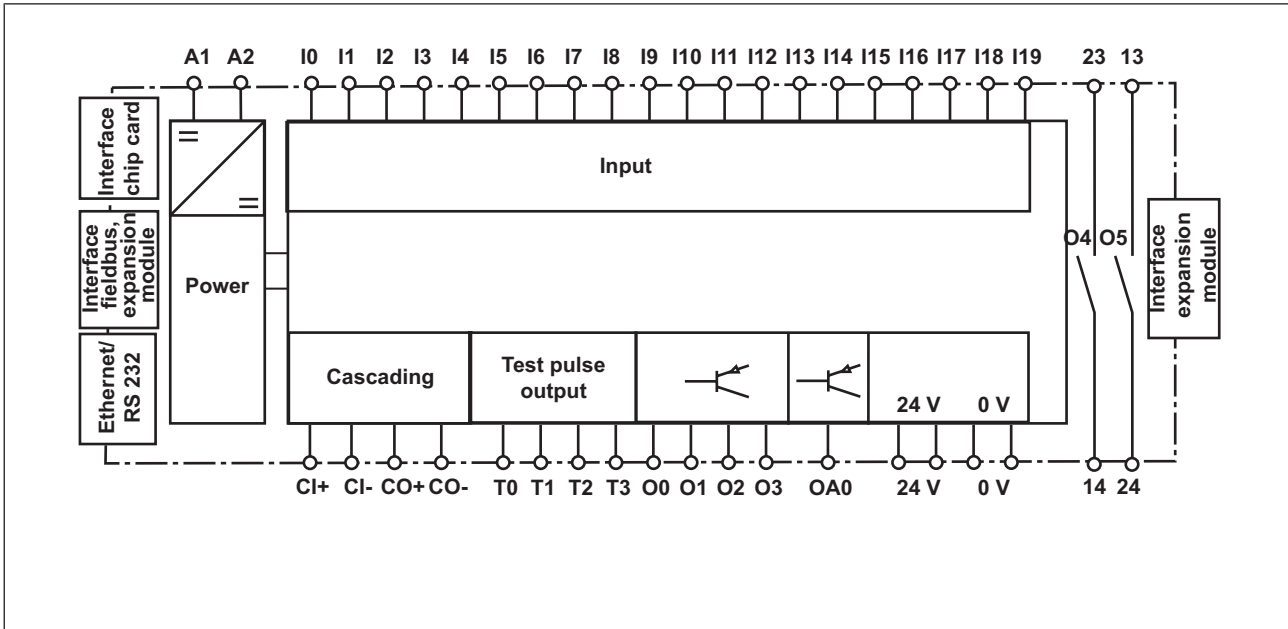

### Installation

#### Dimensions

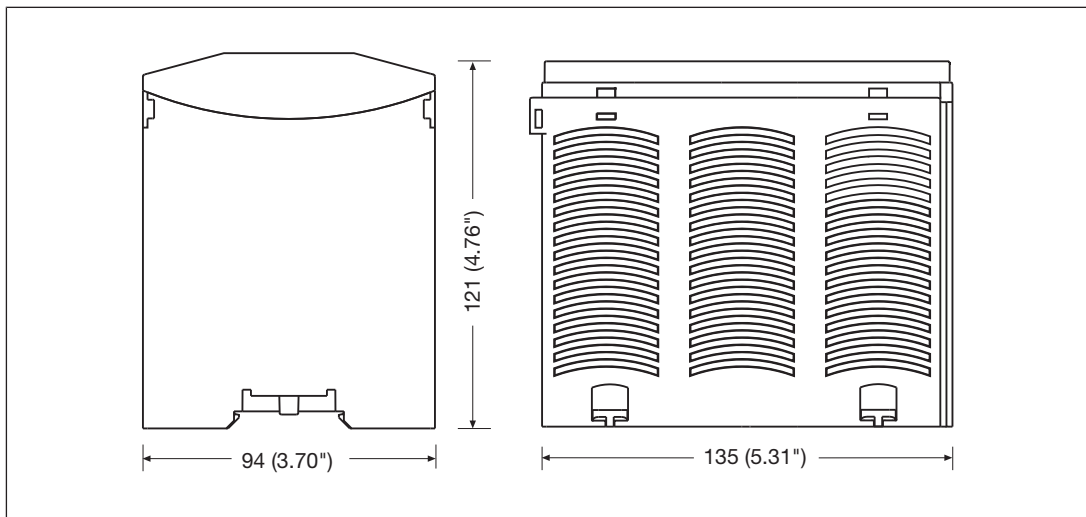

## Base units


### PNOZ m2p

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details](#)  [124](#) must be followed.
- ▶ Outputs:
  - O0 to O5 are safety outputs
  - O4 and O5 are relay outputs
  - O0 to O3 are semiconductor outputs
  - OA0 is an output to delete a project from the base unit (see online help for the PNOZmulti Configurator).
- ▶ To prevent contact welding, a fuse should be connected before the output contacts (see technical details).
- ▶ Use copper wiring with a temperature stability of 75°C.
- ▶ Sufficient fuse protection must be provided on all output contacts with inductive loads.
- ▶ The control system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.
- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.  
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.  
Test pulses that are used for the safety mat may not be reused for other purposes.

## Base units PNOZ m2p

### Connection

Supply voltage	AC	DC
For the safety system (connector X7)		
For the semiconductor outputs (connector X2) Must always be present, even if the semiconductor outputs are not used		

Supply voltage

Input circuit	Single-channel	Dual-channel
E-STOP <b>without</b> detection of shorts across contacts		
E-STOP <b>with</b> detection of shorts across contacts		

Connection examples for the input circuit

Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts

Connection examples for start circuit

## Base units PNOZ m2p

<p>Redundant output</p>		
<p>Single output</p>		

Connection examples for semiconductor outputs

## Base units PNOZ m2p

<p>Redundant output</p>		
<p>Single output</p>		

Connection examples for relay outputs

<p>Feedback loop</p>	<p>Redundant output</p>
<p>Contacts from external contactors</p>	


Connection examples for feedback loop



## Base units PNOZ m2p

### Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (I17), feedback loop (I14), cascading output as auxiliary output (CO+/A2)

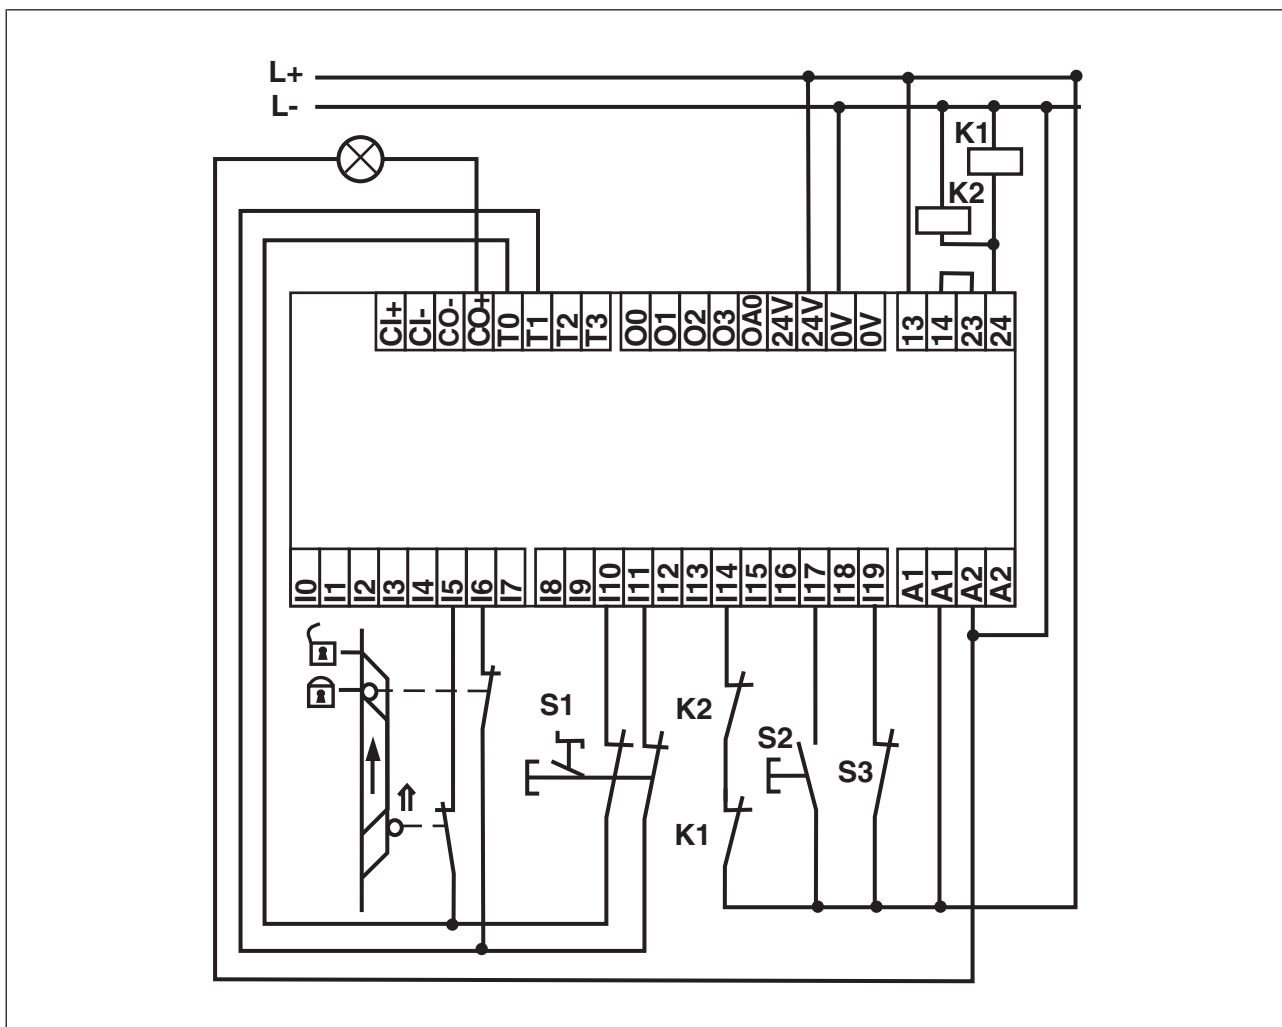

## Base units PNOZ m2p

### Technical Details

General	773120	773123
Approvals	BG, CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), KCC, TÜV, cULus Listed
Electrical data	773120	773123
Supply voltage		
for	<b>Supply to the system</b>	<b>Supply to the system</b>
Voltage	<b>24,0 V</b>	<b>24,0 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>	<b>-15 %/+20 %</b>
Output of external power supply (DC) at no load	<b>8,0 W</b>	<b>9,0 W</b>
Residual ripple DC	<b>5 %</b>	<b>5 %</b>
Supply voltage		
for	<b>Supply to the SC outputs</b>	<b>Supply to the SC outputs</b>
Voltage	<b>24 V</b>	<b>24 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>192,0 W</b>	<b>192,0 W</b>
Residual ripple DC	<b>5 %</b>	<b>5 %</b>
Potential isolation	<b>yes</b>	<b>yes</b>
Supply voltage		
Power consumption per expansion module	<b>2,50 W</b>	<b>2,50 W</b>
Status indicator	<b>LED</b>	<b>LED</b>
Inputs	773120	773123
Number	<b>20</b>	<b>20</b>
Max. number of live inputs within the max. permitted ambient temperature (see "Environmental data")	<b>U<sub>B</sub> ≤ 26,4 V : 20, U<sub>B</sub> &gt; 26,4 V : 15</b>	<b>U<sub>B</sub> ≤ 26,4 V : 20, U<sub>B</sub> &gt; 26,4 V : 15</b>
Signal level at "0"	<b>-3 - +5 V DC</b>	<b>-3 - +5 V DC</b>
Signal level at "1"	<b>15 - 30 V DC</b>	<b>15 - 30 V DC</b>
Input voltage in accordance with EN 61131-2 Type 1	<b>24 V DC</b>	<b>24 V DC</b>
Input current at rated voltage	<b>8 mA</b>	<b>8 mA</b>
Min. pulse duration	<b>18 ms</b>	<b>18 ms</b>
Pulse suppression	<b>0,6 ms</b>	<b>0,6 ms</b>
Maximum input delay	<b>4 ms</b>	<b>4 ms</b>
Potential isolation	<b>No</b>	<b>No</b>

## Base units PNOZ m2p

<b>Semiconductor outputs</b>	<b>773120</b>	<b>773123</b>
Number	4	4
Switching capability		
Voltage	24 V	24 V
Current	2,0 A	2,0 A
Power	48 W	48 W
Signal level at "1"	UB - 0.5 VDC at 2 A	UB - 0.5 VDC at 2 A
Residual current at "0"	0,5 mA	0,5 mA
Max. capacitive load	1 µF	1 µF
Max. duration of off time during self test	300 µs	300 µs
Switch-off delay	30 ms	30 ms
Potential isolation	yes	yes
Short circuit-proof	yes	yes
<b>Semiconductor outputs (stand-ard)</b>	<b>773120</b>	<b>773123</b>
Number	1	1
Switching capability		
Voltage	24 V	24 V
Current	0,50 A	0,50 A
Power	12,0 W	12,0 W
Galvanic isolation	yes	yes
Short circuit-proof	yes	yes
Residual current at "0"	0,5 mA	0,5 mA
Signal level at "1"	UB - 0.5 VDC at 0.5 A	UB - 0.5 VDC at 0.5 A
<b>Test pulse outputs</b>	<b>773120</b>	<b>773123</b>
Number of test pulse outputs	4	4
Voltage	24 V	24 V
Current	0,5 A	0,5 A
Max. duration of off time during self test	5 ms	5 ms
Short circuit-proof	yes	yes
Potential isolation	No	No
<b>Relay outputs</b>	<b>773120</b>	<b>773123</b>
Utilisation category		
In accordance with the standard	EN 60947-4-1	EN 60947-4-1

## Base units PNOZ m2p

Relay outputs	773120	773123
Utilisation category of safety contacts		
AC1 at	240 V	240 V
Max. current	6,0 A	6,0 A
Max. power	1440 VA	1440 VA
DC1 at	24 V	24 V
Max. current	6,0 A	6,0 A
Max. power	144 W	144 W
Utilisation category		
In accordance with the standard	EN 60947-5-1	EN 60947-5-1
Utilisation category of safety contacts		
AC15 at	230 V	230 V
Max. current	3,0 A	3,0 A
Max. power	690 W	690 W
DC13 (6 cycles/min) at	24 V	24 V
Max. current	3,0 A	3,0 A
Max. power	72 W	72 W
Airgap creepage between		
Relay contacts	3 mm	3 mm
Relay contacts and other circuits	5,5 mm	5,5 mm
External contact fuse protection, safety contacts		
In accordance with the standard	EN 60947-5-1	EN 60947-5-1
Blow-out fuse, quick	6 A	6 A
Blow-out fuse, slow	6,00 A	6,00 A
Circuit breaker 24V AC/DC, characteristic B/C	6 A	6 A
Switch-off delay	50 ms	50 ms
Potential isolation	yes	yes
<b>Cascading output as standard output</b>	<b>773120</b>	<b>773123</b>
Number	1	1
Switching capability		
Voltage	24 V	24 V
Current	0,2 A	0,2 A
Power	4,8 W	4,8 W
Galvanic isolation	No	No
Short circuit-proof	yes	yes
Residual current at "0"	0,5 mA	0,5 mA
<b>Ethernet interface</b>	<b>773120</b>	<b>773123</b>
Number	–	2

## Base units PNOZ m2p

<b>Serial interface</b>	<b>773120</b>	<b>773123</b>
Number of RS232 interfaces	1	–
<b>Times</b>	<b>773120</b>	<b>773123</b>
Switch-on delay	5,00 s	5,00 s
Supply interruption before de-energisation	20 ms	20 ms
Simultaneity, channel 1 and 2 max.	3 s	3 s
Simultaneity in the two-hand circuit	0,5 s	0,5 s
Max. cycle time of the device	15 ms	15 ms
Max. processing time for data communication	–	50 ms
<b>Environmental data</b>	<b>773120</b>	<b>773123</b>
Ambient temperature		
In accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	0 - 60 °C
Forced convection in control cabinet off	55 °C	55 °C
Storage temperature		
In accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
In accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Not permitted
EMC	EN 61131-2	EN 61131-2
Vibration		
In accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10,0 - 150,0 Hz	10,0 - 150,0 Hz
Acceleration	1g	1g
Shock stress		
In accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Max. operating height above sea level	2000 m	2000 m
Airgap creepage		
In accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	250 V	250 V
Rated impulse withstand voltage	6,00 kV	6,00 kV

## Base units PNOZ m2p

<b>Environmental data</b>	<b>773120</b>	<b>773123</b>
Protection type		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>
<b>Potential isolation</b>	<b>773120</b>	<b>773123</b>
Potential isolation between	<b>SC output and system voltage</b>	<b>SC output and system voltage</b>
Type of potential isolation	<b>Protective separation</b>	<b>Protective separation</b>
Rated surge voltage	<b>2500 V</b>	<b>2500 V</b>
Potential isolation between	<b>RL output and system voltage</b>	<b>RL output and system voltage</b>
Type of potential isolation	<b>Protective separation</b>	<b>Protective separation</b>
Rated surge voltage	<b>6000 V</b>	<b>6000 V</b>
<b>Mechanical data</b>	<b>773120</b>	<b>773123</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>
DIN rail		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
Max. cable length		
Max. cable length per input	<b>1,0 km</b>	<b>1,0 km</b>
Sum of individual cable lengths at the test pulse output	<b>40 km</b>	<b>40 km</b>
Material		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals		
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Conductor cross section with screw terminals (relay outputs)		
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>	<b>0,25 Nm</b>
Torque setting with screw terminals (relay outputs)	<b>0,50 Nm</b>	<b>0,50 Nm</b>

## Base units PNOZ m2p

Mechanical data	773120	773123
Stripping length with screw terminals	7 mm	7 mm
Stripping length with screw terminals (relay outputs)	8 mm	8 mm
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG
Conductor cross section with spring-loaded terminals (relay outputs)		
1 core flexible without crimp connector	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
1 core flexible with crimp connector	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm
Stripping length with spring-loaded terminals (relay outputs)	10 mm	10 mm
Dimensions		
Height	94,0 mm	94,0 mm
Width	135,0 mm	135,0 mm
Depth	121,0 mm	121,0 mm
Weight	499 g	521 g

Where standards are undated, the 2010-10 latest editions shall apply.

## Base units PNOZ m2p

### Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
<b>Logic</b>						
CPU	2-channel	PL e	Cat. 4	SIL CL 3	4,90E-09	20
Expansion	–	PL e	Cat. 4	SIL CL 3	9,20E-09	20
<b>Input</b>						
SC inputs	1-channel	PL d	Cat. 2	SIL CL 2	2,50E-09	20
SC inputs	2-channel	PL e	Cat. 4	SIL CL 3	2,90E-10	20
SC inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,81E-09	20
SC inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	2,50E-10	20
Cascad. inputs	–	PL e	Cat. 4	SIL CL 3	3,10E-10	20
<b>Output</b>						
SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	7,00E-09	20
SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	8,60E-10	20
Cascad. outputs	–	PL e	Cat. 4	SIL CL 3	4,91E-10	20
Relay outputs	1-channel	PL c	Cat. 1	-	2,90E-08	20
Relay outputs	2-channel	PL e	Cat. 4	SIL CL 3	3,00E-10	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switching frequency and the load on the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.



## Base units PNOZ m2p

### Supplementary data

#### Service life graph for the relay contacts

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

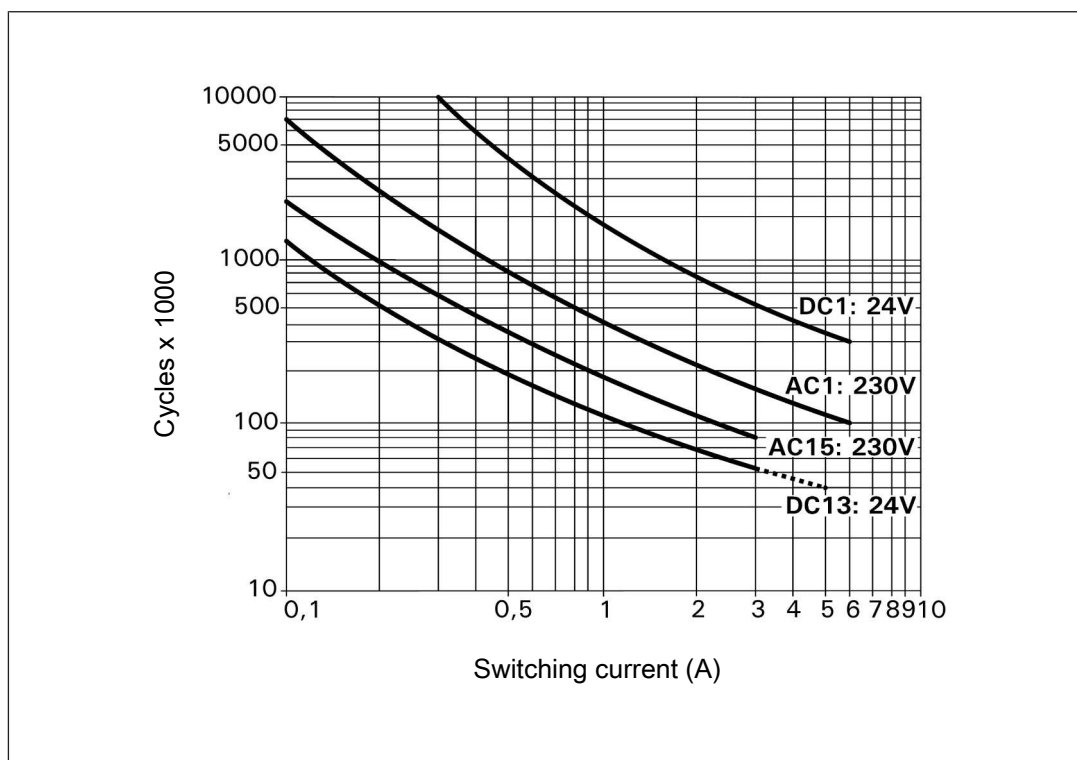


Fig.: Service life graphs at 24 VDC and 230 VAC

## Base units PNOZ m2p

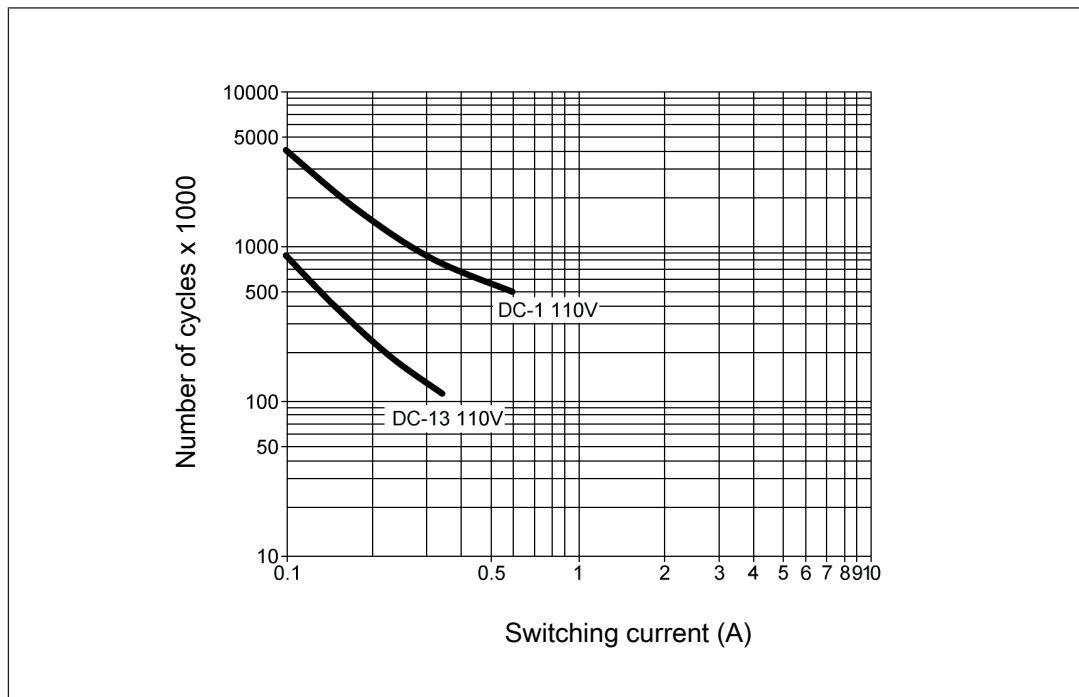


Fig.: Service life graphs at 110 VDC

### Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[124\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

## Base units PNOZ m2p

### Order reference

#### Product

Order reference		

Product type	Features	Order No.
PNOZ m2p	Base unit	773 120
PNOZ m2p ETH	Base unit, Ethernet interface	773 123

### Accessories


#### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 100
Set screw terminals	1 set of screw terminals	793 100

#### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639

## Base units PNOZ m3p

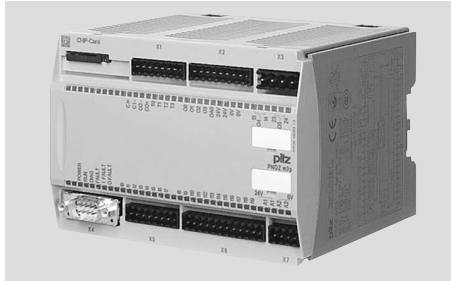

### Overview

#### Unit features

Using the product PNOZ m3p:

Base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Designed to monitor and control furnaces
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Positive-guided relay outputs:
  - 2 safety outputs  
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Semiconductor outputs:
  - 4 safety outputs  
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
  - 1 output for standard applications
- ▶ 4 test pulse outputs
- ▶ 1 cascading input and output;  
can also be used as a standard output
- ▶ 20 inputs for connecting, for example:
  - E-STOP pushbuttons
  - Two-hand pushbuttons
  - Safety gate limit switches
  - Start buttons
  - Light beam devices
  - Scanners
  - Enabling switches
  - PSEN

## Base units PNOZ m3p

---

- Operating mode selector switches
- Safety mats
- ▶ Muting function
- ▶ LED indicator for:
  - Diagnostics
  - Supply voltage
  - Output circuits
  - Input circuits
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Integrated interfaces:
  - PNOZ m3p: Serial interface RS232
  - PNOZ m3p **ETH**: 2 Ethernet interfaces
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)

### Chip card


To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

## Base units PNOZ m3p


### Front view

### PNOZ m3p

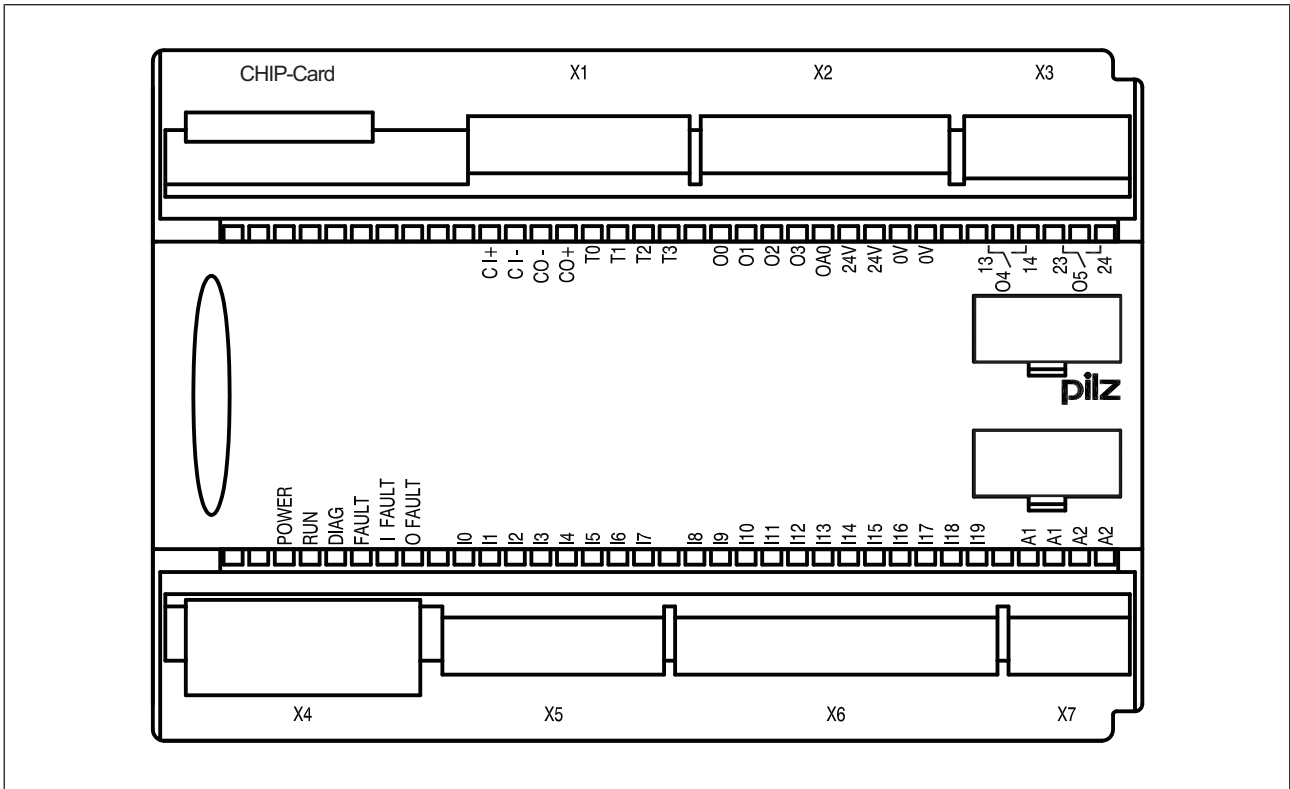

## Base units PNOZ m3p

### PNOZ m3p ETH

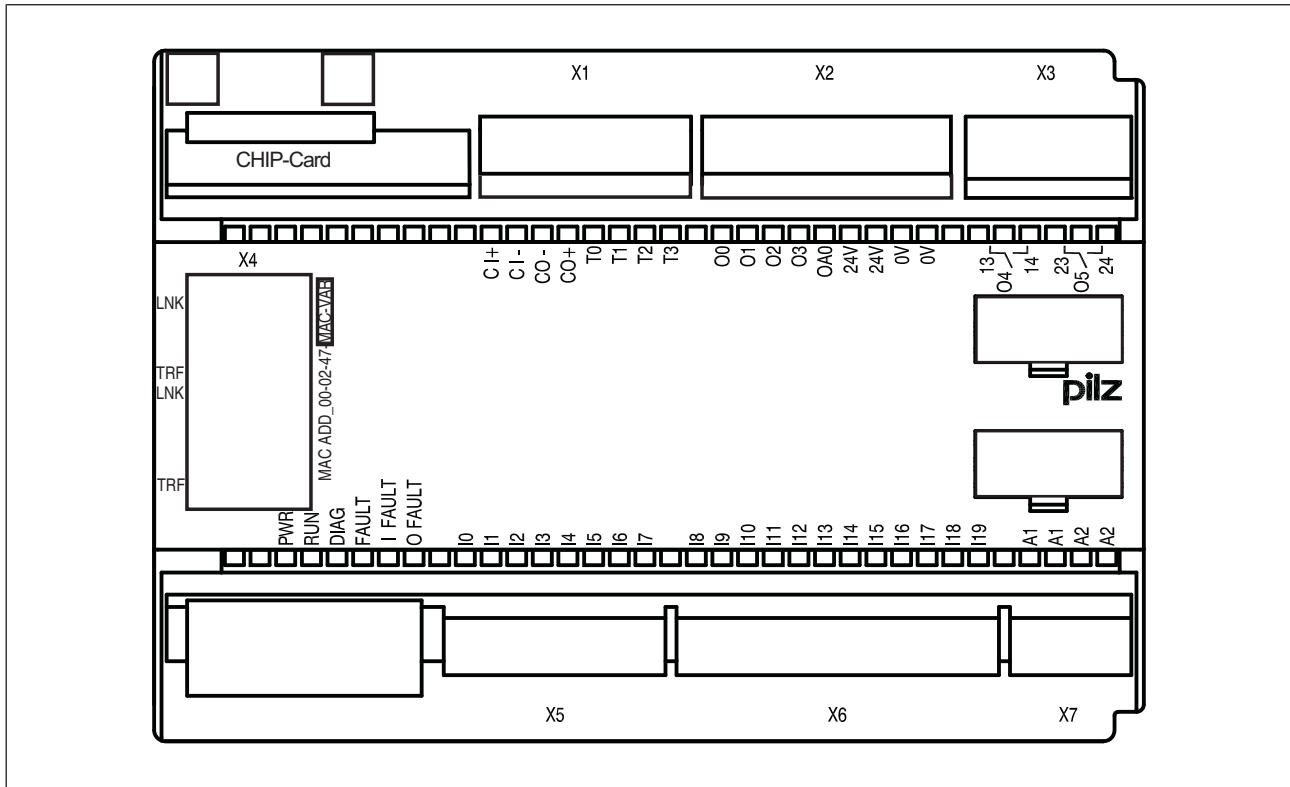

#### Legend:

- ▶ CHIP card:
  - Interface chip card
- ▶ X1:
  - Cascading inputs and outputs CI and CO,
  - Test pulse outputs T0 ... T3
- ▶ X2:
  - Semiconductor outputs O0 ... O3,
  - Auxiliary output OA0,
  - Supply connections
- ▶ X3:
  - Relay outputs O4 and O5
- ▶ X4:
  - RS232 interface / Ethernet interface
- ▶ X5, X6:
  - Inputs I0 ... I19

## Base units PNOZ m3p

---

- ▶ X7:
  - Power supply
- ▶ LEDs:
  - PWR
  - RUN
  - DIAG
  - FAULT
  - I FAULT
  - O FAULT

### Function description

#### Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

#### Application for furnaces

The base unit PNOZ m3p is designed for controlling and monitoring furnaces (see online help for the PNOZmulti Configurator).

These include:

Monitoring:

- ▶ Safety chains
- ▶ Combustion air pressure
- ▶ Ignition
- ▶ Flame monitoring
- ▶ External compound controller
- ▶ Tightness control

and controlling:

- ▶ Safety valves
- ▶ Ignition valves




## Base units PNOZ m3p

- ▶ Vent valve
- ▶ Ignition
- ▶ External compound controller
- ▶ Combustion Air Fan

The following oil and gas burner types can be monitored:

- ▶ Master burner with direct ignition
- ▶ Master burner with indirect ignition and joint flame monitoring
- ▶ Master burner with indirect ignition and separate flame monitoring

### Block diagram

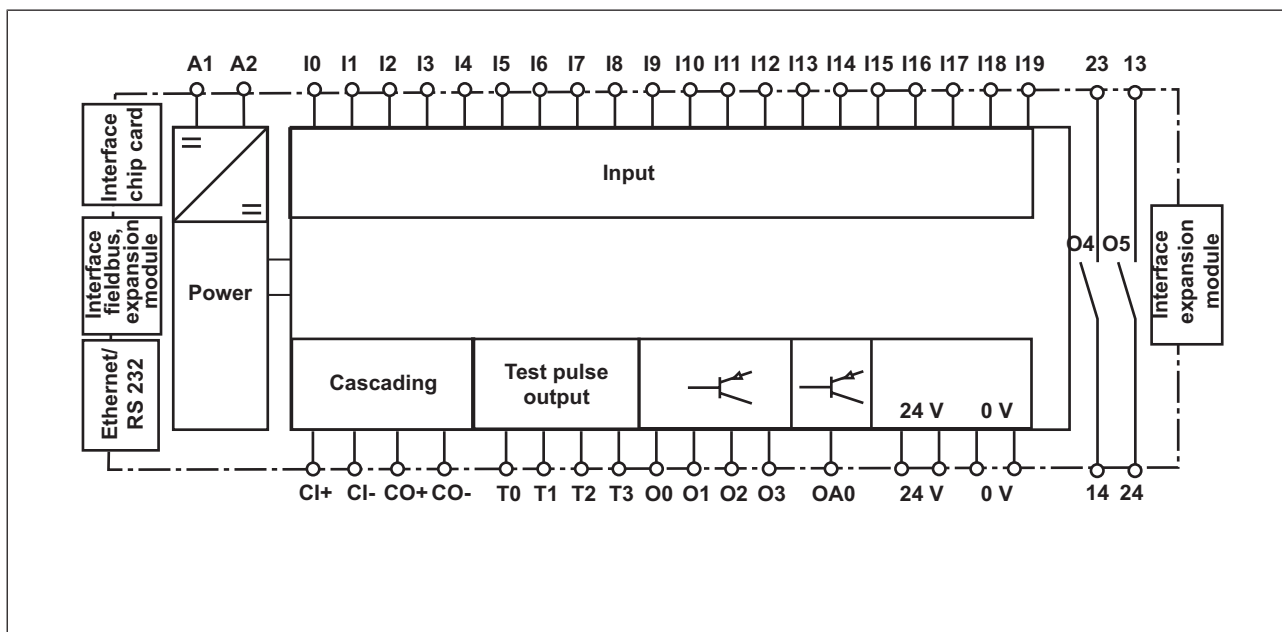


## Base units

### PNOZ m3p

## Installation

### Dimensions

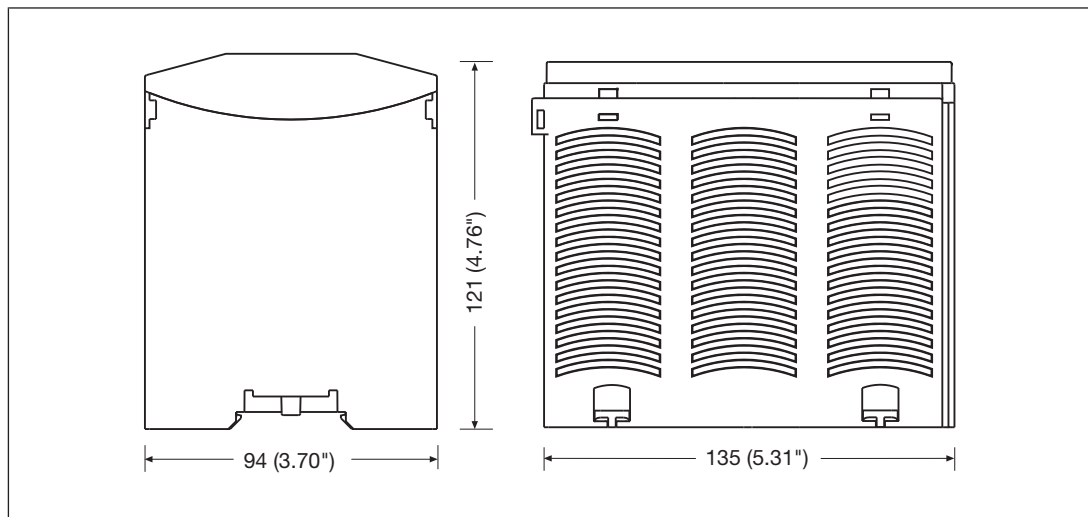

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[145\]](#) must be followed.
- ▶ Outputs:
  - O0 to O5 are safety outputs
  - O4 and O5 are relay outputs
  - O0 to O3 are semiconductor outputs
  - OA0 is an output to delete a project from the base unit (see online help for the PNOZmulti Configurator).
- ▶ To prevent contact welding, a fuse should be connected before the output contacts (see technical details).
- ▶ Use copper wiring with a temperature stability of 75°C.
- ▶ Sufficient fuse protection must be provided on all output contacts with inductive loads.
- ▶ The control system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.

## Base units PNOZ m3p

- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.  
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.  
Test pulses that are used for the safety mat may not be reused for other purposes.

The PNOZ m3p is not suitable for connection to DC supplies.

### Connection

Supply voltage	AC	DC
For the safety system (connector X7)		
For the semiconductor outputs (connector X2) Must always be present, even if the semiconductor outputs are not used		

Supply voltage

Input circuit	Single-channel	Dual-channel
E-STOP <b>without</b> detection of shorts across contacts		
E-STOP <b>with</b> detection of shorts across contacts		

Connection examples for the input circuit

## Base units PNOZ m3p

Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts

Connection examples for start circuit

Redundant output		
Single output		

Connection examples for semiconductor outputs

## Base units PNOZ m3p

<p>Redundant output</p>		
<p>Single output</p>		

Connection examples for relay outputs


<p>Feedback loop</p>	<p>Redundant output</p>
<p>Contacts from external contactors</p>	

Connection examples for feedback loop

## Base units PNOZ m3p

### Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (I17), feedback loop (I14), cascading output as auxiliary output (CO+/A2)

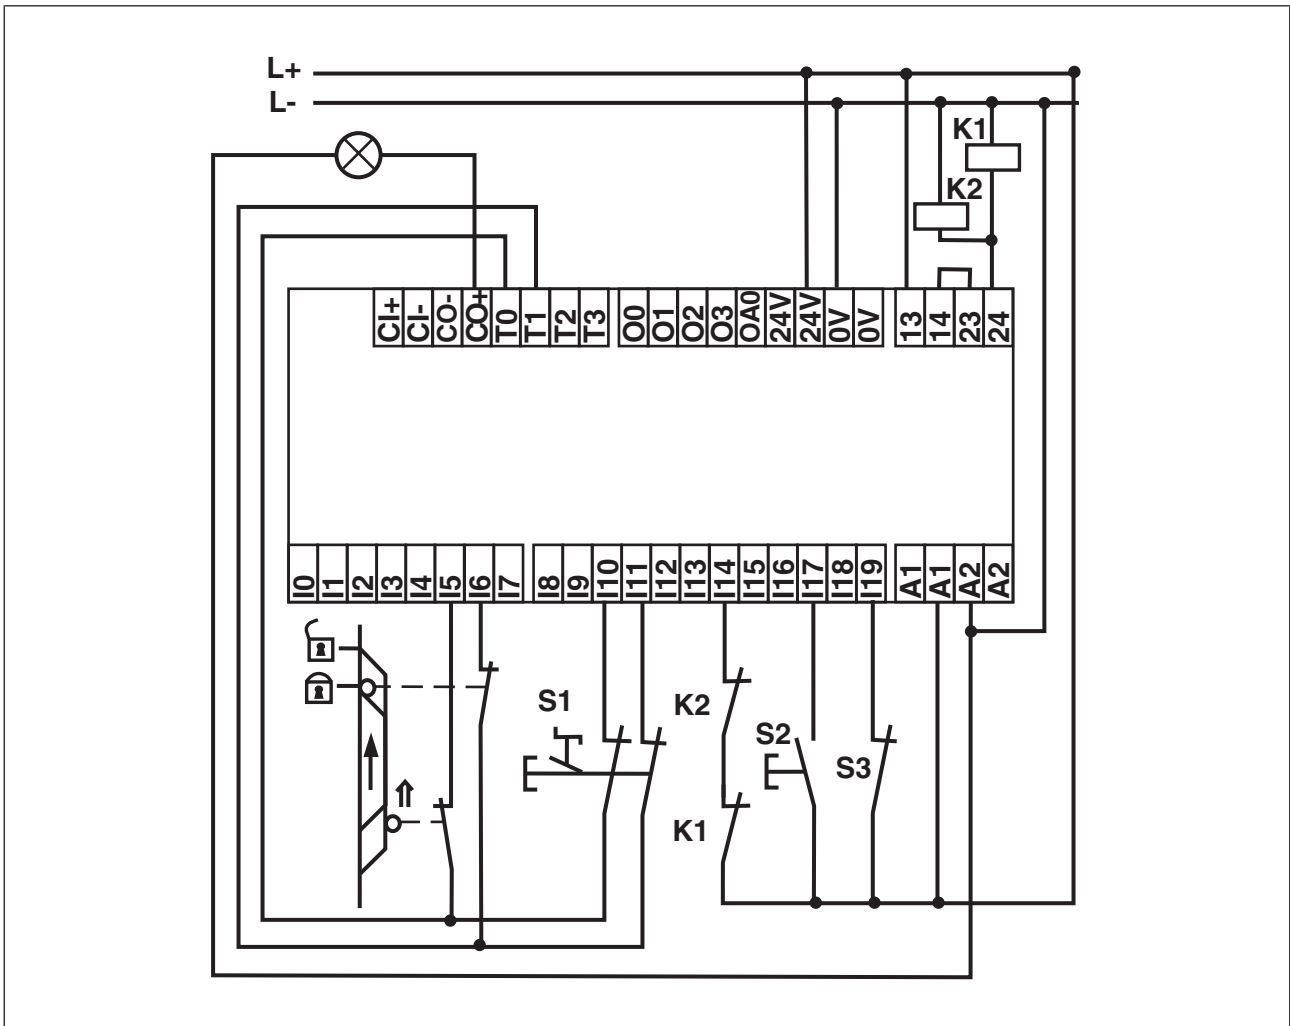

## Base units PNOZ m3p

### Technical Details

General	773125	773126
Approvals	BG, CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), KCC, TÜV, cULus Listed
Electrical data	773125	773126
Supply voltage		
for	<b>Supply to the system</b>	<b>Supply to the system</b>
Voltage	<b>24,0 V</b>	<b>24,0 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>	<b>-15 %/+20 %</b>
Output of external power supply (DC) at no load	<b>8,0 W</b>	<b>9,0 W</b>
Residual ripple DC	<b>5 %</b>	<b>5 %</b>
Supply voltage		
for	<b>Supply to the SC outputs</b>	<b>Supply to the SC outputs</b>
Voltage	<b>24 V</b>	<b>24 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>192,0 W</b>	<b>192,0 W</b>
Residual ripple DC	<b>5 %</b>	<b>5 %</b>
Potential isolation	<b>yes</b>	<b>yes</b>
Supply voltage		
Power consumption per expansion module	<b>2,50 W</b>	<b>2,50 W</b>
Status indicator	<b>LED</b>	<b>LED</b>
Inputs	773125	773126
Number	<b>20</b>	<b>20</b>
Max. number of live inputs within the max. permitted ambient temperature (see "Environmental data")	<b>U<sub>B</sub> ≤ 26,4 V : 20, U<sub>B</sub> &gt; 26,4 V : 15</b>	<b>U<sub>B</sub> ≤ 26,4 V : 20, U<sub>B</sub> &gt; 26,4 V : 15</b>
Signal level at "0"	<b>-3 - +5 V DC</b>	<b>-3 - +5 V DC</b>
Signal level at "1"	<b>15 - 30 V DC</b>	<b>15 - 30 V DC</b>
Input voltage in accordance with EN 61131-2 Type 1	<b>24 V DC</b>	<b>24 V DC</b>
Input current at rated voltage	<b>8 mA</b>	<b>8 mA</b>
Min. pulse duration	<b>18 ms</b>	<b>18 ms</b>
Pulse suppression	<b>0,6 ms</b>	<b>0,6 ms</b>
Maximum input delay	<b>4 ms</b>	<b>4 ms</b>
Potential isolation	<b>No</b>	<b>No</b>

## Base units PNOZ m3p

<b>Semiconductor outputs</b>	<b>773125</b>	<b>773126</b>
Number	4	4
Switching capability		
Voltage	24 V	24 V
Current	2,0 A	2,0 A
Power	48 W	48 W
Signal level at "1"	UB - 0.5 VDC at 2 A	UB - 0.5 VDC at 2 A
Residual current at "0"	0,5 mA	0,5 mA
Max. capacitive load	1 µF	1 µF
Max. duration of off time during self test	300 µs	300 µs
Switch-off delay	30 ms	30 ms
Potential isolation	yes	yes
Short circuit-proof	yes	yes
<b>Semiconductor outputs (stand-ard)</b>	<b>773125</b>	<b>773126</b>
Number	1	1
Switching capability		
Voltage	24 V	24 V
Current	0,50 A	0,50 A
Power	12,0 W	12,0 W
Galvanic isolation	yes	yes
Short circuit-proof	yes	yes
Residual current at "0"	0,5 mA	0,5 mA
Signal level at "1"	UB - 0.5 VDC at 0.5 A	UB - 0.5 VDC at 0.5 A
<b>Test pulse outputs</b>	<b>773125</b>	<b>773126</b>
Number of test pulse outputs	4	4
Voltage	24 V	24 V
Current	0,5 A	0,5 A
Max. duration of off time during self test	5 ms	5 ms
Short circuit-proof	yes	yes
Potential isolation	No	No
<b>Relay outputs</b>	<b>773125</b>	<b>773126</b>
Utilisation category		
In accordance with the standard	EN 60947-4-1	EN 60947-4-1



## Base units PNOZ m3p

<b>Relay outputs</b>	<b>773125</b>	<b>773126</b>
Utilisation category of safety contacts		
AC1 at	<b>240 V</b>	<b>240 V</b>
Max. current	<b>6,0 A</b>	<b>6,0 A</b>
Max. power	<b>1440 VA</b>	<b>1440 VA</b>
DC1 at	<b>24 V</b>	<b>24 V</b>
Max. current	<b>6,0 A</b>	<b>6,0 A</b>
Max. power	<b>144 W</b>	<b>144 W</b>
Utilisation category		
In accordance with the standard	<b>EN 60947-5-1</b>	<b>EN 60947-5-1</b>
Utilisation category of safety contacts		
AC15 at	<b>230 V</b>	<b>230 V</b>
Max. current	<b>3,0 A</b>	<b>3,0 A</b>
Max. power	<b>690 W</b>	<b>690 W</b>
DC13 (6 cycles/min) at	<b>24 V</b>	<b>24 V</b>
Max. current	<b>3,0 A</b>	<b>3,0 A</b>
Max. power	<b>72 W</b>	<b>72 W</b>
Airgap creepage between		
Relay contacts	<b>3 mm</b>	<b>3 mm</b>
Relay contacts and other circuits	<b>5,5 mm</b>	<b>5,5 mm</b>
External contact fuse protection, safety contacts		
In accordance with the standard	<b>EN 60947-5-1</b>	<b>EN 60947-5-1</b>
Blow-out fuse, quick	<b>6 A</b>	<b>6 A</b>
Blow-out fuse, slow	<b>6,00 A</b>	<b>6,00 A</b>
Circuit breaker 24V AC/DC, characteristic B/C	<b>6 A</b>	<b>6 A</b>
Switch-off delay	<b>50 ms</b>	<b>50 ms</b>
Potential isolation	<b>yes</b>	<b>yes</b>
<b>Cascading output as standard output</b>	<b>773125</b>	<b>773126</b>
Number	<b>1</b>	<b>1</b>
Switching capability		
Voltage	<b>24 V</b>	<b>24 V</b>
Current	<b>0,2 A</b>	<b>0,2 A</b>
Power	<b>4,8 W</b>	<b>4,8 W</b>
Galvanic isolation	<b>No</b>	<b>No</b>
Short circuit-proof	<b>yes</b>	<b>yes</b>
Residual current at "0"	<b>0,5 mA</b>	<b>0,5 mA</b>
<b>Ethernet interface</b>	<b>773125</b>	<b>773126</b>
Number	<b>–</b>	<b>2</b>

## Base units PNOZ m3p

<b>Serial interface</b>	<b>773125</b>	<b>773126</b>
Number of RS232 interfaces	1	–
<b>Times</b>	<b>773125</b>	<b>773126</b>
Switch-on delay	5,00 s	5,00 s
Supply interruption before de-energisation	20 ms	20 ms
Simultaneity, channel 1 and 2 max.	3 s	3 s
Simultaneity in the two-hand circuit	0,5 s	0,5 s
Max. cycle time of the device	15 ms	15 ms
Max. processing time for data communication	–	50 ms
<b>Environmental data</b>	<b>773125</b>	<b>773126</b>
Ambient temperature		
In accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	0 - 60 °C
Forced convection in control cabinet off	55 °C	55 °C
Storage temperature		
In accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
In accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Not permitted
EMC	EN 61131-2	EN 61131-2
Vibration		
In accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10,0 - 150,0 Hz	10,0 - 150,0 Hz
Acceleration	1g	1g
Shock stress		
In accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Max. operating height above sea level	2000 m	2000 m
Airgap creepage		
In accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	250 V	250 V
Rated impulse withstand voltage	6,00 kV	6,00 kV

## Base units PNOZ m3p

<b>Environmental data</b>	<b>773125</b>	<b>773126</b>
Protection type		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>
<b>Potential isolation</b>	<b>773125</b>	<b>773126</b>
Potential isolation between	<b>SC output and system voltage</b>	<b>SC output and system voltage</b>
Type of potential isolation	<b>Protective separation</b>	<b>Protective separation</b>
Rated surge voltage	<b>2500 V</b>	<b>2500 V</b>
Potential isolation between	<b>RL output and system voltage</b>	<b>RL output and system voltage</b>
Type of potential isolation	<b>Protective separation</b>	<b>Protective separation</b>
Rated surge voltage	<b>6000 V</b>	<b>6000 V</b>
<b>Mechanical data</b>	<b>773125</b>	<b>773126</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>
DIN rail		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
Max. cable length		
Max. cable length per input	<b>1,0 km</b>	<b>1,0 km</b>
Sum of individual cable lengths at the test pulse output	<b>40 km</b>	<b>40 km</b>
Material		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals		
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Conductor cross section with screw terminals (relay outputs)		
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>	<b>0,25 Nm</b>
Torque setting with screw terminals (relay outputs)	<b>0,50 Nm</b>	<b>0,50 Nm</b>

## Base units PNOZ m3p

Mechanical data	773125	773126
Stripping length with screw terminals	<b>7 mm</b>	<b>7 mm</b>
Stripping length with screw terminals (relay outputs)	<b>8 mm</b>	<b>8 mm</b>
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Conductor cross section with spring-loaded terminals (relay outputs)		
1 core flexible without crimp connector	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>1</b>	<b>1</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>	<b>9 mm</b>
Stripping length with spring-loaded terminals (relay outputs)	<b>10 mm</b>	<b>10 mm</b>
Dimensions		
Height	<b>94,0 mm</b>	<b>94,0 mm</b>
Width	<b>135,0 mm</b>	<b>135,0 mm</b>
Depth	<b>121,0 mm</b>	<b>121,0 mm</b>
Weight	<b>499 g</b>	<b>520 g</b>

Where standards are undated, the 2010-10 latest editions shall apply.

## Base units PNOZ m3p

### Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
<b>Logic</b>						
CPU	2-channel	PL e	Cat. 4	SIL CL 3	4,90E-09	20
Expansion	–	PL e	Cat. 4	SIL CL 3	9,20E-09	20
<b>Input</b>						
SC inputs	1-channel	PL d	Cat. 2	SIL CL 2	2,50E-09	20
SC inputs	2-channel	PL e	Cat. 4	SIL CL 3	2,90E-10	20
SC inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,81E-09	20
SC inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	2,50E-10	20
Cascad. inputs	–	PL e	Cat. 4	SIL CL 3	3,10E-10	20
<b>Output</b>						
SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	7,00E-09	20
SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	8,60E-10	20
Cascad. outputs	–	PL e	Cat. 4	SIL CL 3	4,91E-10	20
Relay outputs	1-channel	PL c	Cat. 1	-	2,90E-08	20
Relay outputs	2-channel	PL e	Cat. 4	SIL CL 3	3,00E-10	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switching frequency and the load on the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

**Base units**  
PNOZ m3p

**Supplementary data**

**Service life graph for the relay contacts**

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

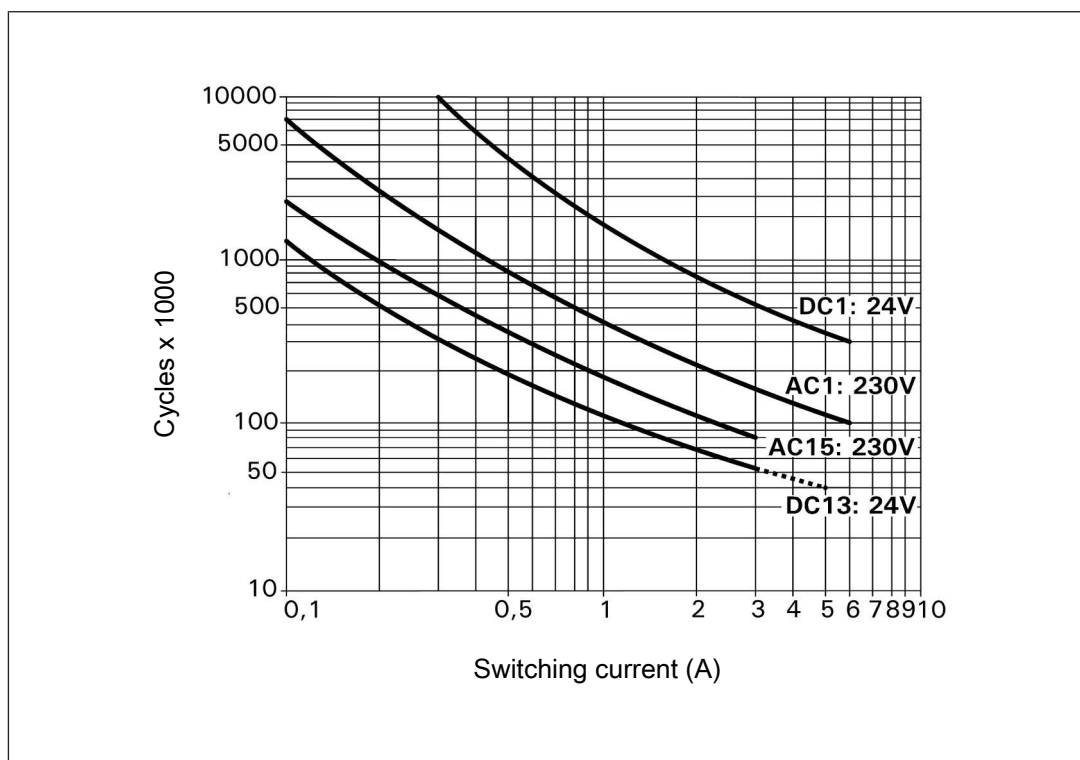


Fig.: Service life graphs at 24 VDC and 230 VAC

## Base units PNOZ m3p

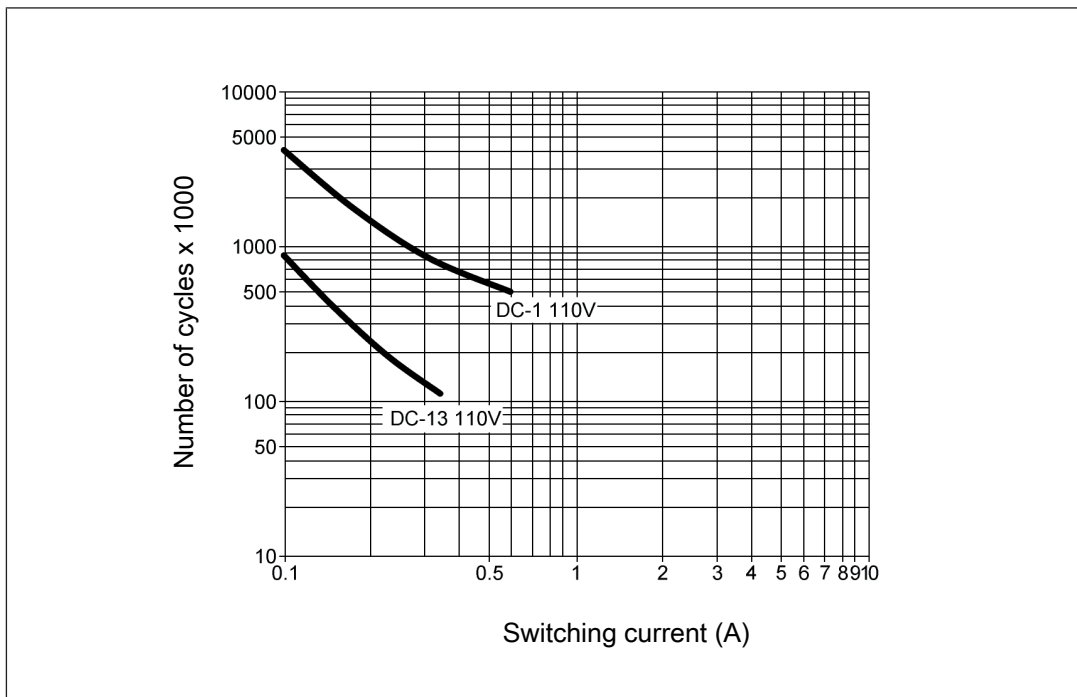


Fig.: Service life graphs at 110 VDC

### Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[145\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

## Base units PNOZ m3p

### Order reference

#### Product

Product type	Features	Order No.
PNOZ m3p	Base unit	773 125
PNOZ m3p ETH	Base unit, Ethernet interface	773 126

#### Accessories

##### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 100
Set screw terminals	1 set of screw terminals	793 100

##### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639



## Input modules PNOZ mi1p


---



### Overview

#### Unit features


The product has the following features:

- ▶ 8 inputs for connecting:
  - E-STOP pushbuttons
  - Two-hand button
  - Safety gate limit switches
  - Start buttons
  - Light beam devices
  - Scanners
  - Enabling switches
  - PSEN
  - Operating mode selector switches
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ LED indicator for:
  - Status of PNOZmulti
- ▶ Max. 8 PNOZ mi1p units can be connected to the base unit
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Plug-in connection terminals (either cage clamp terminal or screw terminal)
- ▶ Coated version:
  - Increased environmental requirements (see [Technical details](#)  159)

## Input modules

### PNOZ mi1p

#### Front view

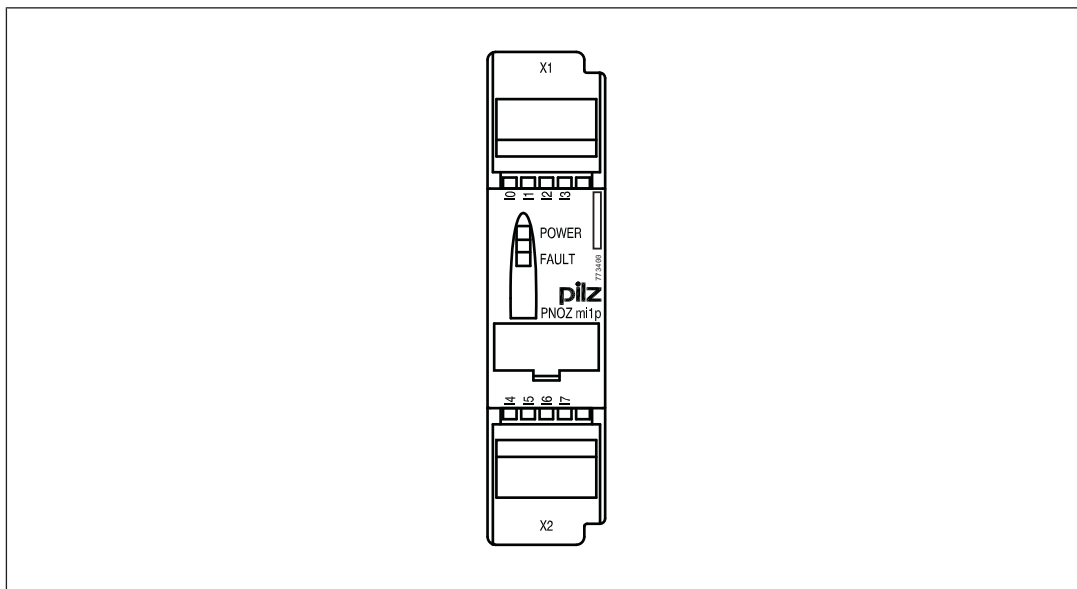

Legend:

- ▶ Inputs I0 – I7

## Function description

### Functions

The expansion module provides additional inputs.

The function of the inputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.


The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion](#) [ 29]".


## Input modules PNOZ mi1p

### Block diagram

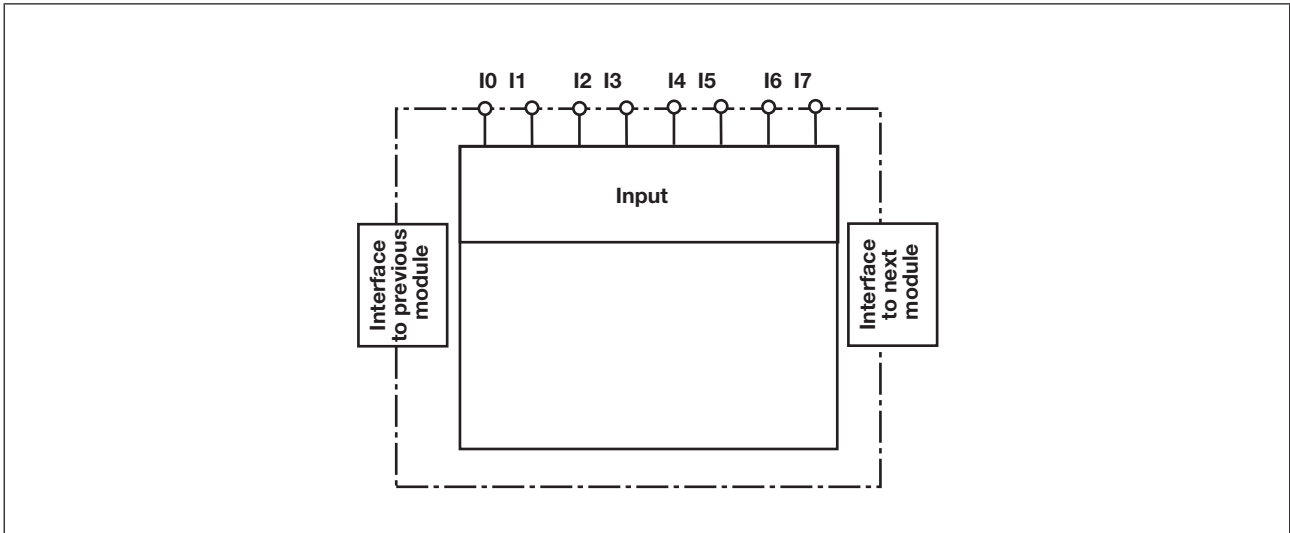

### Installation

#### Dimensions in mm

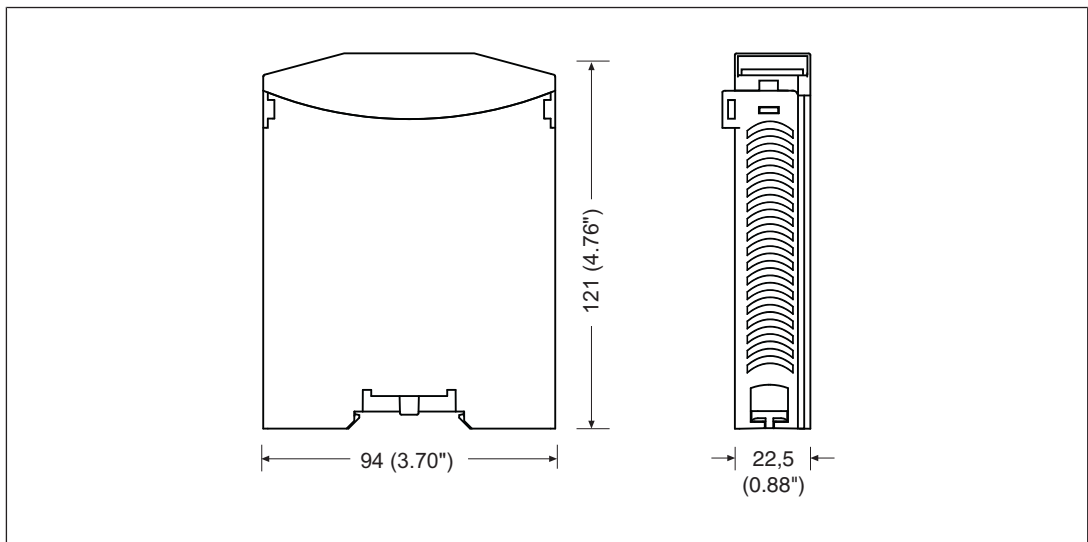

## Input modules PNOZ mi1p

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details](#) [159] must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.

#### Preparing for operation

The N/C contact on the trigger element (e.g. E-STOP) must be connected to the input circuit. A short circuit in the input circuit may or may not be detected, depending on the configuration and wiring. The test pulse outputs on the base unit must be used to detect shorts across contacts. The input assignment is defined in the PNOZmulti Configurator.

The input circuit should be connected as described in the table. The wiring at I0 and I1 is illustrated as an example; inputs I2 ... 17 are wired in a similar way.


#### Connection

Input circuit	Single-channel	Dual-channel
Example: E-Stop without detection of shorts across contacts		
Example: E-Stop with detection of shorts across contacts		

Input circuit

## Input modules PNOZ mi1p

### Connection example

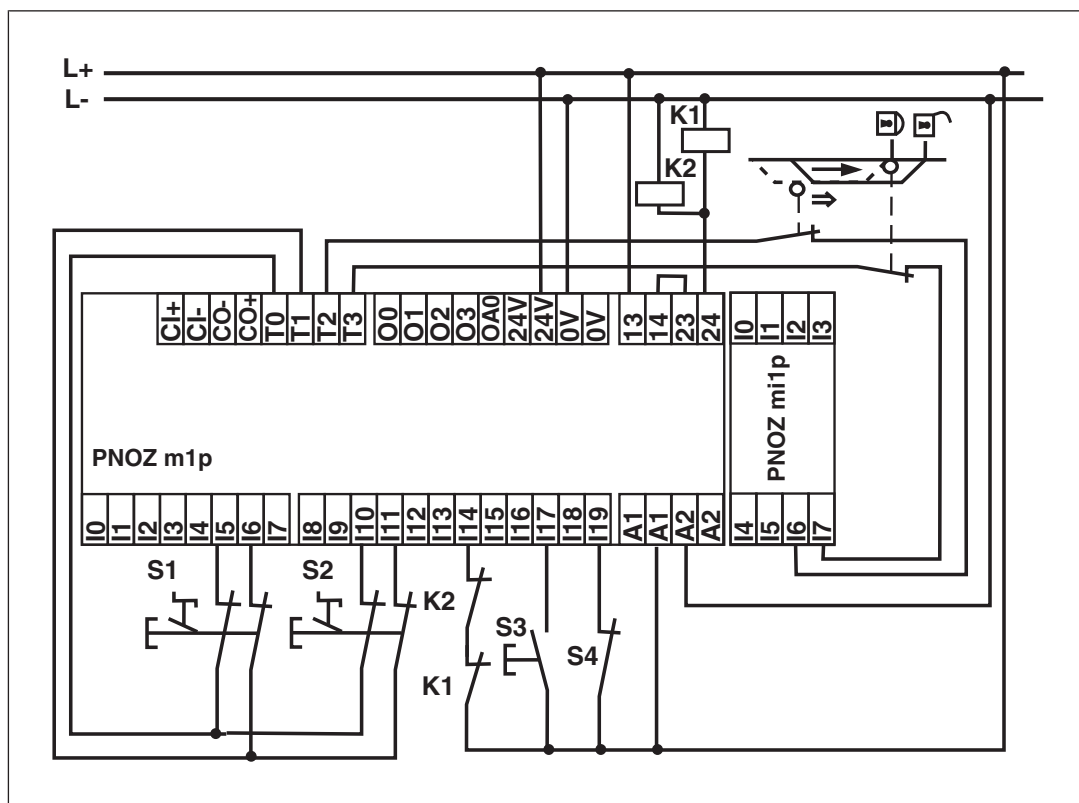

### Technical details

General	773400	773405
Approvals	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
Electrical data	773400	773405
Supply voltage		
for	Module supply	Module supply
internal	Via base unit	Via base unit
Voltage	5,0 V	5,0 V
Kind	DC	DC
Voltage tolerance	-2 %/+2 %	-2 %/+2 %
Power consumption	2,5 W	2,5 W
Status indicator	LED	LED
Inputs	773400	773405
Number	8	8
Signal level at "0"	-3 - +5 V DC	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC	15 - 30 V DC

## Input modules PNOZ mi1p

<b>Inputs</b>	<b>773400</b>	<b>773405</b>
Input voltage in accordance with EN 61131-2 Type 1	<b>24 V DC</b>	<b>24 V DC</b>
Min. pulse duration	<b>18 ms</b>	<b>18 ms</b>
Pulse suppression	<b>0,6 ms</b>	<b>0,6 ms</b>
Maximum input delay	<b>4 ms</b>	<b>4 ms</b>
Potential isolation	<b>No</b>	<b>No</b>
<b>Times</b>	<b>773400</b>	<b>773405</b>
Switch-on delay	<b>5,00 s</b>	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>	<b>20 ms</b>
Simultaneity, channel 1 and 2 max.	<b>3 s</b>	<b>3 s</b>
Simultaneity in the two-hand circuit	<b>0,5 s</b>	<b>0,5 s</b>
<b>Environmental data</b>	<b>773400</b>	<b>773405</b>
Ambient temperature		
In accordance with the standard	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>	<b>-25 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>	<b>–</b>
Storage temperature		
In accordance with the standard	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>	<b>-25 - 70 °C</b>
Climatic suitability		
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>	<b>Short-term</b>
EMC	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Vibration		
In accordance with the standard	<b>EN 60068-2-6</b>	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>	<b>5,0 - 500,0 Hz</b>
Acceleration	<b>1g</b>	<b>1g</b>
Broadband noise		
In accordance with the standard	<b>–</b>	<b>EN 60068-2-64</b>
Frequency	<b>–</b>	<b>5 - 500 Hz</b>
Acceleration	<b>–</b>	<b>1,9grms</b>
Corrosive gas check		
SO <sub>2</sub> : Concentration 10 ppm, duration 10 days, passive	<b>–</b>	<b>DIN V 40046-36</b>
H <sub>2</sub> S: Concentration 1 ppm, duration 10 days, passive	<b>–</b>	<b>DIN V 40046-37</b>

## Input modules PNOZ mi1p

<b>Environmental data</b>	<b>773400</b>	<b>773405</b>
Shock stress		
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>
Airgap creepage		
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>30 V</b>	<b>30 V</b>
Protection type		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>
<b>Mechanical data</b>	<b>773400</b>	<b>773405</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>
DIN rail		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
Max. cable length		
Max. cable length per input	<b>1,0 km</b>	<b>1,0 km</b>
Material		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals		
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>	<b>0,25 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>	<b>7 mm</b>

## Input modules PNOZ mi1p

Mechanical data	773400	773405
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm
Dimensions		
Height	94,0 mm	94,0 mm
Width	22,5 mm	22,5 mm
Depth	121,0 mm	121,0 mm
Weight	120 g	123 g

Where standards are undated, the 2008-03 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
1-channel	PL d	Cat. 2	SIL CL 2	2,50E-09	SIL 2	2,20E-04	20
2-channel	PL e	Cat. 4	SIL CL 3	2,90E-10	SIL 3	4,50E-06	20
Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,81E-09	SIL 2	9,34E-05	20
1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	2,50E-10	SIL 3	2,21E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.



## Input modules

### PNOZ mi1p

#### Order reference

#### Product

Product type	Features	Order No.
PNOZ mi1p	Expansion module, 8 inputs	773 400
PNOZ mi1p coated version	Expansion module, 8 inputs, coated version	773 405

#### Accessories

#### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 400
Set screw terminals	1 set of screw terminals	793 400

#### Terminator, jumper

Product type	Features	Order No.
PNOZmulti bus terminator	Terminator	779 110
PNOZmulti bus terminator coated	Terminator, coated version	779 112
KOP-XE	Jumper	774 639
KOP-XE coated	Jumper, coated version	774 640

## Input modules PNOZ mi2p

---



### Overview

#### Unit features

Using the product PNOZ mi2p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti .


The product has the following features:

- ▶ 8 inputs for standard functions
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ LED indicator for:
  - Status of PNOZmulti
- ▶ Max. 8 PNOZ mi2p can be connected to the base unit
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Input modules

### PNOZ mi2p

#### Front view

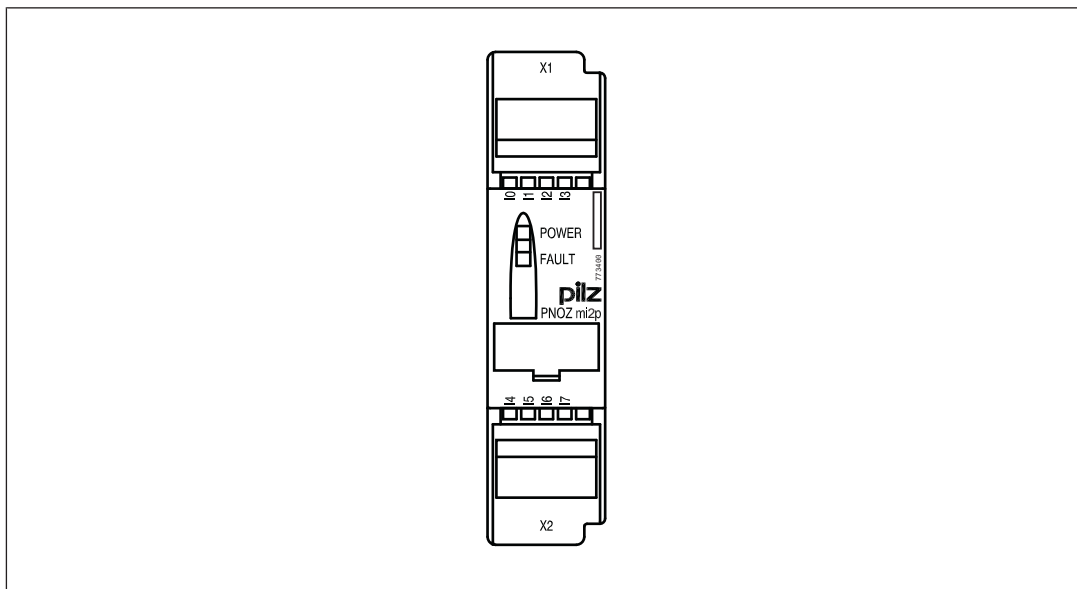

Legend:

- ▶ Inputs I0 – I7

## Function description

### Functions

The expansion module provides additional inputs.

The function of the inputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.


The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion](#) [ 29]".


## Input modules PNOZ mi2p

### Block diagram

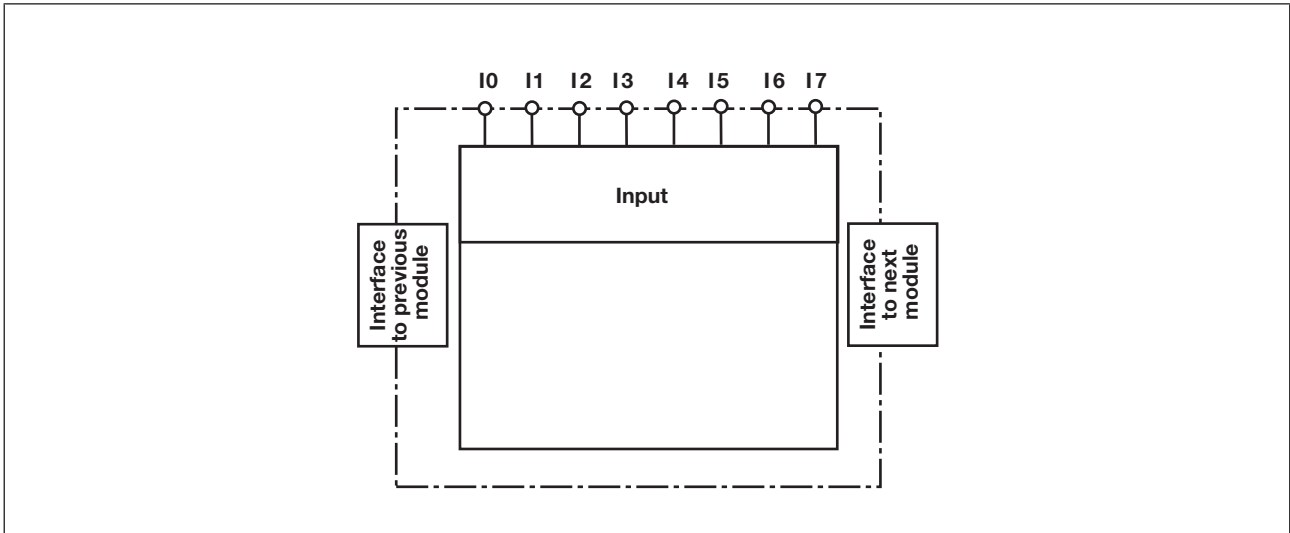

### Installation

#### Dimensions in mm

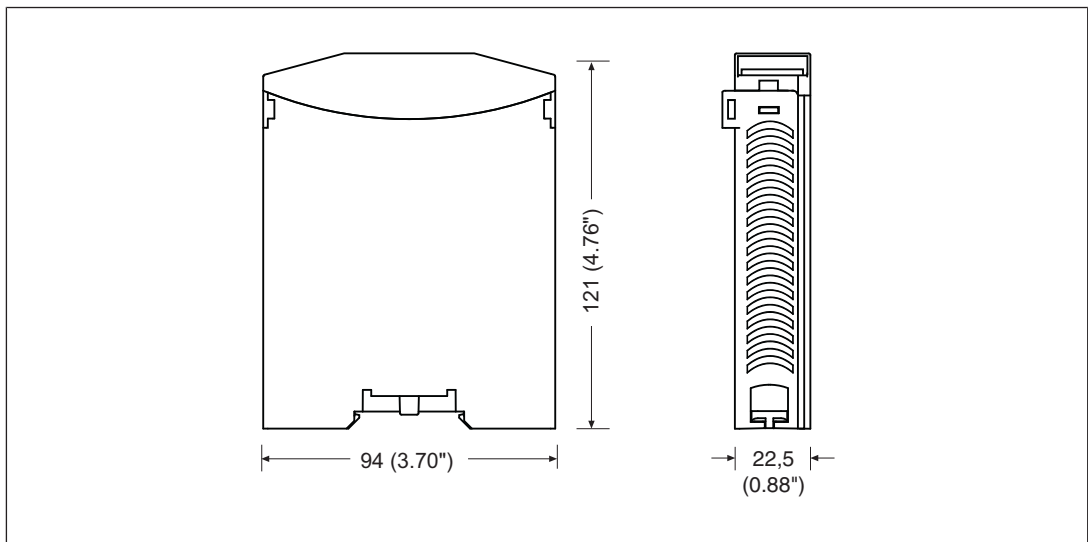

## Input modules PNOZ mi2p

### Commissioning



#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[168\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.


#### Connection

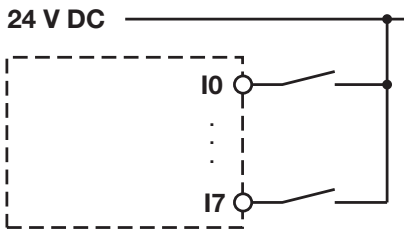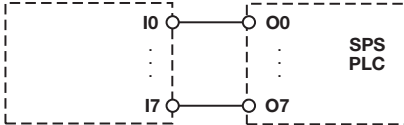Input circuit	Contact	Semiconductor
<p><b>Not safety-related</b></p>		

## Input modules PNOZ mi2p

### Connection example

Poll of PLC outputs (standard function)

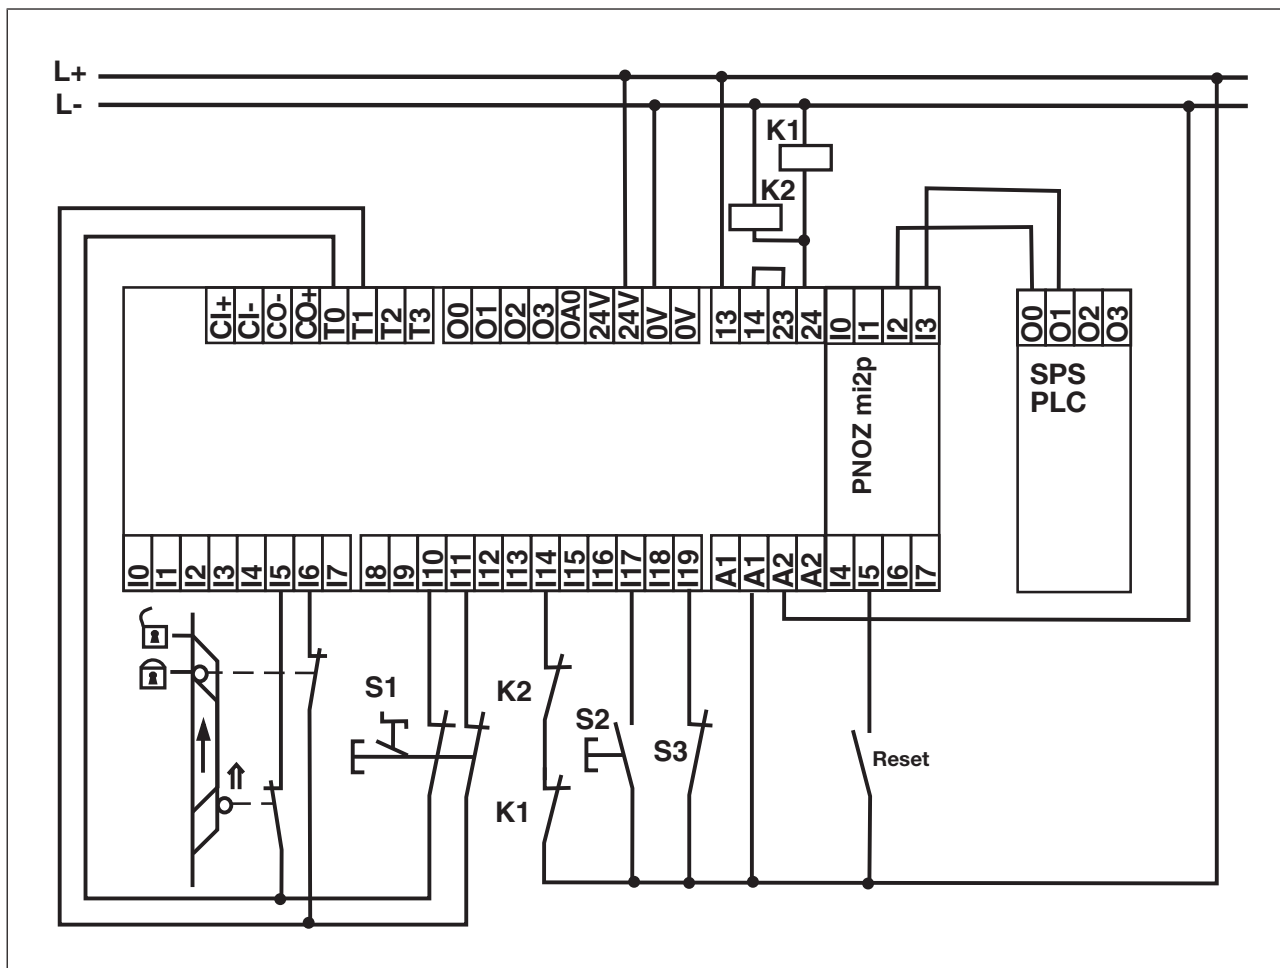

### Technical details

#### General

Approvals

BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed

#### Electrical data

Supply voltage

for

Voltage

Kind

Voltage tolerance

Power consumption

**Module supply**

**5,0 V**

**DC**

**-2 %/+2 %**

**2,5 W**

Status indicator

**LED**

## Input modules

### PNOZ mi2p

<b>Inputs</b>	
Number	<b>8</b>
Signal level at "0"	<b>-3 - +5 V DC</b>
Signal level at "1"	<b>15 - 30 V DC</b>
Input voltage in accordance with EN 61131-2 Type 1	<b>24 V DC</b>
Min. pulse duration	<b>18 ms</b>
Pulse suppression	<b>0,6 ms</b>
Potential isolation	<b>No</b>
<b>Times</b>	
Switch-on delay	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>
Simultaneity, channel 1 and 2 max.	<b>3 s</b>
Simultaneity in the two-hand circuit	<b>0,5 s</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Max. temperature in accordance with UL	<b>0 - 55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>

## Input modules PNOZ mi2p

### Environmental data

#### Protection type

In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

### Mechanical data

#### Mounting position

**Horizontal on top hat rail**

#### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

#### Max. cable length

Max. cable length per input	<b>1,0 km</b>
-----------------------------	---------------

#### Material

Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>

#### Connection type

**Spring-loaded terminal, screw terminal**

#### Conductor cross section with screw terminals

1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>

#### Torque setting with screw terminals

**0,25 Nm**

#### Stripping length with screw terminals

**7 mm**

#### Conductor cross section with spring-loaded terminals

1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>

#### Spring-loaded terminals: Terminal points per connection

**1**

#### Stripping length with spring-loaded terminals

**9 mm**

#### Dimensions

Height	<b>94,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>121,0 mm</b>

#### Weight

**119 g**

Where standards are undated, the 2008-03 latest editions shall apply.



## Input modules PNOZ mi2p

### Order reference

#### Product

Product type	Features	Order No.
PNOZ mi2p	8 standard inputs	773 410

### Accessories

#### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 400
Set screw terminals	1 set of screw terminals	793 400

#### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639

## Output modules PNOZ mo1p

---



### Overview

#### Unit features

Using the product PNOZ mo1p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
  - 4 safety outputs
  - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.
- ▶ Plug-in connection terminals:
  - either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Coated version:
  - Increased environmental requirements (see [Technical details \[177\]](#))

## Output modules

### PNOZ mo1p

#### Front view

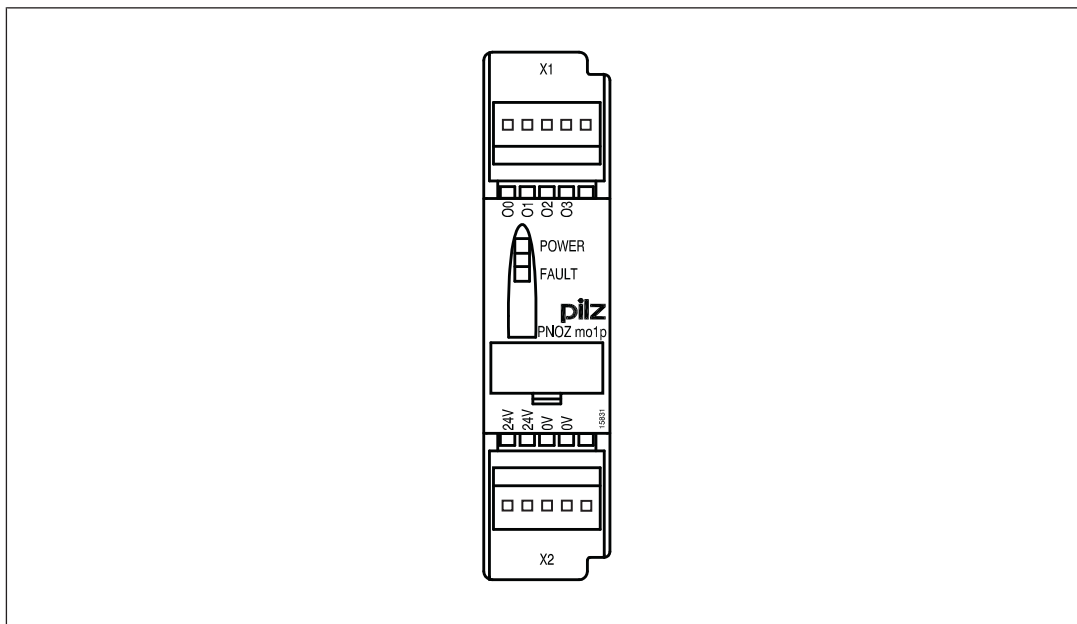

#### Legend:

- ▶ 0 V, 24 V  
Supply connections
- ▶ O0 – O4  
Semiconductor outputs

## Function description

### Functions

The expansion module provides additional semiconductor outputs.


The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

## Output modules

### PNOZ mo1p

#### Block diagram

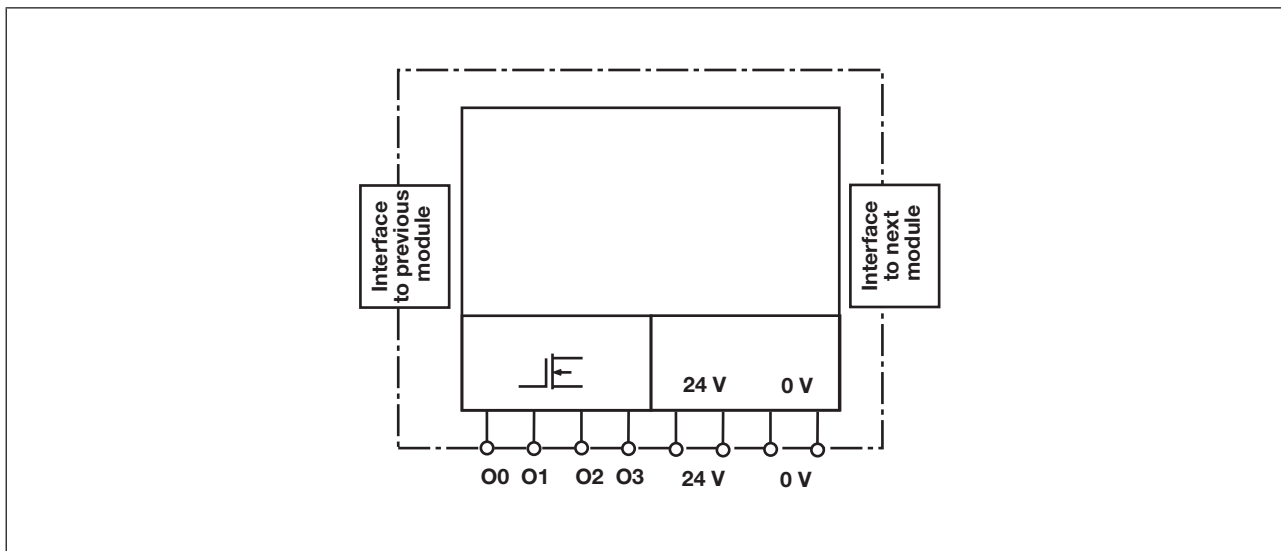


#### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion \[📖 29\]](#)".

#### Installation

##### Dimensions in mm

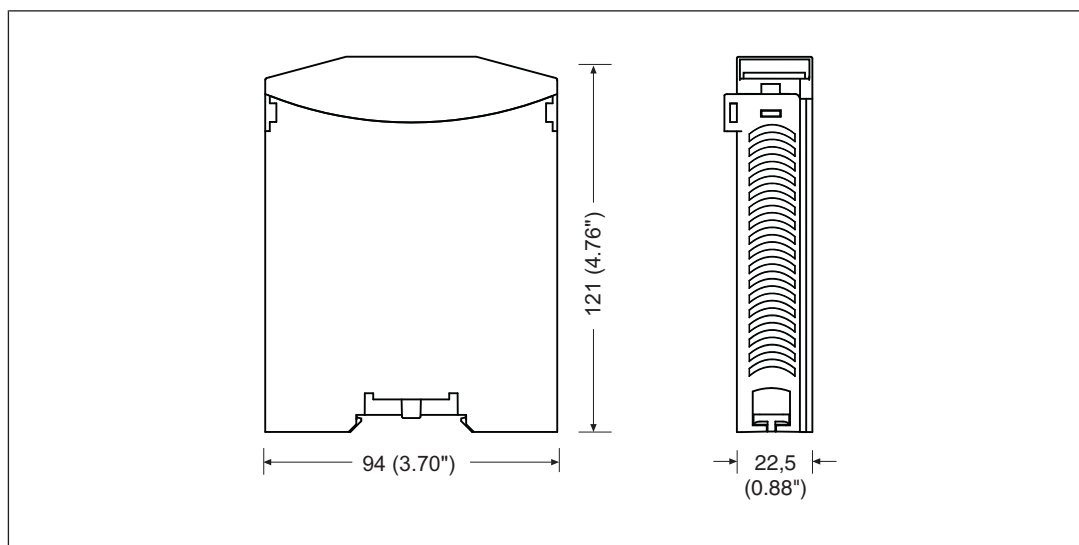

## Output modules PNOZ mo1p

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Please note:

- ▶ Information given in the [Technical details \[177\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.


#### Connection

Supply voltage	AC	DC
Redundant output		
Single output		

## Output modules PNOZ mo1p

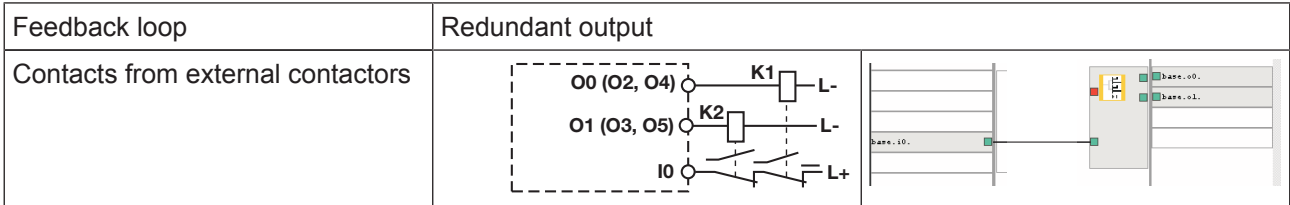

### Connection example

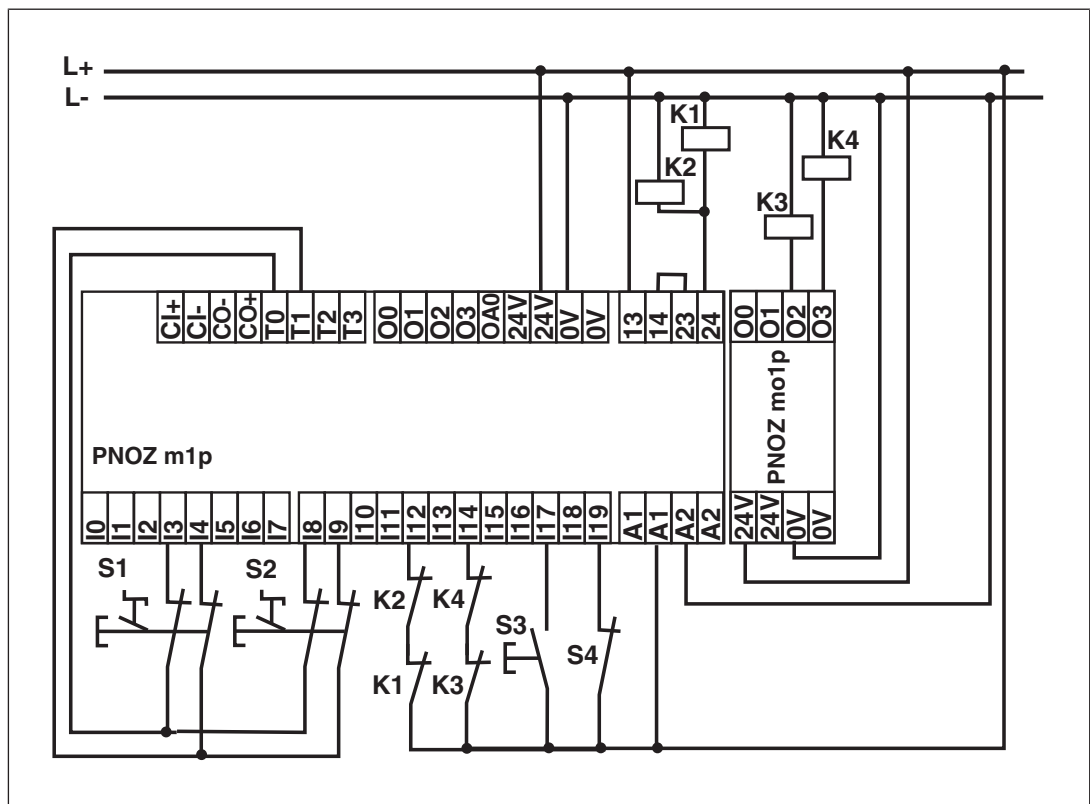

PNOZ mo1p: Contactor K3 and K4  
 PNOZ m1p: Feedback loop K3 and K4 at I14

## Output modules PNOZ mo1p

### Technical details

General	773500	773505
Approvals	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
Electrical data	773500	773505
Supply voltage		
for	<b>Supply to the SC outputs</b>	<b>Supply to the SC outputs</b>
Voltage	<b>24 V</b>	<b>24 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>192,0 W</b>	<b>192,0 W</b>
Residual ripple DC	<b>5 %</b>	<b>5 %</b>
Potential isolation	<b>yes</b>	<b>yes</b>
Supply voltage		
for	<b>Module supply</b>	<b>Module supply</b>
internal	<b>Via base unit</b>	<b>Via base unit</b>
Voltage	<b>5,0 V</b>	<b>5,0 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>	<b>-2 %/+2 %</b>
Power consumption	<b>2,5 W</b>	<b>2,5 W</b>
Status indicator	<b>LED</b>	<b>LED</b>
Semiconductor outputs	773500	773505
Number	<b>4</b>	<b>4</b>
Switching capability		
Voltage	<b>24 V</b>	<b>24 V</b>
Current	<b>2,0 A</b>	<b>2,0 A</b>
Power	<b>48 W</b>	<b>48 W</b>
Voltage	–	<b>24 V</b>
Current	–	<b>1 A</b>
Power	–	<b>24 W</b>
Signal level at "1"	<b>UB - 0.5 VDC at 2 A</b>	<b>UB - 0.5 VDC at 2 A</b>
Residual current at "0"	<b>0,5 mA</b>	<b>0,5 mA</b>
Max. capacitive load	<b>1 µF</b>	<b>1 µF</b>
Max. duration of off time during self test	<b>300 µs</b>	<b>300 µs</b>
Switch-off delay	<b>30 ms</b>	<b>30 ms</b>
Potential isolation	<b>yes</b>	<b>yes</b>
Short circuit-proof	<b>yes</b>	<b>yes</b>

## Output modules

### PNOZ mo1p

<b>Times</b>	<b>773500</b>	<b>773505</b>
Switch-on delay	<b>5,00 s</b>	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>	<b>20 ms</b>
<b>Environmental data</b>	<b>773500</b>	<b>773505</b>
Ambient temperature		
In accordance with the standard	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>	<b>-25 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>	–
Storage temperature		
In accordance with the standard	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>	<b>-25 - 70 °C</b>
Climatic suitability		
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>	<b>Short-term</b>
EMC	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Vibration		
In accordance with the standard	<b>EN 60068-2-6</b>	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>	<b>5,0 - 500,0 Hz</b>
Acceleration	<b>1g</b>	<b>1g</b>
Broadband noise		
In accordance with the standard	–	<b>EN 60068-2-64</b>
Frequency	–	<b>5 - 500 Hz</b>
Acceleration	–	<b>1,9grms</b>
Corrosive gas check		
SO <sub>2</sub> : Concentration 10 ppm, duration 10 days, passive	–	<b>DIN V 40046-36</b>
H <sub>2</sub> S: Concentration 1 ppm, duration 10 days, passive	–	<b>DIN V 40046-37</b>
Shock stress		
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>
Airgap creepage		
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>30 V</b>	<b>30 V</b>



## Output modules PNOZ mo1p

<b>Environmental data</b>	<b>773500</b>	<b>773505</b>
<b>Protection type</b>		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>
<b>Potential isolation</b>	<b>773500</b>	<b>773505</b>
Potential isolation between	<b>SC output and system voltage</b>	<b>SC output and system voltage</b>
Type of potential isolation	<b>Protective separation</b>	<b>Protective separation</b>
Rated surge voltage	<b>2500 V</b>	<b>2500 V</b>
<b>Mechanical data</b>	<b>773500</b>	<b>773505</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>
<b>DIN rail</b>		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
<b>Material</b>		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>	<b>Spring-loaded terminal, screw terminal</b>
<b>Conductor cross section with screw terminals</b>		
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>	<b>0,25 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>	<b>7 mm</b>
<b>Conductor cross section with spring-loaded terminals</b>		
1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>1</b>	<b>1</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>	<b>9 mm</b>
<b>Dimensions</b>		
Height	<b>94,0 mm</b>	<b>94,0 mm</b>
Width	<b>22,5 mm</b>	<b>22,5 mm</b>
Depth	<b>121,0 mm</b>	<b>121,0 mm</b>

## Output modules PNOZ mo1p

Mechanical data	773500	773505
Weight	154 g	156 g

Where standards are undated, the 2008-03 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008	EN ISO 13849-1: 2008	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008
	PL	Category					T <sub>M</sub> [year]
1-channel	PL d	Cat. 2	SIL CL 2	7,00E-09	SIL 2	6,14E-04	20
2-channel	PL e	Cat. 4	SIL CL 3	8,60E-10	SIL 3	1,30E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

### Order reference

#### Product

Product type	Features	Order No.
PNOZ mo1p	Expansion module, 2 or 4 semiconductor outputs, safe	773 500
PNOZ mo1p coated version	Expansion module, 2 or 4 semiconductor outputs, safe, coated version	773 505

### Accessories

#### Terminator, jumper

Product type	Features	Order No.
PNOZmulti bus terminator	Terminator	779 110
PNOZmulti bus terminator coated	Terminator, coated version	779 112
KOP-XE	Jumper	774 639
KOP-XE coated	Jumper, coated version	774 640


#### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 400
Set screw terminals	1 set of screw terminals	793 400

## Output modules PNOZ mo1p

### Supplementary data

Maximum capacitive load  $C$  ( $\mu\text{F}$ ) with load current  $I$  (mA) at the semiconductor outputs

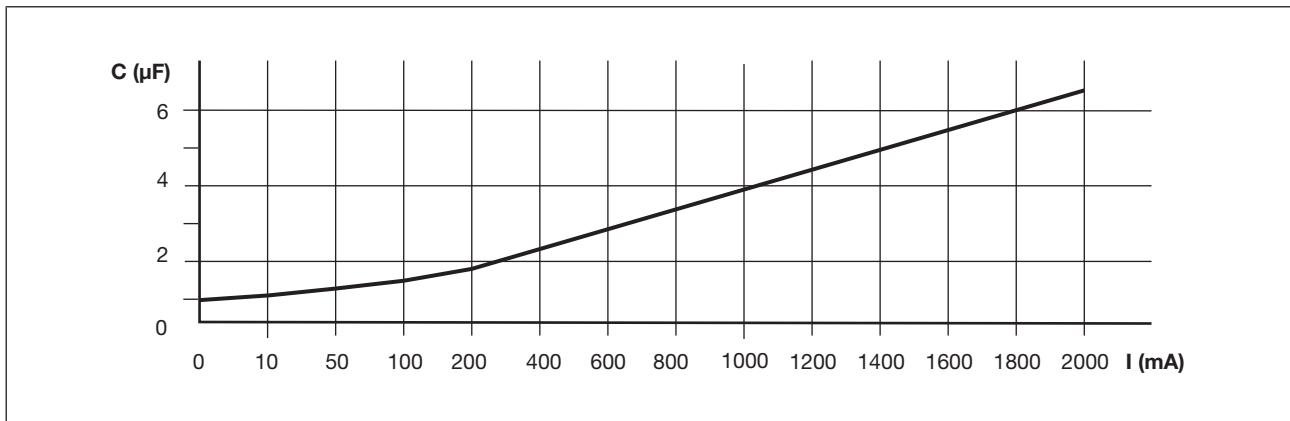

## Output modules PNOZ mo2p

---




### Overview

#### Unit features

Using the product PNOZ mo2p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Positive-guided relay outputs:
  - 2 safety outputs
  - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Status indicators
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.
- ▶ Plug-in connection terminals:
  - either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Coated version:
  - Increased environmental requirements (see [Technical details](#)  186])

## Output modules

### PNOZ mo2p

#### Front view

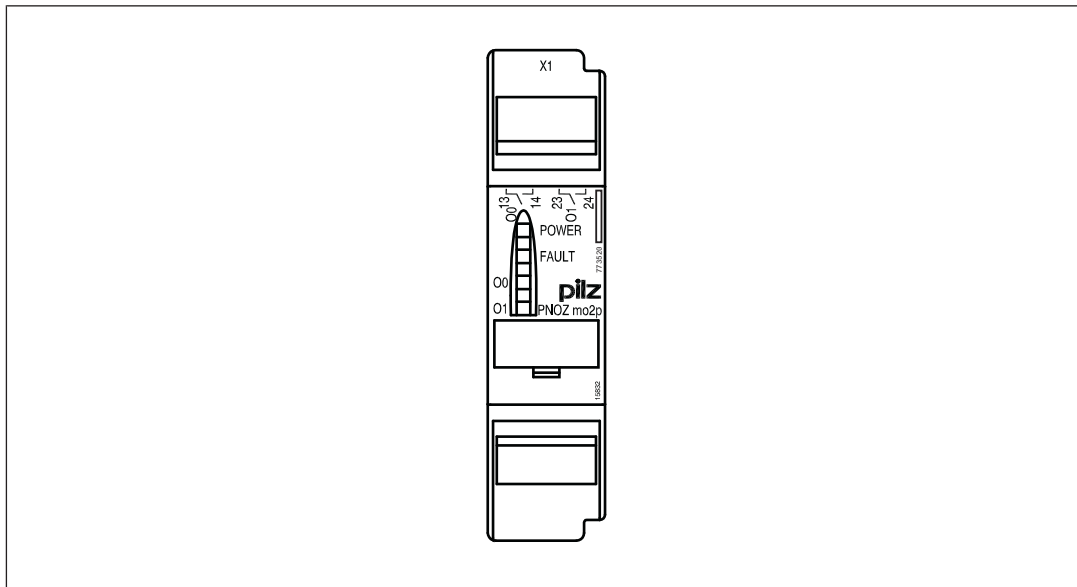

Key:

- ▶ O0 – O1  
Relay outputs

## Function description


### Functions

The expansion module provides additional relay outputs.

The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.


### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion](#) [ 29]".

# Output modules


## PNOZ mo2p

### Block diagram

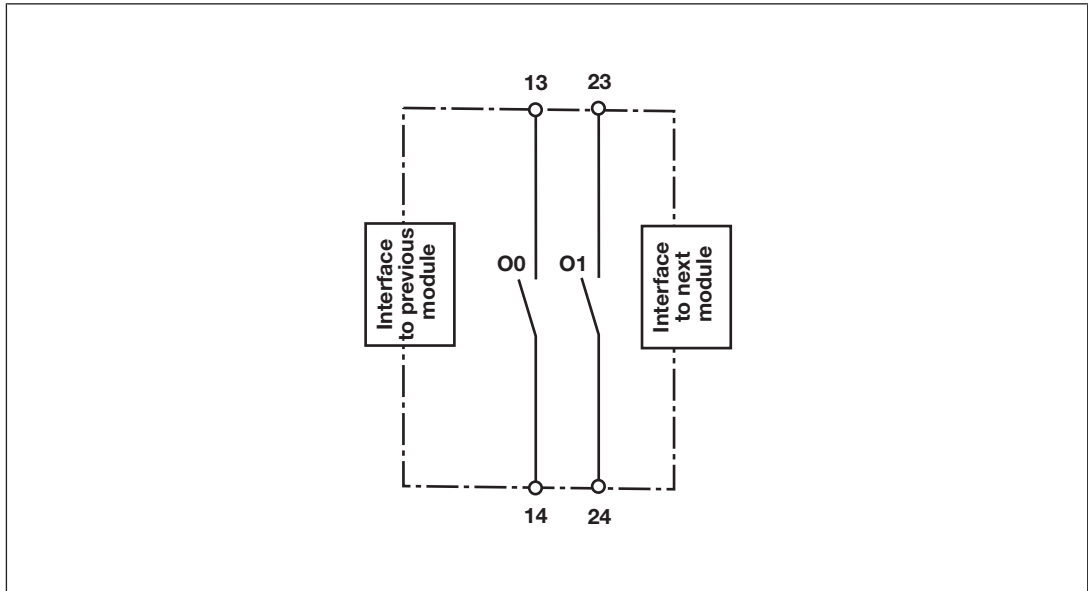

### Installation

#### Dimensions in mm

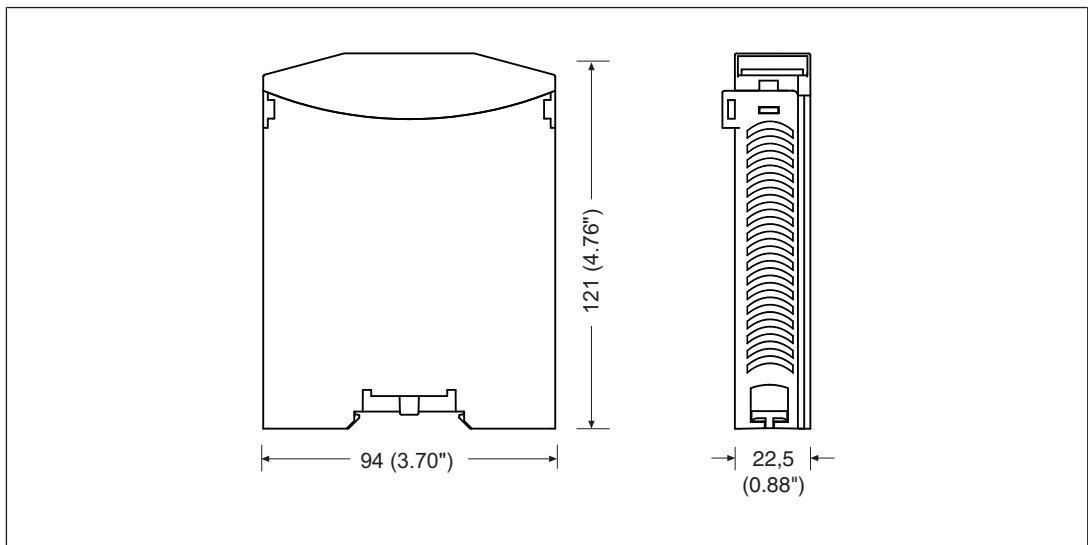

## Output modules PNOZ mo2p

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:


- ▶ Information given in the [Technical details \[186\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.

#### Connection

<p>Redundant</p>		
<p>single</p>		
<p>Feedback loop</p>	<p>Redundant output</p>	
<p>Contacts from external contactors</p>		

## Output modules PNOZ mo2p

### Connection example

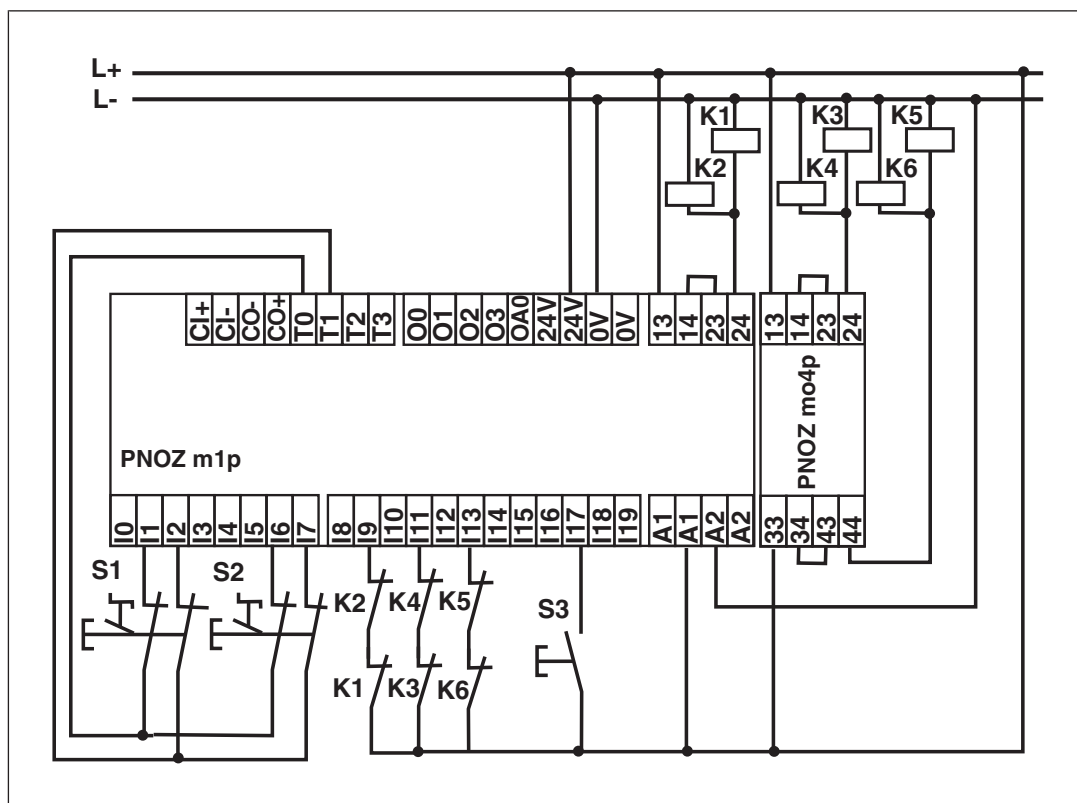

### Technical details

General	773520	773525
Approvals	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
<b>Electrical data</b>	<b>773520</b>	<b>773525</b>
Supply voltage		
for	<b>Module supply</b>	<b>Module supply</b>
internal	<b>Via base unit</b>	<b>Via base unit</b>
Voltage	<b>5,0 V</b>	<b>5,0 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>	<b>-2 %/+2 %</b>
Power consumption	<b>2,5 W</b>	<b>2,5 W</b>
Status indicator	<b>LED</b>	<b>LED</b>
<b>Relay outputs</b>	<b>773520</b>	<b>773525</b>
Utilisation category		
In accordance with the standard	<b>EN 60947-4-1</b>	<b>EN 60947-4-1</b>



## Output modules PNOZ mo2p

Relay outputs	773520	773525
Utilisation category of safety contacts		
AC1 at	240 V	240 V
Min. current	10,00 mA	10,00 mA
Max. current	6,0 A	6,0 A
Max. power	1440 VA	1440 VA
DC1 at	24 V	24 V
Min. current	10,00 mA	10,00 mA
Max. current	6,0 A	6,0 A
Max. power	144 W	144 W
Safety contacts, AC1 at	–	240 V
Max. current	–	4 A
Max. power	–	960 W
Safety contacts, DC 1 at	–	24 V
Max. current	–	4 A
Max. power	–	96 W
Utilisation category		
In accordance with the standard	EN 60947-5-1	EN 60947-5-1
Utilisation category of safety contacts		
AC15 at	230 V	230 V
Max. current	3,0 A	3,0 A
Max. power	690 W	690 W
DC13 (6 cycles/min) at	24 V	24 V
Max. current	3,0 A	3,0 A
Max. power	72 W	72 W
Airgap creepage between		
Relay contacts	3 mm	3 mm
Relay contacts and other circuits	5,5 mm	5,5 mm
External contact fuse protection, safety contacts		
In accordance with the standard	EN 60947-5-1	EN 60947-5-1
Blow-out fuse, quick	6 A	6 A
Blow-out fuse, slow	6,00 A	6,00 A
Circuit breaker 24V AC/DC, characteristic B/C	6 A	6 A
Switch-off delay	50 ms	50 ms
Potential isolation	yes	yes
<b>Times</b>	<b>773520</b>	<b>773525</b>
Switch-on delay	5,00 s	5,00 s

## Output modules

### PNOZ mo2p

Times	773520	773525
Supply interruption before de-energisation	<b>20 ms</b>	<b>20 ms</b>
<b>Environmental data</b>	<b>773520</b>	<b>773525</b>
Ambient temperature		
In accordance with the standard	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>	<b>-25 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>	–
Storage temperature		
In accordance with the standard	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>	<b>-25 - 70 °C</b>
Climatic suitability		
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>	<b>Short-term (only with separated extra low voltage)</b>
EMC	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Vibration		
In accordance with the standard	<b>EN 60068-2-6</b>	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>	<b>1g</b>
Broadband noise		
In accordance with the standard	–	<b>EN 60068-2-64</b>
Frequency	–	<b>5 - 500 Hz</b>
Acceleration	–	<b>1,9grms</b>
Corrosive gas check		
SO <sub>2</sub> : Concentration 10 ppm, duration 10 days, passive	–	<b>DIN V 40046-36</b>
H <sub>2</sub> S: Concentration 1 ppm, duration 10 days, passive	–	<b>DIN V 40046-37</b>
Shock stress		
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>
Airgap creepage		
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>250 V</b>	<b>250 V</b>
Rated impulse withstand voltage	<b>6,00 kV</b>	<b>6,00 kV</b>

## Output modules PNOZ mo2p

<b>Environmental data</b>	<b>773520</b>	<b>773525</b>
<b>Protection type</b>		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>
<b>Potential isolation</b>	<b>773520</b>	<b>773525</b>
Potential isolation between	<b>RL output and system voltage</b>	<b>RL output and system voltage</b>
Type of potential isolation	<b>Protective separation</b>	<b>Protective separation</b>
Rated surge voltage	<b>6000 V</b>	<b>6000 V</b>
<b>Mechanical data</b>	<b>773520</b>	<b>773525</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>
<b>DIN rail</b>		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
<b>Material</b>		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>	<b>Spring-loaded terminal, screw terminal</b>
<b>Conductor cross section with screw terminals (relay outputs)</b>		
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals (relay outputs)	<b>0,50 Nm</b>	<b>0,50 Nm</b>
Stripping length with screw terminals (relay outputs)	<b>8 mm</b>	<b>8 mm</b>
<b>Conductor cross section with spring-loaded terminals (relay outputs)</b>		
1 core flexible without crimp connector	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>1</b>	<b>1</b>
Stripping length with spring-loaded terminals (relay outputs)	<b>10 mm</b>	<b>10 mm</b>

## Output modules PNOZ mo2p

Mechanical data	773520	773525
Dimensions		
Height	94,0 mm	94,0 mm
Width	22,5 mm	22,5 mm
Depth	121,0 mm	121,0 mm
Weight	170 g	151 g

Where standards are undated, the 2009-01 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
1-channel	PL c	Cat. 1	-	2,90E-08	-	2,60E-03	20
2-channel	PL e	Cat. 4	SIL CL 3	3,00E-10	SIL 3	5,20E-07	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switching frequency and the load on the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

**Output modules**  
PNOZ mo2p

**Supplementary data**

**Service life graph for the relay contacts**

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

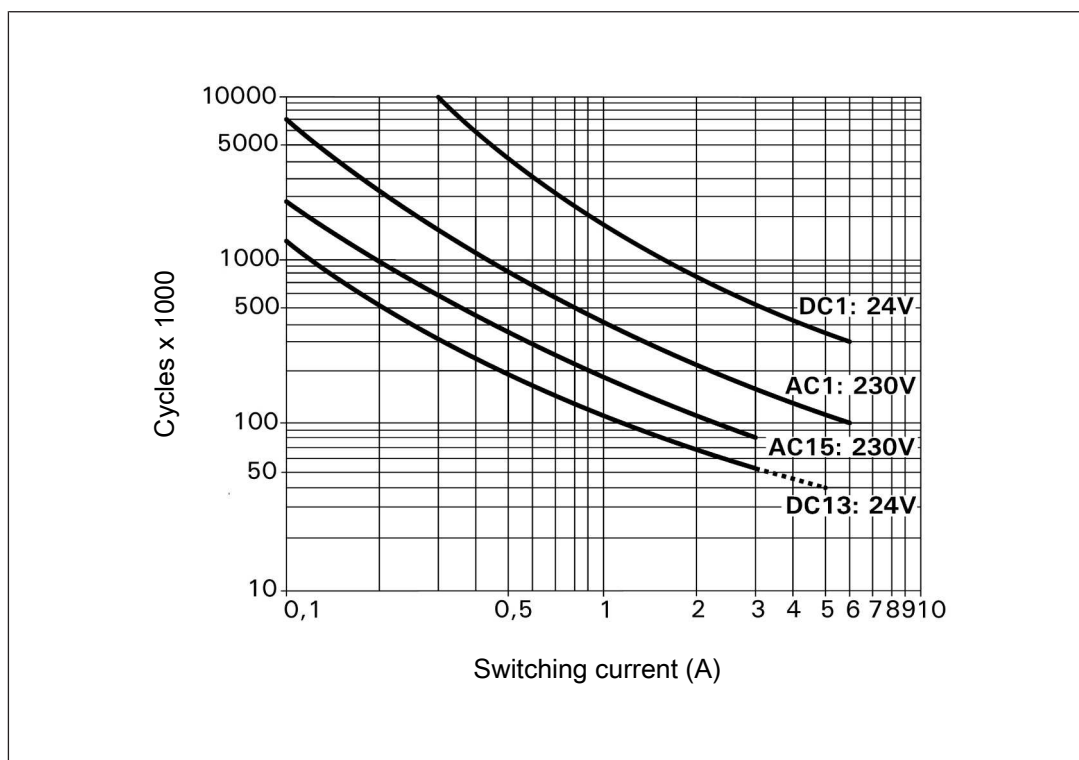


Fig.: Service life graphs at 24 VDC and 230 VAC

## Output modules

### PNOZ mo2p

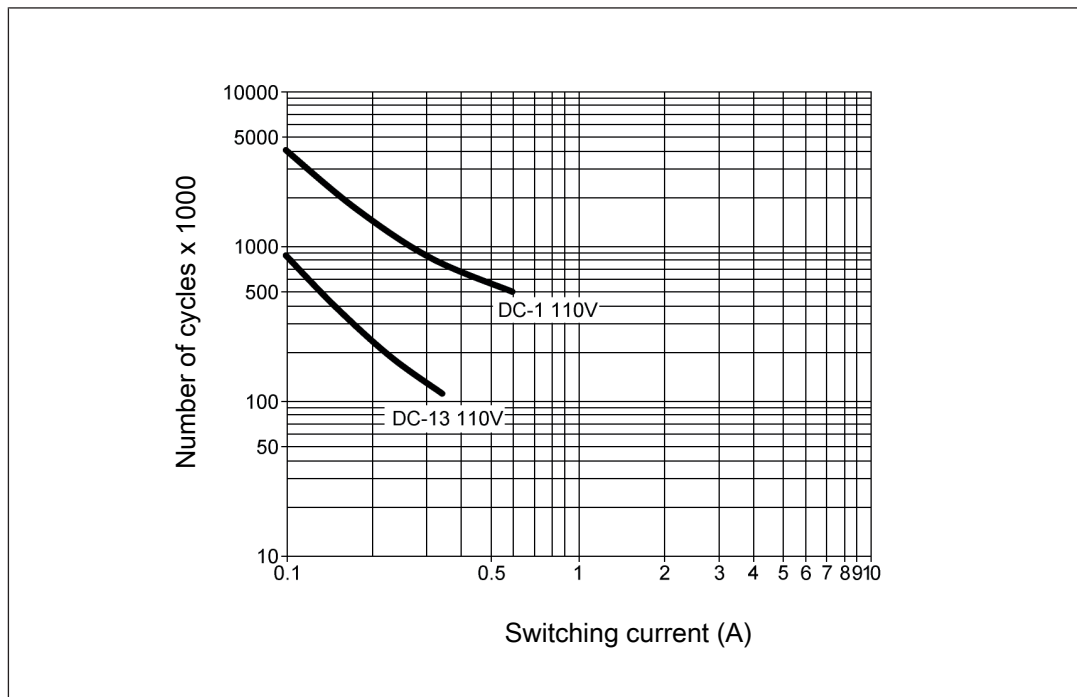


Fig.: Service life graphs at 110 VDC

#### Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[186\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

## Output modules PNOZ mo2p

### Order reference

#### Product

Product type	Features	Order No.
PNOZ mo2p	Expansion module, 1 or 2 relay outputs, positive-guided	773 520
PNOZ mo2p coated version	Expansion module, 1 or 2 relay outputs, positive-guided, coated version	773 525

#### Accessories

##### Terminator, jumper

Product type	Features	Order No.
PNOZmulti bus terminator	Terminator	779 110
PNOZmulti bus terminator coated	Terminator, coated version	779 112
KOP-XE	Jumper	774 639
KOP-XE coated	Jumper, coated version	774 640

##### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 520
Set screw terminals	1 set of screw terminals	793 520

## Output modules PNOZ mo3p

---



### Overview

#### Unit features

Using the product PNOZ mo3p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
  - 2 dual-pole safety outputs
  - up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application
- ▶ Open circuit detection
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.
- ▶ Plug-in connection terminals:
  - either spring-loaded terminal or screw terminal available as an accessory (see order reference)



## Output modules PNOZ mo3p

### Front view

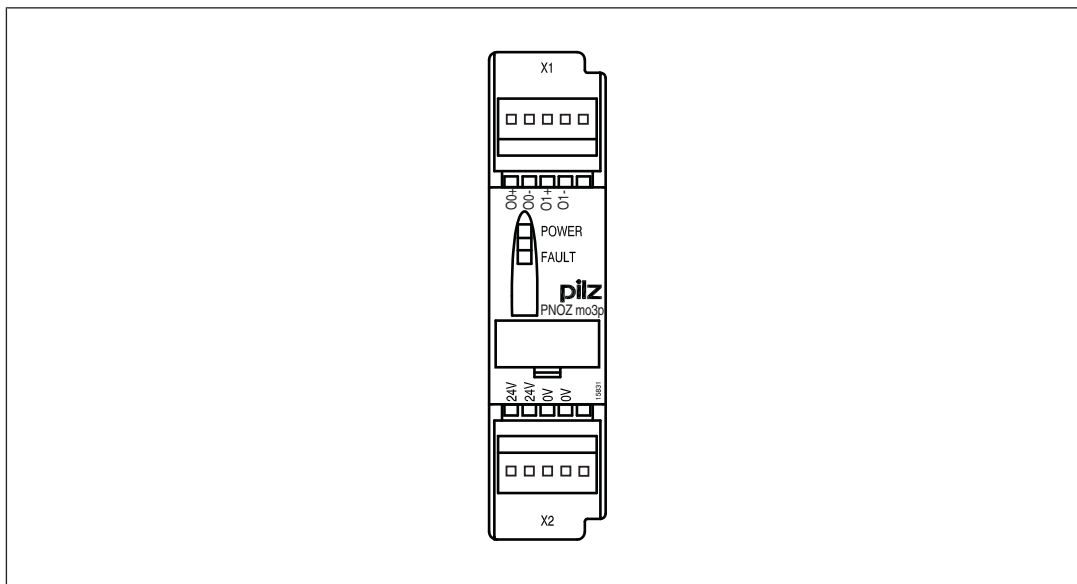

#### Legend:

- ▶ 0 V, 24 V  
Supply connections
- ▶ O0+, O0- and O1+, O1-  
Dual-pole semiconductor outputs

## Function description

### Functions


The expansion module provides additional semiconductor outputs.

The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

## Output modules PNOZ mo3p

### Block diagram

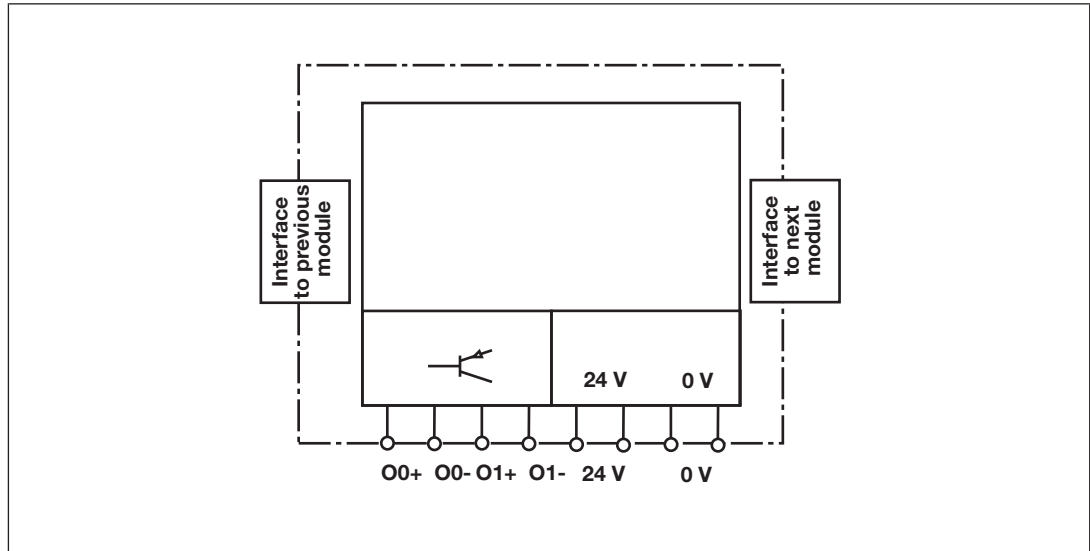


### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion](#) [ 29]".

### Installation

#### Dimensions in mm

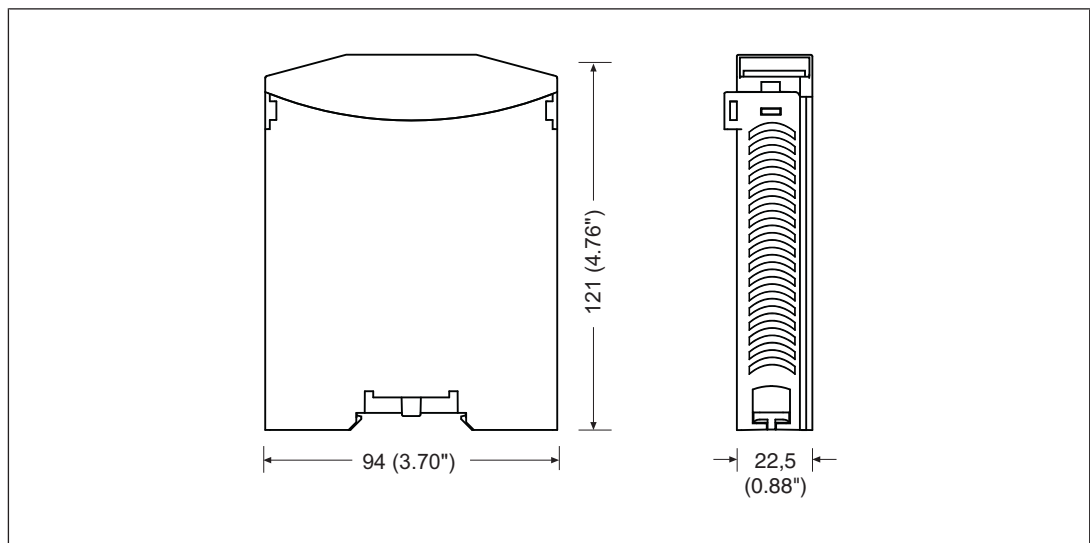

## Output modules PNOZ mo3p

### Commissioning

#### General wiring guidelines


The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:


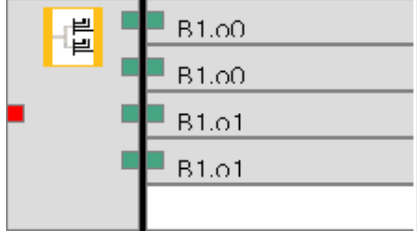
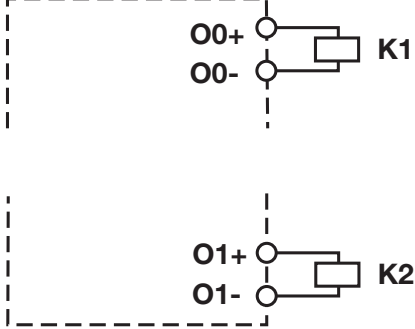
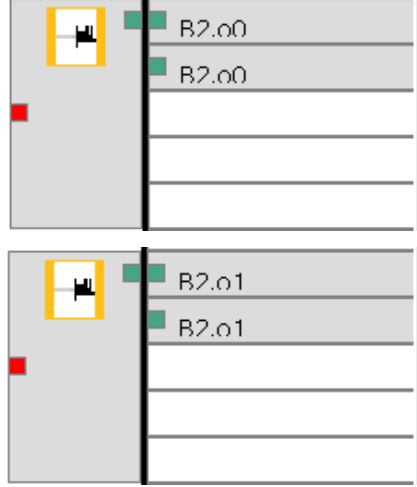
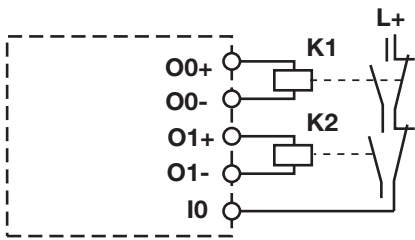

- ▶ Information given in the [Technical details \[199\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Please note: The supply voltage always must be present at X2, even if you do not use the semiconductor outputs.

The unit has 2 dual-pole semiconductor outputs. These may be configured as single-pole or redundant outputs. The output assignment is defined in the PNOZmulti Configurator. Wire the output circuit as described in the table.

#### Connection

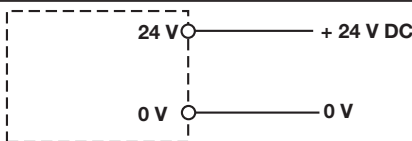
Supply voltage	AC	DC
	/	

## Output modules PNOZ mo3p

<p>Redundant output</p>		
<p>Single output</p>		
<p>Feedback loop Contacts from external contactors</p>		

## Output modules PNOZ mo3p

### Connection example

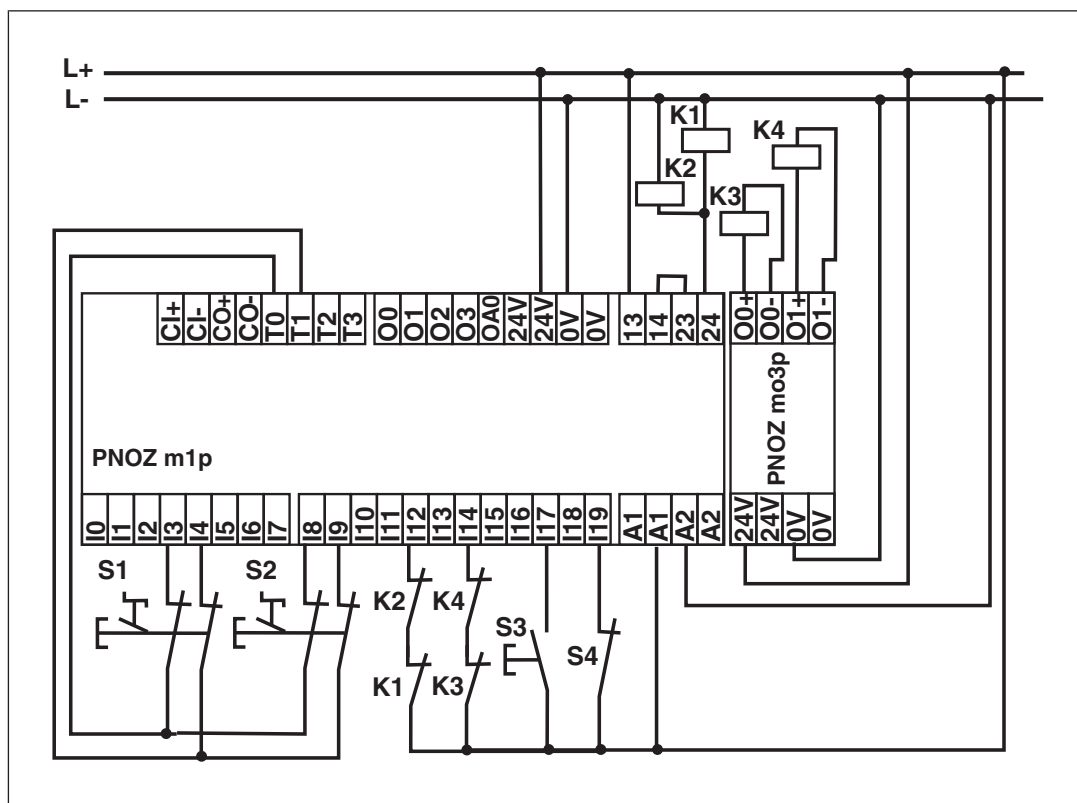

### Technical details

#### General

Approvals

BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed

#### Electrical data

Supply voltage

for

Supply to the SC outputs

Voltage

24 V

Kind

DC

Voltage tolerance

-15 %/+20 %

Output of external power supply (DC)

96,0 W

Residual ripple DC

5 %

Potential isolation

yes

## Output modules

### PNOZ mo3p

#### Electrical data

Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>5,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>2,5 W</b>

Status indicator	<b>LED</b>
------------------	------------

#### Semiconductor outputs, 2-pole

Number	<b>2</b>
Switching capability	
Voltage	<b>24 V DC</b>
Current	<b>2 A</b>
Power	<b>48 W</b>
Residual current at "0"	<b>0,5 mA</b>
Signal level at "1"	<b>2 A: UB - 0,5 V DC</b>
Switch-off delay	<b>30 ms</b>
Open circuit detection off	<b>3,00 kOhm</b>
Galvanic isolation	<b>yes</b>
Short circuit-proof	<b>yes</b>

#### Times

Switch-on delay	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>

#### Environmental data

Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>

## Output modules

### PNOZ mo3p

#### Environmental data

##### Shock stress

In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>

Max. operating height above sea level	<b>2000 m</b>
---------------------------------------	---------------

##### Airgap creepage

In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>

Rated insulation voltage	<b>30 V</b>
--------------------------	-------------

##### Protection type

In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

#### Potential isolation

Potential isolation between	<b>SC output and system voltage</b>
-----------------------------	-------------------------------------

Type of potential isolation	<b>Protective separation</b>
-----------------------------	------------------------------

Rated surge voltage	<b>2500 V</b>
---------------------	---------------

#### Mechanical data

Mounting position	<b>Horizontal on top hat rail</b>
-------------------	-----------------------------------

##### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

##### Material

Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>

Connection type	<b>Spring-loaded terminal, screw terminal</b>
-----------------	---

##### Conductor cross section with screw terminals

1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>

Torque setting with screw terminals	<b>0,25 Nm</b>
-------------------------------------	----------------

Stripping length with screw terminals	<b>7 mm</b>
---------------------------------------	-------------

##### Conductor cross section with spring-loaded terminals

1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>

Spring-loaded terminals: Terminal points per connection	<b>1</b>
---	----------

Stripping length with spring-loaded terminals	<b>9 mm</b>
---	-------------

## Output modules

### PNOZ mo3p

#### Mechanical data

##### Dimensions

Height	94,0 mm
Width	22,5 mm
Depth	121,0 mm

Weight	127 g
--------	-------

Where standards are undated, the 2008-03 latest editions shall apply.

#### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008	EN ISO 13849-1: 2008	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
	PL	Category					
2-channel	PL e	Cat. 4	SIL CL 3	1,74E-09	SIL 3	2,48E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

#### Order reference

##### Product

Product type	Features	Order No.
PNOZ mo3p	Expansion module, 2 dual-pole semiconductor outputs, safe	773 510

#### Accessories

##### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 400
Set screw terminals	1 set of screw terminals	793 400

##### Terminator, jumper


Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639



## Output modules PNOZ mo3p

### Supplementary data

Maximum capacitive load  $C$  ( $\mu\text{F}$ ) with load current  $I$  (mA) at the semiconductor outputs

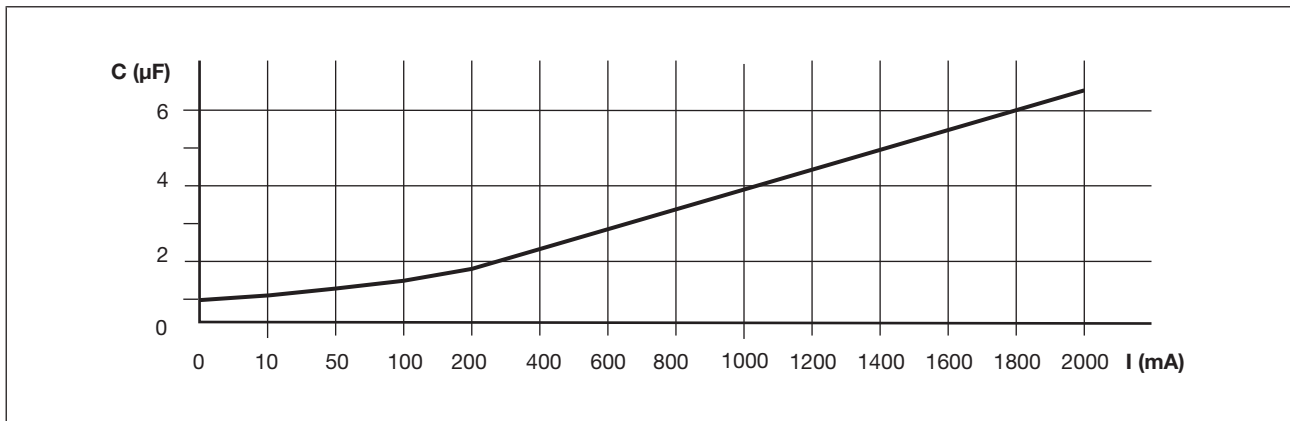

## Output modules PNOZ mo4p

---




### Overview

#### Unit features

Using the product PNOZ mo4p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Positive-guided relay outputs:
  - 4 safety outputs
  - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Status indicators
- ▶ Max. 6 PNOZ mo4p units can be connected to the base unit
- ▶ Plug-in connection terminals:
  - either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Coated version:
  - Increased environmental requirements (see [Technical details](#) [ 208])

## Output modules PNOZ mo4p

### Front view

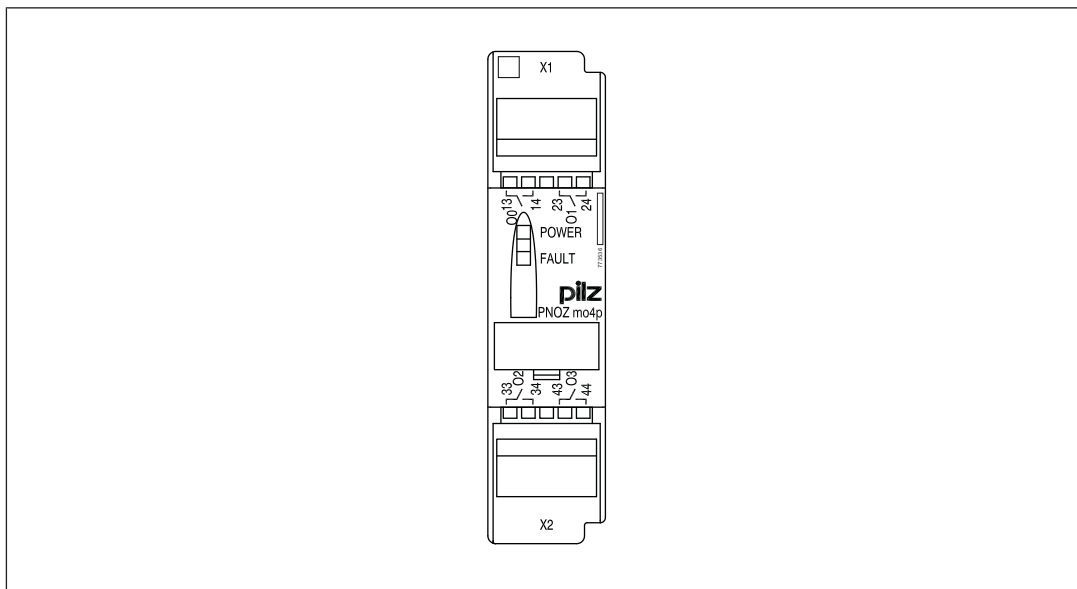

Legend:

- ▶ O0 – O3  
Relay outputs

## Function description

### Functions

The expansion module provides additional relay outputs.

The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.


The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion](#) [ 29]".


**Output modules**  
PNOZ mo4p

**Block diagram**

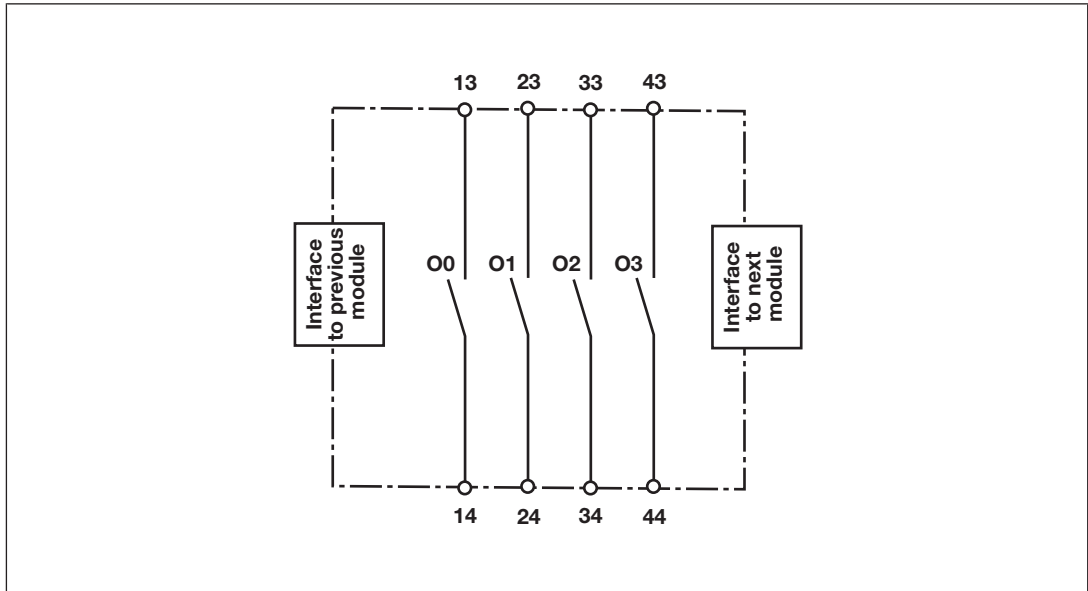

**Installation**

**Dimensions in mm**

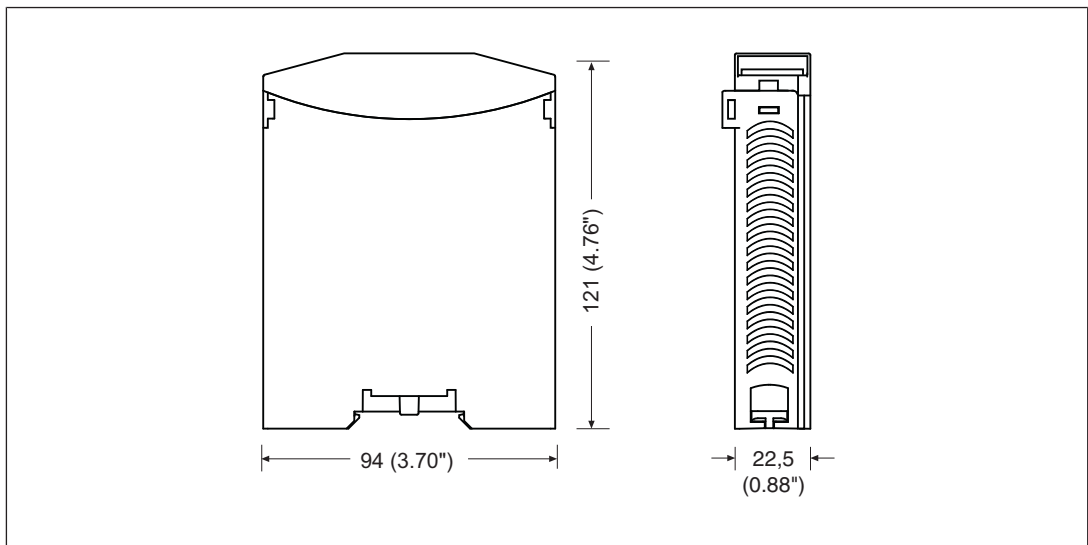

## Output modules PNOZ mo4p

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:


- ▶ Information given in the [Technical details \[208\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.

#### Connection

<p>Redundant</p>		
<p>single</p>		
<p>Feedback loop Contacts from external contactors</p>		

## Output modules PNOZ mo4p

### Connection example

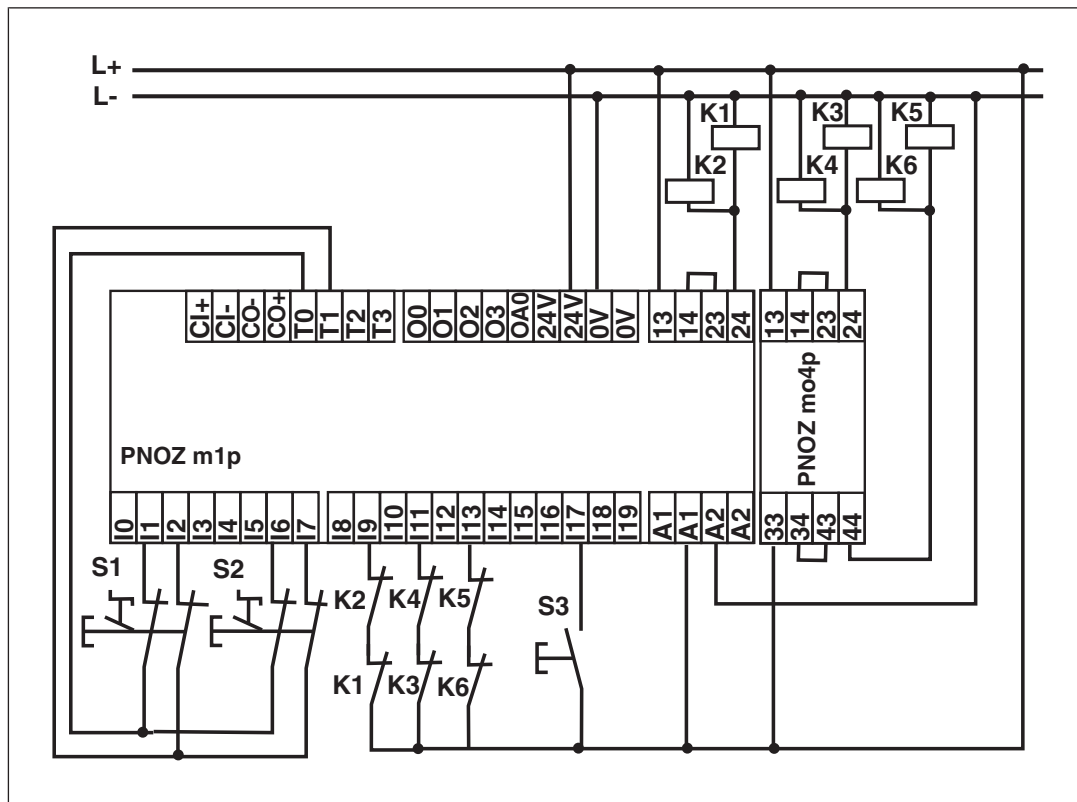

### Technical details

General	773536	773537
Approvals	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
<b>Electrical data</b>	<b>773536</b>	<b>773537</b>
Supply voltage		
for	<b>Module supply</b>	<b>Module supply</b>
internal	<b>Via base unit</b>	<b>Via base unit</b>
Voltage	<b>5,0 V</b>	<b>5,0 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>	<b>-2 %/+2 %</b>
Power consumption	<b>2,5 W</b>	<b>2,5 W</b>
Status indicator	<b>LED</b>	<b>LED</b>
<b>Relay outputs</b>	<b>773536</b>	<b>773537</b>
Utilisation category		
In accordance with the standard	<b>EN 60947-4-1</b>	<b>EN 60947-4-1</b>

## Output modules PNOZ mo4p

Relay outputs	773536	773537
Utilisation category of safety contacts		
AC1 at	<b>240 V</b>	<b>240 V</b>
Min. current	<b>10,00 mA</b>	<b>10,00 mA</b>
Max. current	<b>6,0 A</b>	<b>6,0 A</b>
Max. power	<b>1440 VA</b>	<b>1440 VA</b>
DC1 at	<b>24 V</b>	<b>24 V</b>
Min. current	<b>10,00 mA</b>	<b>10,00 mA</b>
Max. current	<b>6,0 A</b>	<b>6,0 A</b>
Max. power	<b>144 W</b>	<b>144 W</b>
Safety contacts, AC1 at	–	<b>240 V</b>
Max. current	–	<b>2 A</b>
Max. power	–	<b>480 W</b>
Safety contacts, DC 1 at	–	<b>24 V</b>
Max. current	–	<b>2 A</b>
Max. power	–	<b>48 W</b>
Utilisation category		
In accordance with the standard	<b>EN 60947-5-1</b>	<b>EN 60947-5-1</b>
Utilisation category of safety contacts		
AC15 at	<b>230 V</b>	<b>230 V</b>
Max. current	<b>3,0 A</b>	<b>3,0 A</b>
Max. power	<b>690 W</b>	<b>690 W</b>
DC13 (6 cycles/min) at	<b>24 V</b>	<b>24 V</b>
Max. current	<b>3,0 A</b>	<b>3,0 A</b>
Max. power	<b>72 W</b>	<b>72 W</b>
AC15 at	–	<b>230 V</b>
Max. current	–	<b>2 A</b>
Max. power	–	<b>460 W</b>
DC13 (6 cycles/min) at	–	<b>24 V</b>
Max. current	–	<b>2 A</b>
Max. power	–	<b>48 W</b>
Max. permitted total current of relay outputs at an ambient temperature of > 50 °C		
	<b>12 A</b>	–
Airgap creepage between		
Relay contacts	<b>3 mm</b>	<b>3 mm</b>
Relay contacts and other circuits	<b>5,5 mm</b>	<b>5,5 mm</b>

## Output modules PNOZ mo4p

<b>Relay outputs</b>	<b>773536</b>	<b>773537</b>
External contact fuse protection, safety contacts		
In accordance with the standard	<b>EN 60947-5-1</b>	<b>EN 60947-5-1</b>
Blow-out fuse, quick	<b>6 A</b>	<b>6 A</b>
Blow-out fuse, slow	<b>6,00 A</b>	<b>6,00 A</b>
Circuit breaker 24V AC/DC, characteristic B/C	<b>6 A</b>	<b>6 A</b>
Switch-off delay	<b>50 ms</b>	<b>50 ms</b>
Conventional thermal current	<b>12,0 A</b>	<b>12,0 A</b>
<b>Times</b>	<b>773536</b>	<b>773537</b>
Switch-on delay	<b>5,00 s</b>	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>	<b>20 ms</b>
<b>Environmental data</b>	<b>773536</b>	<b>773537</b>
Ambient temperature		
In accordance with the standard	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>	<b>-25 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>	–
Storage temperature		
In accordance with the standard	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>	<b>-25 - 70 °C</b>
Climatic suitability		
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>	<b>Short-term (only with separated extra low voltage)</b>
EMC	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Vibration		
In accordance with the standard	<b>EN 60068-2-6</b>	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>	<b>5,0 - 500,0 Hz</b>
Acceleration	<b>1g</b>	<b>1g</b>
Broadband noise		
In accordance with the standard	–	<b>EN 60068-2-64</b>
Frequency	–	<b>5 - 500 Hz</b>
Acceleration	–	<b>1,9grms</b>
Corrosive gas check		
SO <sub>2</sub> : Concentration 10 ppm, duration 10 days, passive	–	<b>DIN V 40046-36</b>
H <sub>2</sub> S: Concentration 1 ppm, duration 10 days, passive	–	<b>DIN V 40046-37</b>



## Output modules

### PNOZ mo4p

<b>Environmental data</b>	<b>773536</b>	<b>773537</b>
Shock stress		
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>
Airgap creepage		
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>250 V</b>	<b>250 V</b>
Rated impulse withstand voltage	<b>6,00 kV</b>	<b>6,00 kV</b>
Protection type		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>
<b>Mechanical data</b>	<b>773536</b>	<b>773537</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>
DIN rail		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
Material		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals (relay outputs)		
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals (relay outputs)	<b>0,50 Nm</b>	<b>0,50 Nm</b>
Stripping length with screw terminals (relay outputs)	<b>8 mm</b>	<b>8 mm</b>

## Output modules

### PNOZ mo4p

Mechanical data	773536	773537
Conductor cross section with spring-loaded terminals (relay outputs)		
1 core flexible without crimp connector	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
1 core flexible with crimp connector	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals (relay outputs)	10 mm	10 mm
Dimensions		
Height	94,0 mm	94,0 mm
Width	22,5 mm	22,5 mm
Depth	121,0 mm	121,0 mm
Weight	204 g	204 g

Where standards are undated, the 2009-01 latest editions shall apply.

## Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
1-channel	PL c	Cat. 1	-	2,90E-08	-	2,60E-03	20
2-channel	PL e	Cat. 4	SIL CL 3	3,00E-10	SIL 3	5,20E-07	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switching frequency and the load on the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

**Output modules**  
PNOZ mo4p

**Supplementary data**

**Service life graph for the relay contacts**

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

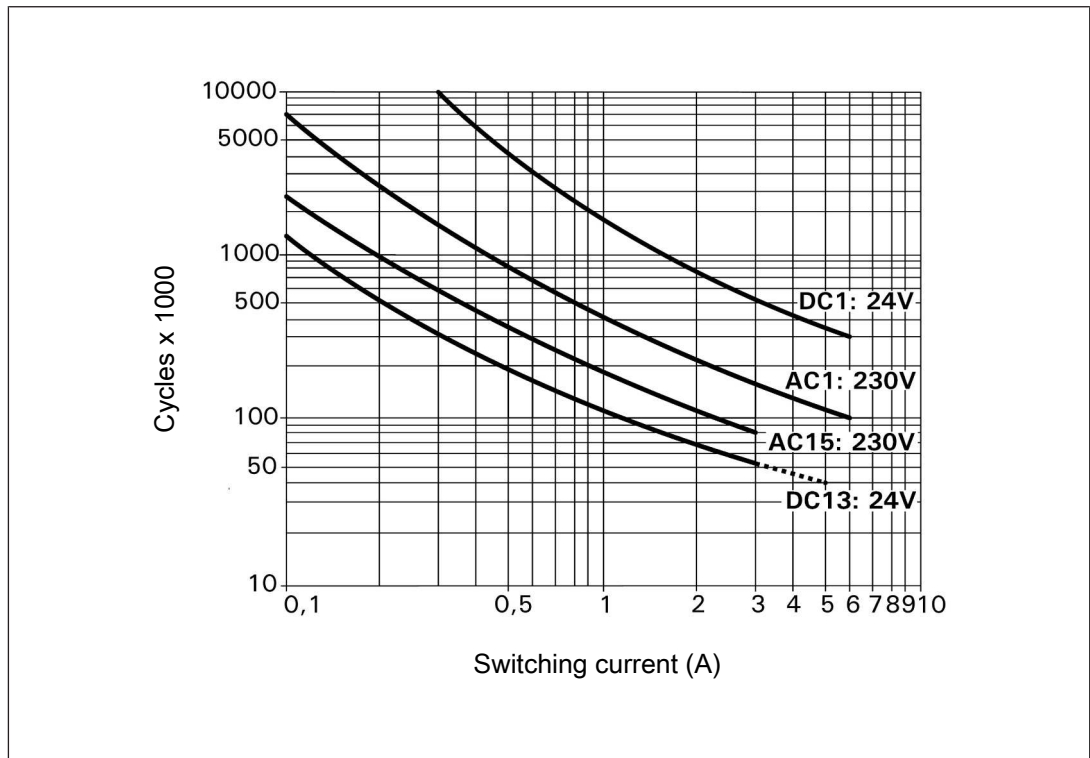


Fig.: Service life graphs at 24 VDC and 230 VAC

## Output modules PNOZ mo4p

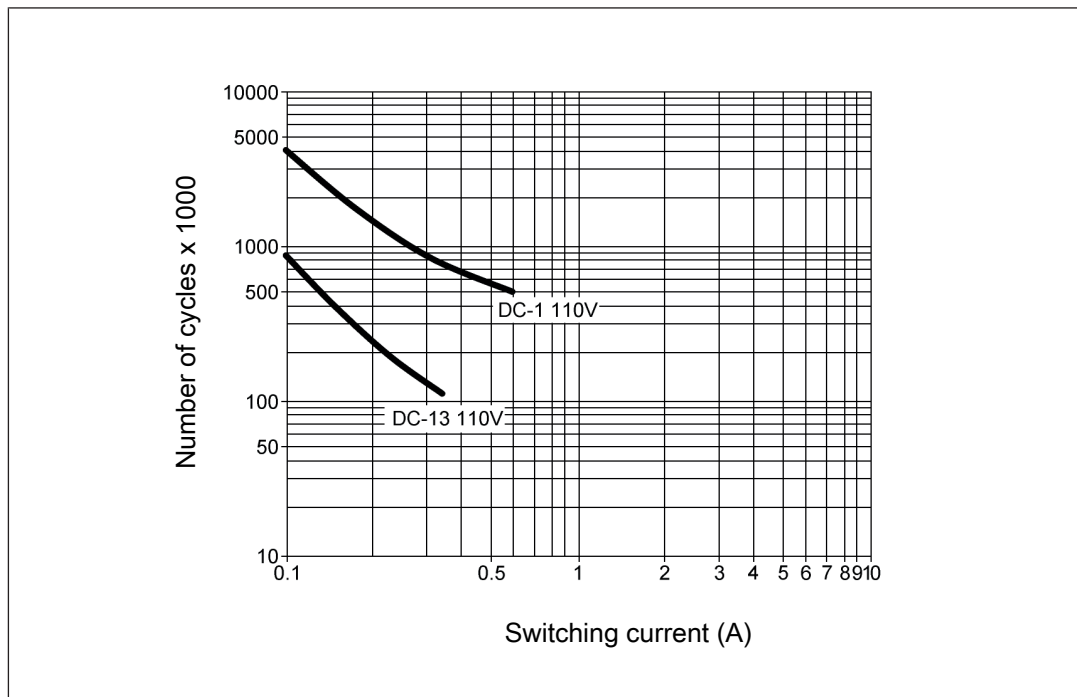


Fig.: Service life graphs at 110 VDC

### Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[208\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

**Output modules****PNOZ mo4p****Order reference****Product**

Product type	Features	Order No.
PNOZ mo4p	Expansion module, 2 or 4 relay outputs, positive-guided	773 536
PNOZ mo4p coated version	Expansion module, 2 or 4 relay outputs, positive-guided, coated version	773 537

**Accessories****Connection terminals**

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 536
Set screw terminals	1 set of screw terminals	793 536

**Terminator, jumper**

Product type	Features	Order No.
PNOZmulti bus terminator	Terminator	779 110
PNOZmulti bus terminator coated	Terminator, coated version	779 112
KOP-XE	Jumper	774 639
KOP-XE coated	Jumper, coated version	774 640

## Output modules PNOZ mo5p

---



### Overview


#### Unit features

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Positive-guided relay outputs, diverse:
  - 4 safety outputs
  - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Suitable for controlling the safety valves on a burner in accordance with EN 50156
- ▶ Status indicators
- ▶ Plug-in connection terminals (either cage clamp terminal or screw terminal)
- ▶ Max. 8 expansion modules and one fieldbus module can be connected to a base unit. A max. 6 of these may be the expansion modules PNOZ mo5p, PNOZ mo4p, PNOZ mo2p and PNOZ mo1p.

## Output modules PNOZ mo5p

### Front view

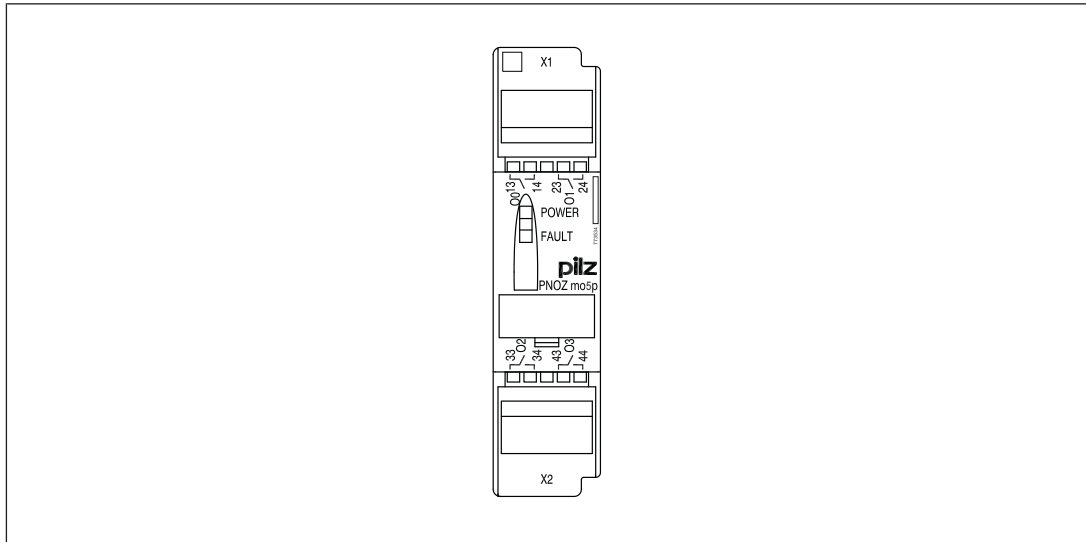

#### Key:

- ▶ O0 – O3  
Relay outputs

## Function description

### Integrated protection mechanisms

The relay conforms to the following safety criteria:

- ▶ The circuit is redundant with built-in self-monitoring.
- ▶ The safety function remains effective in the case of a component failure.
- ▶ The relay contacts meet the requirements for protective separation through increased insulation compared with all other circuits in the safety system.
- ▶ A defective relay contact will be detected during switching.
- ▶ The relays are diverse in design.

### Operation

The expansion module provides additional relay outputs.

The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.


The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

## Output modules PNOZ mo5p

### System reaction time


Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion \[📖 29\]](#)".

### Block diagram

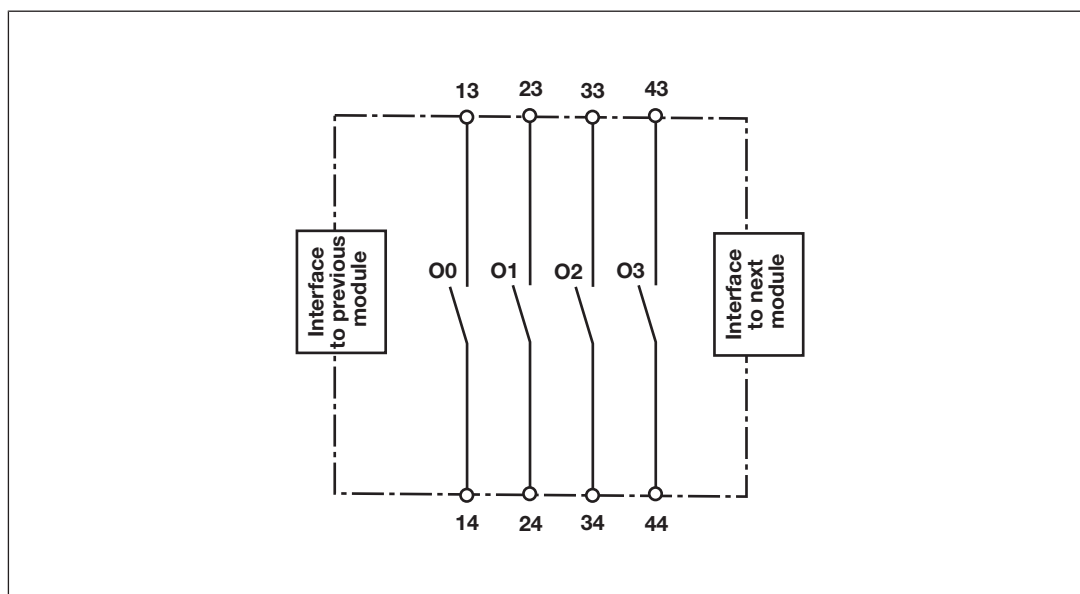

### Installation

#### Dimensions in mm

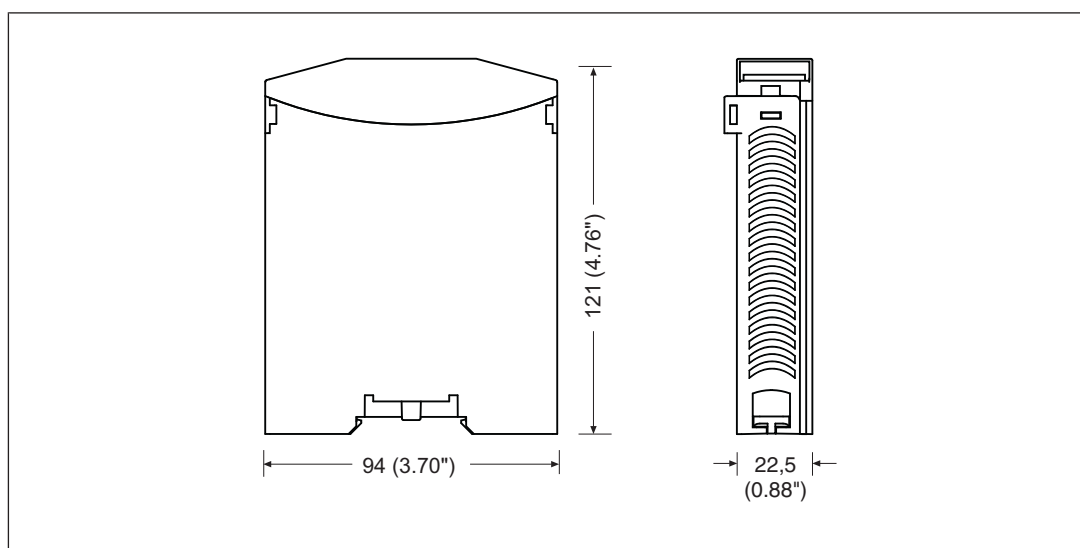



## Output modules PNOZ mo5p

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:


- ▶ Information given in the [Technical details \[221\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.

#### Connection

<p>Redundant</p>		
<p>single</p>		
<p>Feedback loop Contacts from external contactors</p>		


## Output modules PNOZ mo5p

Connecting the safety valves on a burner in accordance with EN 50156

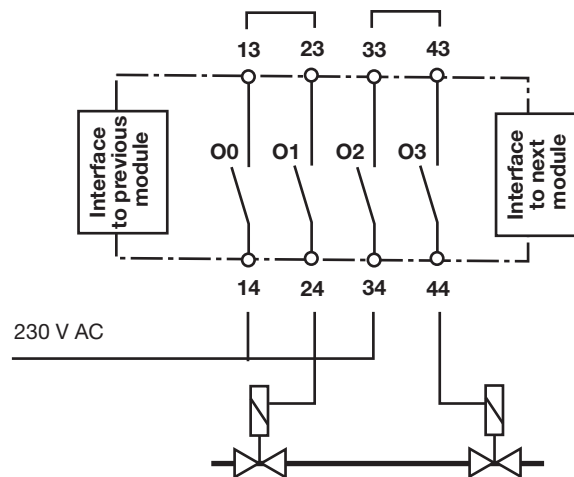

**Output modules**  
PNOZ mo5p

**Connection example**

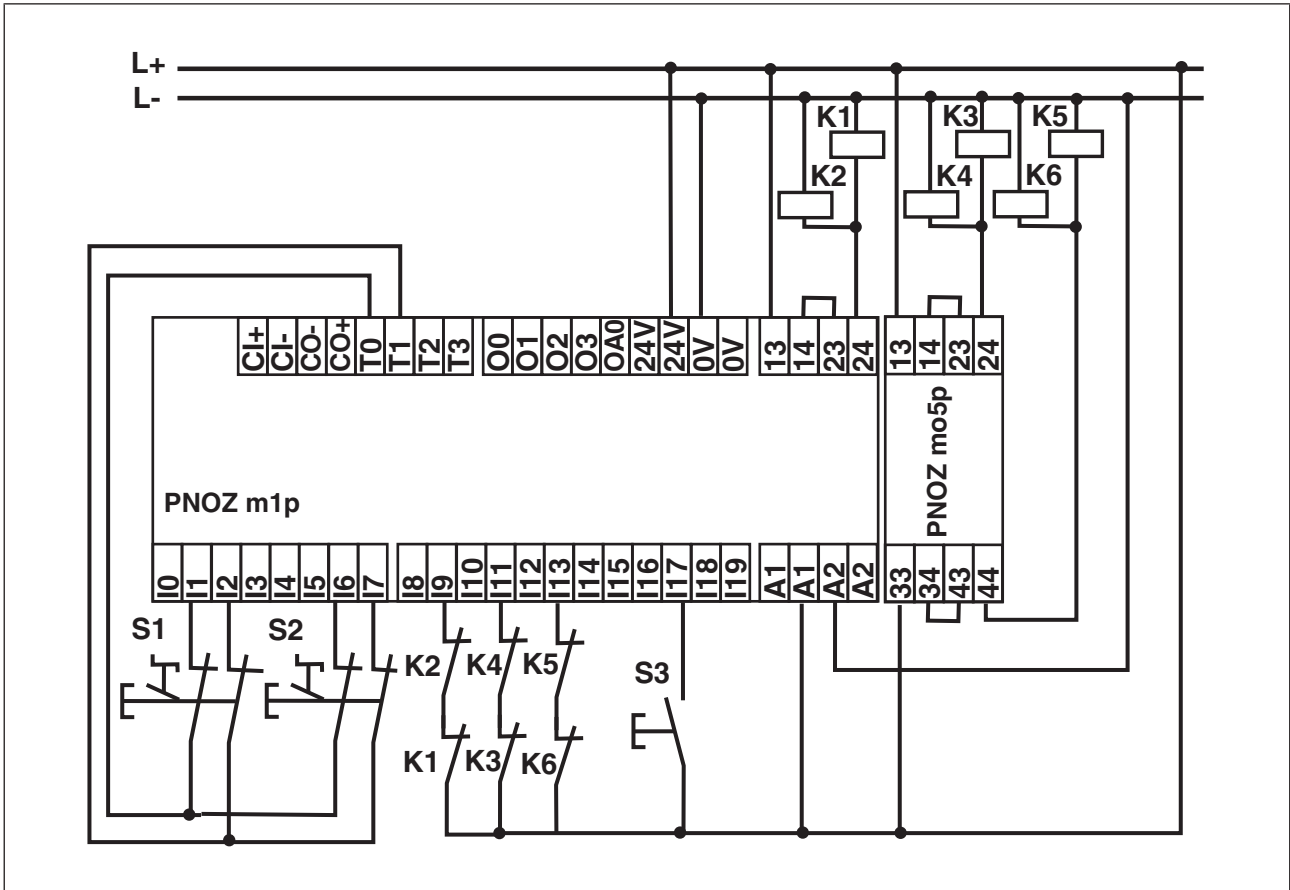

**Technical details**

<b>General</b>	
Approvals	BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed
<b>Electrical data</b>	
Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>5,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>3,5 W</b>
Status indicator	<b>LED</b>
<b>Relay outputs</b>	
Utilisation category	
In accordance with the standard	<b>EN 60947-4-1</b>

## Output modules

### PNOZ mo5p

#### Relay outputs

##### Utilisation category of safety contacts

AC1 at	<b>240 V</b>
Min. current	<b>10,00 mA</b>
Max. current	<b>1,5 A</b>
Max. power	<b>360 VA</b>
DC1 at	<b>24 V</b>
Min. current	<b>10,00 mA</b>
Max. current	<b>6,0 A</b>
Max. power	<b>144 W</b>

##### Utilisation category

In accordance with the standard	<b>EN 60947-5-1</b>
---------------------------------	---------------------

##### Utilisation category of safety contacts

AC15 at	<b>230 V</b>
Max. current	<b>0,6 A</b>
Max. power	<b>138 W</b>
DC13 (6 cycles/min) at	<b>24 V</b>
Max. current	<b>0,4 A</b>
Max. power	<b>9 W</b>

##### Airgap creepage between

Relay contacts	<b>3 mm</b>
Relay contacts and other circuits	<b>5,5 mm</b>

##### External contact fuse protection, safety contacts

In accordance with the standard	<b>EN 60947-5-1</b>
Blow-out fuse, quick	<b>6 A</b>
Blow-out fuse, slow	<b>6,00 A</b>
Circuit breaker 24V AC/DC, characteristic B/C	<b>6 A</b>

Switch-off delay	<b>50 ms</b>
------------------	--------------

Conventional thermal current	<b>12,0 A</b>
------------------------------	---------------

#### Times

Switch-on delay	<b>5,00 s</b>
-----------------	---------------

Supply interruption before de-energisation	<b>20 ms</b>
--	--------------

#### Environmental data

##### Ambient temperature

In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>

##### Storage temperature

In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>

## Output modules PNOZ mo5p

### Environmental data

Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>250 V</b>
Rated impulse withstand voltage	<b>6,00 kV</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

### Mechanical data

Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals (relay outputs)	
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals (relay outputs)	<b>0,50 Nm</b>
Stripping length with screw terminals (relay outputs)	<b>8 mm</b>

## Output modules

### PNOZ mo5p

#### Mechanical data

Conductor cross section with spring-loaded terminals  
(relay outputs)

1 core flexible without crimp connector	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>

Spring-loaded terminals: Terminal points per connection

**1**

Stripping length with spring-loaded terminals (relay outputs)

**10 mm**

Dimensions

Height	<b>94,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>121,0 mm</b>

Weight

**198 g**

Where standards are undated, the 2009-01 latest editions shall apply.

## Output modules PNOZ mo5p

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
1-channel	PL c	Cat. 1	-	2,90E-08	-	2,60E-03	20
2-channel	PL e	Cat. 4	SIL CL 3	3,00E-10	SIL 3	5,20E-07	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switching frequency and the load on the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

**Output modules**  
PNOZ mo5p

**Supplementary data**

**Service life graph for the relay contacts**

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

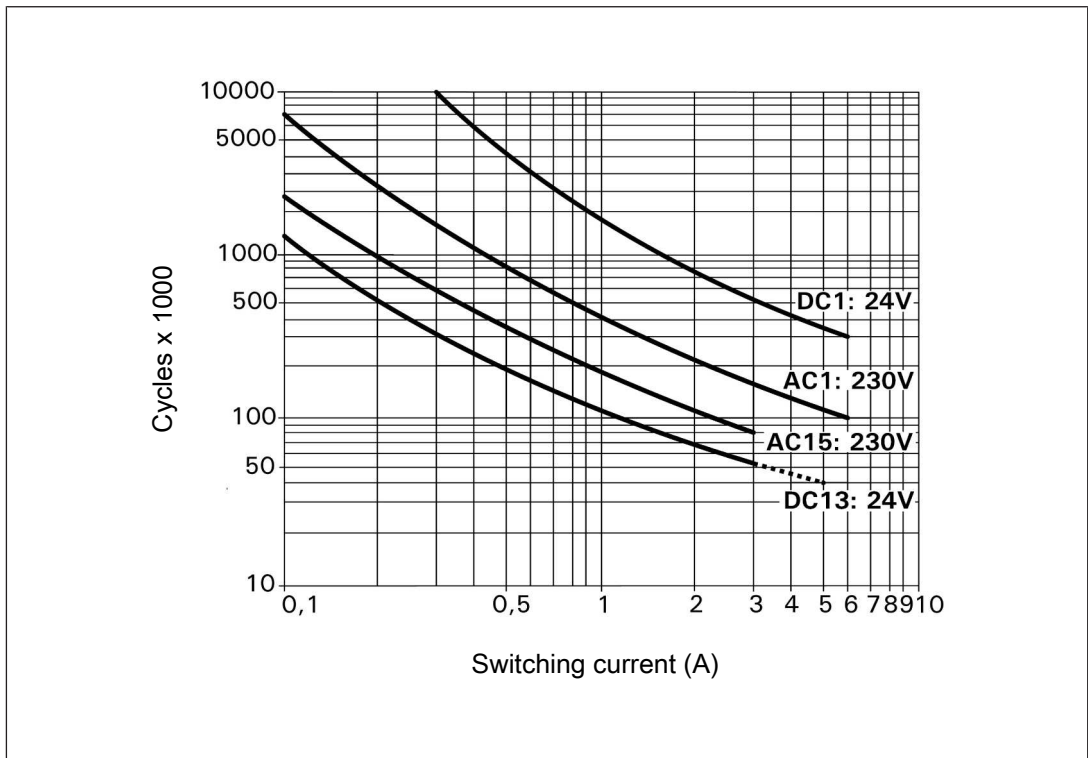


Fig.: Service life graphs at 24 VDC and 230 VAC



## Output modules PNOZ mo5p

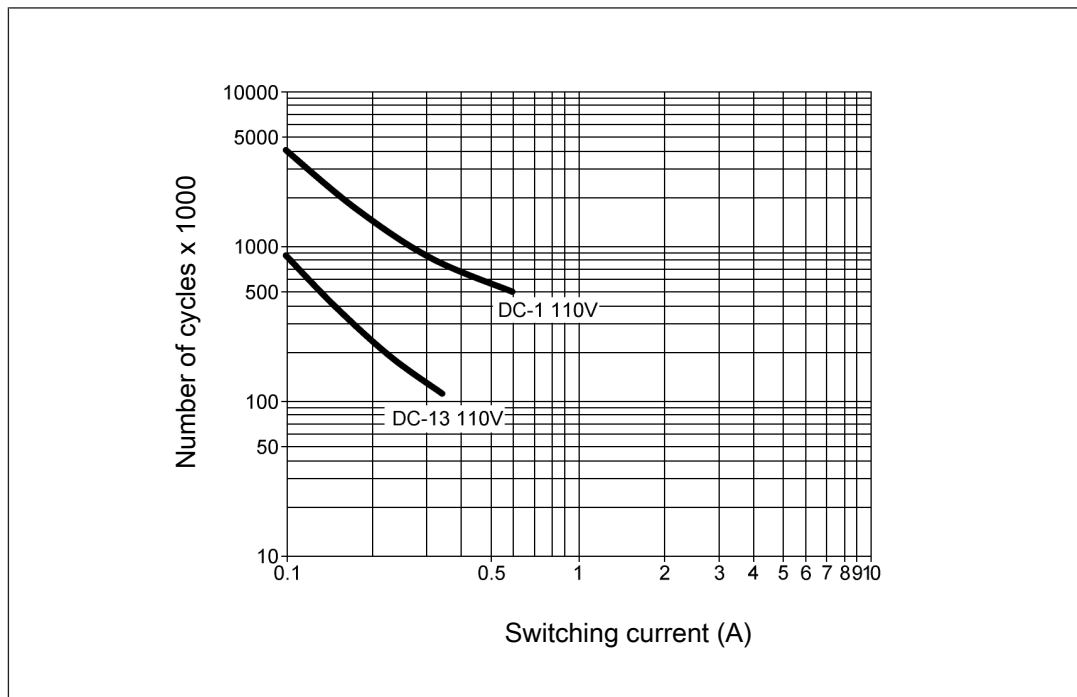


Fig.: Service life graphs at 110 VDC

### Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[221\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

## Output modules PNOZ mo5p

---

### Order reference

#### Product

Product type	Features	Order No.
PNOZ mo5p	Expansion module, 2 or 4 relay outputs, positive-guided, diverse	773 534

#### Accessories

##### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 536
Set screw terminals	1 set of screw terminals	793 536

##### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639

## Output modules PNOZ mc1p

---




### Overview

#### Unit features

Using the product PNOZ mc1p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
  - 16 auxiliary outputs
- ▶ Status indicators
- ▶ Coated version:
  - Increased environmental requirements (see [Technical details](#) [ 233])
- ▶ Plug-in connection terminals:
  - either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Output modules PNOZ mc1p

### Front view

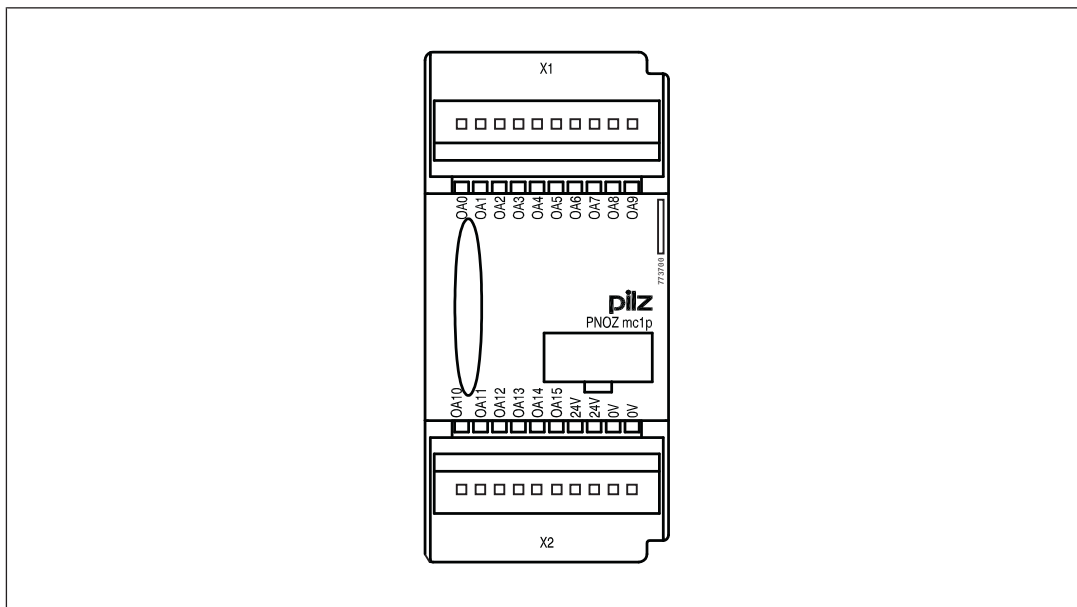

### Function description

#### Functions


The expansion module operates as a signal module with non-safety-related outputs.

The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.


## Output modules PNOZ mc1p

### Block diagram

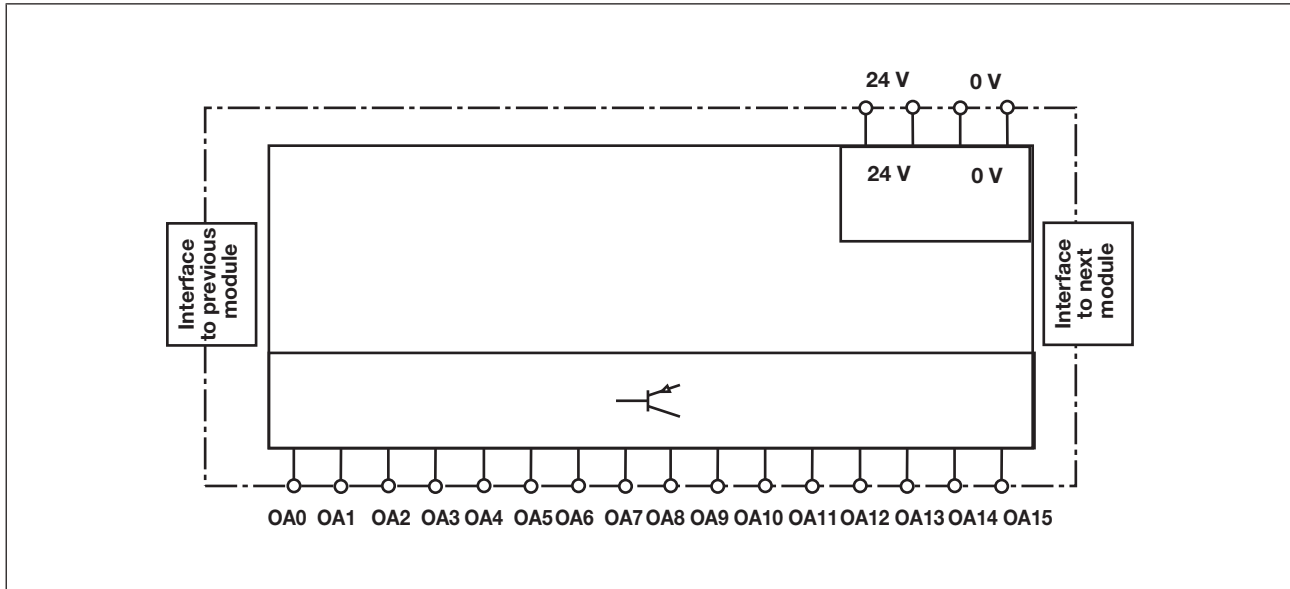

### Installation

#### Dimensions

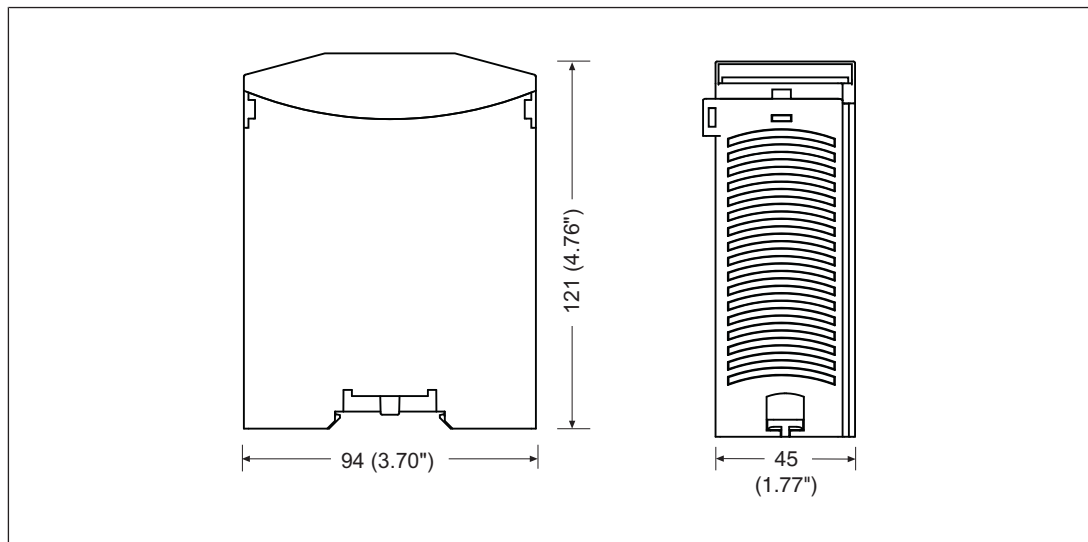

## Output modules PNOZ mc1p

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator.

Please note:

- ▶ 2 connection terminals are available for each of the supply connections 24 V and 0 V. This means that the supply voltage can be looped through several connections. The current at each terminal may not exceed 3 A.
- ▶ Outputs OA0 to OA15 are auxiliary outputs using semiconductor technology.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Information given in the [Technical details \[233\]](#) must be followed.

#### Connection

Supply voltage	AC	DC

Supply voltage

--	--	--

Semiconductor outputs

## Output modules PNOZ mc1p

### Technical details

General	773700	773705
Approvals	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
Electrical data	773700	773705
Supply voltage		
for	<b>Supply to the SC outputs</b>	<b>Supply to the SC outputs</b>
Voltage	<b>24 V</b>	<b>24 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>192,0 W</b>	<b>192,0 W</b>
Potential isolation	<b>yes</b>	<b>yes</b>
Supply voltage		
for	<b>Module supply</b>	<b>Module supply</b>
internal	<b>Via base unit</b>	<b>Via base unit</b>
Voltage	<b>5,0 V</b>	<b>5,0 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>	<b>-2 %/+2 %</b>
Power consumption	<b>0,6 W</b>	<b>0,6 W</b>
Status indicator	<b>LED</b>	<b>LED</b>
Semiconductor outputs (standard)	773700	773705
Number	<b>16</b>	<b>16</b>
Switching capability		
Voltage	<b>24 V</b>	<b>24 V</b>
Current	<b>0,50 A</b>	<b>0,50 A</b>
Power	<b>12,0 W</b>	<b>12,0 W</b>
Max. permitted overall performance of semiconductor outputs at an ambient temperature of > 50 °C	–	<b>144 W</b>
Galvanic isolation	<b>yes</b>	<b>yes</b>
Short circuit-proof	<b>yes</b>	<b>yes</b>
Residual current at "0"	<b>0,5 mA</b>	<b>0,5 mA</b>
Signal level at "1"	<b>UB - 0.5 VDC at 0.5 A</b>	<b>UB - 0.5 VDC at 0.5 A</b>
Times	773700	773705
Switch-on delay	<b>5,00 s</b>	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>	<b>20 ms</b>

## Output modules PNOZ mc1p

<b>Environmental data</b>	<b>773700</b>	<b>773705</b>
Ambient temperature		
In accordance with the standard	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>	<b>-25 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>	–
Storage temperature		
In accordance with the standard	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>	<b>-25 - 70 °C</b>
Climatic suitability		
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>	<b>Short-term</b>
EMC	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Vibration		
In accordance with the standard	<b>EN 60068-2-6</b>	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>	<b>1g</b>
Corrosive gas check		
SO <sub>2</sub> : Concentration 10 ppm, duration 10 days, passive	–	<b>DIN V 40046-36</b>
H <sub>2</sub> S: Concentration 1 ppm, duration 10 days, passive	–	<b>DIN V 40046-37</b>
Shock stress		
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>
Airgap creepage		
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>30 V</b>	<b>30 V</b>
Protection type		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>
<b>Mechanical data</b>	<b>773700</b>	<b>773705</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>



## Output modules PNOZ mc1p

Mechanical data	773700	773705
DIN rail		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
Material		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals		
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>	<b>0,25 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>	<b>7 mm</b>
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>1</b>	<b>1</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>	<b>9 mm</b>
Dimensions		
Height	<b>94,0 mm</b>	<b>94,0 mm</b>
Width	<b>45,0 mm</b>	<b>45,0 mm</b>
Depth	<b>121,0 mm</b>	<b>121,0 mm</b>
Weight	<b>164 g</b>	<b>166 g</b>

Where standards are undated, the 2008-03 latest editions shall apply.

**Output modules****PNOZ mc1p****Order reference****Product**

Product type	Features	Order No.
PNOZ mc1p	Expansion module, 16 semiconductor outputs, standard	773 700
PNOZ mc1p coated version	Expansion module, 16 semiconductor outputs, standard, coated version	773 705

**Accessories****Terminator, jumper**

Product type	Features	Order No.
PNOZmulti bus terminator	Terminator	779 110
PNOZmulti bus terminator coated	Terminator, coated version	779 112
KOP-XE	Jumper	774 639
KOP-XE coated	Jumper, coated version	774 640

**Connection terminals**

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 700
Set screw terminals	1 set of screw terminals	793 700

## Analogue input module PNOZ ma1p




### Overview

#### Unit features

Using the product PNOZ ma1p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ 2 safe analogue inputs for current or voltage measurement
- ▶ Each input can be configured separately
- ▶ Voltage range: -10,24 ... +10.2375 V
- ▶ Current range: 0 ... 25.59 mA
- ▶ Resolution
  - Voltage measurement: 13 Bit (signed 12 Bit)
  - Current measurement: 12 Bit
- ▶ Range monitoring to monitor for wiring errors or errors in the sensor (4 range limits can be configured)
- ▶ Threshold value monitoring to monitor process variables (8 threshold values can be configured)
- ▶ Max. 4 PNOZ ma1p units can be connected to the base unit
- ▶ Exact analogue value can be passed to a fieldbus for diagnostic purposes
- ▶ LEDs for
  - Operating state
  - State of the input signals (Ch0, Ch1)
  - Error
- ▶ Coated version:
  - Increased environmental requirements (see [Technical details](#) [ 242])
- ▶ Plug-in connection terminals:
  - either spring-loaded terminal or screw terminal available as an accessory (see order reference)

## Analogue input module PNOZ ma1p

- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

### Front view

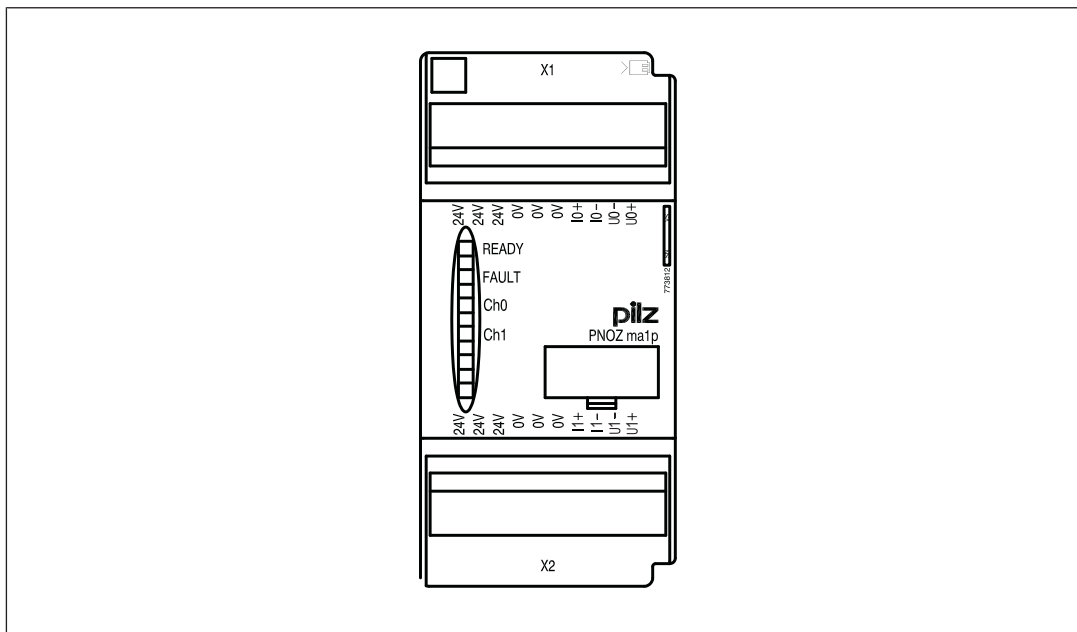

#### Key:

- ▶ 0 V, 24 V:  
Supply connections
- ▶ I0+, I0-:  
Inputs for current measurement
- ▶ U0+, U0-:  
Inputs for voltage measurement

## Function Description

### Functions

The analogue input module monitors analogue input signals. It can measure both current and voltage.

The input signals are collected and read in at each input through two channels and are converted into digital signals. The resolution is 13 Bit for voltage measurement, 12 Bit for current measurement.

# Analogue input module

## PNOZ ma1p

In the PNOZmulti Configurator you can define limit values, which are to be monitored:

▶ **Range monitoring**

With range monitoring you can define the permitted value range. You can define up to 4 range limits (e.g. <3 mA monitored for open circuit; I > 21 mA monitored for encoder error). Depending on the selected condition ("greater than" or "less than"), the ENBL output bit and output bits 1 - 8 for threshold value monitoring are set to "0" if the recorded value exceeds or drops below a range limit. An entry is added to the error stack.


**Exception:** If "automatic start" type has been selected, no entry will be added to the error stack.

▶ **Threshold value monitoring**

You can define up to 8 switching thresholds, which can be used to monitor certain process variables (e.g. different temperature values). The thresholds can be configured with or without scaling. 2 threshold values are configured per threshold. One threshold value defines when the relevant output bit (1 ... 8) is set to "1". The second threshold value defines when the output bit is reset to "0". No entry is added to the error stack.

The **exact analogue values** are made available to the base unit to forward to a fieldbus. This value is transmitted through a single channel and is not safety-related. It can be used for diagnostic purposes.


### Block diagram

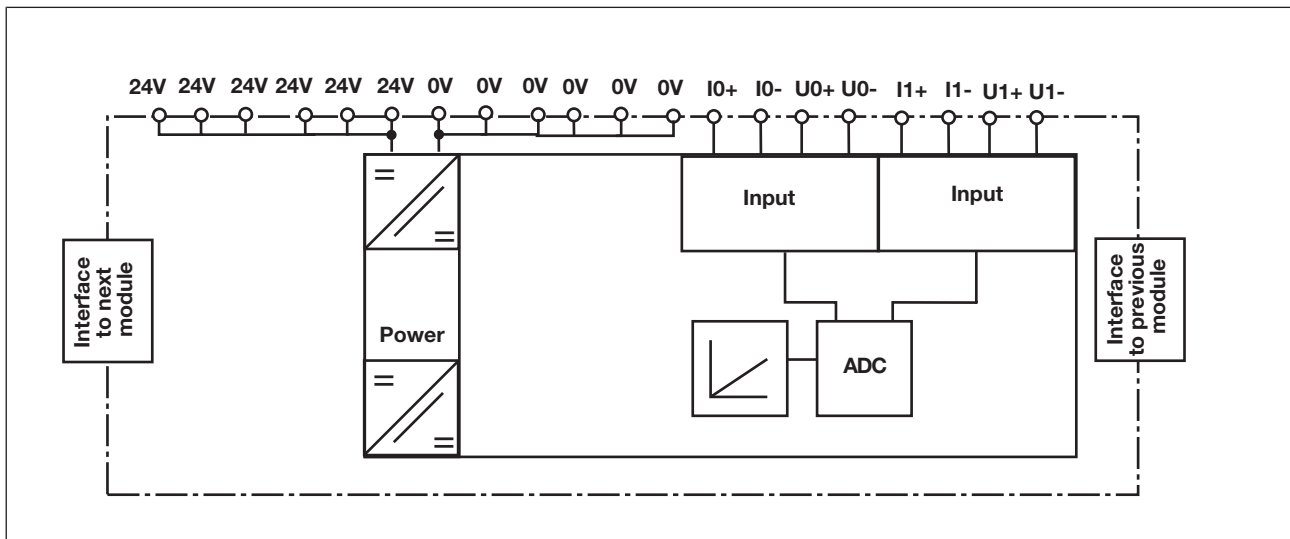

## Analogue input module PNOZ ma1p

### Installation

#### Dimensions

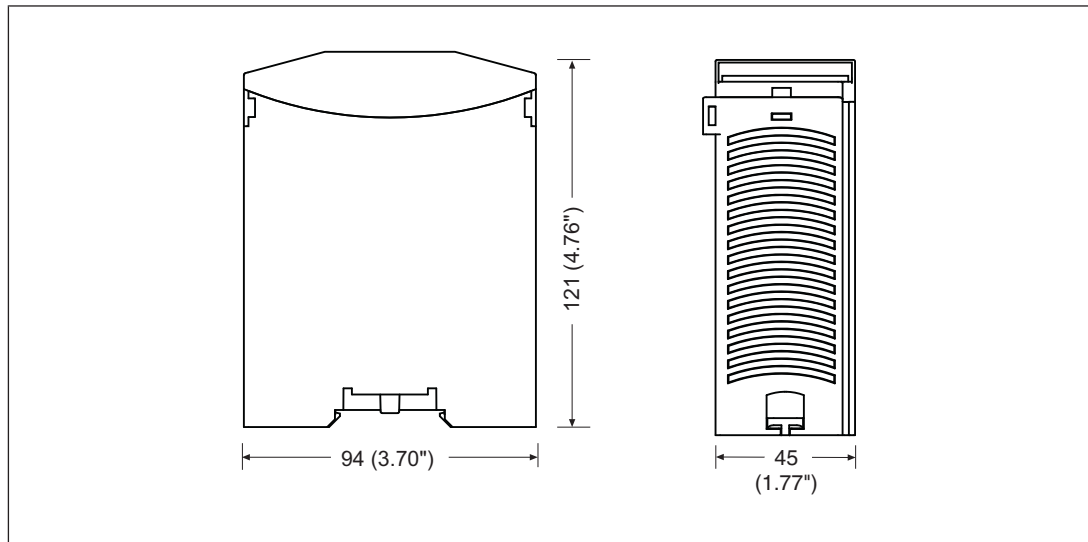

### Commissioning

#### Wiring


The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[242\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ The power supply that feeds the expansion module and the input devices must meet the regulations for extra low voltages with protective separation (SELV, PELV).
- ▶ 6 connection terminals are available for each of the supply connections 24 V and 0 V. This means that the supply voltage can be looped through several connections and the encoder can be supplied.
- ▶ Use shielded, twisted pair cable for the connections on the input current circuits.
- ▶ Separate the supply voltage cable from the analogue input current lines.
- ▶ If the analogue input module is used to measure current, the voltage inputs must be short-circuited.
- ▶ **For transducers located outside the control cabinet:** Where the cable enters the control cabinet, the cable shield **must** be connected to the earth potential over a wide surface area and with low impedance (connect in star).

## Analogue input module PNOZ ma1p

### Connection

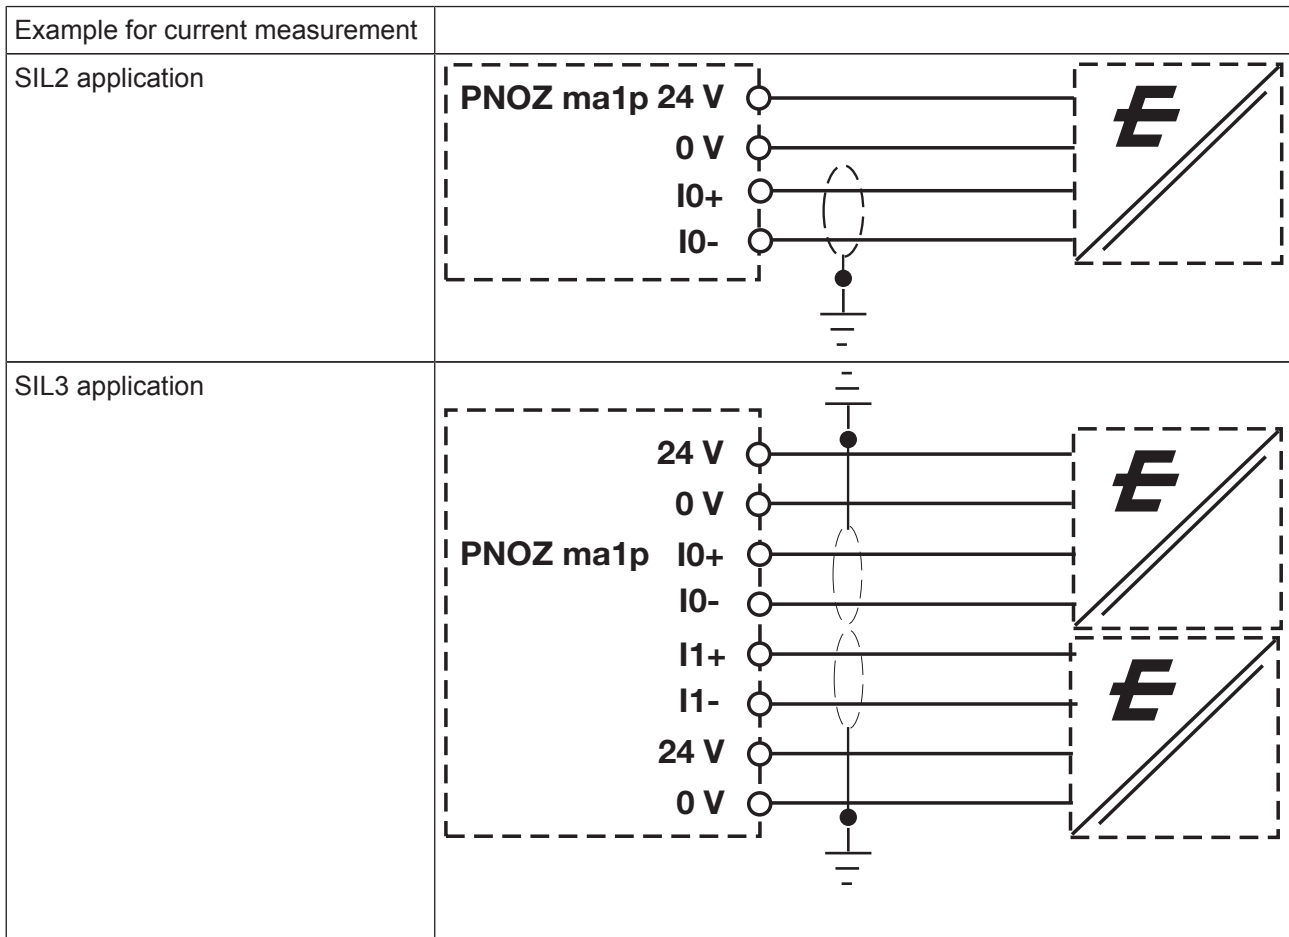

Connection to transducer (SIL2 or SIL3)

Please note:

- ▶ The transducers are SIL2 certified
- ▶ The voltage supply to the input device is optional
- ▶ With current measurement, the voltage inputs U+ - U- must be short-circuited.

## Analogue input module

### PNOZ ma1p

#### Technical details

General	773812	773813
Approvals	BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed
Electrical data	773812	773813
Supply voltage		
for	<b>Module supply</b>	<b>Module supply</b>
Voltage	<b>24,0 V</b>	<b>24,0 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>2,0 W</b>	<b>2,0 W</b>
Residual ripple DC	<b>5 %</b>	<b>5 %</b>
Status indicator	<b>LED</b>	<b>LED</b>
Analogue inputs	773812	773813
Number of analogue inputs	<b>2</b>	<b>2</b>
Type of analogue inputs	<b>Voltage, current</b>	<b>Voltage, current</b>
Input filter	<b>1st order, RC filter</b>	<b>1st order, RC filter</b>
Cutoff frequency	<b>80 Hz</b>	<b>80 Hz</b>
Current measurement		
Signal range	<b>0,00 - 25,59 mA</b>	<b>0,00 - 25,59 mA</b>
Value range	<b>0 - 4095 d</b>	<b>0 - 4095 d</b>
Resolution	<b>12 Bit</b>	<b>12 Bit</b>
Value of least significant bit (LSB)	<b>6,25 µA</b>	<b>6,25 µA</b>
Input resistance	<b>100,000 Ohm</b>	<b>100,000 Ohm</b>
Max. continuous current	<b>50 mA</b>	<b>50 mA</b>
Voltage measurement		
Signal range	<b>-10,2400 - 10,2375 V</b>	<b>-10,2400 - 10,2375 V</b>
Value range	<b>-4096 - 4095 d</b>	<b>-4096 - 4095 d</b>
Resolution	<b>13 Bit (signed 12 Bit)</b>	<b>13 Bit (signed 12 Bit)</b>
Value of least significant bit (LSB)	<b>5 mV</b>	<b>5 mV</b>
Input resistance	<b>290 kOhm</b>	<b>290 kOhm</b>
Max. continuous voltage	<b>-30 - 30 V</b>	<b>-30 - 30 V</b>



## Analogue input module PNOZ ma1p

<b>Analogue inputs</b>	<b>773812</b>	<b>773813</b>
Deviations from the measuring range limit value		
Output variable error at 25 °C	0,5 %	0,5 %
Temperature coefficient	0,0025 %/K	0,0025 %/K
Greatest transient deviation during el. interference test	1,0 %	1,0 %
Max. measurement error at full temperature range	0,5 %	0,5 %
Max. measurement error in the case of a potential module error	1,5 %	1,5 %
Max. voltage between inputs I0 and I1 with current or voltage measurement	30 V	30 V
Filter time constant	2,0 ms	2,0 ms
Potential isolation	No	No
<b>Times</b>	<b>773812</b>	<b>773813</b>
Switch-on delay	5,00 s	5,00 s
Supply interruption before de-energisation	20 ms	20 ms
Max. reaction time when the input signal changes	100 ms	100 ms
<b>Environmental data</b>	<b>773812</b>	<b>773813</b>
Ambient temperature		
In accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	-25 - 60 °C
Forced convection in control cabinet off	55 °C	55 °C
Storage temperature		
In accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
In accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Short-term
EMC	EN 61131-2	EN 61131-2
Vibration		
In accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10,0 - 150,0 Hz	–
Acceleration	1g	1g
Broadband noise		
In accordance with the standard	–	EN 60068-2-64
Frequency	–	5 - 500 Hz
Acceleration	–	1,9grms

## Analogue input module

### PNOZ ma1p

<b>Environmental data</b>	<b>773812</b>	<b>773813</b>
Shock stress		
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>
Airgap creepage		
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>30 V</b>	<b>30 V</b>
Protection type		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>
<b>Mechanical data</b>	<b>773812</b>	<b>773813</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>
DIN rail		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
Material		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals		
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>	<b>0,25 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>	<b>7 mm</b>
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>

## Analogue input module PNOZ ma1p

Mechanical data	773812	773813
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9,0 mm	9,0 mm
Dimensions		
Height	94,0 mm	94,0 mm
Width	45,0 mm	45,0 mm
Depth	121,0 mm	121,0 mm
Weight	184 g	196 g

Where standards are undated, the 2009-10 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
1-channel	PL e	Cat. 4	SIL CL 3	8,71E-09	SIL 3	4,21E-05	20
2-channel	PL e	Cat. 4	SIL CL 3	8,71E-09	SIL 3	4,21E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

## Analogue input module

### PNOZ ma1p

#### Order reference

#### Product

Product type	Features	Order No.
PNOZ ma1p	Expansion module, 2 analogue inputs	773 812
PNOZ ma1p coated version	Expansion module, 2 analogue inputs, coated version	773 813

#### Accessories

#### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 700
Set screw terminals	1 set of screw terminals	793 700

#### Terminator, jumper

Product type	Features	Order No.
PNOZmulti bus terminator	Terminator	779 110
PNOZmulti bus terminator coated	Terminator, coated version	779 112
KOP-XE	Jumper	774 639
KOP-XE coated	Jumper, coated version	774 640

## Link modules PNOZ ml1p

---



### Overview

#### Unit features

Using the product PNOZ ml1p:


Link module to safely connect two configurable control systems PNOZmulti.

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Point-to-point connection via 4-core shielded and twisted-pair cable
- ▶ 32 virtual inputs and 32 virtual outputs
- ▶ Status indicators
- ▶ Plug-in connection terminals (either cage clamp terminal or screw terminal)
- ▶ Max. 4 PNOZ ml1p units can be connected to the base unit
- ▶ LEDs for
  - Operating state
  - Error
  - Connection status
- ▶ Coated version:  
Increased environmental requirements (see [Technical details \[📖 254\]](#))

## Link modules PNOZ ml1p

### Front view

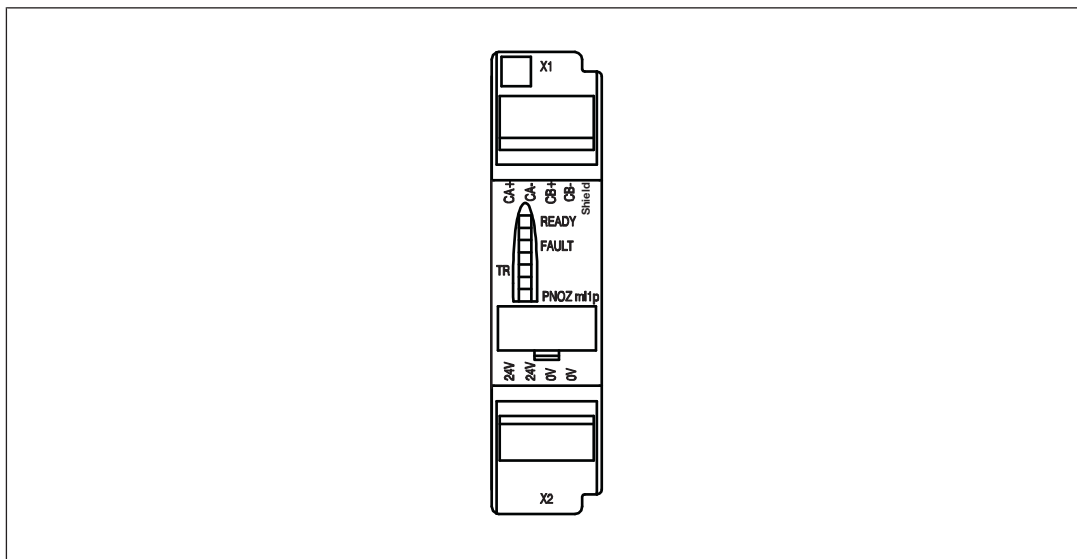

#### Key:

- ▶ 0 V, 24 V:  
Supply connections
- ▶ CA+, CA-, CB+, CB-:  
Connections for 2 expansion modules PNOZ ml1p
- ▶ Shield:  
Connection for the cable shield

## Function Description

### Functions

The PNOZ ml1p link module is used to safely transfer the input information from 32 virtual inputs and 32 virtual outputs between two PNOZmulti systems. One link module is assigned to each base unit. Data is exchanged cyclically.

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

## Link modules

### PNOZ ml1p

#### Data exchange:

- ▶ Data is exchanged cyclically.
- ▶ After the end of a PNOZmulti cycle, each base unit sends its output data to its link module. This output data is immediately sent to the link module on the other base unit.
- ▶ At the same time, the base unit reads the input data from the link module.

#### Connection of multiple base units:

Any number of base units can be connected via PNOZ ml1p link modules. Two PNOZ ml1p are required for the connection between two base units. However, only a maximum of 4 link modules may be connected to any one base unit.

#### Data transmission time:

The data transmission time  $t_{\text{BUS}}$  is the time between the virtual output at base unit 1 being set and the virtual input at base unit 2 becoming available (see [Technical details \[📖 254\]](#)).

#### The maximum reaction time for series connection of n base units

This is the time between the activation of a safety function at the input on one base unit and the switching of an output on the connected base unit.

- ▶ The maximum reaction time  $t_{\text{SUM}}$  includes the following times:

$t_{\text{ON}}$ : Input delay = 4 ms

$t_{\text{COND}}$ : Switch-off delay of semiconductor output = 30 ms

$t_{\text{REL}}$ : Switch-off delay of relay output = 50 ms

$t_{\text{BUS}}$ : Data transmission time between two base units = 35 ms

n: Number of connections between base units

The maximum reaction time  $t_{\text{SUM}}$  for series connection of n base units

- ▶ On semiconductor outputs:

$$t_{\text{SUM}} = t_{\text{ON}} + (n * t_{\text{BUS}}) + t_{\text{COND}}$$

- ▶ On relay outputs:


$$t_{\text{SUM}} = t_{\text{ON}} + (n * t_{\text{BUS}}) + t_{\text{REL}}$$

- ▶ Input delay and switch-off delay are only included once in the reaction time. The data transmission time between the link modules is multiplied by the number of connections.
- ▶ Please refer to the [Connection examples \[📖 253\]](#).

## Link modules PNOZ ml1p

### Virtual inputs and outputs:


Inputs and outputs for both PNOZmulti systems are assigned in the PNOZmulti Configurator. Inputs and outputs with the same number are assigned to each other, e.g. output o5 on one PNOZmulti system to input i5 on the other PNOZmulti system.

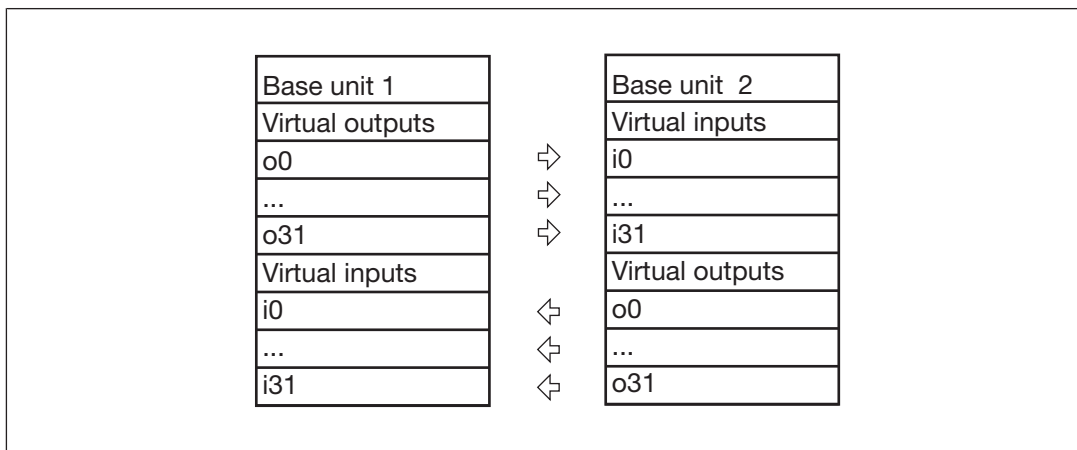

### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion \[📖 29\]](#)".

### Block diagram

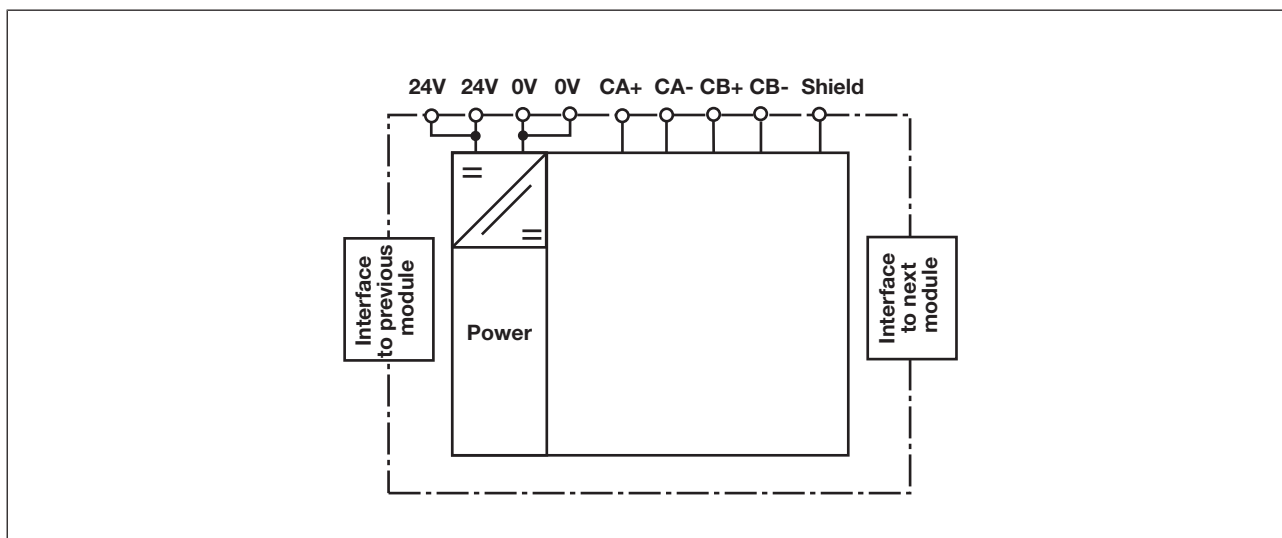




## Link modules

### PNOZ ml1p

## Installation

### Dimensions in mm

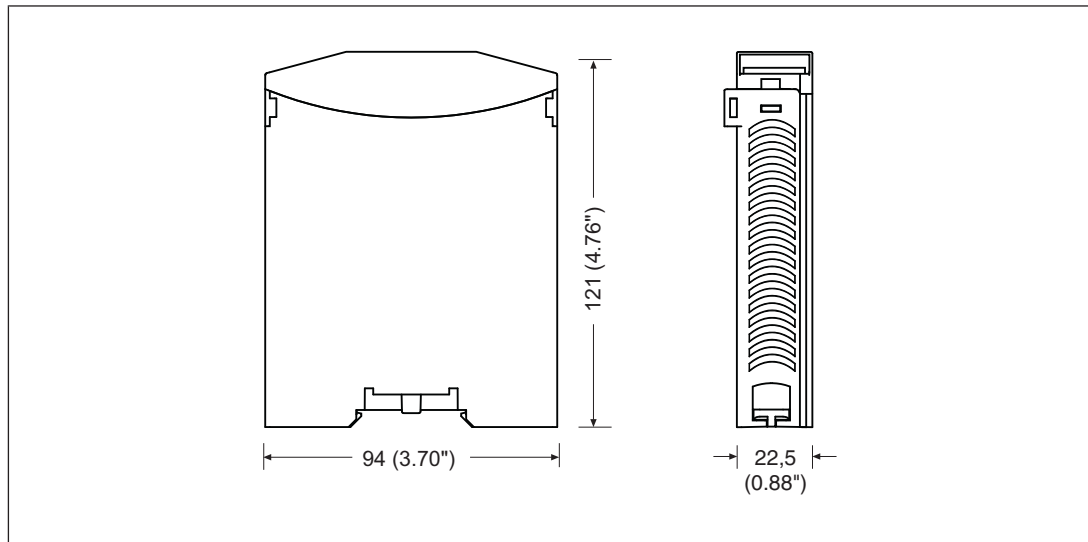

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Please note:

- ▶ Information given in the [Technical details \[254\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ The max. cable length between two link modules may be max. 1000 m.  
Please note:  
When connecting to a PNOZ ml1p with a version < 2.0, the cable length may be max. 100 m. The reduced cable length must be configured in the PNOZmulti Configurator.
- ▶ Connect the inputs and outputs from two PNOZ ml1p with a 4-core shielded cable. The cables must be twisted in pairs (see "Preparing for operation").
- ▶ Note the crossover cabling, e.g. CA+ with CB+.
- ▶ The cables must be classified into a minimum of Category 5 in accordance with ISO/ IEC 11801.


## Link modules PNOZ ml1p

- ▶ You can use ready-made cable from Pilz to connect two PNOZ ml1p. The plug-in connection terminals are either designed as cage clamp terminals or screw terminals (see order reference).
- ▶ Cable shield:
  - Please note: Always connect the shield to both link modules (**Shield** terminal).
  - The shield of the connection cable may only be connected to the **Shield** terminals on both PNOZ ml1p. Do **not** connect the shield to the equipotential bonding bar, for example.

### Connection

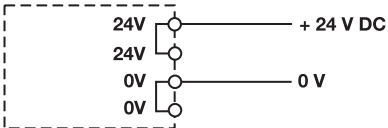Supply voltage	AC	DC
	/	

### Connection of two PNOZmulti base units via the module PNOZ ml1p

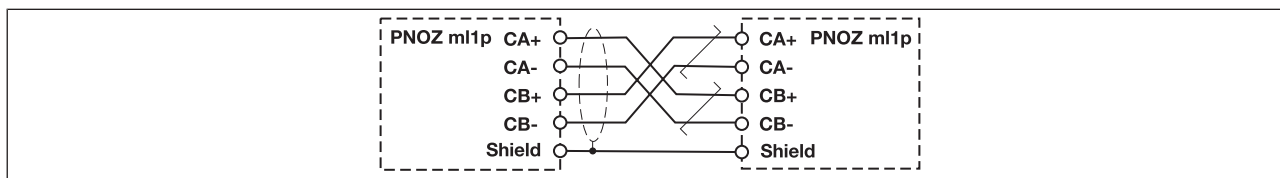

## Link modules PNOZ ml1p

### Connection examples

#### Example: Series connection of 3 base units

Reaction time  $t_{SUM}$  between base unit Base 1 and Base 2:

Input delay  $t_{ON}$  at I3 and I6 + data transmission time  $1 * t_{BUS}$  through link module + switch-off delay  $t_{COND}$  of the semiconductor output at O0

$$t_{SUM} = t_{ON} + (n * t_{BUS}) + t_{COND}$$


$$t_{SUM} = 4 \text{ ms} + (1 * 35 \text{ ms}) + 30 \text{ ms} = 69 \text{ ms}$$

Reaction time  $t_{SUM}$  between base unit Base 1 and Base 3:

Input delay  $t_{ON}$  at I3 and I6 + data transmission time  $2 * t_{BUS}$  through link modules + switch-off delay  $t_{COND}$  of the semiconductor output at O1

$$t_{SUM} = t_{ON} + (n * t_{BUS}) + t_{COND}$$

$$t_{SUM} = 4 \text{ ms} + (2 * 35 \text{ ms}) + 30 \text{ ms} = 104 \text{ ms}$$

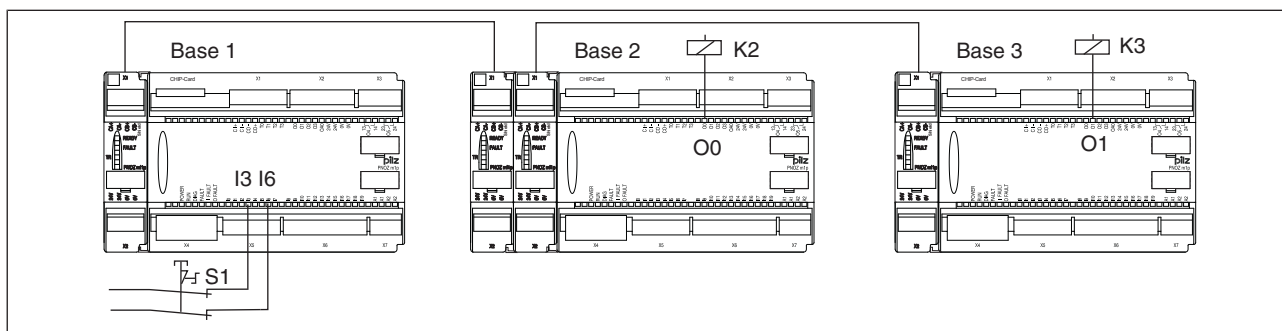

## Link modules PNOZ ml1p

### Example: Connection of 5 base units


The reaction times are calculated in the same way as application example 1. After pressing S1 on Base 1, the semiconductor outputs switch after the following reaction times  $t_{SUM}$ :

O0 on Base 1: 69 ms

O1 on Base 3: 104 ms

O0 on Base 4: 139 ms

O0 on Base 5: 104 ms

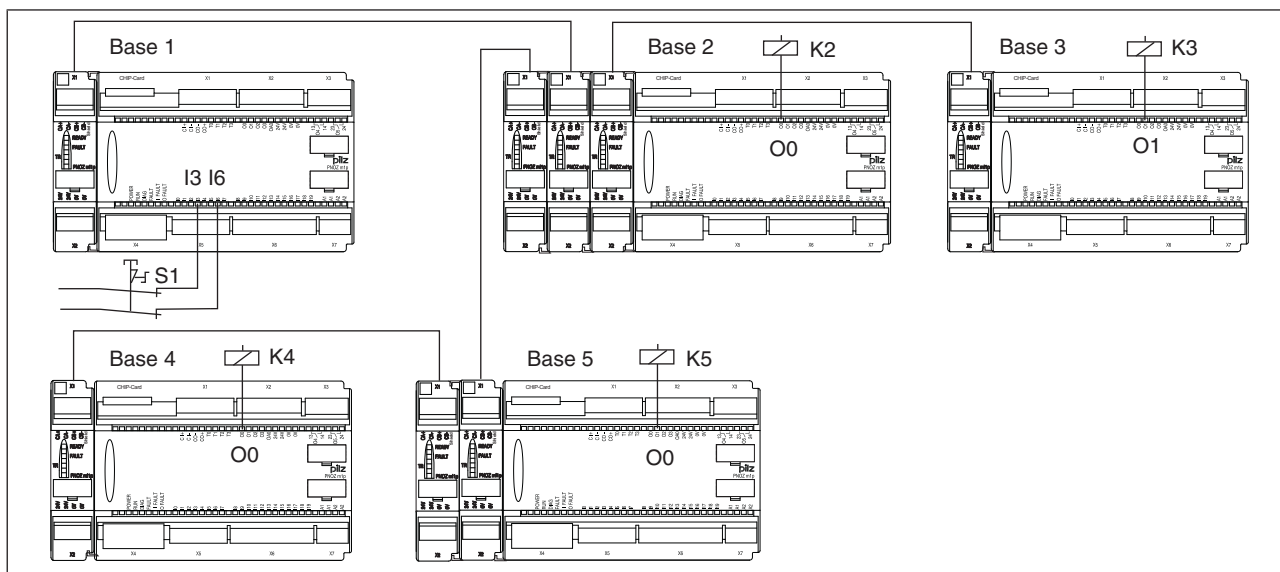

### Technical details

General	773540	773545
Approvals	BG, CCC, CE, EAC (Eurasian), KCC, TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed
Electrical data	773540	773545
Supply voltage		
for	<b>Module supply</b>	<b>Module supply</b>
Voltage	<b>24,0 V</b>	<b>24,0 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>5,0 W</b>	<b>5,0 W</b>
Residual ripple DC	<b>5 %</b>	<b>5 %</b>
Status indicator	<b>LED</b>	<b>LED</b>
Virtual inputs	773540	773545
Number of virtual inputs	<b>32</b>	<b>32</b>
Virtual outputs	773540	773545
Number of virtual outputs	<b>32</b>	<b>32</b>

## Link modules PNOZ ml1p

<b>Times</b>	<b>773540</b>	<b>773545</b>
Switch-on delay	<b>5,00 s</b>	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>	<b>20 ms</b>
Max. data transmission time	<b>35 ms</b>	<b>35 ms</b>
<b>Environmental data</b>	<b>773540</b>	<b>773545</b>
Ambient temperature		
In accordance with the standard	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>	<b>-25 - 60 °C</b>
Storage temperature		
In accordance with the standard	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>	<b>-25 - 70 °C</b>
Climatic suitability		
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>	<b>Short-term</b>
EMC	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Vibration		
In accordance with the standard	<b>EN 60068-2-6</b>	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>	<b>5,0 - 500,0 Hz</b>
Acceleration	<b>1g</b>	<b>1g</b>
Broadband noise		
In accordance with the standard	–	<b>EN 60068-2-64</b>
Frequency	–	<b>5 - 500 Hz</b>
Acceleration	–	<b>1,9grms</b>
Shock stress		
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>
Airgap creepage		
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>30 V</b>	<b>30 V</b>
Protection type		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>

## Link modules PNOZ ml1p

<b>Mechanical data</b>	<b>773540</b>	<b>773545</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>
DIN rail		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
Max. cable length between two link modules	<b>1 km</b>	<b>1 km</b>
Material		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals		
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>	<b>0,25 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>	<b>7 mm</b>
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>1</b>	<b>1</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>	<b>9 mm</b>
Dimensions		
Height	<b>94,0 mm</b>	<b>94,0 mm</b>
Width	<b>22,5 mm</b>	<b>22,5 mm</b>
Depth	<b>121,0 mm</b>	<b>121,0 mm</b>
Weight	<b>129 g</b>	<b>135 g</b>

Where standards are undated, the 2010-07 latest editions shall apply.

## Link modules PNOZ ml1p

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
2-channel	PL e	Cat. 4	SIL CL 3	8,82E-09	SIL 3	3,86E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

### Order reference

#### Product

Product type	Features	Order No.
PNOZ ml1p	Link Module	773 540
PNOZ ml1p coated version	Link module, coated version	773 545

### Accessories

#### Terminator, jumper

Product type	Features	Order No.
PNOZmulti bus terminator	Terminator	779 110
PNOZmulti bus terminator coated	Terminator, coated version	779 112
KOP-XE	Jumper	774 639
KOP-XE coated	Jumper, coated version	774 640

#### Cable

Product type	Features	Order No.
PNOZ mli1p 5m screw	Cable, 5-pin, shielded, screw terminal, 5 m	773 890
PNOZ mli1p 10m screw	Cable, 5-pin, shielded, screw terminal, 10 m	773 891
PNOZ mli1p 50m screw	Cable, 5-pin, shielded, screw terminal, 50 m	773 892
PNOZ mli1p 5m spring	Cable, 5-pin, shielded, spring-loaded terminal, 5 m	773 893
PNOZ mli1p 10m spring	Cable, 5-pin, shielded, spring-loaded terminal, 10 m	773 894
PNOZ mli1p 50m spring	Cable, 5-pin, shielded, spring-loaded terminal, 50 m	773 895

## Link modules

### PNOZ ml1p

---

Product type	Features	Order No.
PNOZ mli1p 1.5m spring	Cable, 5-pin, shielded, spring-loaded terminal, 1.5 m	773 896
PNOZ mli1p 1.5m spring	Cable, 5-pin, shielded, spring-loaded terminal, 1.5 m	773 897
SafetyNET p Cable	SafetyNET p cable, 1 - 500 m	380 000

#### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 400
Set screw terminals	1 set of screw terminals	793 400



## Link modules PNOZ ml2p

---



### Overview

#### Unit features

Using the product PNOZ ml2p:


Link module to safely connect decentralised input/output modules to a configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Max. 4 PNOZ ml2p can be connected to the base unit
- ▶ Max. 4 decentralised modules PDP67 F 8DI ION can be connected to the link module PNOZ ml2p
- ▶ Plug-in connection terminals (either cage clamp terminal or screw terminal)
- ▶ LEDs for
  - Operating status
  - Fault
  - Connection status
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Link modules PNOZ ml2p

### Front view

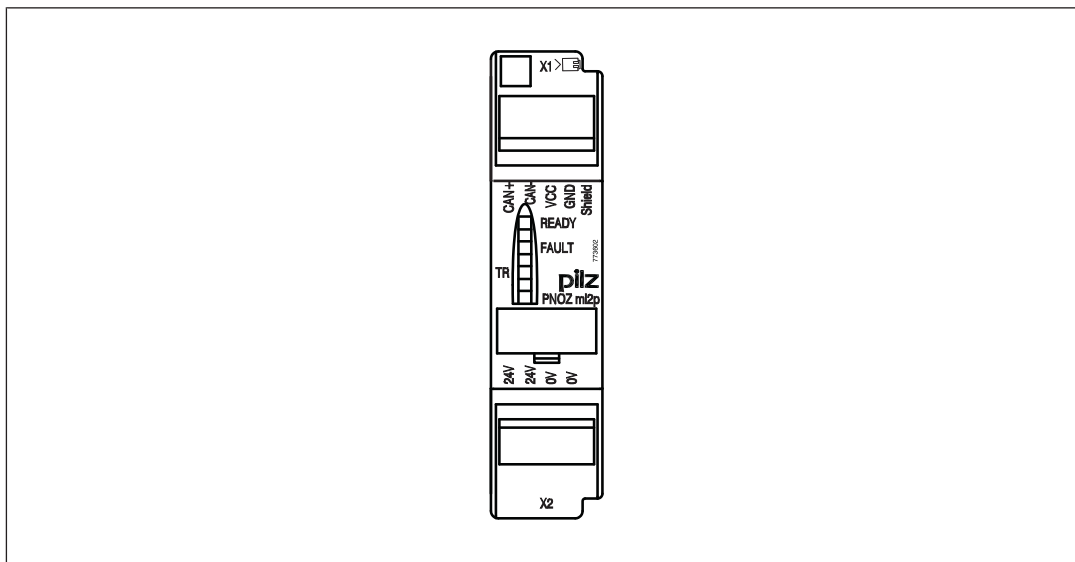

#### Key:

- ▶ 0 V, 24 V:  
Supply connections
- ▶ CAN+, CAN-, VCC, GND:  
Connection for decentralised modules
- ▶ Shield:  
Connection for the cable shield

## Function description

### Operation

The link module PNOZ ml2p is used to safely transfer the input information from decentralised modules to the safety system PNOZmulti.

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

## Link modules PNOZ ml2p


### Data exchange:

- ▶ Communication with the decentralised modules is via a safe data link.
- ▶ The link module PNOZ ml2p reads the input information from the decentralised modules as part of each cycle and then forwards it to the base unit.
- ▶ At the end of a PNOZmulti cycle, the base unit sends its output data to its link module. This output data is immediately sent to the decentralised modules.

### Linking several decentralised modules:

- ▶ A maximum of 4 link modules can be connected to a PNOZmulti base unit.
- ▶ A maximum of 4 decentralised modules can be connected to a link module PNOZ ml2p.
- ▶ If a decentralised module receives data intended for a different decentralised module that is connected, the data is forwarded without being processed.

### Block diagram

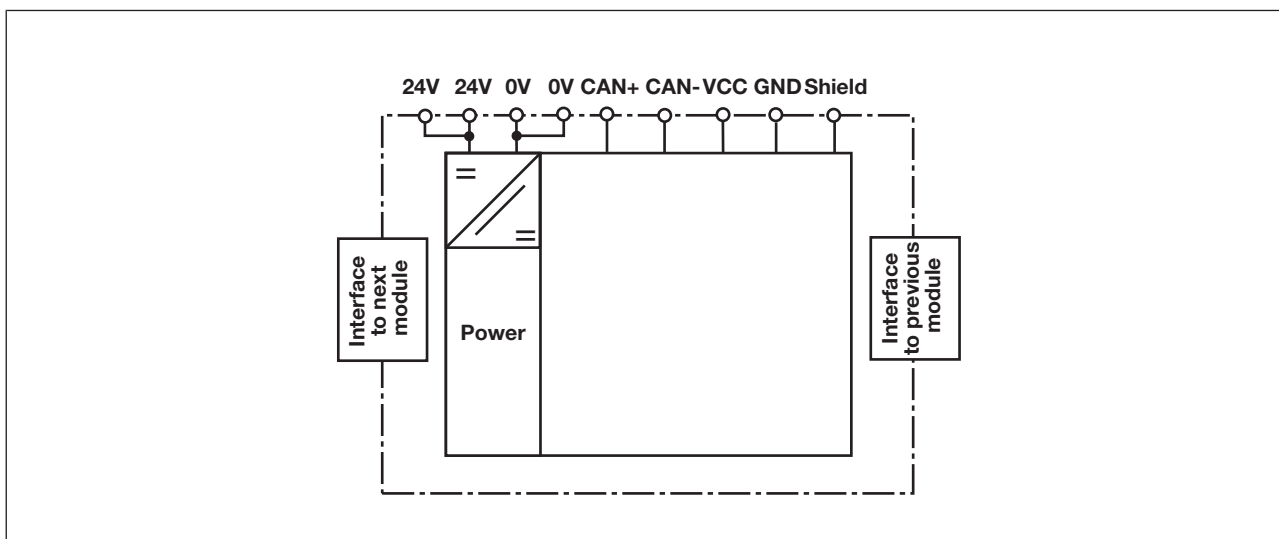


## Link modules

### PNOZ ml2p

## Installation

### Dimensions in mm

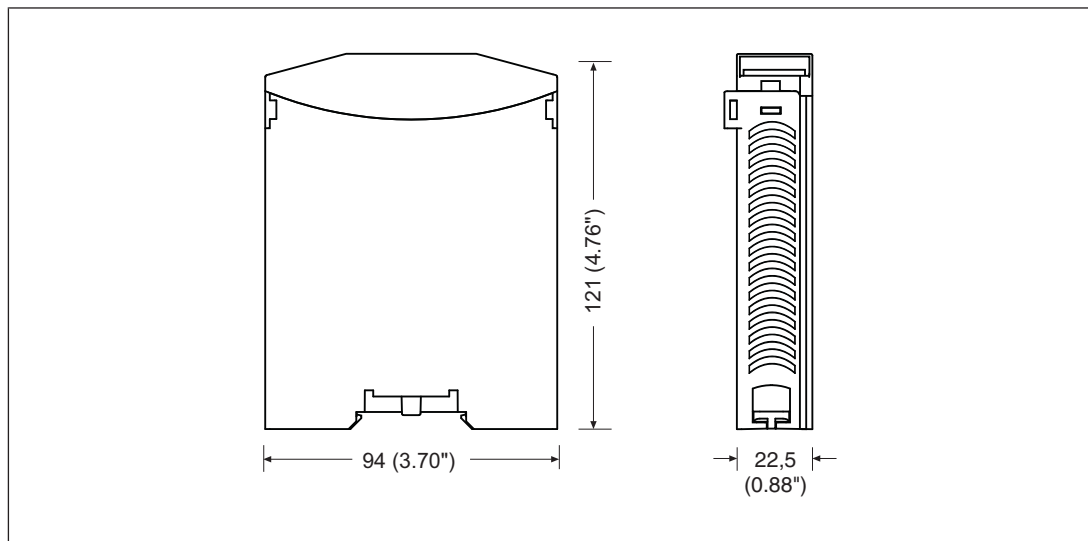

## Commissioning

### General wiring guidelines


The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[267\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Please refer to the technical details for information on the maximum cable length. Please also read the section entitled [Voltage drop \[265\]](#).
- ▶ Shielded cable must be used from a cable length of 30 m.
- ▶ Pilz pre-assembled cable can be used to connect the decentralised modules (see [Order references \[269\]](#)).
- ▶ The plug-in connection terminals are either designed as cage clamp terminals or screw terminals (see [Order references \[269\]](#)).

## Link modules PNOZ ml2p

### Insulation voltage test


The product PNOZ ml2p is connected to functional earth  via protection elements on the supply voltage. Insulation voltage tests are only possible with voltages up to ca. 42 V.

### Preparing for operation

#### Download modified project to the PNOZmulti safety system


As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

### Connection

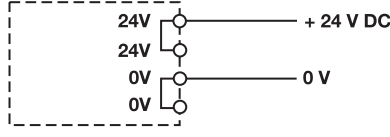Supply voltage	AC	DC
	/	

Supply voltage


#### Connection to a decentralised input module PDP67

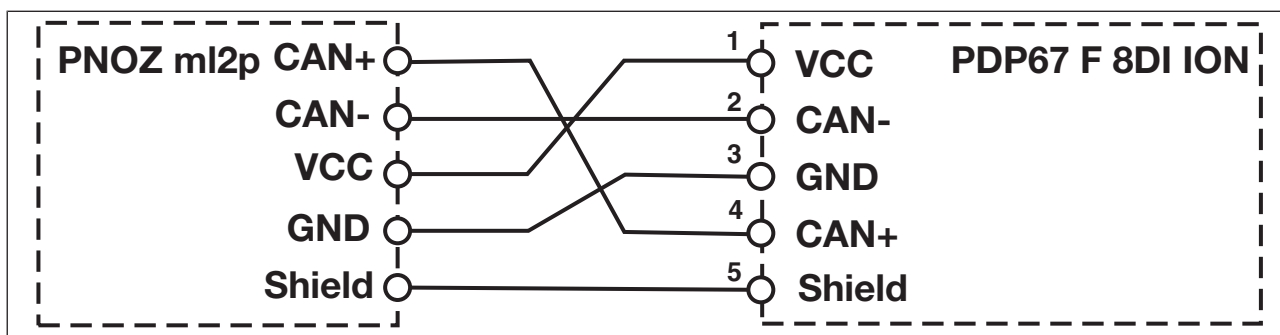

## Link modules

### PNOZ ml2p


Connection when using the PSS SB BUSCABLE LC in conjunction with a Pilz self-assembly "PSS67 M12 connector" (see order reference in the Technical Catalogue)

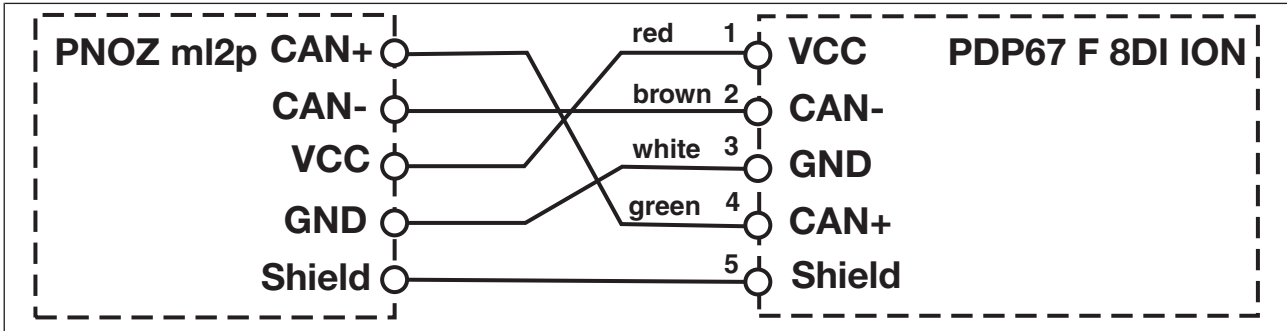

## Link modules PNOZ ml2p

### Series connection of 4 decentralised modules

You can connect up to 4 decentralised modules in series to a PNOZmulti link module.

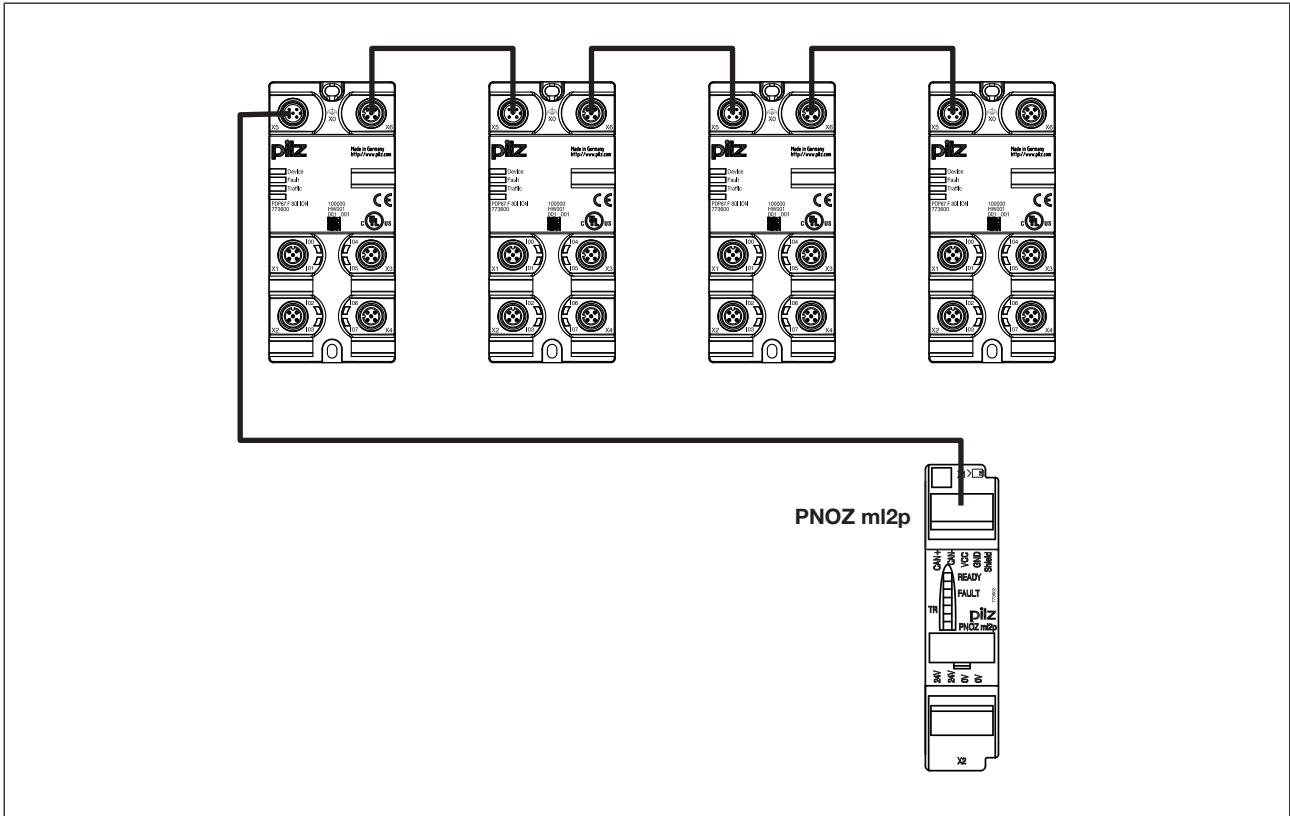

### Voltage drop

The max. cable length depends on the voltage drop in the supply voltage cables. The level of voltage drop is determined by the:

- ▶ Cable resistance on the supply voltage cables
- ▶ Operating current of the modules
- ▶ Load on the modules

To increase the max. cable length, the input voltage can be permanently increased by the voltage tolerance (see Technical Details).

## Link modules PNOZ ml2p


### Guidelines for various cable types

Cable type	Voltage drop per 10 m and per 100 mA
PSS SB BUSCABLE LC	0.1 V
Sensor cable 0.25 mm <sup>2</sup>	0.15 V
Sensor cable 0.34 mm <sup>2</sup>	0.11 V
Sensor cable 0.5 mm <sup>2</sup>	0.07 V

### Calculation example

- ▶ The PSS SB BUSCABLE LC is used in accordance with the pin assignment in section 6.2.2.

Voltage drop per 10 m and per 100 mA: 0.1 V

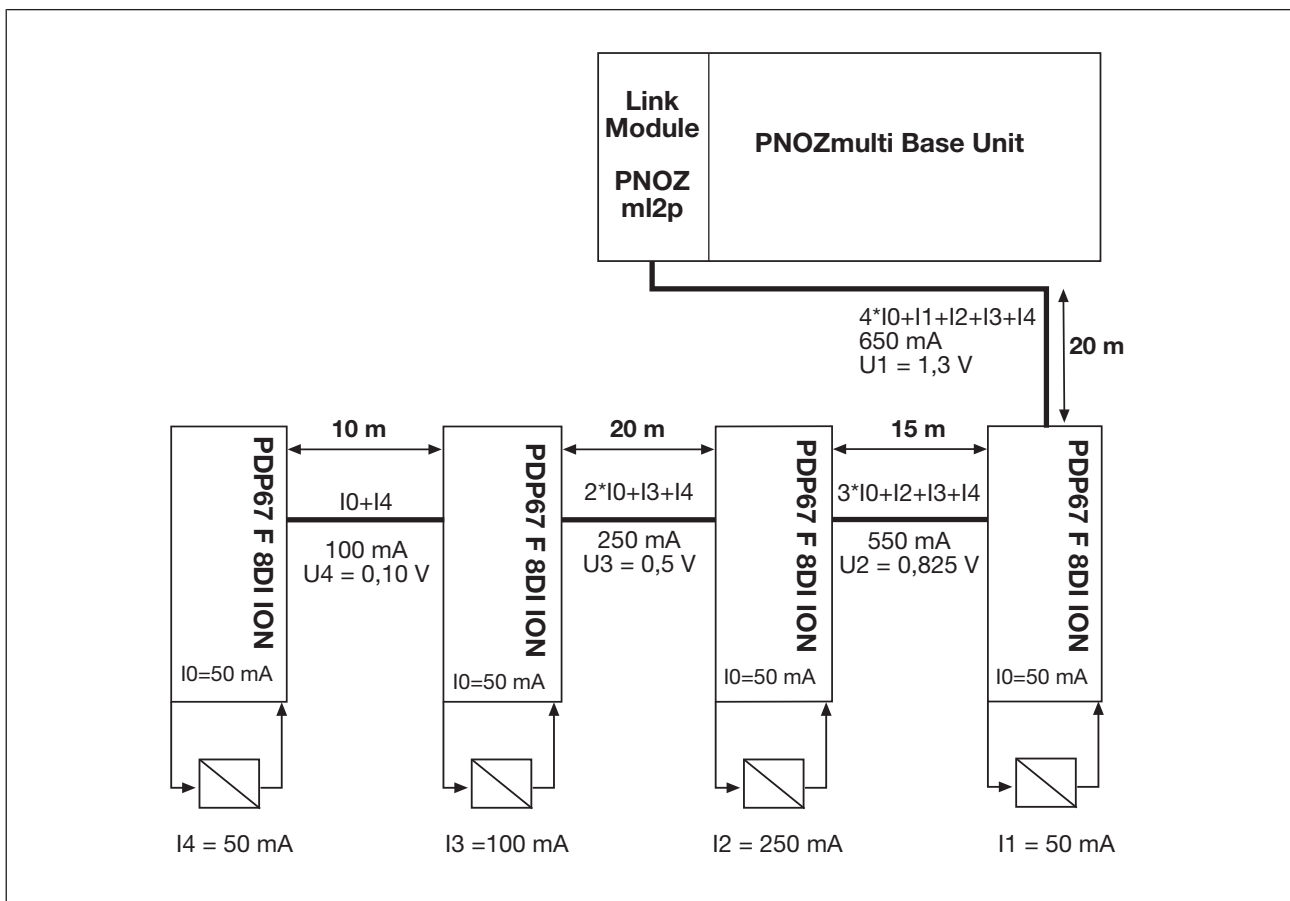

Key:

- ▶ I0: Module's consumption.
- ▶ I1 ... I5: Load current taken from the module



## Link modules PNOZ ml2p

- ▶ U1 ... U4: Voltage drop on the respective connection path

Total voltage drop from the link module PNOZ ml2p to the final PDP67 F 8DI ION:

$$U_{\text{total}} = U_1 + U_2 + U_3 + U_4$$

$$U_{\text{total}} = 1.3 \text{ V} + 0.825 \text{ V} + 0.5 \text{ V} + 0.10 \text{ V} = 2.725 \text{ V}$$

### Technical details

General	
Approvals	<b>BG, CCC, CE, EAC (Eurasian), KCC, TÜV, cULus Listed</b>
Electrical data	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>5,0 W</b>
Residual ripple DC	<b>5 %</b>
Status indicator	<b>LED</b>
Inputs	
Maximum input delay	<b>15 ms</b>
Semiconductor outputs	
Switch-off delay	<b>35 ms</b>
Test pulse outputs	
Maximum output current, decentralised module supply	<b>4 A</b>
Short circuit protection of decentralised module supply	<b>yes</b>
Times	
Switch-on delay	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>
Environmental data	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>

## Link modules PNOZ ml2p

<b>Environmental data</b>	
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Max. cable length unshielded	<b>30 m</b>
Max. cable length shielded	<b>100 m</b>
Material	
Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>

## Link modules PNOZ ml2p

### Mechanical data

Spring-loaded terminals: Terminal points per connection	1
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	94,0 mm
Width	22,5 mm
Depth	121,0 mm
Weight	133 g

Where standards are undated, the 2009-12 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008	EN ISO 13849-1: 2008	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
	PL	Category					
–	PL e	Cat. 4	SIL CL 3	5,35E-09	SIL 3	3,30E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

### Order reference

#### Products

Product type	Features	Order No.
PNOZ ml2p	Link Module	773 602

#### Accessories

##### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639

## Link modules PNOZ ml2p

### Adapter

Product type	Features	Order No.
PSEN ma adapter	Adapter for connection to safety switch PSENmag	380 300
PSEN cs adapter	Adapter for connection to safety switch PSENcode	380 301
PSEN sl adapter	Adapter for connection to safety switch PSENSlock	380 325

### Cable

Product type	Features	Order No.
PSS SB BUSCABLE LC	Cable, shielded, 1 - 100 m	311074
PSS67 I/O Cable	Cable, 1 - 30 m	380 320
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 3 m	380 200
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 5 m	380 201
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 10 m	380 202
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 30 m	380 203
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 3m	380 204
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 5 m	380 205
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 10 m	380 206
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 30 m	380 207
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 3m	380 208
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 5 m	380 209
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 10 m	380 210
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 20 m	380 220
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 30 m	380 211
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 3m	380 212
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 5 m	380 213

## Link modules PNOZ ml2p

Product type	Features	Order No.
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 10 m	380 214
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 30 m	380 215
PSEN op cable axial M12 5-pole 3m	Cable, straight, M12, 5-pin, open-ended socket, 3 m	630310
PSEN op cable axial M12 5-pole 5m	Cable, straight, M12, 5-pin, open-ended socket, 5 m	630311
PSEN op cable axial M12 5-pole 10m	Cable, straight, M12, 5-pin, open-ended socket, 10 m	630312
PSEN op cable axial M12 5-pole 20m	Cable, straight, M12, 5-pin, open-ended socket, 20 m	630298
PSEN op cable axial M12 5-pole 30m	Cable, straight, M12, 5-pin, open-ended socket, 30 m	630297

### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 400
Set screw terminals	1 set of screw terminals	793 400

### Connector

Product type	Features	Order No.
PSS67 M12 connector	Connector, M12, straight, 5-pin, A-coded	380 308
PSS67 M12 connector	Socket, M12, straight, 5-pin, A-coded	380 309
PSS67 M12 connector	Connector, M12, angled, 5-pin, A-coded	380 310
PSS67 M12 connector	Socket, M12, angled, 5-pin, A-coded	380 311
PSS67 M8 connector	Connector, M8, straight, 4-pin	380 316
PSS67 M8 connector	Socket, M8, straight, 4-pin	380 317
PSS67 M8 connector	Connector, M8, angled, 4-pin	380 318
PSS67 M8 connector	Socket, M8, angled, 4-pin	380 319

## Speed monitors PNOZ ms1p



### Overview

#### Unit features

Using the product PNOZ ms1p:

Speed monitor for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:


- ▶ Monitoring of 2 independent axes
- ▶ Connection per axis
  - 1 incremental encoder  
or
  - 2 proximity switches  
or
  - 1 incremental encoder and 1 proximity switch
- ▶ Measured variables:
  - Standstill
  - Speed (8 values can be set)
  - Direction of rotation
- ▶ Axis types, input device types and reset mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
  - Supply voltage
  - Incremental encoder
  - Proximity switch
  - Axis status, standstill and excess speed
  - Faults on the system
- ▶ Proximity switch connection technology: Plug-in connection terminals (either cage clamp terminal or screw terminal)

## Speed monitors

### PNOZ ms1p

- ▶ Connection technology incremental encoder:  
Female RJ45 connector
- ▶ Galvanic isolation between the connections X1, X12 and X22
- ▶ Max. 4 speed monitors can be connected to the base unit

#### Front view

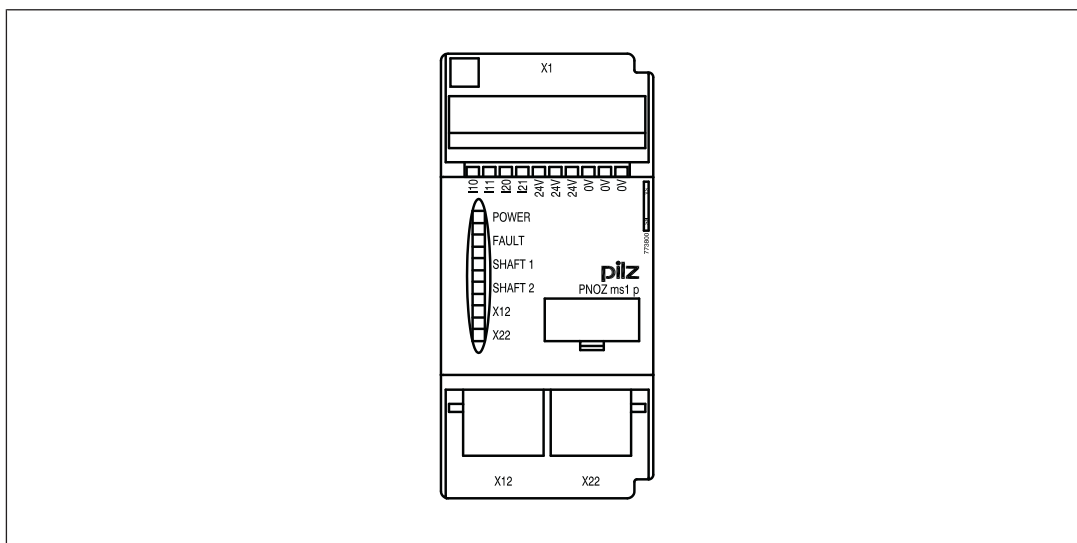

#### Key:

- ▶ X1:
  - I10, I11:  
connection terminals for proximity switch at axis 1
  - I20, I21:  
connection terminals for proximity switch at axis 2
  - 0 V, 24 V:  
supply connections
- ▶ X12:
  - female connector for the connection of an incremental encoder at axis 1
- ▶ X22:
  - female connector for the connection of an incremental encoder at axis 2
- ▶ LEDs:
  - POWER
  - FAULT
  - SHAFT 1
  - SHAFT 2
  - X12

## Speed monitors PNOZ ms1p

– X22


### Function description

#### Operation

The speed monitor can independently monitor two axes for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the safety circuit loaded, the values can be transferred from the base unit, e.g. to a relay output on the safety system. Incremental encoders and/or proximity detectors can be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.

#### Block diagram

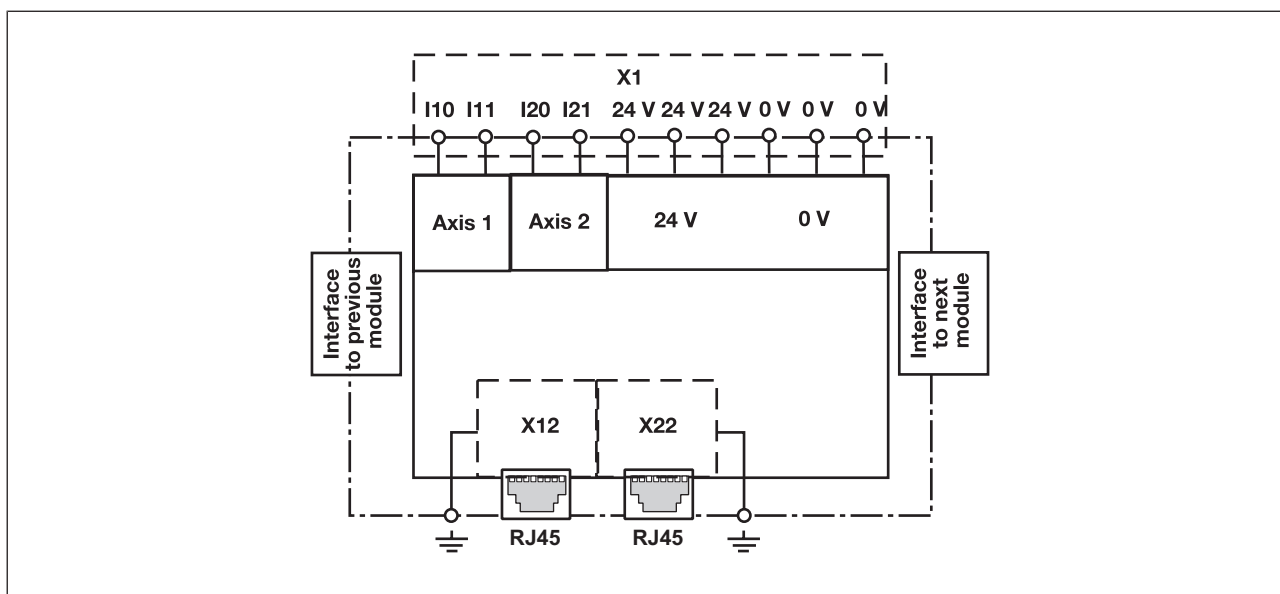

#### Input device types

##### Proximity switch

##### Requirements of the proximity switches

- ▶ Only "pnp" type proximity switches may be used (N/O contact, switching to positive).
- ▶ The proximity switches require a 24 VDC supply.
- ▶ The proximity switches must be fitted so that at least one is always activated (carries a high signal).
- ▶ The proximity switches must be fitted so that the recorded signals overlap.



## Speed monitors PNOZ ms1p

- ▶ When monitoring with proximity switches we recommend you use proximity switches with hysteresis in order to prevent bounce and therefore incorrect measurements.

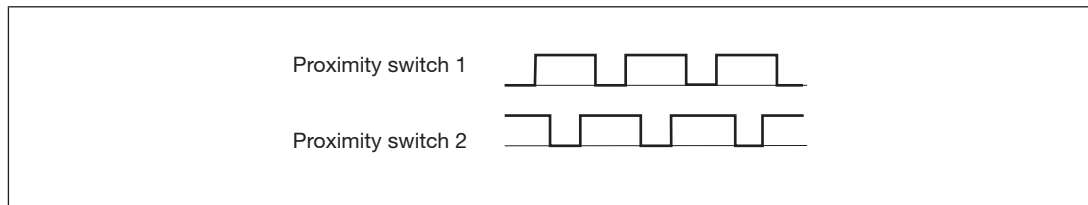


Fig.: Example proximity switch signal behaviour

- ▶ Please note the values stated in the technical details

### Incremental encoders

#### Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
  - Sin/Cos
  - TTL (RS422)
- ▶ Please note the values stated in the technical details

#### Adapter for incremental encoders

The adapter records the data between the encoder and drive and makes it available to the PNOZ ms1p via the RJ45 socket.

Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

#### Incremental encoder and proximity switch on one axis

In order to increase the availability, a proximity switch and an incremental encoder can be configured on one axis for the speed monitor. The speed monitor then monitors 3 signals on an axis: Track A and track B of the incremental encoder and the proximity switch

#### Standstill monitoring

Standstill is detected when at least two of these signals fall below the standstill frequency.

## Speed monitors

### PNOZ ms1p

#### Monitoring for broken shearpins

If the Broken shearpin monitoring option is activated, a shearpin break is recognised if


- ▶ both signals of the incremental encoder fall below the set standstill frequency (standstill) and
- ▶ the proximity switch exceeds the set standstill frequency (rotating shaft).

The recognised broken shearpin leads to safe condition (see status B2 in "Signal statuses" table in Chapter 8 of the operating manual). If individual or multiple signals change, the system may leave a safe state (see "Signal statuses" table).

Hazards that can arise through an automatic restart must be excluded from the user program.

## Installation

### Dimensions

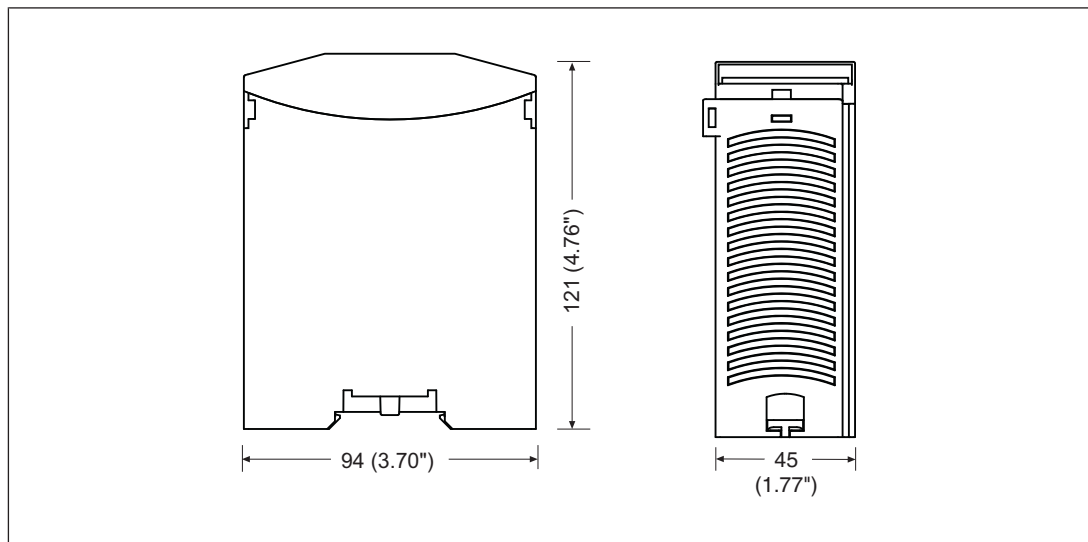

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[285\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.


## Speed monitors PNOZ ms1p

On each of the 2 axes you can connect as required:

- ▶ 1 incremental encoder  
or
- ▶ 2 proximity switches  
or
- ▶ 1 incremental encoder and 1 proximity switch

	Incremental encoder	Proximity switch
Connection axis 1	X12	-
	-	I10, I11, 0 V
	X12	I10, 0 V
Connection axis 2	X22	-
	-	I20, I21, 0 V
	X22	I20, 0 V

### Pin assignment of RJ45 socket

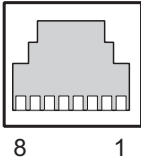RJ45 socket 8-pin	PIN	Track
	1	5 V
	2	0 V
	3	n.c.
	4	A
	5	/A
	6	n.c.
	7	B
	8	/B

### Connection of proximity switches


Proceed as follows when connecting proximity switches:

- ▶ Terminals I10 and I11: connect the proximity switch for axis 1
- ▶ Terminals I20 and I21: connect the proximity switch for axis 2.
- ▶ If only one axis is to be monitored, either terminals I10 and I11 or terminals I20 and I21 will remain free.
- ▶ When connecting incremental encoders and proximity switches on one axis:
  - Terminals I10: connect proximity switch for axis 1 (I11 is not used)
  - Terminals I20: connect proximity switch for axis 2 (I21 is not used)

## Speed monitors

### PNOZ ms1p

- ▶ The proximity switch must always be connected to a 0 V terminal of the speed monitor. The 0 V terminals are connected internally.
- ▶ Connect proximity switch to 24 VDC of the power supply or the speed monitor (the 24 V terminals of the speed monitor are connected internally)

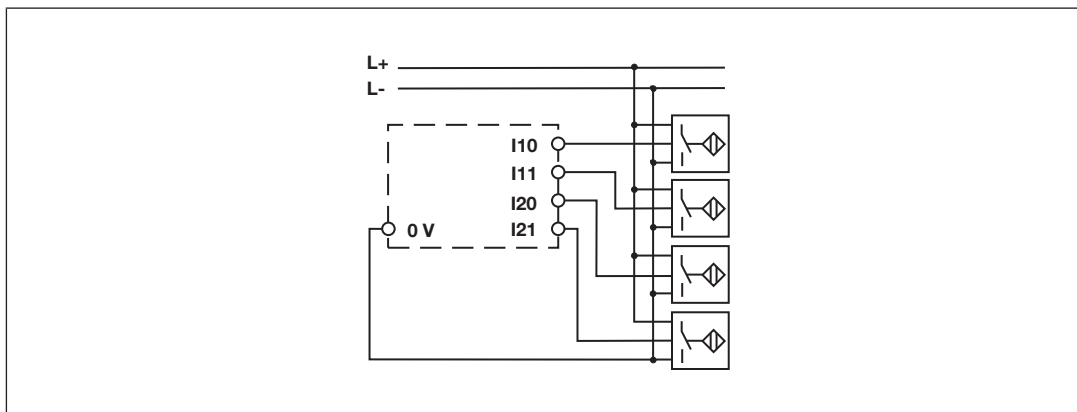

### Connection of the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors axis 1; the incremental encoder on connector X22 monitors axis 2.
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

## Speed monitors

### PNOZ ms1p

#### Connect signals of the incremental encoder to the speed monitor

Input device types: 1 Vss, 5 V-TTL

- ▶ Supply incremental encoder and speed monitor with 5 VDC
- ▶ Terminate incremental encoder with  $Z_0 = 120 \text{ Ohm}$

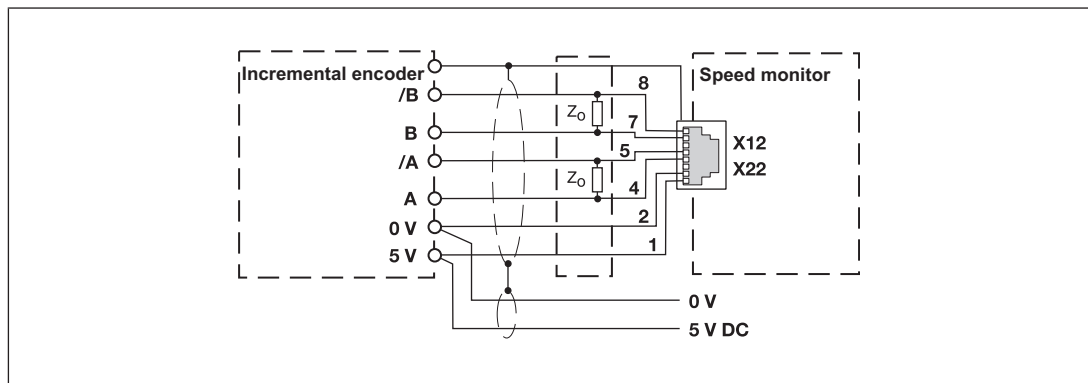


Fig.: Connection to incremental encoder type 1 Vss, 5 V-TTL

#### Connect incremental encoder to the speed monitor via an adapter

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the female RJ45 connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive. The signal lines can then be terminated directly at the adapter with  $Z_0 = 120 \text{ Ohm}$ .
- ▶ If the signal lines in the drive are already terminated with  $Z_0 = 120 \text{ Ohm}$ , the incremental encoder may no longer be terminated.
- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under [Connect signals of the incremental encoder to the speed monitor \[279\]](#) and in the adapter operating manual must be observed when connecting the supply voltage.

## Speed monitors PNOZ ms1p

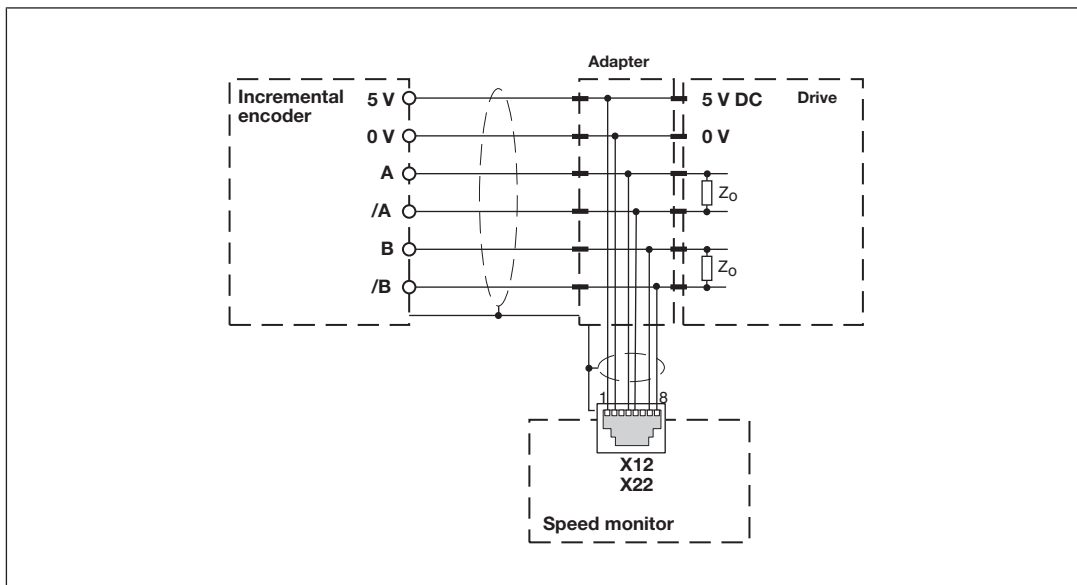


Fig.: Connection via adapter and drive

## Connection of proximity switches and incremental encoder

### Proximity switch and incremental encoder on various axes

Axis 1:

Proximity switch at I10, I11

or

incremental encoder at X12

Axis 2:

Proximity switch at I20, I21

or

incremental encoder at X22

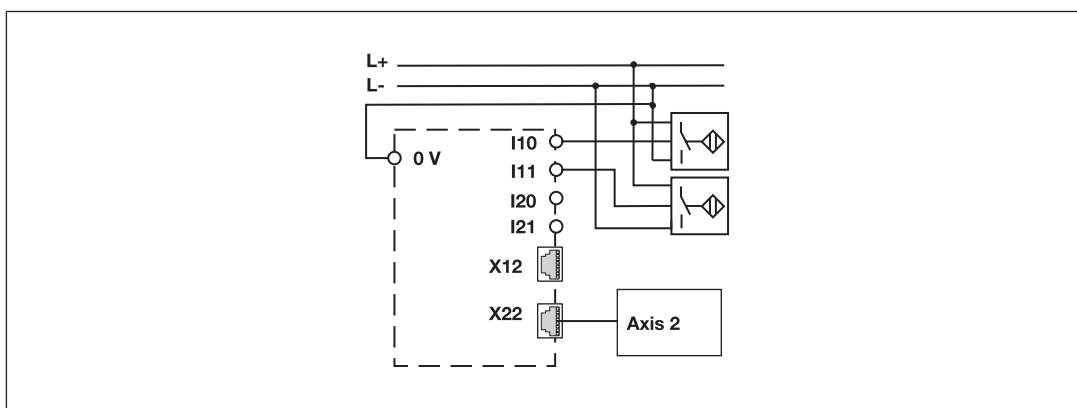


Fig.: Proximity switch and incremental encoder on various axes

## Speed monitors PNOZ ms1p

### Proximity switch and incremental encoder on one axis

Axis 1:

Proximity switch at I10 (I11 is unused)

and

Incremental encoder at X12

Axis 2:

Proximity switch at I20 (I21 is unused)

and

Incremental encoder at X22

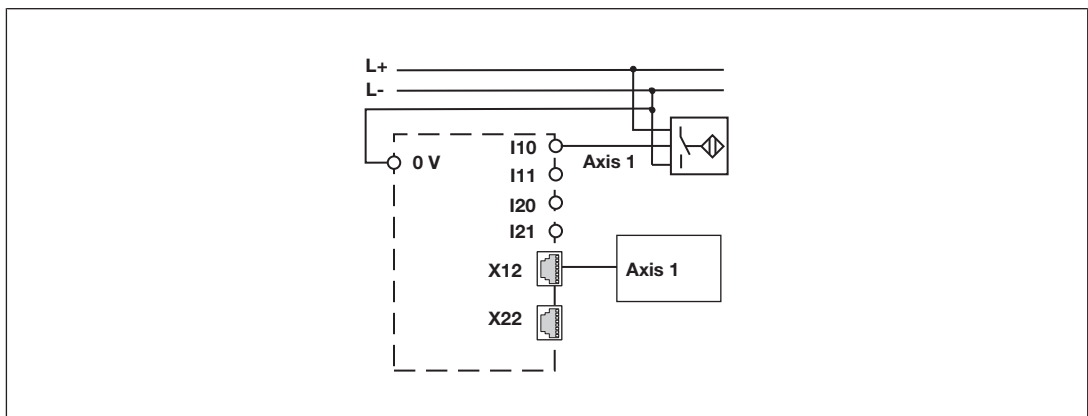


Fig.: Proximity switch and incremental encoder on one axis

## Speed monitors PNOZ ms1p

### Connection examples

#### Connection of 2 proximity switches and an incremental encoder

##### Description

- ▶ 2 proximity switches, pnp-switching
- ▶ 1 incremental encoder

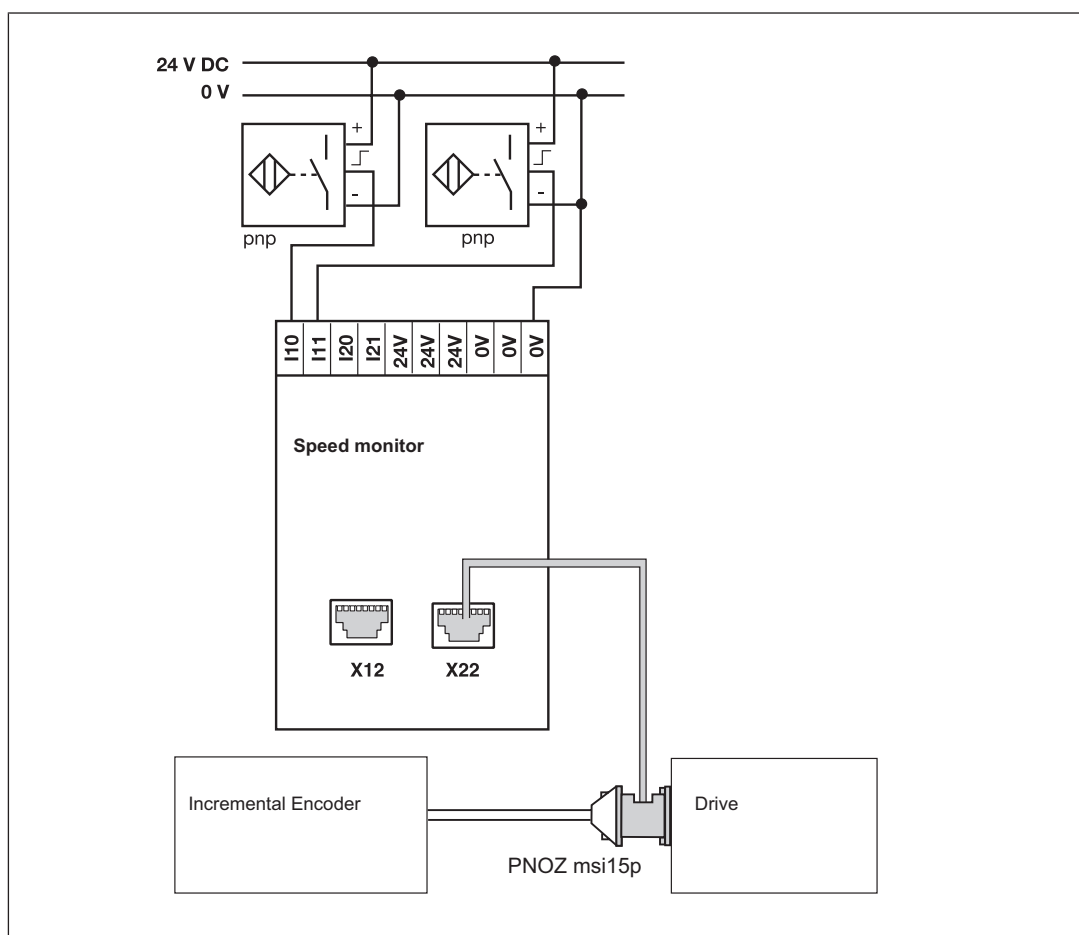


Fig.: Connection of 2 proximity switches, pnp-switching, one incremental encoder



## Speed monitors PNOZ ms1p

### Connection of 4 proximity switches

#### Description

- ▶ 4 proximity switches, pnp-switching
- ▶ Connection through 24 V terminals and 0 V

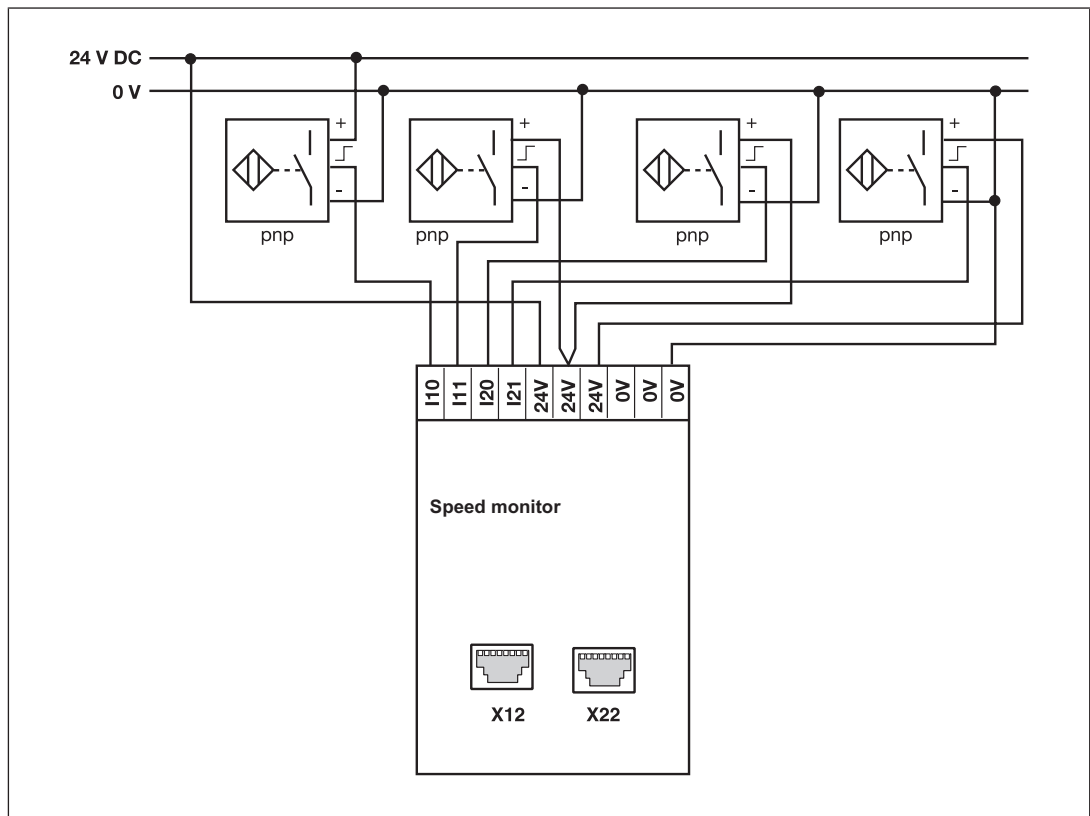


Fig.: Connection of 4 proximity switches, pnp-switching, connection through 24 V terminals and 0 V

## Speed monitors PNOZ ms1p

### Connection of an incremental encoder and proximity switch on an axis

#### Description

- ▶ 1 proximity switch, pnp-switching
- ▶ 1 incremental encoder
- ▶ Incremental encoder and proximity switch on one axis

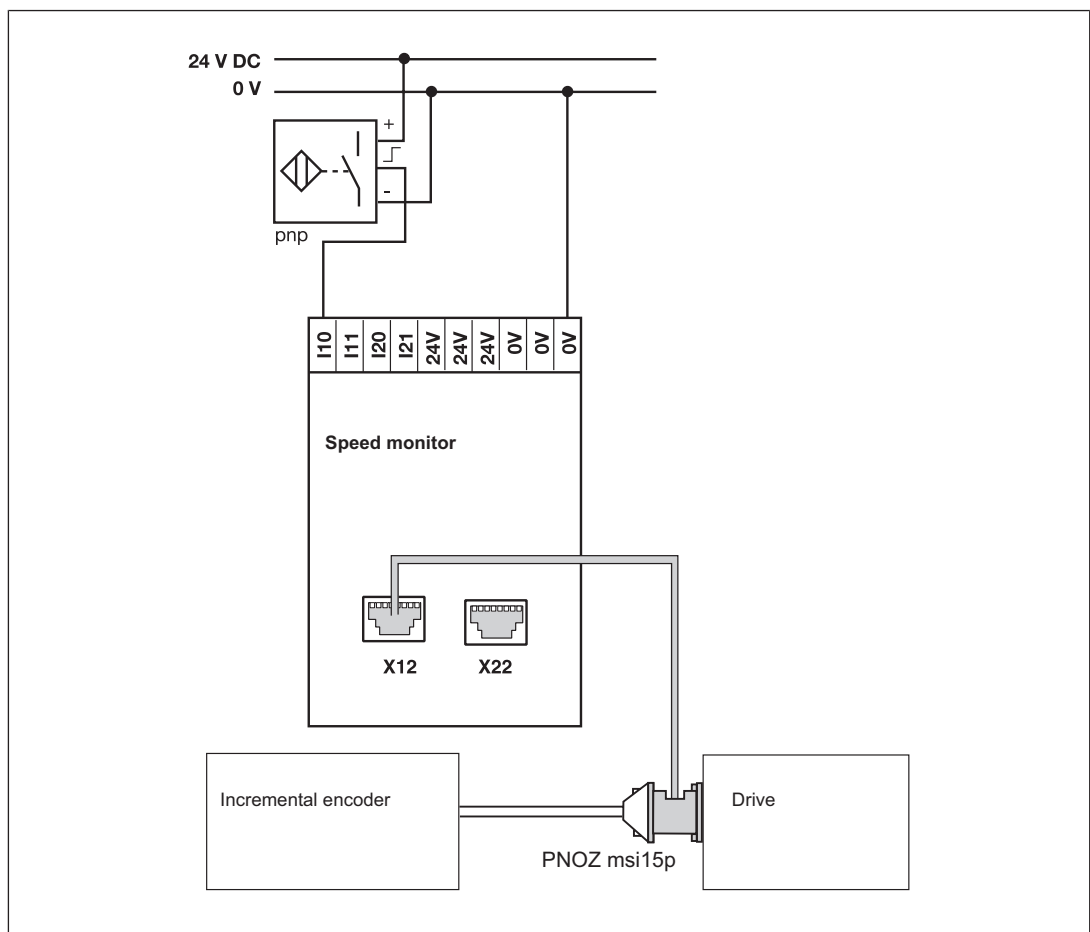


Fig.: Connection of an incremental encoder and proximity switch, pnp-switching, on an axis

## Speed monitors

### PNOZ ms1p

#### Technical details

General	
Approvals	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
Electrical data	
Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>5,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>1,0 W</b>
Status indicator	<b>LED</b>
Proximity switch input	
Number of inputs	<b>4</b>
Input signal level	
Signal level at "1"	<b>11 - 30 V</b>
Signal level at "0"	<b>-3 - 5 V</b>
Input resistance	<b>3 kOhm</b>
Input's frequency range	<b>0 - 3 kHz</b>
Configurable monitoring frequency	
Without hysteresis	<b>0.1 Hz - 3 kHz</b>
With hysteresis	<b>0.2 Hz - 3 kHz</b>
Incremental encoder input	
Number of inputs	<b>2</b>
Connection type	<b>RJ45 female connector, 8-pin</b>
Supply voltage for incremental encoders	<b>5 V DC ±10 %, typ.30 mA</b>
Input signal level	<b>0,5 - 5,0 V<sub>ss</sub></b>
Phase position for the differential signals A, /A and B, /B	<b>90° ±30°</b>
Overload protection	<b>-30 - 30 V</b>
Input resistance	<b>10,0 kOhm</b>
Input's frequency range	<b>0 - 500 kHz</b>
Configurable monitoring frequency	
Without hysteresis	<b>0.1 Hz - 500 kHz</b>
With hysteresis	<b>0.2 Hz - 500 kHz</b>
Times	
Configurable switch-off delay	<b>0 - 2.500 ms</b>
Supply interruption before de-energisation	<b>20 ms</b>

## Speed monitors PNOZ ms1p

<b>Times</b>	
Reaction time	
f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms</b>
f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms + 1/f</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

## Speed monitors PNOZ ms1p

Mechanical data	
Material	
Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>1</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>
Dimensions	
Height	<b>94,0 mm</b>
Width	<b>45,0 mm</b>
Depth	<b>121,0 mm</b>
Weight	<b>192 g</b>

Where standards are undated, the 2009-06 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN IEC 62061 SIL CL	EN IEC 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
Initiator	<b>PL e</b>	<b>Cat. 3</b>	<b>SIL CL 3</b>	<b>3,68E-09</b>	<b>SIL 3</b>	<b>4,84E-05</b>	<b>20</b>
Incremental encoder	<b>PL e</b>	<b>Cat. 3</b>	<b>SIL CL 3</b>	<b>4,52E-09</b>	<b>SIL 3</b>	<b>5,80E-05</b>	<b>20</b>

All the units used within a safety function must be considered when calculating the safety characteristic data.

## Speed monitors

### PNOZ ms1p

#### Order reference

#### Product

Product type	Features	Order no.
PNOZ ms1p	Expansion module, speed monitor	773 800

#### Accessories

#### Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783 800
Set screw terminals	1 set of screw terminals	793 800


#### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639

## Speed monitors PNOZ ms1p

### Application Examples

#### Safe standstill monitoring

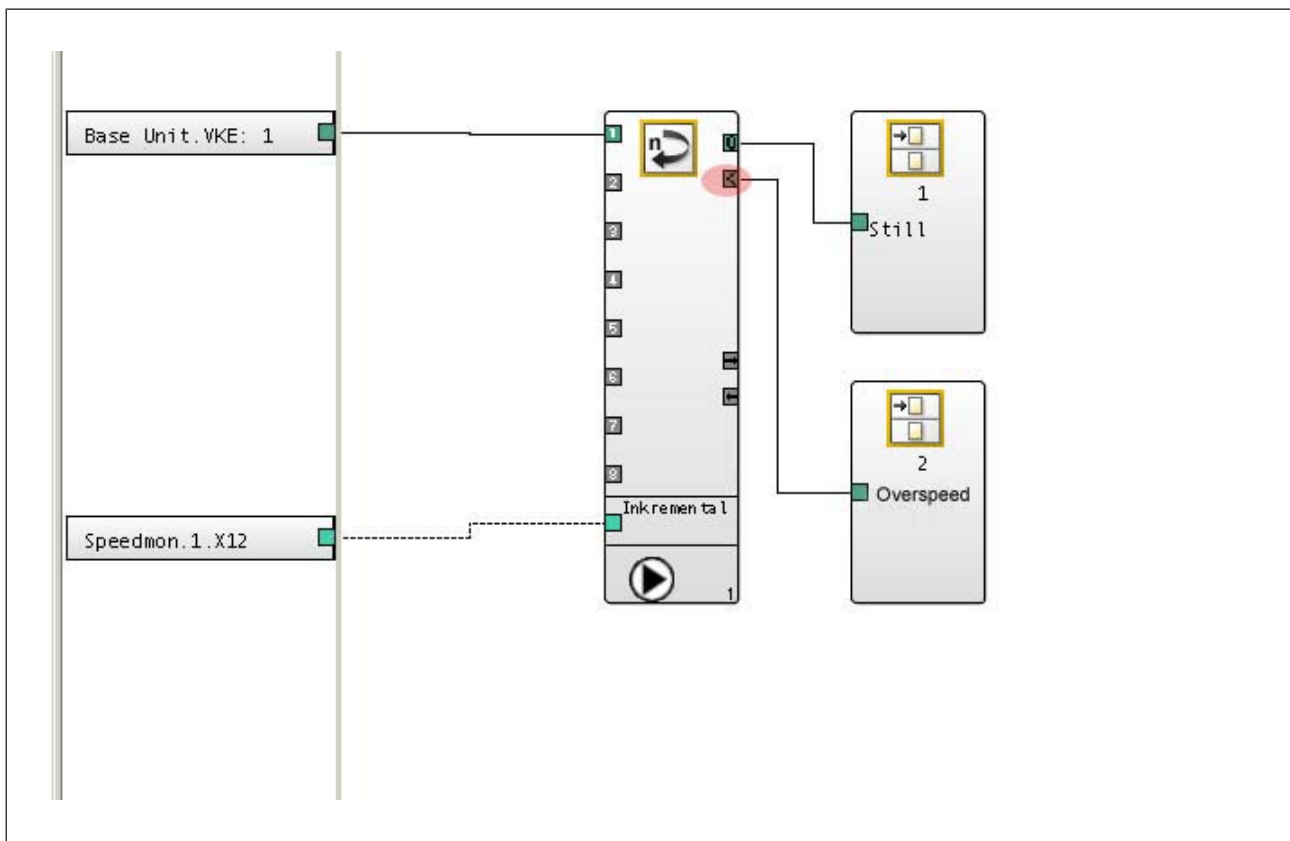

Configuration in the PNOZmulti Configurator

- ▶ Standstill: depending on requirement
- ▶ Speed n1: greater than the maximum permitted speed.


If the "Overspeed" output (see red marking) = "0", either the maximum permitted speed has been exceeded or the speed monitor has recognised a fault.

"Overdrive" output = "0" must lead to the shutdown of the relevant axis.

## Speed monitors

### PNOZ ms1p

#### Safe monitoring with "reduced speed" operating mode

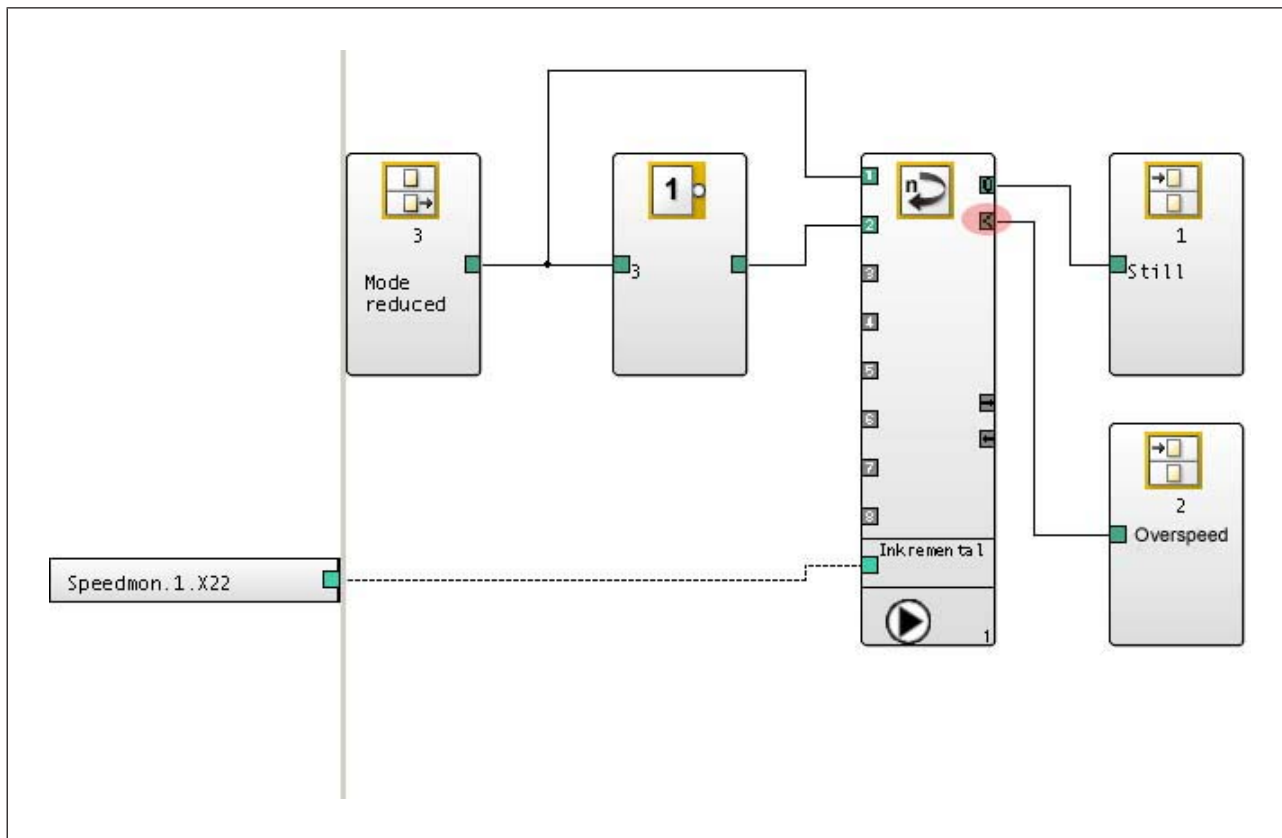

#### Configuration in the PNOZmulti Configurator

- ▶ Standstill: depending on requirement
- ▶ Speed n1: reduced speed, depending on requirement
- ▶ Speed n2: greater than the maximum permitted speed.

If the "Overspeed" output (see red marking) = "0", either the maximum permitted speed has been exceeded or the speed monitor has recognised a fault.

"Overspeed" output = "0" must lead to the shutdown of the relevant axis, irrespective of whether the "reduced speed" operating mode is active.



## Speed monitors PNOZ ms2p HTL



### Overview

#### Unit features

Using the product PNOZ ms2p HTL:

Speed monitor for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Monitoring of 2 independent axes
- ▶ Connection per axis
  - 1 incremental encoder  
or
  - 2 proximity switches  
or
  - 1 incremental encoder and 1 proximity switch
- ▶ Measured variables:
  - Standstill
  - Speed (8 values can be set)
  - Direction of rotation
- ▶ Axis types, input device types and start mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
  - Supply voltage
  - Incremental encoder
  - Proximity switch
  - Axis status, standstill and excess speed
  - Faults on the system
- ▶ Proximity switch connection technology: Plug-in connection terminals (either cage clamp terminal or screw terminal)

## Speed monitors PNOZ ms2p HTL

- ▶ Incremental encoder connection technology:  
RJ45 female connector
- ▶ Galvanic isolation between the connections X1, X12 and X22
- ▶ Max. 4 speed monitors can be connected to the base unit

### Front view

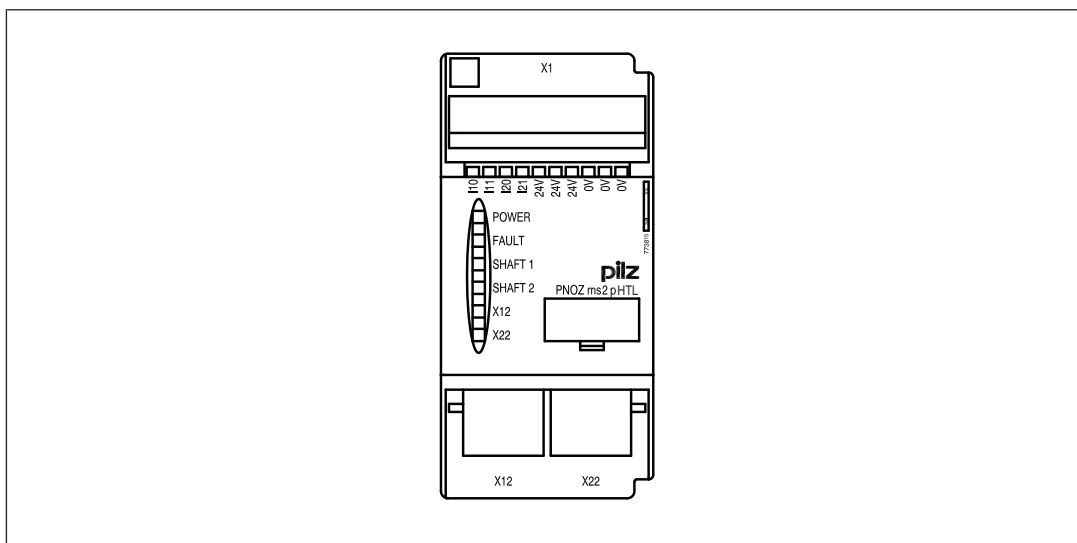

### Legend:

- ▶ X1:
  - I10, I11:  
Connection terminals for proximity switch at axis 1
  - I20, I21:  
Connection terminals for proximity switch at axis 2
  - 0 V, 24 V:  
Supply connections
- ▶ X12:
  - female connector for the connection of an incremental encoder at axis 1
- ▶ X22:
  - female connector for the connection of an incremental encoder at axis 2
- ▶ LEDs:
  - POWER
  - FAULT
  - SHAFT 1
  - SHAFT 2
  - X12

## Speed monitors PNOZ ms2p HTL

– X22


### Function description

#### Operation

The speed monitor can independently monitor two axes for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the safety circuit loaded, the values can be transferred from the base unit, e.g. to a relay output on the safety system. Incremental encoders and/or proximity detectors can be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.

#### Block diagram

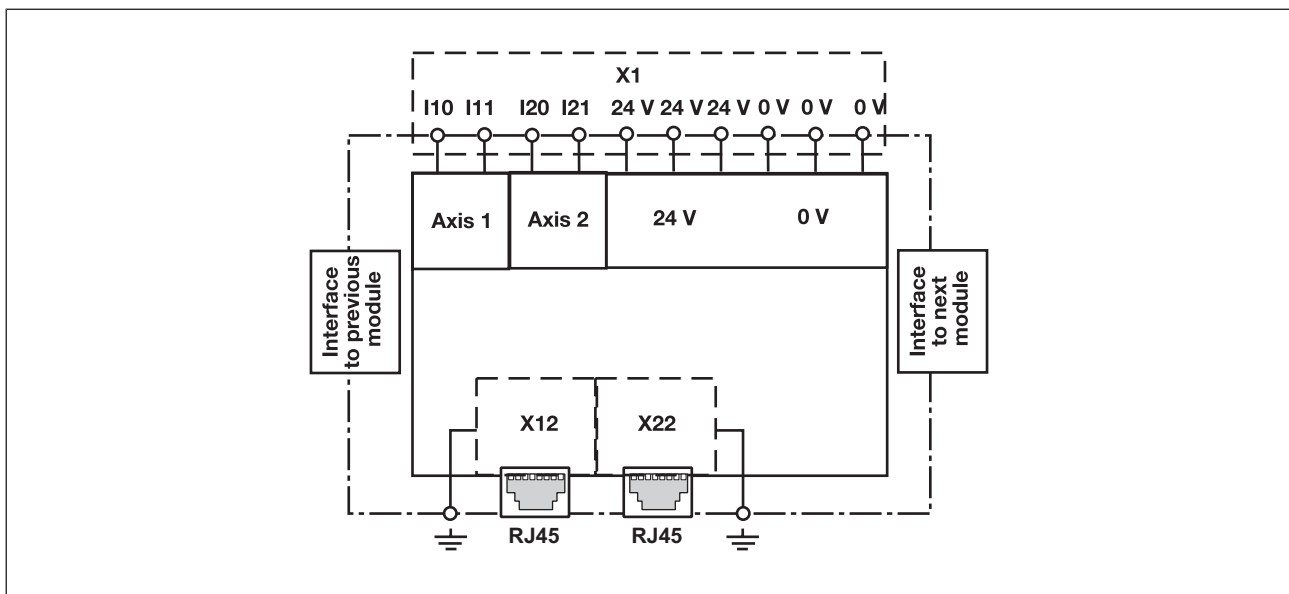

#### Input device types

##### Proximity switch

##### Requirements of the proximity switches

- ▶ Only "pnp" type proximity switches may be used (N/O contact, switching to positive).
- ▶ The proximity switches require a 24 VDC supply.
- ▶ The proximity switches must be fitted so that at least one is always activated (carries a high signal).
- ▶ The proximity switches must be fitted so that the recorded signals overlap.

## Speed monitors PNOZ ms2p HTL

- ▶ When monitoring with proximity switches we recommend you use proximity switches with hysteresis in order to prevent bounce and therefore incorrect measurements.

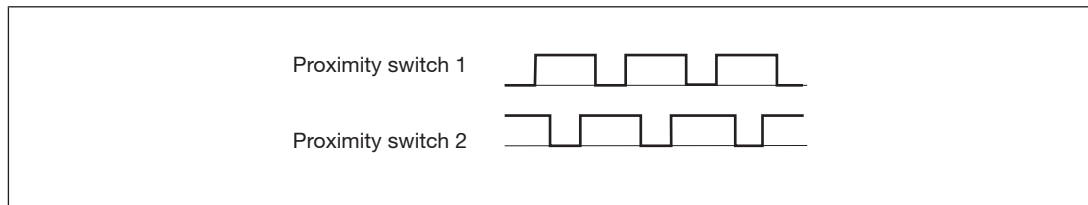


Fig.: Example proximity switch signal behaviour

- ▶ Please note the values stated in the technical details

### Incremental encoders

#### Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
  - HTL (12 V – 30 V)
- ▶ Please note the values stated in the technical details

#### Adapter for incremental encoders

The adapter records the data between the encoder and drive and makes it available to the PNOZ ms2p HTL via the RJ45 socket.

Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

#### Incremental encoder and proximity switch on one axis

In order to increase the availability, a proximity switch and an incremental encoder can be configured on one axis for the speed monitor. The speed monitor then monitors 3 signals on an axis: Track A and track B of the incremental encoder and the proximity switch

#### Standstill monitoring

Standstill is detected when at least two of these signals fall below the standstill frequency.

## Speed monitors

### PNOZ ms2p HTL

#### Monitoring for broken shearpins

If the Broken shearpin monitoring option is activated, a shearpin break is recognised if


- ▶ both signals of the incremental encoder fall below the set standstill frequency (standstill) and
- ▶ the proximity switch exceeds the set standstill frequency (rotating shaft).

The recognised broken shearpin leads to safe condition (see status B2 in "Signal statuses" table in Chapter 8 of the operating manual). If individual or multiple signals change, the system may leave a safe state (see "Signal statuses" table).

Hazards that can arise through an automatic restart must be excluded from the user program.

## Installation

### Dimensions

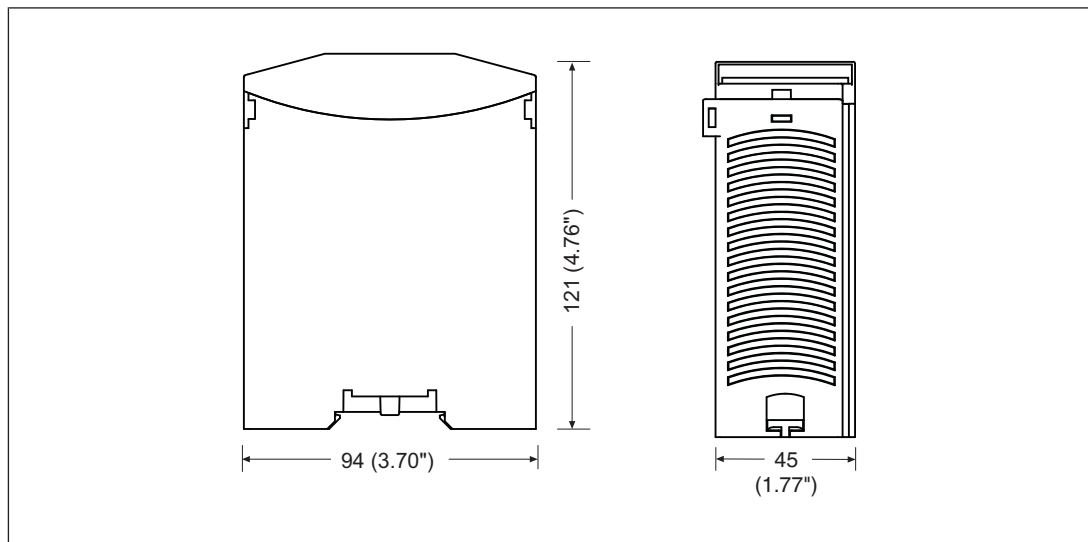

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[304\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.


## Speed monitors PNOZ ms2p HTL

On each of the 2 axes you can connect as required:

- ▶ 1 incremental encoder  
or
- ▶ 2 proximity switches  
or
- ▶ 1 incremental encoder and 1 proximity switch

	Incremental encoder	Proximity switch
Connection axis 1	X12	-
	-	I10, I11, 0 V
	X12	I10, 0 V
Connection axis 2	X22	-
	-	I20, I21, 0 V
	X22	I20, 0 V

### Pin assignment of RJ45 socket

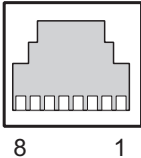RJ45 socket 8-pin	PIN	Track
	1	n.c.
	2	0 V
	3	n.c.
	4	A
	5	/A
	6	n.c.
	7	B
	8	/B


### Connection of proximity switches

Proceed as follows when connecting proximity switches:

- ▶ Terminals I10 and I11: connect the proximity switch for axis 1
- ▶ Terminals I20 and I21: connect the proximity switch for axis 2.
- ▶ If only one axis is to be monitored, either terminals I10 and I11 or terminals I20 and I21 will remain free.
- ▶ When connecting incremental encoders and proximity switches on one axis:
  - Terminals I10: connect proximity switch for axis 1 (I11 is not used)
  - Terminals I20: connect proximity switch for axis 2 (I21 is not used)

## Speed monitors PNOZ ms2p HTL

- ▶ The proximity switch must always be connected to a 0 V terminal of the speed monitor. The 0 V terminals are connected internally.
- ▶ Connect proximity switch to 24 VDC of the power supply or the speed monitor (the 24 V terminals of the speed monitor are connected internally)

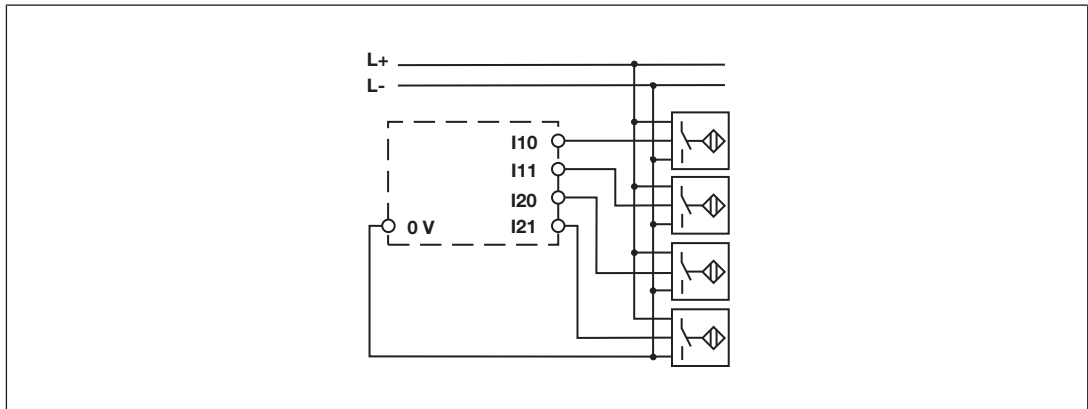

### Connection of the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors axis 1; the incremental encoder on connector X22 monitors axis 2.
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

### Connect signals of the incremental encoder to the speed monitor

Encoder types: 24 V-HTL

- ▶ Apply 24 VDC supply voltage to incremental encoder only
- ▶ Do not terminate incremental encoder with  $Z0 = 120 \text{ Ohm}$

## Speed monitors PNOZ ms2p HTL

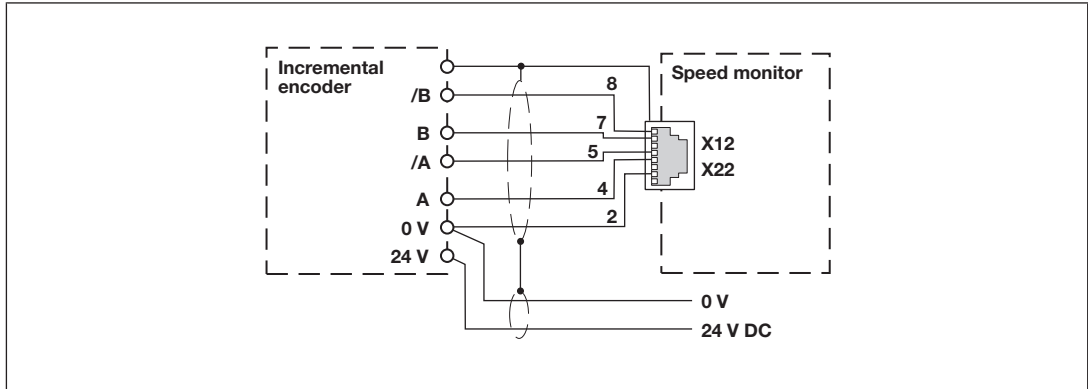


Fig.: Connection to incremental encoder type 24 V-HTL

### Connect incremental encoder to the speed monitor via an adapter

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the female RJ45 connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive.
- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under "Connect incremental encoder signals to the speed monitor" and in the adapter operating manual must be observed when connecting the supply voltage.
- ▶ Supply voltage (12 V – 30 V) to incremental encoder only.
- ▶ HTL signals may not be fitted with a terminating resistor.

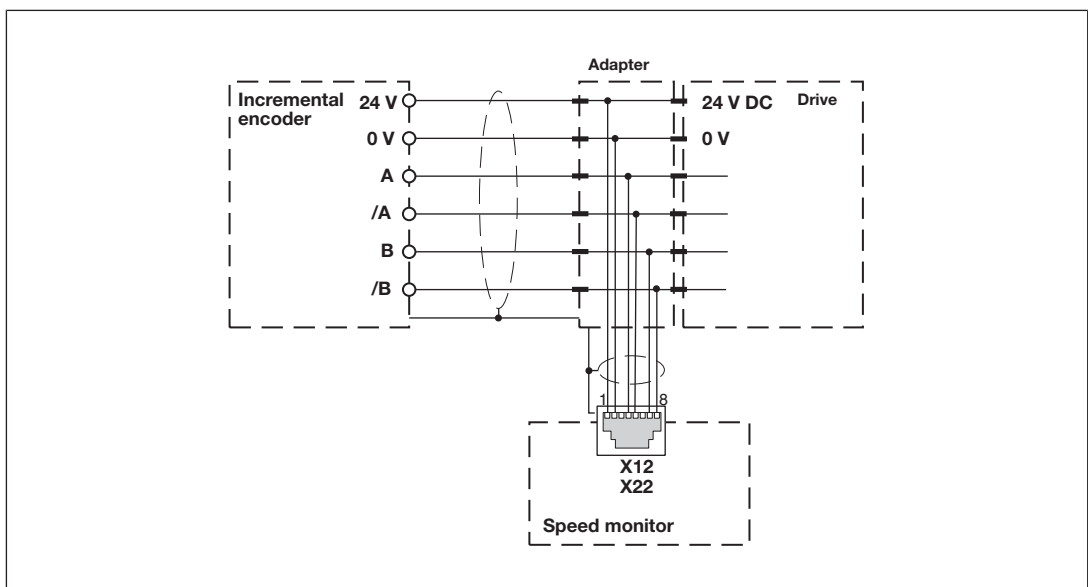


Fig.: Connection via adapter and drive



## Speed monitors PNOZ ms2p HTL

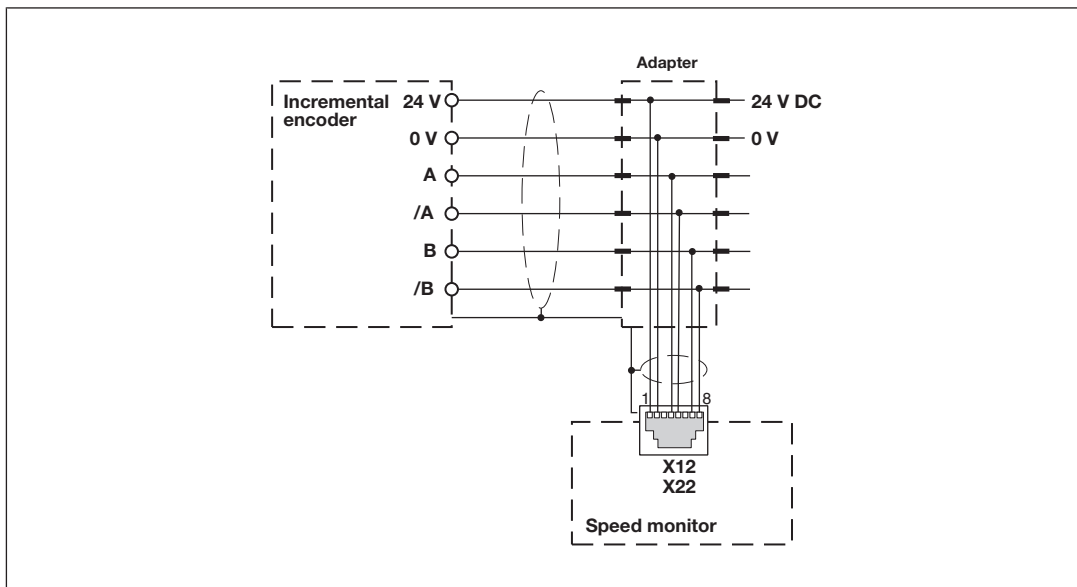


Fig.: Connection via adapter

### Connection of proximity switches and incremental encoder

#### Proximity switch and incremental encoder on various axes

Axis 1:

Proximity switch at I10, I11

or

incremental encoder at X12

Axis 2:

Proximity switch at I20, I21

or

incremental encoder at X22

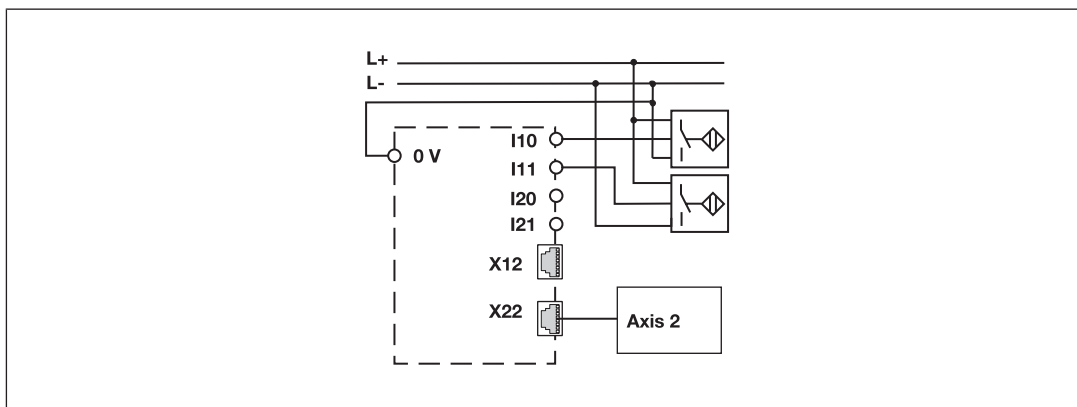


Fig.: Proximity switch and incremental encoder on various axes

## Speed monitors PNOZ ms2p HTL

### Proximity switch and incremental encoder on one axis

Axis 1:

Proximity switch at I10 (I11 is unused)

and

Incremental encoder at X12

Axis 2:

Proximity switch at I20 (I21 is unused)

and

Incremental encoder at X22

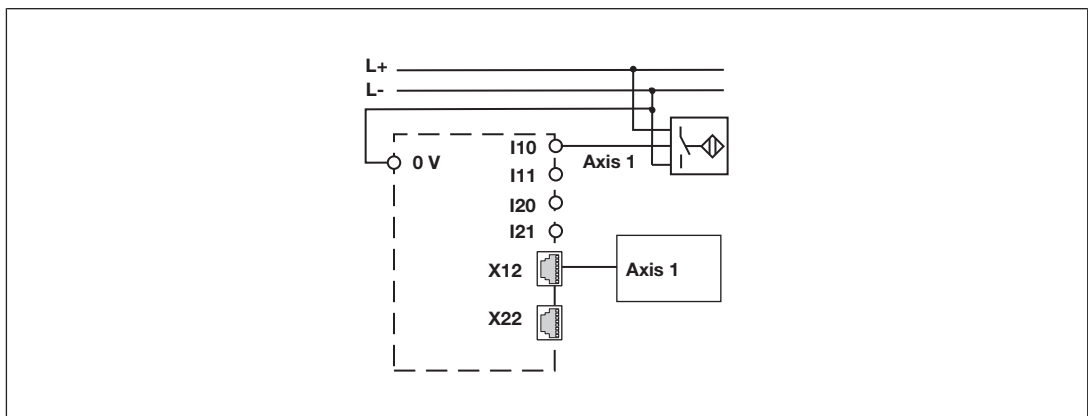


Fig.: Proximity switch and incremental encoder on one axis

## Speed monitors PNOZ ms2p HTL

### Connection examples

#### Connection of 2 proximity switches and an incremental encoder

##### Description

- ▶ 2 proximity switches, pnp-switching
- ▶ 1 incremental encoder

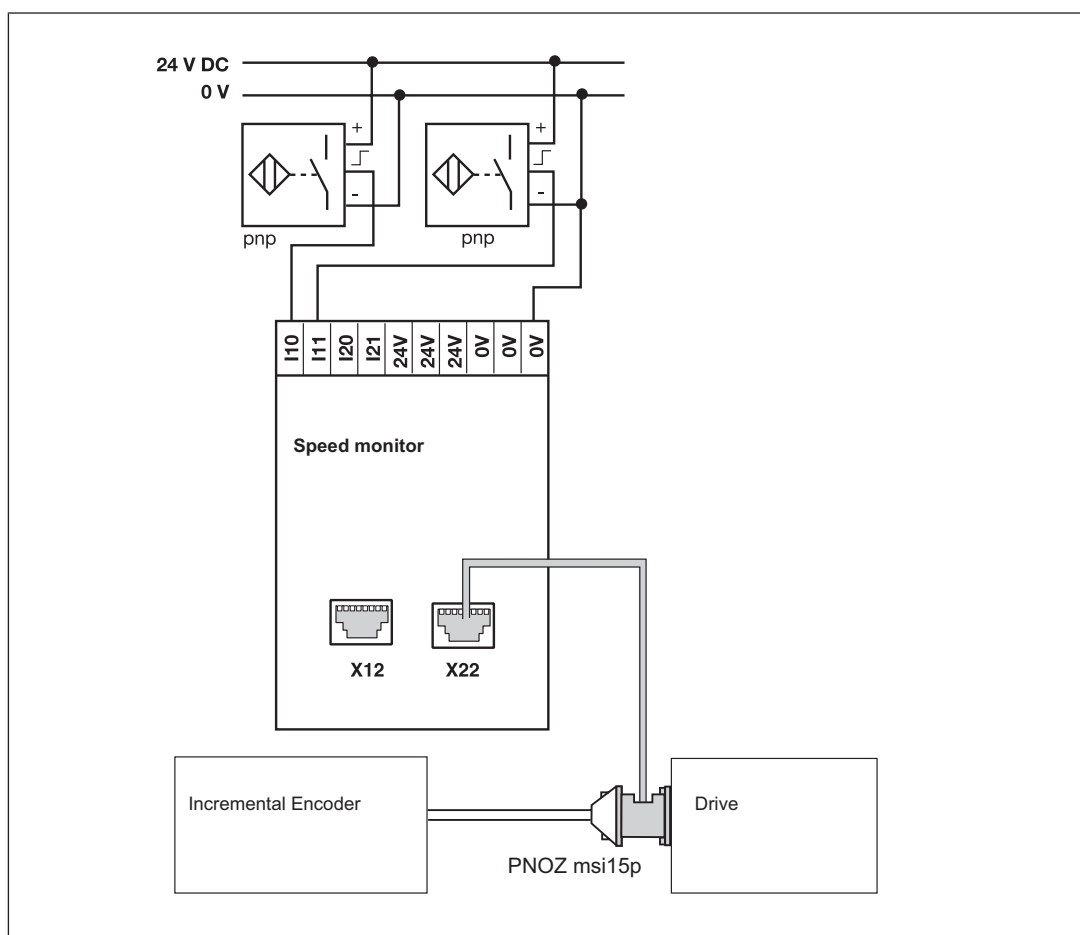


Fig.: Connection of 2 proximity switches, pnp-switching, one incremental encoder

## Speed monitors PNOZ ms2p HTL

### Connection of 4 proximity switches

#### Description

- ▶ 4 proximity switches, pnp-switching
- ▶ Connection through 24 V terminals and 0 V

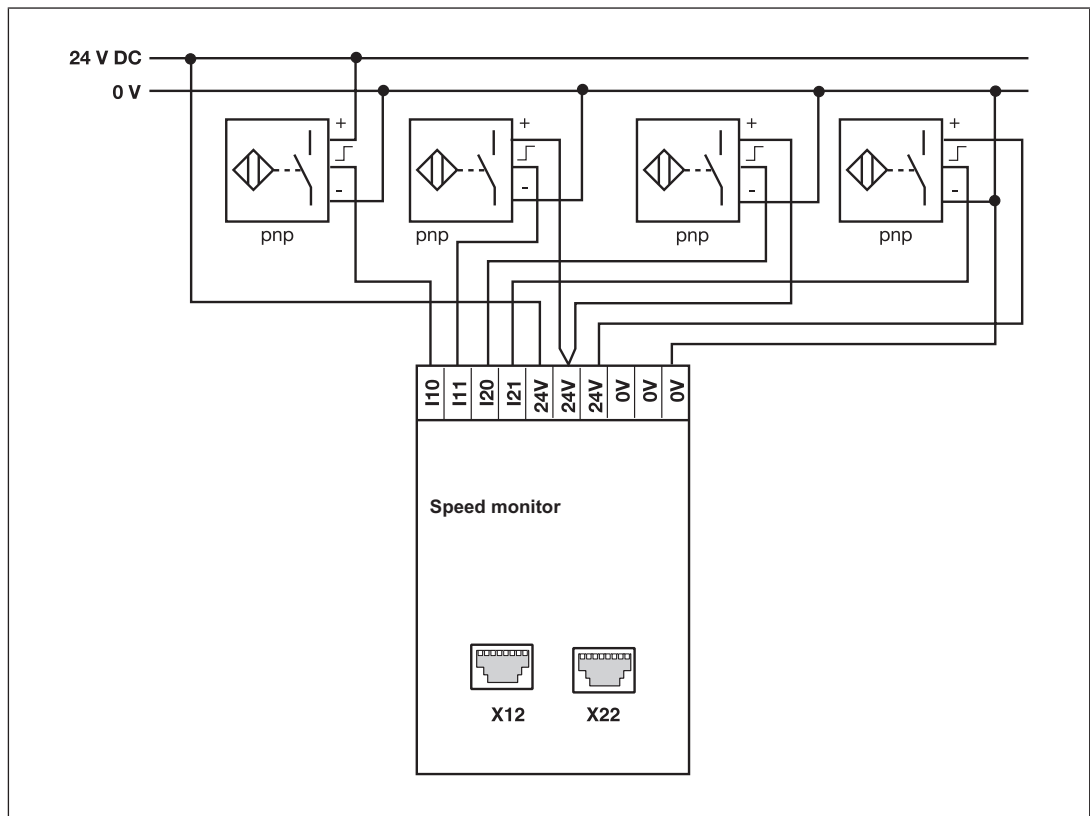


Fig.: Connection of 4 proximity switches, pnp-switching, connection through 24 V terminals and 0 V

## Speed monitors PNOZ ms2p HTL

### Connection of an incremental encoder and proximity switch on an axis

#### Description

- ▶ 1 proximity switch, pnp-switching
- ▶ 1 incremental encoder
- ▶ Incremental encoder and proximity switch on one axis

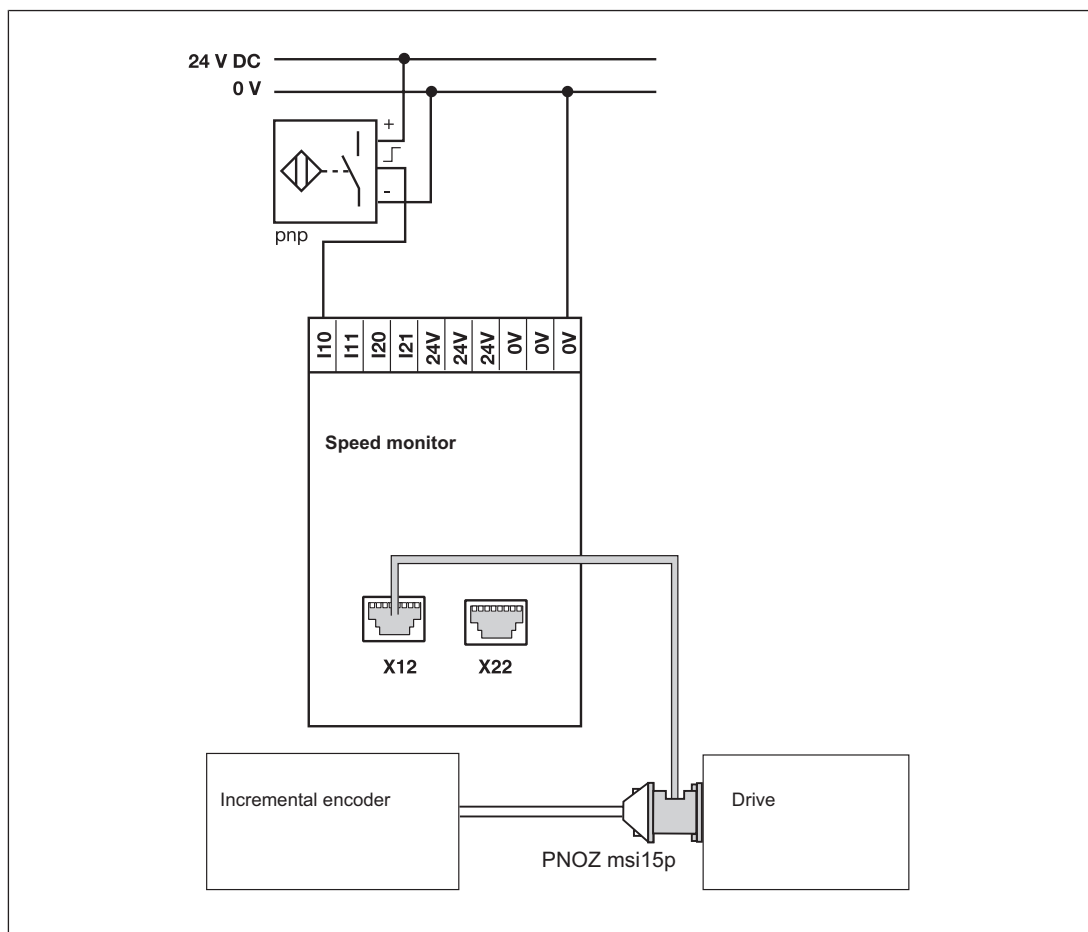


Fig.: Connection of an incremental encoder and proximity switch, pnp-switching, on an axis

## Speed monitors

### PNOZ ms2p HTL

#### Technical details

General	
Approvals	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
Electrical data	
Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>5,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>1,0 W</b>
Status indicator	<b>LED</b>
Proximity switch input	
Number of inputs	<b>4</b>
Input signal level	
Signal level at "1"	<b>11 - 30 V</b>
Signal level at "0"	<b>-3 - 5 V</b>
Input resistance	<b>3 kOhm</b>
Input's frequency range	<b>0 - 3 kHz</b>
Configurable monitoring frequency	
Without hysteresis	<b>0.1 Hz - 3 kHz</b>
With hysteresis	<b>0.2 Hz - 3 kHz</b>
Incremental encoder input	
Number of inputs	<b>2</b>
Connection type	<b>RJ45 female connector, 8-pin</b>
Input signal level	<b>12,0 - 30,0 Vss</b>
Phase position for the differential signals A, /A and B, /B	<b>90° ±30°</b>
Overload protection	<b>-30 - 30 V</b>
Input resistance	<b>10,0 kOhm</b>
Input's frequency range	<b>0 - 200 kHz</b>
Configurable monitoring frequency	
Without hysteresis	<b>0.1 Hz - 200 kHz</b>
With hysteresis	<b>0.2 Hz - 200 kHz</b>
Times	
Configurable switch-off delay	<b>0 - 2.500 ms</b>
Supply interruption before de-energisation	<b>20 ms</b>

## Speed monitors

### PNOZ ms2p HTL

<b>Times</b>	
Reaction time	
f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms</b>
f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms + 1/f</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

## Speed monitors PNOZ ms2p HTL

Mechanical data	
Material	
Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>1</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>
Dimensions	
Height	<b>94,0 mm</b>
Width	<b>45,0 mm</b>
Depth	<b>121,0 mm</b>
Weight	<b>220 g</b>

Where standards are undated, the 2009-06 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN IEC 62061 SIL CL	EN IEC 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
Initiator	<b>PL e</b>	<b>Cat. 3</b>	<b>SIL CL 3</b>	<b>3,68E-09</b>	<b>SIL 3</b>	<b>4,84E-05</b>	<b>20</b>
Incremental encoder	<b>PL e</b>	<b>Cat. 3</b>	<b>SIL CL 3</b>	<b>6,73E-09</b>	<b>SIL 3</b>	<b>8,18E-05</b>	<b>20</b>

All the units used within a safety function must be considered when calculating the safety characteristic data.



## Speed monitors PNOZ ms2p HTL

---

### Order reference

#### Product

Product type	Features	Order No.
PNOZ ms2p HTL	Expansion module, speed monitor	773 815

#### Accessories

##### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639


##### Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783 800
Set screw terminals	1 set of screw terminals	793 800

## Speed monitors PNOZ ms2p HTL

### Application Examples

#### Safe standstill monitoring

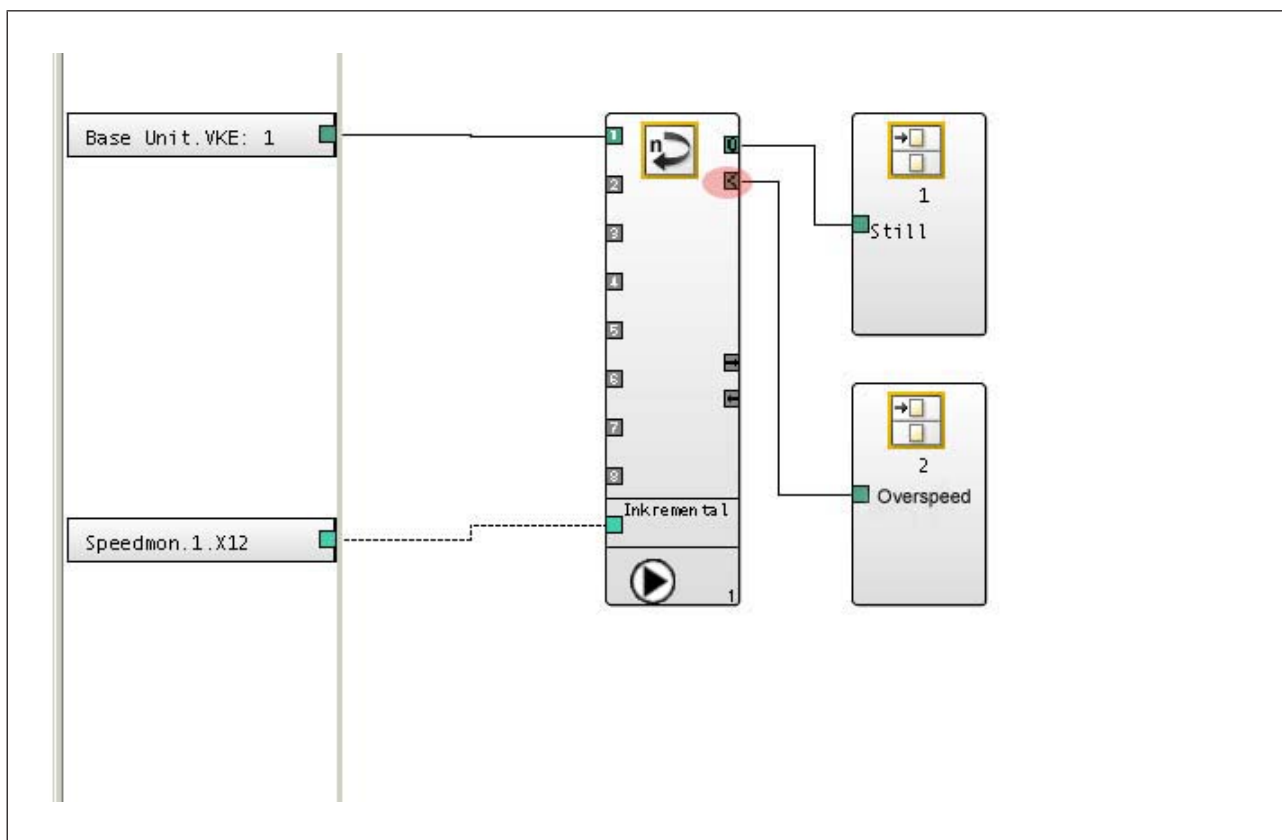

Configuration in the PNOZmulti Configurator


- ▶ Standstill: depending on requirement
- ▶ Speed n1: greater than the maximum permitted speed.

If the "Overspeed" output (see red marking) = "0", either the maximum permitted speed has been exceeded or the speed monitor has recognised a fault.

"Overspeed" output = "0" must lead to the shutdown of the relevant axis.

## Speed monitors PNOZ ms2p HTL

### Safe monitoring with "reduced speed" operating mode

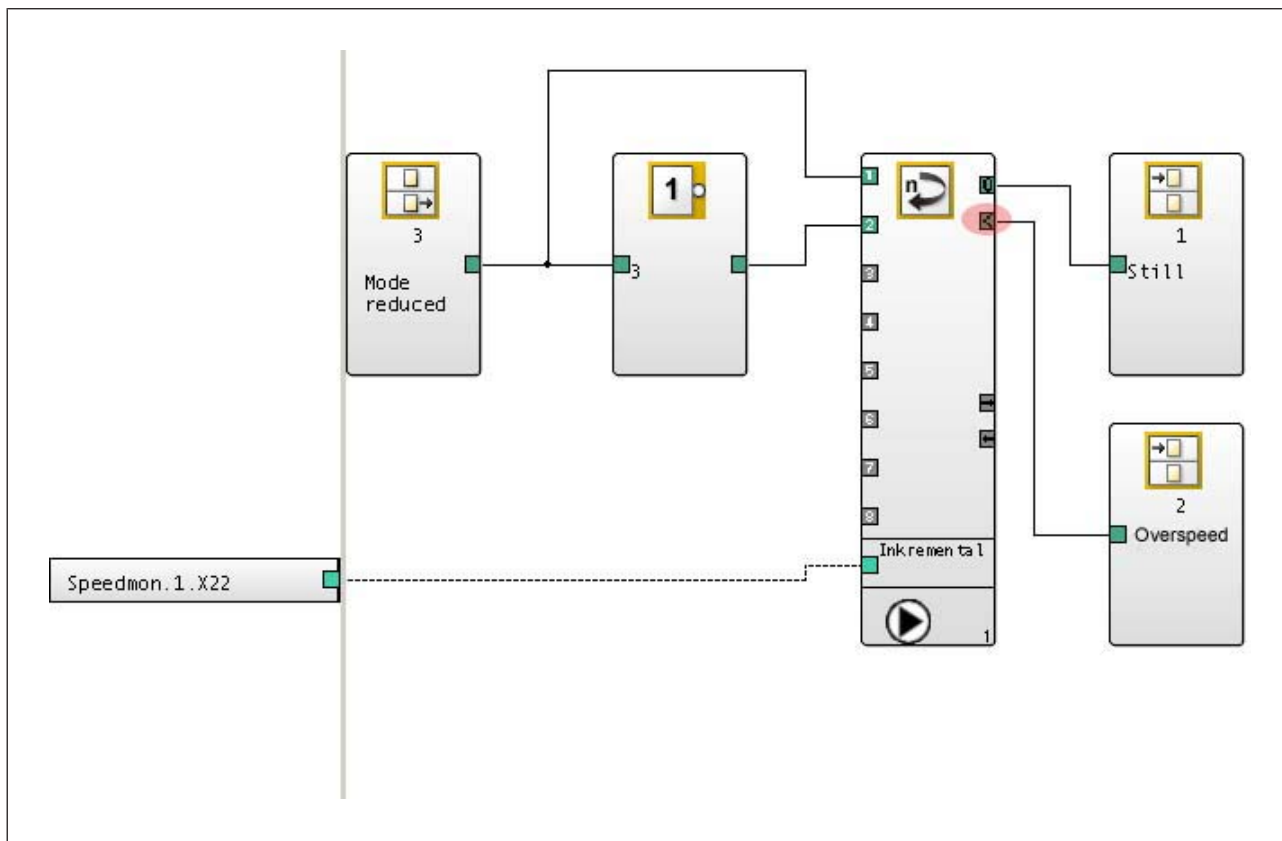

#### Configuration in the PNOZmulti Configurator

- ▶ Standstill: depending on requirement
- ▶ Speed n1: reduced speed, depending on requirement
- ▶ Speed n2: greater than the maximum permitted speed.

If the "Overspeed" output (see red marking) = "0", either the maximum permitted speed has been exceeded or the speed monitor has recognised a fault.

"Overspeed" output = "0" must lead to the shutdown of the relevant axis, irrespective of whether the "reduced speed" operating mode is active.

## Speed monitors

### PNOZ ms2p TTL (Coated Version)



## Overview

### Unit features

Using the product PNOZ ms2p TTL (Coated Version):

Speed monitor for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:


- ▶ Monitoring of 2 independent axes
- ▶ Connection per axis
  - 1 incremental encoder  
or
  - 2 proximity switches  
or
  - 1 incremental encoder and 1 proximity switch
- ▶ Measured variables:
  - Standstill
  - Speed (8 values can be set)
  - Direction of rotation
- ▶ Axis types, input device types and start mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
  - Supply voltage
  - Incremental encoder
  - Proximity switch
  - Axis status, standstill and excess speed
  - Faults on the system
- ▶ Proximity switch connection technology: Plug-in connection terminals (either cage clamp terminal or screw terminal)

## Speed monitors

### PNOZ ms2p TTL (Coated Version)

- ▶ Incremental encoder connection technology:  
RJ45 female connector
- ▶ Galvanic isolation between the connections X1, X12 and X22
- ▶ Max. 4 speed monitors can be connected to the base unit
- ▶ Coated version:  
Increased environmental requirements (see [Technical details \[323\]](#))

#### Front view

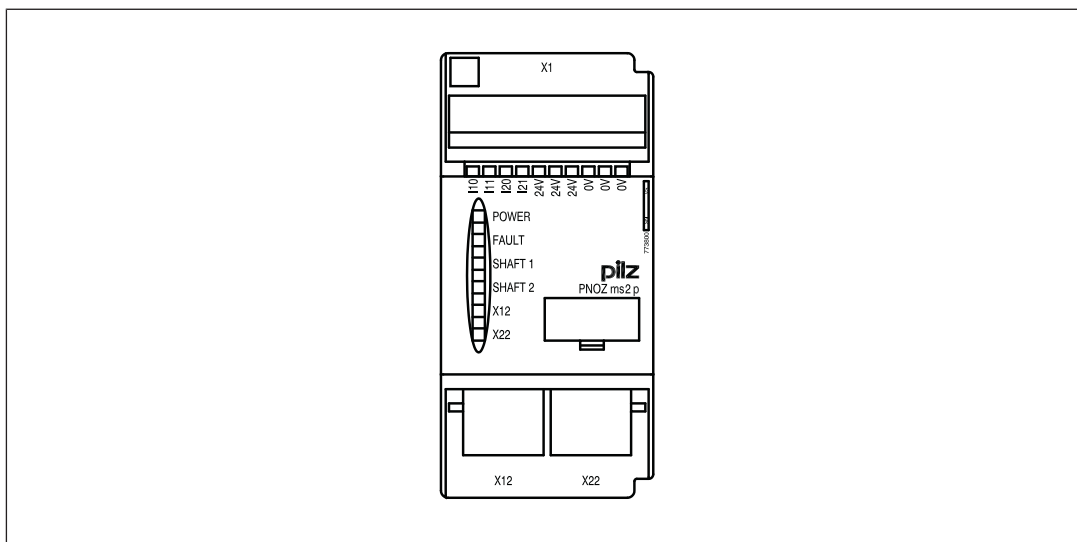

#### Key:

- ▶ X1:
  - I10, I11:  
connection terminals for proximity switch at axis 1
  - I20, I21:  
connection terminals for proximity switch at axis 2
  - 0 V, 24 V:  
supply connections
- ▶ X12:
  - female connector for the connection of an incremental encoder at axis 1
- ▶ X22:
  - female connector for the connection of an incremental encoder at axis 2
- ▶ LEDs:
  - POWER
  - FAULT
  - SHAFT 1

## Speed monitors PNOZ ms2p TTL (Coated Version)

- SHAFT 2
- X12
- X22


### Function description

#### Operation

The speed monitor can independently monitor two axes for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the safety circuit loaded, the values can be transferred from the base unit, e.g. to a relay output on the safety system. Incremental encoders and/or proximity detectors can be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.

#### Block diagram

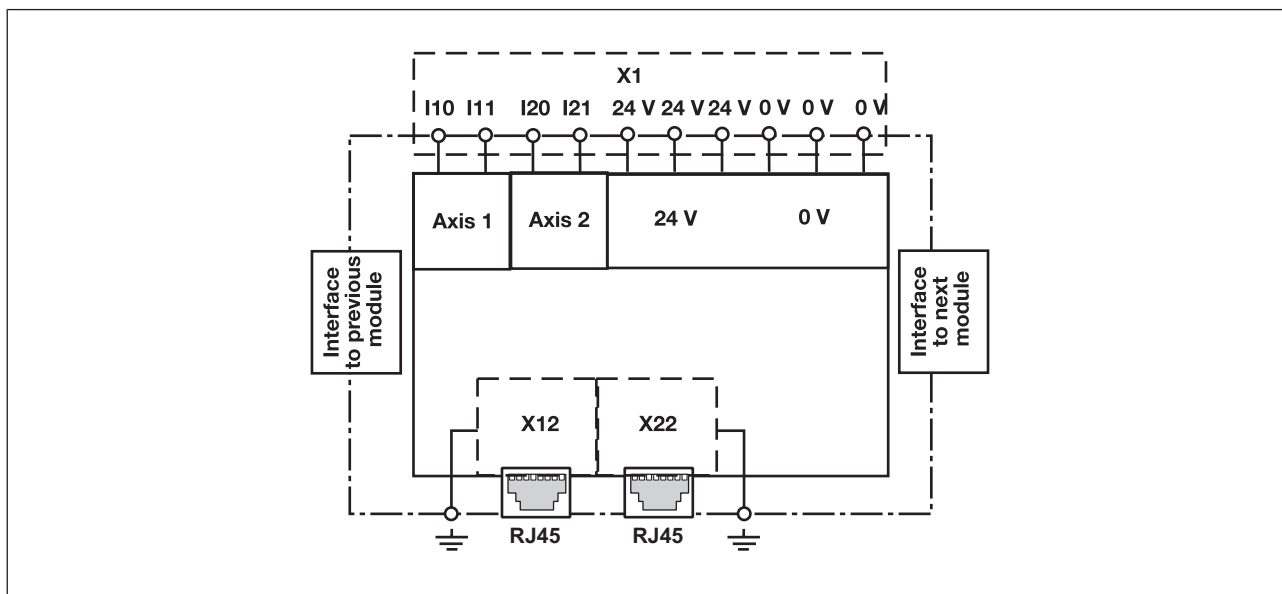

#### Input device types

##### Proximity switch

##### Requirements of the proximity switches

- ▶ Only "pnp" type proximity switches may be used (N/O contact, switching to positive).
- ▶ The proximity switches require a 24 VDC supply.

## Speed monitors

### PNOZ ms2p TTL (Coated Version)

- ▶ The proximity switches must be fitted so that at least one is always activated (carries a high signal).
- ▶ The proximity switches must be fitted so that the recorded signals overlap.
- ▶ When monitoring with proximity switches we recommend you use proximity switches with hysteresis in order to prevent bounce and therefore incorrect measurements.

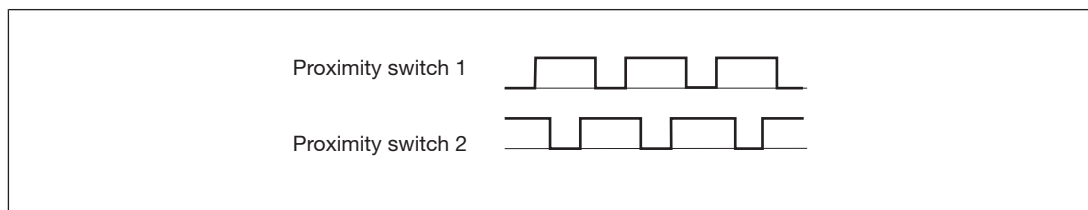


Fig.: Example proximity switch signal behaviour

- ▶ Please note the values stated in the technical details

#### Incremental encoders

##### Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
  - Sin/Cos
  - TTL (RS422)
- ▶ Please note the values stated in the technical details

##### Adapter for incremental encoders

The adapter records the data between the encoder and drive and makes it available to the PNOZ ms2p TTL (Coated Version) via the RJ45 socket.

Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

##### Incremental encoder and proximity switch on one axis

In order to increase the availability, a proximity switch and an incremental encoder can be configured on one axis for the speed monitor. The speed monitor then monitors 3 signals on an axis: Track A and track B of the incremental encoder and the proximity switch

##### Standstill monitoring

Standstill is detected when at least two of these signals fall below the standstill frequency.

## Speed monitors

### PNOZ ms2p TTL (Coated Version)

#### Monitoring for broken shearpins

If the Broken shearpin monitoring option is activated, a shearpin break is recognised if


- ▶ both signals of the incremental encoder fall below the set standstill frequency (standstill)
- and
- ▶ the proximity switch exceeds the set standstill frequency (rotating shaft).

The recognised broken shearpin leads to safe condition (see status B2 in "Signal statuses" table in Chapter 8 of the operating manual). If individual or multiple signals change, the system may leave a safe state (see "Signal statuses" table).

Hazards that can arise through an automatic restart must be excluded from the user program.

## Installation

### Dimensions

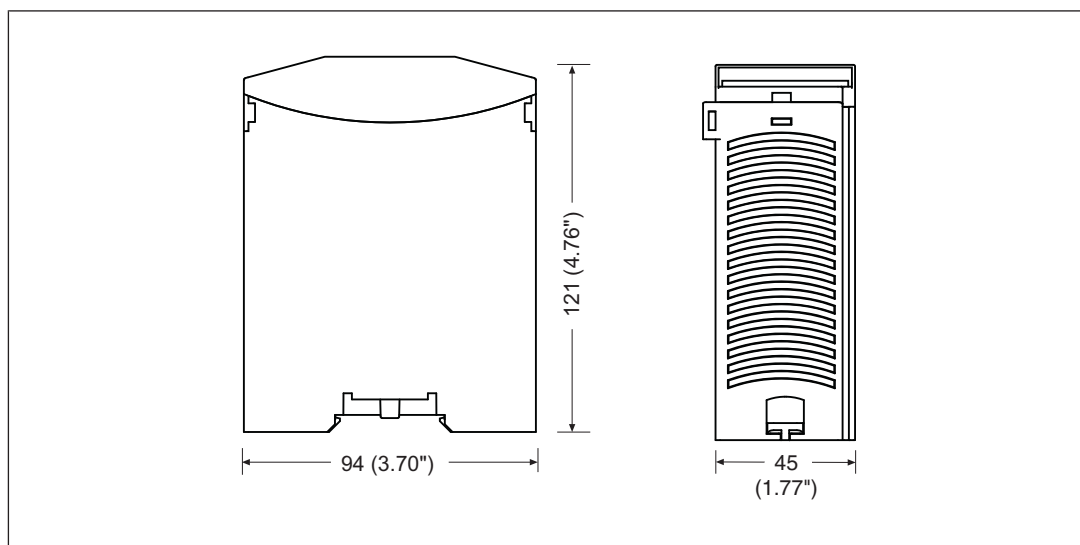

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[323\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.




## Speed monitors PNOZ ms2p TTL (Coated Version)

On each of the 2 axes you can connect as required:

- ▶ 1 incremental encoder  
or
- ▶ 2 proximity switches  
or
- ▶ 1 incremental encoder and 1 proximity switch

	Incremental encoder	Proximity switch
Connection axis 1	X12	-
	-	I10, I11, 0 V
	X12	I10, 0 V
Connection axis 2	X22	-
	-	I20, I21, 0 V
	X22	I20, 0 V

### Pin assignment of RJ45 socket

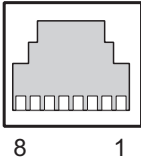RJ45 socket 8-pin	PIN	Track
	1	n.c.
	2	0 V
	3	n.c.
	4	A
	5	/A
	6	n.c.
	7	B
	8	/B

### Connection of proximity switches


Proceed as follows when connecting proximity switches:

- ▶ Terminals I10 and I11: connect the proximity switch for axis 1
- ▶ Terminals I20 and I21: connect the proximity switch for axis 2.
- ▶ If only one axis is to be monitored, either terminals I10 and I11 or terminals I20 and I21 will remain free.
- ▶ When connecting incremental encoders and proximity switches on one axis:
  - Terminals I10: connect proximity switch for axis 1 (I11 is not used)
  - Terminals I20: connect proximity switch for axis 2 (I21 is not used)

## Speed monitors

### PNOZ ms2p TTL (Coated Version)

- ▶ The proximity switch must always be connected to a 0 V terminal of the speed monitor. The 0 V terminals are connected internally.
- ▶ Connect proximity switch to 24 VDC of the power supply or the speed monitor (the 24 V terminals of the speed monitor are connected internally)

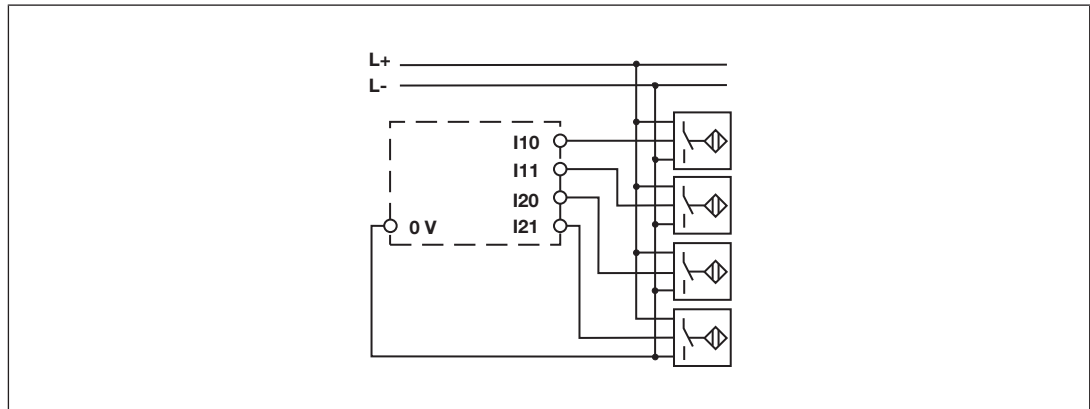

### Connection of the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors axis 1; the incremental encoder on connector X22 monitors axis 2.
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

### Connect signals of the incremental encoder to the speed monitor

Encoder types: 1 Vss, 5 V-TTL

- ▶ Apply 5 VDC to incremental encoder only
- ▶ Terminate incremental encoder with  $Z_0 = 120 \text{ Ohm}$

## Speed monitors PNOZ ms2p TTL (Coated Version)

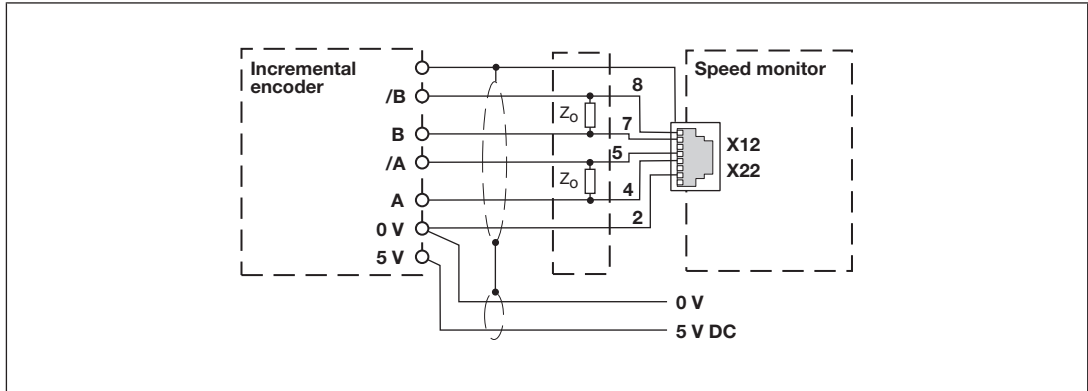


Fig.: Connection to incremental encoder type 1 Vss, 5 V-TTL

### Connect incremental encoder to the speed monitor via an adapter

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the female RJ45 connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive. The signal lines can then be terminated directly at the adapter with  $Z_0 = 120 \text{ Ohm}$ .
- ▶ If the signal lines in the drive are already terminated with  $Z_0 = 120 \text{ Ohm}$ , the incremental encoder may no longer be terminated.
- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under "Connect incremental encoder signals to the speed monitor" and in the adapter operating manual must be observed when connecting the supply voltage.
- ▶ Supply only incremental encoder with 5 VDC.

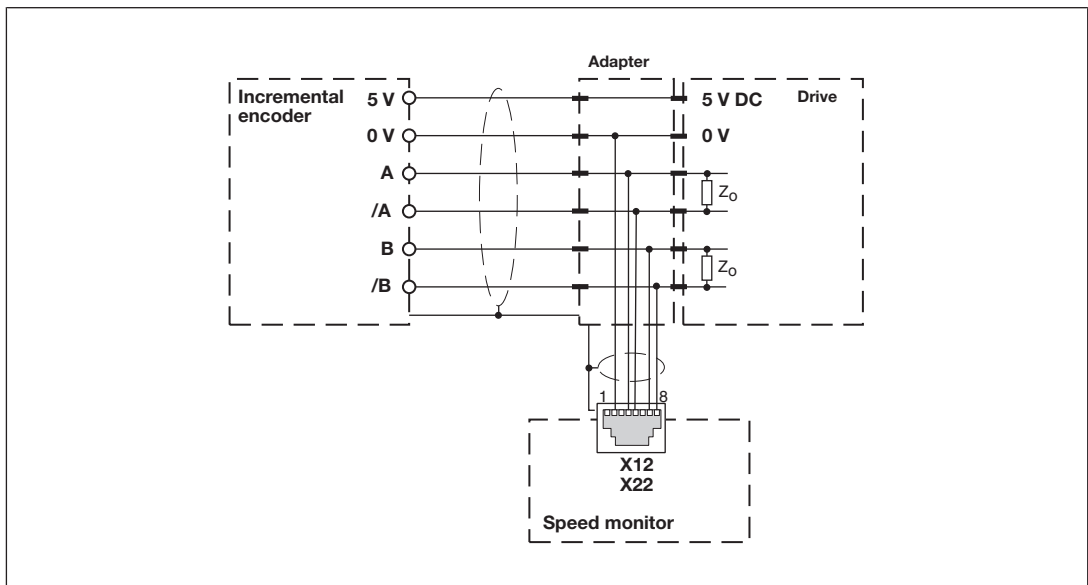


Fig.: Connection via adapter and drive

## Speed monitors

### PNOZ ms2p TTL (Coated Version)

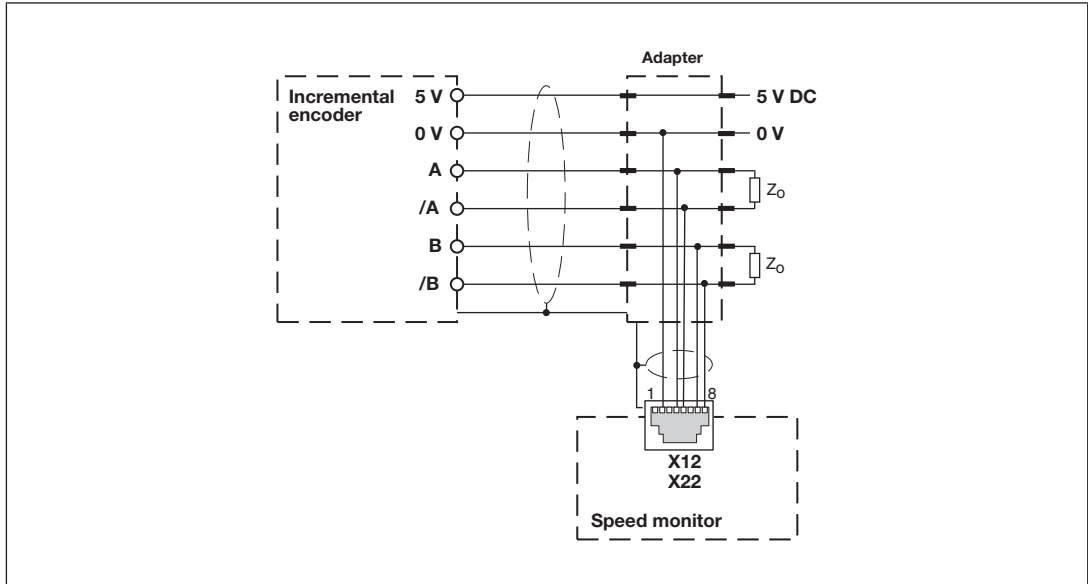


Fig.: Connection via adapter

## Connection of proximity switches and incremental encoder

### Proximity switch and incremental encoder on various axes

Axis 1:

Proximity switch at I10, I11

or

incremental encoder at X12

Axis 2:

Proximity switch at I20, I21

or

incremental encoder at X22

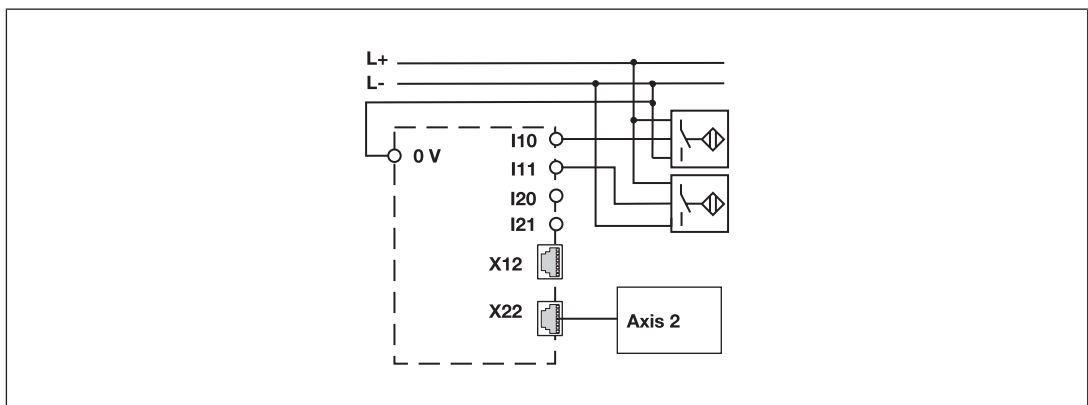


Fig.: Proximity switch and incremental encoder on various axes

## Speed monitors PNOZ ms2p TTL (Coated Version)

### Proximity switch and incremental encoder on one axis

Axis 1:  
Proximity switch at I10 (I11 is unused)  
and  
Incremental encoder at X12  
Axis 2:  
Proximity switch at I20 (I21 is unused)  
and  
Incremental encoder at X22

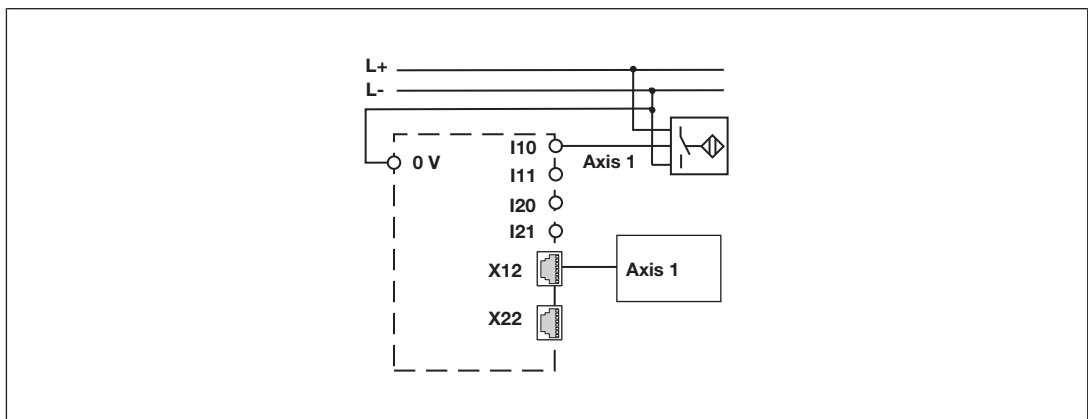


Fig.: Proximity switch and incremental encoder on one axis

## Speed monitors PNOZ ms2p TTL (Coated Version)

### Connection examples

#### Connection of 2 proximity switches and an incremental encoder

##### Description

- ▶ 2 proximity switches, pnp-switching
- ▶ 1 incremental encoder

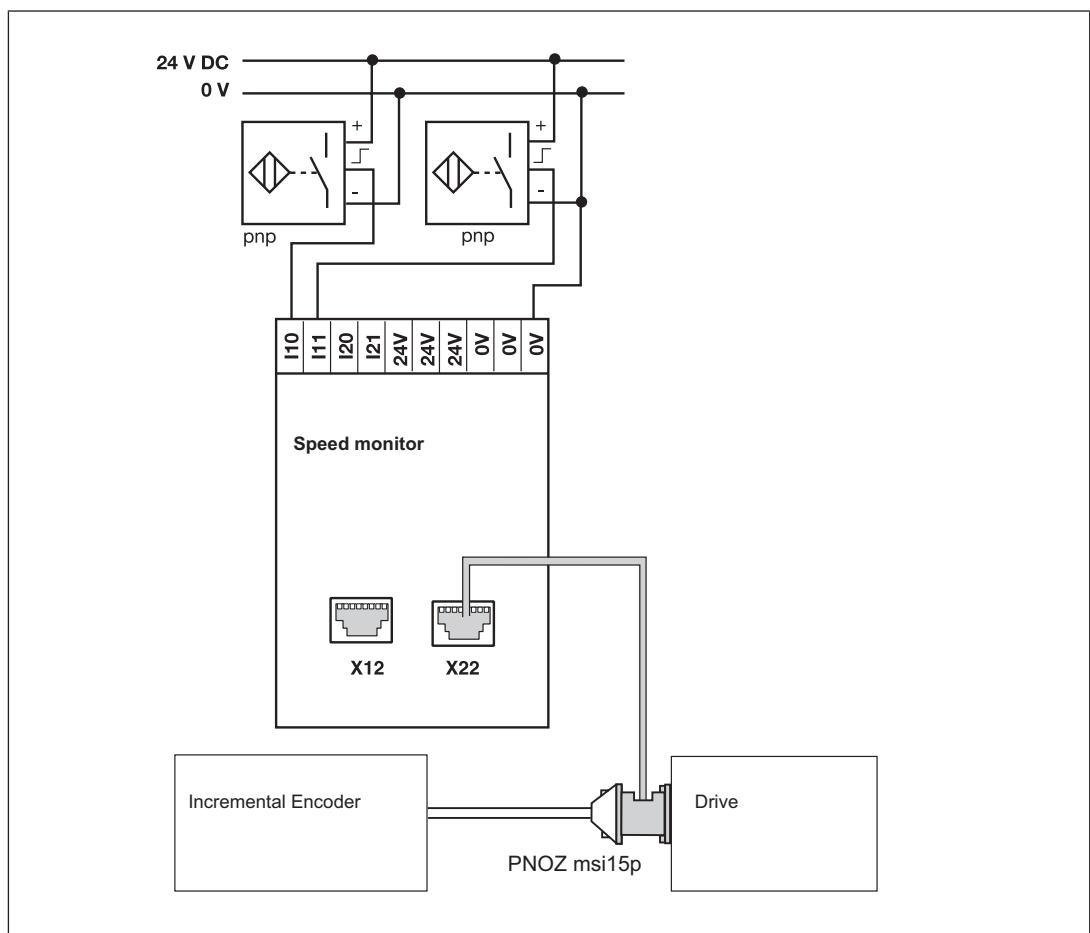


Fig.: Connection of 2 proximity switches, pnp-switching, one incremental encoder

## Speed monitors PNOZ ms2p TTL (Coated Version)

### Connection of 4 proximity switches

#### Description

- ▶ 4 proximity switches, pnp-switching
- ▶ Connection through 24 V terminals and 0 V

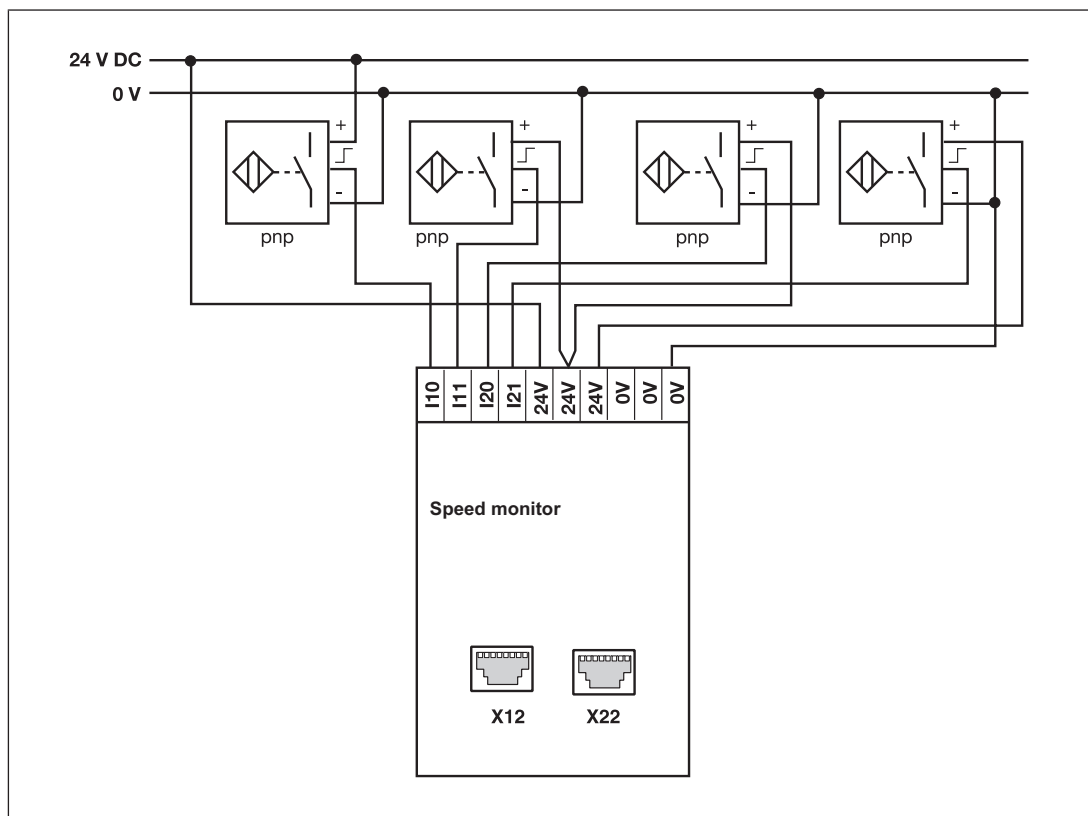


Fig.: Connection of 4 proximity switches, pnp-switching, connection through 24 V terminals and 0 V

## Speed monitors PNOZ ms2p TTL (Coated Version)

### Connection of an incremental encoder and proximity switch on an axis

#### Description

- ▶ 1 proximity switch, pnp-switching
- ▶ 1 incremental encoder
- ▶ Incremental encoder and proximity switch on one axis

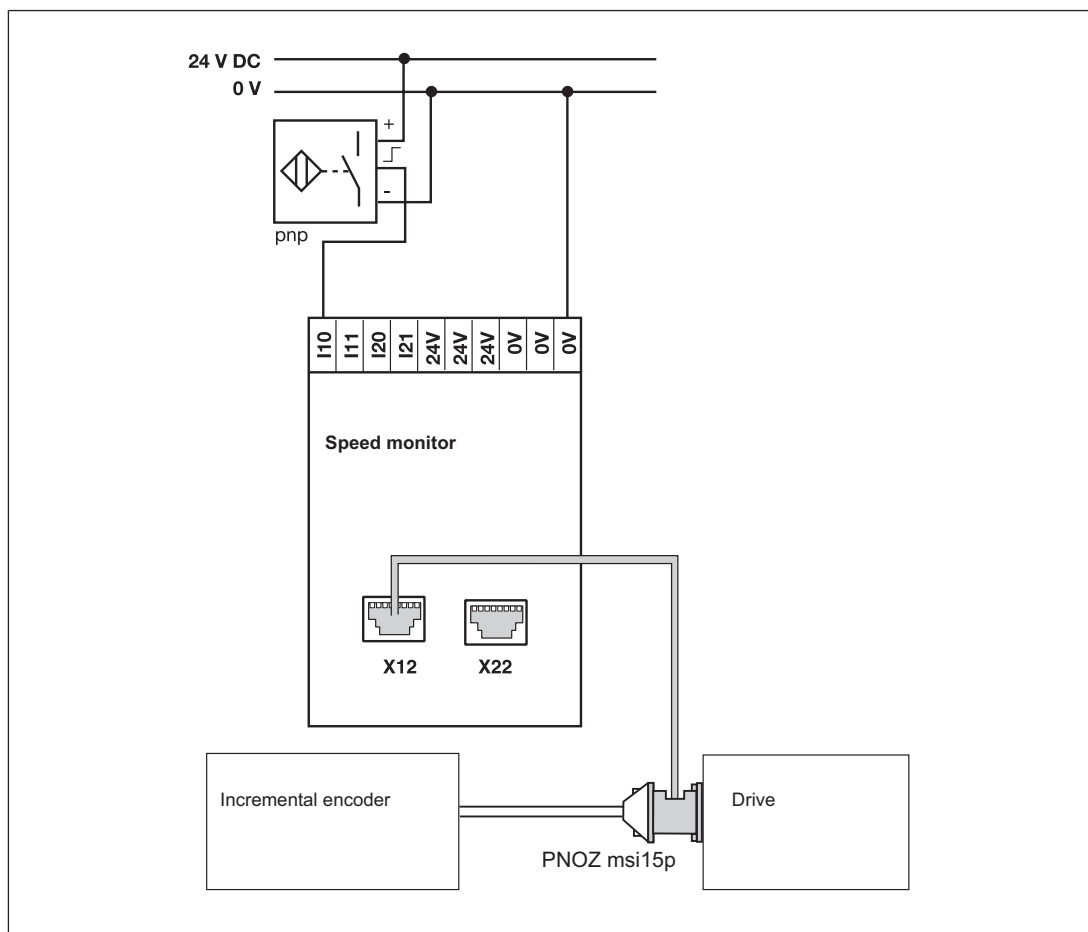


Fig.: Connection of an incremental encoder and proximity switch, pnp-switching, on an axis



**Speed monitors****PNOZ ms2p TTL (Coated Version)****Technical details**

<b>General</b>	<b>773811</b>	<b>773816</b>
Approvals	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
<b>Electrical data</b>	<b>773811</b>	<b>773816</b>
Supply voltage		
for	<b>Module supply</b>	<b>Module supply</b>
internal	<b>Via base unit</b>	<b>Via base unit</b>
Voltage	<b>5,0 V</b>	<b>5,0 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>	<b>-2 %/+2 %</b>
Power consumption	<b>1,0 W</b>	<b>1,0 W</b>
Status indicator	<b>LED</b>	<b>LED</b>
<b>Proximity switch input</b>	<b>773811</b>	<b>773816</b>
Number of inputs	<b>4</b>	<b>4</b>
Input signal level		
Signal level at "1"	<b>11 - 30 V</b>	<b>11 - 30 V</b>
Signal level at "0"	<b>-3 - 5 V</b>	<b>-3 - 5 V</b>
Input resistance	<b>3 kOhm</b>	<b>3 kOhm</b>
Input's frequency range	<b>0 - 3 kHz</b>	<b>0 - 3 kHz</b>
Configurable monitoring frequency		
Without hysteresis	<b>0.1 Hz - 3 kHz</b>	<b>0.1 Hz - 3 kHz</b>
With hysteresis	<b>0.2 Hz - 3 kHz</b>	<b>0.2 Hz - 3 kHz</b>
<b>Incremental encoder input</b>	<b>773811</b>	<b>773816</b>
Number of inputs	<b>2</b>	<b>2</b>
Connection type	<b>RJ45 female connector, 8-pin</b>	<b>RJ45 female connector, 8-pin</b>
Input signal level	<b>0,5 - 5,0 V<sub>ss</sub></b>	<b>0,5 - 5,0 V<sub>ss</sub></b>
Phase position for the differential signals A, /A and B, /B	<b>90° ±30°</b>	<b>90° ±30°</b>
Overload protection	<b>-30 - 30 V</b>	<b>-30 - 30 V</b>
Input resistance	<b>10,0 kOhm</b>	<b>10,0 kOhm</b>
Input's frequency range	<b>0 - 500 kHz</b>	<b>0 - 500 kHz</b>
Configurable monitoring frequency		
Without hysteresis	<b>0.1 Hz - 500 kHz</b>	<b>0.1 Hz - 500 kHz</b>
With hysteresis	<b>0.2 Hz - 500 kHz</b>	<b>0.2 Hz - 500 kHz</b>
<b>Times</b>	<b>773811</b>	<b>773816</b>
Configurable switch-off delay	<b>0 - 2.500 ms</b>	<b>0 - 2.500 ms</b>
Supply interruption before de-energisation	<b>20 ms</b>	<b>20 ms</b>

## Speed monitors PNOZ ms2p TTL (Coated Version)

Times	773811	773816
<b>Reaction time</b>		
f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms</b>	<b>10 ms</b>
f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms + 1/f</b>	<b>10 ms + 1/f</b>
<b>Environmental data</b>		
<b>Ambient temperature</b>		
In accordance with the standard	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>
Temperature range	<b>-25 - 60 °C</b>	<b>0 - 60 °C</b>
<b>Storage temperature</b>		
In accordance with the standard	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>	<b>-25 - 70 °C</b>
<b>Climatic suitability</b>		
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Short-term</b>	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>	<b>EN 61131-2</b>
<b>Vibration</b>		
In accordance with the standard	<b>EN 60068-2-6</b>	<b>EN 60068-2-6</b>
Frequency	<b>5,0 - 500,0 Hz</b>	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>	<b>1g</b>
<b>Broadband noise</b>		
In accordance with the standard	<b>EN 60068-2-64</b>	–
Frequency	<b>5 - 500 Hz</b>	–
Acceleration	<b>1,9grms</b>	–
<b>Shock stress</b>		
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>
<b>Airgap creepage</b>		
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>30 V</b>	<b>30 V</b>

**Speed monitors****PNOZ ms2p TTL (Coated Version)**

<b>Environmental data</b>	<b>773811</b>	<b>773816</b>
Protection type		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>
<b>Mechanical data</b>	<b>773811</b>	<b>773816</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>
DIN rail		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
Material		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals		
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>	<b>0,25 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>	<b>7 mm</b>
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>1</b>	<b>1</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>	<b>9 mm</b>
Dimensions		
Height	<b>94,0 mm</b>	<b>94,0 mm</b>
Width	<b>45,0 mm</b>	<b>45,0 mm</b>
Depth	<b>121,0 mm</b>	<b>121,0 mm</b>
Weight	<b>220 g</b>	<b>220 g</b>

Where standards are undated, the 2009-10 latest editions shall apply.

## Speed monitors PNOZ ms2p TTL (Coated Version)

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN IEC 62061 SIL CL	EN IEC 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
Initiator	PL e	Cat. 3	SIL CL 3	3,68E-09	SIL 3	4,84E-05	20
Incremental encoder	PL e	Cat. 3	SIL CL 3	6,73E-09	SIL 3	8,18E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

### Order reference

#### Product

Product type	Features	Order No.
PNOZ ms2p TTL	Expansion module, speed monitor	773 816
PNOZ ms2p TTL coated version	Expansion module, speed monitor, coated version	773 811

### Accessories

#### Terminator, jumper

Product type	Features	Order No.
PNOZmulti bus terminator	Terminator	779 110
PNOZmulti bus terminator coated	Terminator, coated version	779 112
KOP-XE	Jumper	774 639
KOP-XE coated	Jumper, coated version	774 640

#### Connection terminals


Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783 800
Set screw terminals	1 set of screw terminals	793 800

## Speed monitors

### PNOZ ms2p TTL (Coated Version)

#### Application Examples

##### Safe standstill monitoring

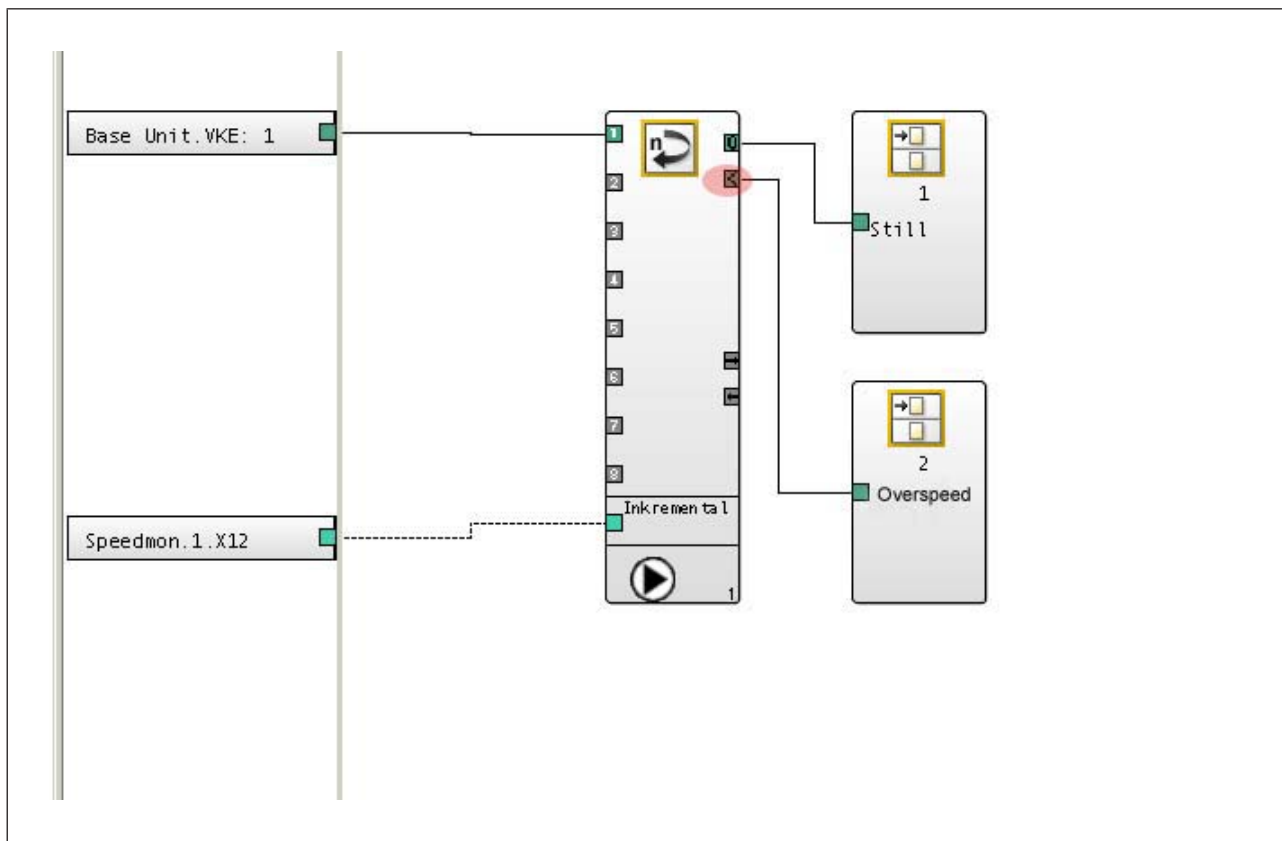

Configuration in the PNOZmulti Configurator

- ▶ Standstill: depending on requirement
- ▶ Speed n1: greater than the maximum permitted speed.


If the "Overspeed" output (see red marking) = "0", either the maximum permitted speed has been exceeded or the speed monitor has recognised a fault.

"Overspeed" output = "0" must lead to the shutdown of the relevant axis.

## Speed monitors

### PNOZ ms2p TTL (Coated Version)

#### Safe monitoring with "reduced speed" operating mode

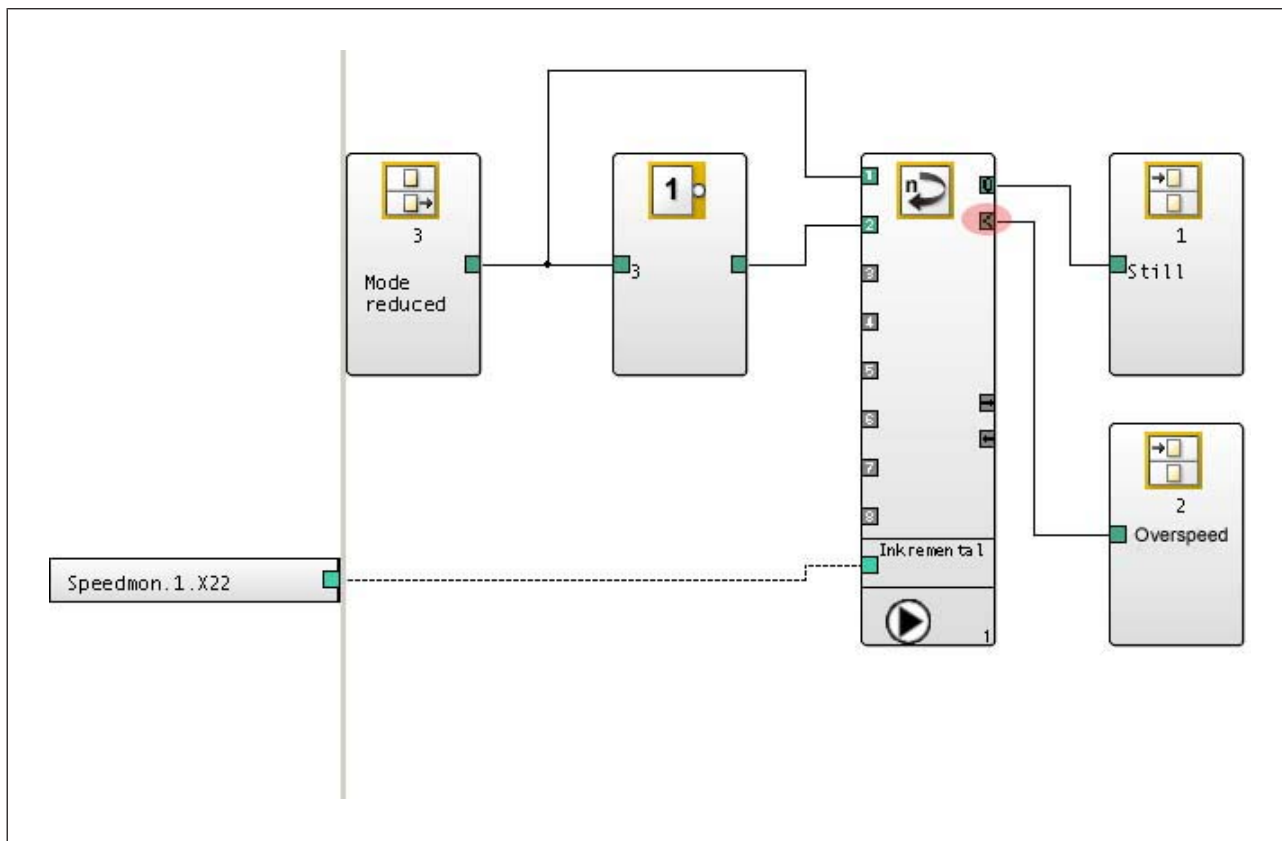

#### Configuration in the PNOZmulti Configurator

- ▶ Standstill: depending on requirement
- ▶ Speed n1: reduced speed, depending on requirement
- ▶ Speed n2: greater than the maximum permitted speed.

If the "Overspeed" output (see red marking) = "0", either the maximum permitted speed has been exceeded or the speed monitor has recognised a fault.

"Overspeed" output = "0" must lead to the shutdown of the relevant axis, irrespective of whether the "reduced speed" operating mode is active.

## Speed monitors PNOZ ms3p



### Overview

#### Unit features

Using the product PNOZ ms3p:

Speed monitor for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Monitoring of 2 independent axes
- ▶ Connection per axis
  - 1 incremental encoder
- ▶ Measured variables:
  - Standstill
  - Speed (8 values can be set)
  - Direction of rotation
- ▶ Axis types, start mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
  - Supply voltage
  - Incremental encoder
  - Axis status, standstill and excess speed
  - Faults on the system
- ▶ Incremental encoder connection technology: RJ45 female connector
- ▶ Function to deactivate speed monitoring
- ▶ Galvanic isolation between the connections X1, X12 and X22
- ▶ Max. 4 speed monitors can be connected to the base unit

## Speed monitors

### PNOZ ms3p

#### Front view

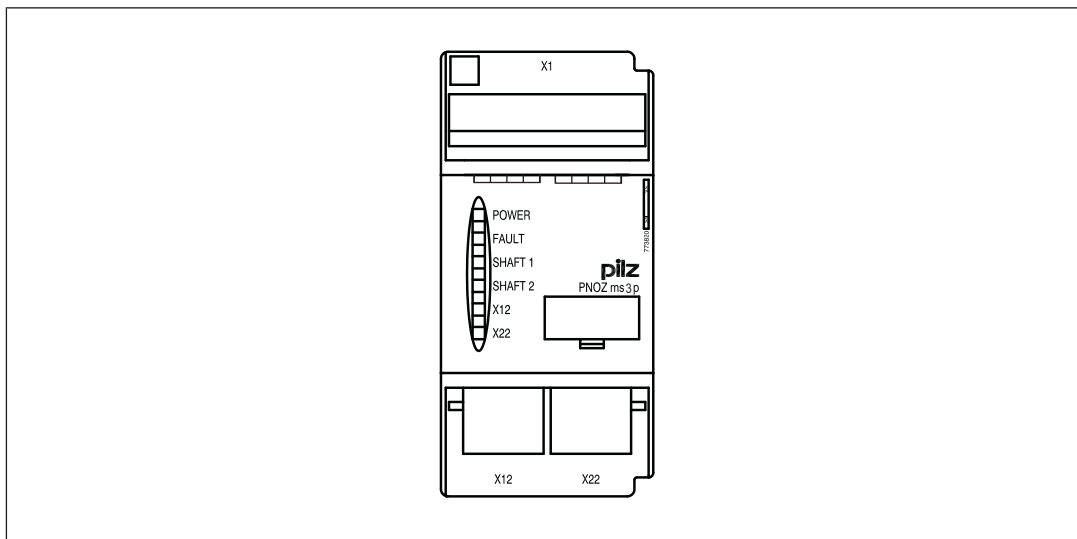

#### Key:

- ▶ X12:
  - Female connector for connecting an incremental encoder to axis 1
- ▶ X22:
  - Female connector for connecting an incremental encoder to axis 2
- ▶ LEDs:
  - POWER
  - FAULT
  - SHAFT 1
  - SHAFT 2
  - X12
  - X22

## Function description

### Operation


The speed monitor can independently monitor two axes for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the implemented safety circuit, the values may be transferred from the base unit to a relay output on the safety system, for example. Incremental encoders may be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.



## Speed monitors PNOZ ms3p

### Block diagram

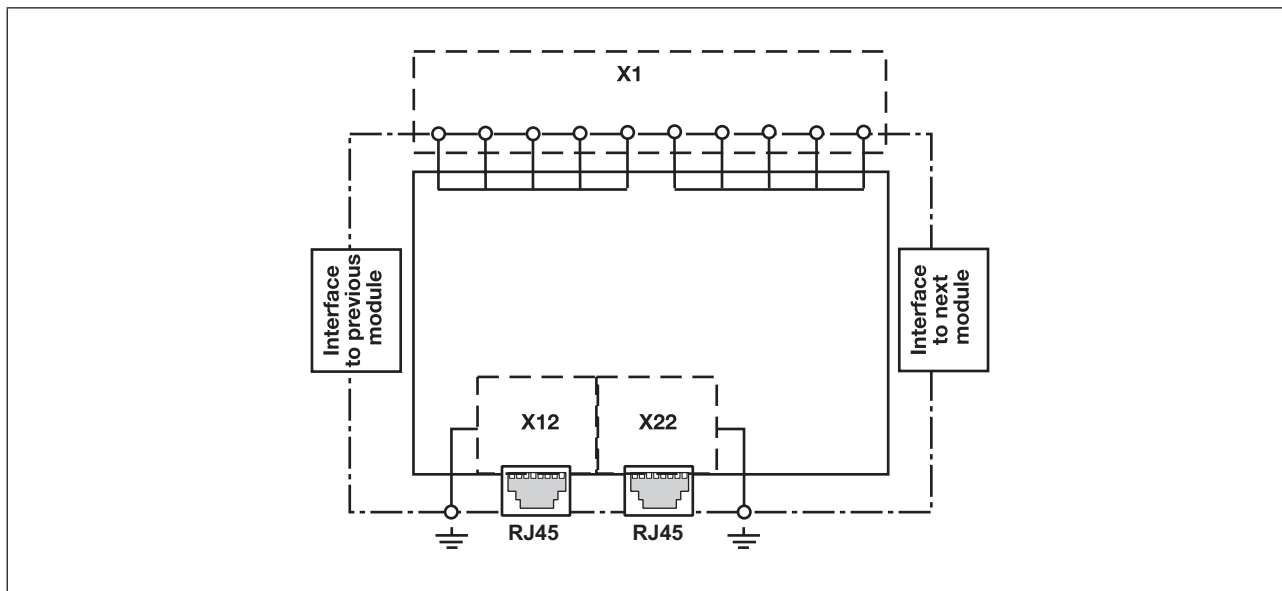

### Incremental encoders

#### Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
  - Sin/Cos
  - TTL (RS 422)
  - HTL (24 V)
- ▶ Please note the values stated in the technical details

#### Adapter for incremental encoders

The adapter records the data between the encoder and drive and makes it available to the PNOZ ms3p via the RJ45 socket.


Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

## Speed monitors

### PNOZ ms3p

## Installation

### Dimensions

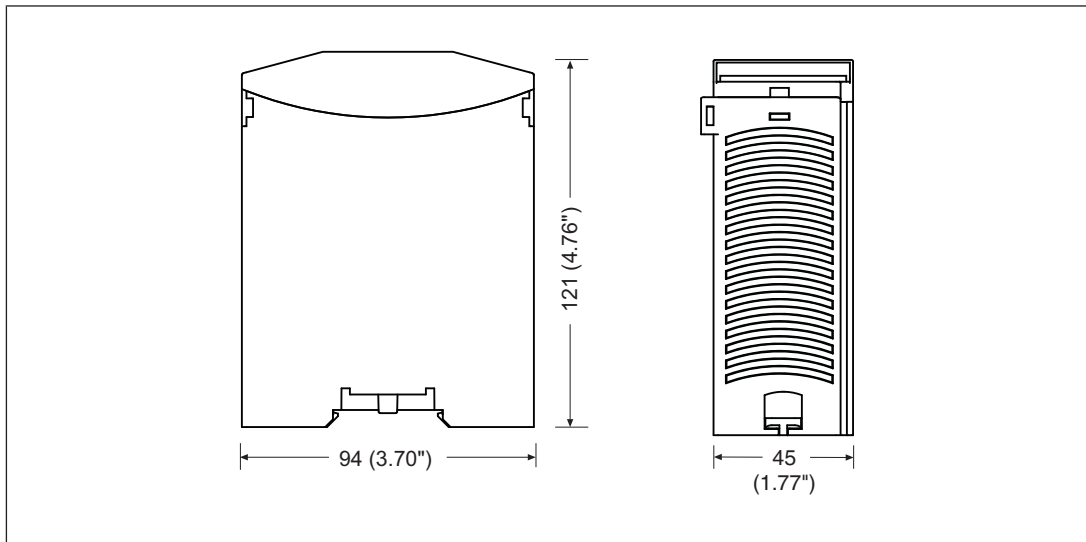

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[323\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

## Speed monitors PNOZ ms3p

### Pin assignment of RJ45 socket

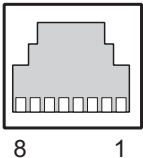RJ45 socket 8-pin	PIN	Track
	1	n.c.
	2	0 V
	3	n.c.
	4	A
	5	/A
	6	n.c.
	7	B
	8	/B

### Connecting the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors axis 1; the incremental encoder on connector X22 monitors axis 2.
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

### Connect the signals from the incremental encoder to the speed monitor

Encoder types: 1 Vss, 5 V-TTL

- ▶ Apply 5 VDC to incremental encoder only
- ▶ Do not terminate incremental encoder with  $Z_0 = 120 \text{ Ohm}$

**Speed monitors**  
PNOZ ms3p

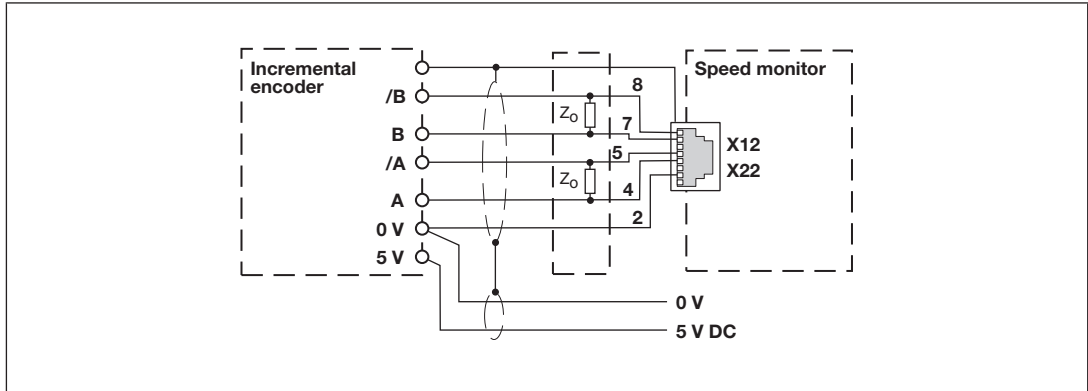


Fig.: Connection to incremental encoder type 1 Vss, 5 V-TTL

Encoder types: 24 V-HTL

- ▶ Apply 24 VDC supply voltage to incremental encoder only
- ▶ Do not terminate incremental encoder with  $Z_0 = 120 \text{ Ohm}$

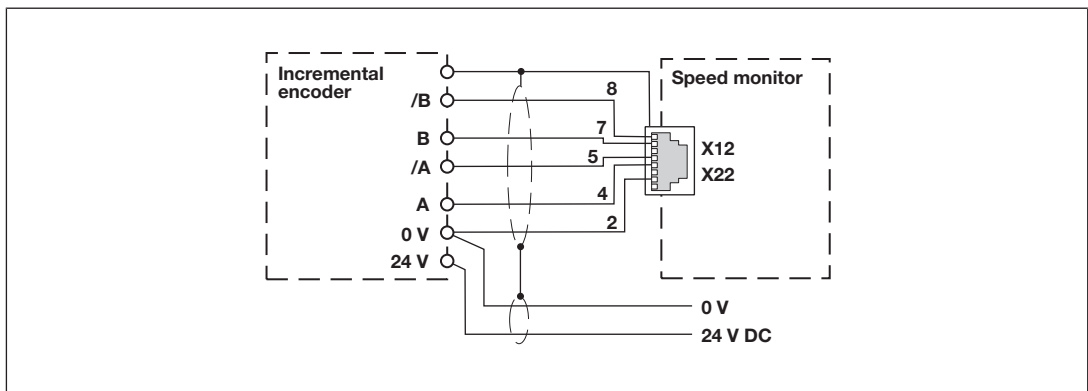


Fig.: Connection to incremental encoder type 24 V-HTL

**Connect the incremental encoder to the speed monitor via an adapter**

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the female RJ45 connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive. The signal lines can then be terminated directly at the adapter with  $Z_0 = 120 \text{ Ohm}$ .
- ▶ If the signal lines in the drive are already terminated with  $Z_0 = 120 \text{ Ohm}$ , the incremental encoder may no longer be terminated.
- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under "Connect incremental encoder signals to the speed monitor" and in the adapter operating manual must be observed when connecting the supply voltage.
- ▶ Supply only incremental encoder with 5 VDC. 24 V-HTL signals may not be terminated.

## Speed monitors PNOZ ms3p

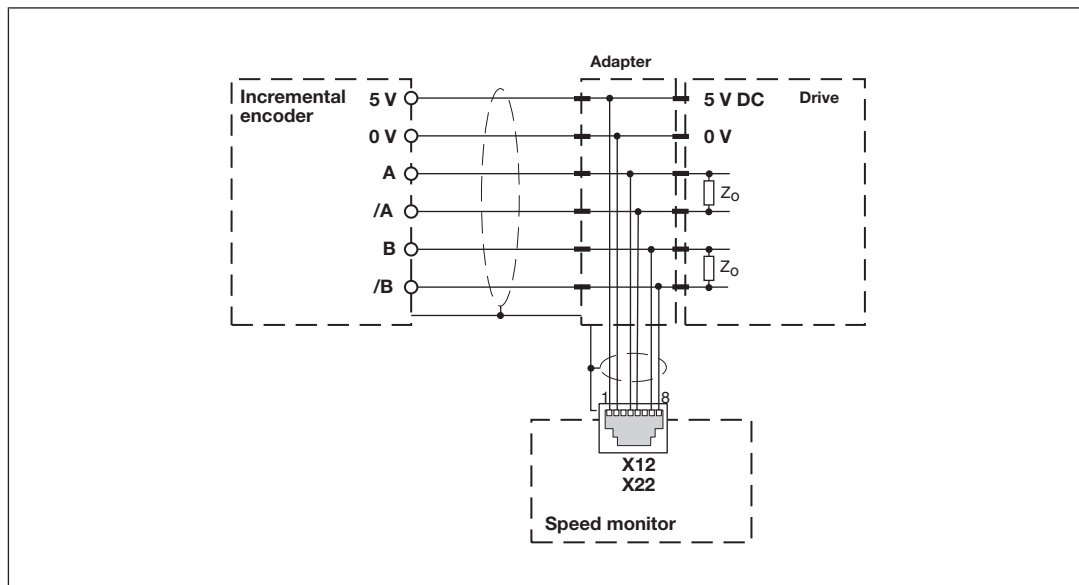


Fig.: Connection via adapter and drive

### Technical details

General	
Approvals	BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed
Electrical data	
Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>5,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>1,0 W</b>
Status indicator	<b>LED</b>
Incremental encoder input	
Number of inputs	<b>2</b>
Connection type	<b>RJ45 female connector, 8-pin</b>
Input signal level	<b>0,5 - 30,0 Vss</b>
Phase position for the differential signals A, /A and B, /B	<b>90° ±30°</b>
Overload protection	<b>-30 - 30 V</b>
Input resistance	<b>10,0 kOhm</b>
Input's frequency range	<b>0 - 500 kHz</b>
Configurable monitoring frequency	
Without hysteresis	<b>0.1 Hz - 500 kHz</b>
With hysteresis	<b>0.2 Hz - 500 kHz</b>

## Speed monitors PNOZ ms3p

<b>Times</b>	
Configurable switch-off delay	<b>0 - 2.500 ms</b>
Supply interruption before de-energisation	<b>20 ms</b>
Reaction time	
f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms</b>
f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms + 1/f</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>

## Speed monitors PNOZ ms3p

Mechanical data	
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PPO UL 94 V0
Front	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm
Stripping length with screw terminals	7 mm
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	94,0 mm
Width	45,0 mm
Depth	121,0 mm
Weight	211 g

Where standards are undated, the 2009-10 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008	EN ISO 13849-1: 2008	EN IEC 62061	EN IEC 62061	IEC 61511	IEC 61511	EN ISO 13849-1: 2008
	PL	Category	SIL CL	PFH <sub>D</sub> [1/h]	SIL	PFD	T <sub>M</sub> [year]
Incremental encoder	PL e	Cat. 3	SIL CL 3	6,36E-09	SIL 3	8,45E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

## Speed monitors

### PNOZ ms3p

#### Order reference

#### Product

Product type	Features	Order No.
PNOZ ms3p	Expansion module, speed monitor	773 820

#### Accessories

#### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639

#### Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783 800
Set screw terminals	1 set of screw terminals	793 800



## Speed monitors PNOZ ms3p

### Application examples

#### Examples without position control


##### Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", without position control

Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" must be evaluated in the user program during operation in such a way that a set bit leads to a safety-related error reaction (shutdown).

#### Example 1

Immediate shutdown as soon as diagnostic bit 10 is set.

The bit is evaluated as follows:

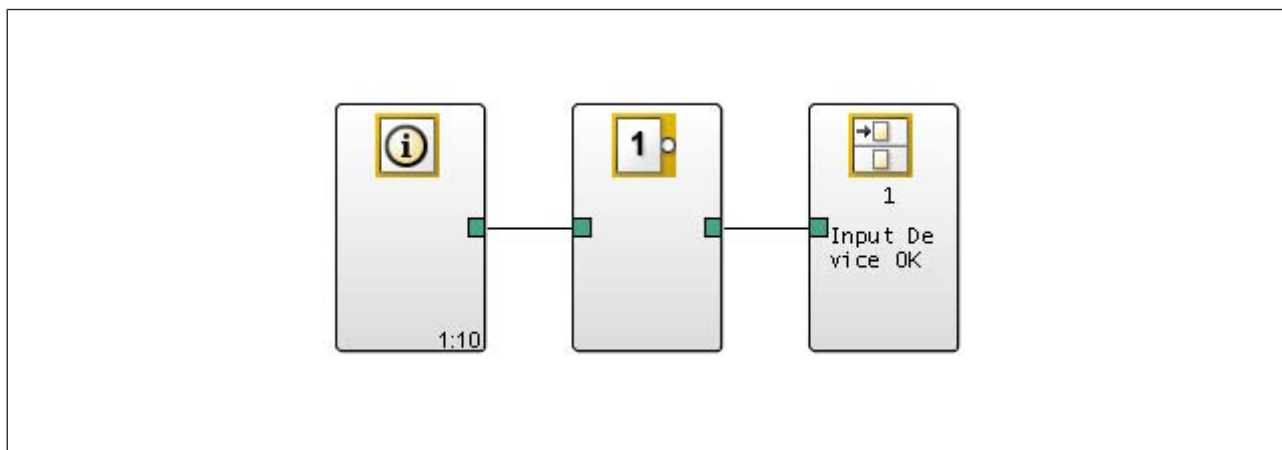


The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

## Speed monitors PNOZ ms3p

### Example 2

A set diagnostic bit 10 can be tolerated for a maximum of 4 hours (occurrence of second error). If no feasible signals above standstill frequency are measured within this time, a shut-down will occur.

In this case, the bit will be evaluated as follows:

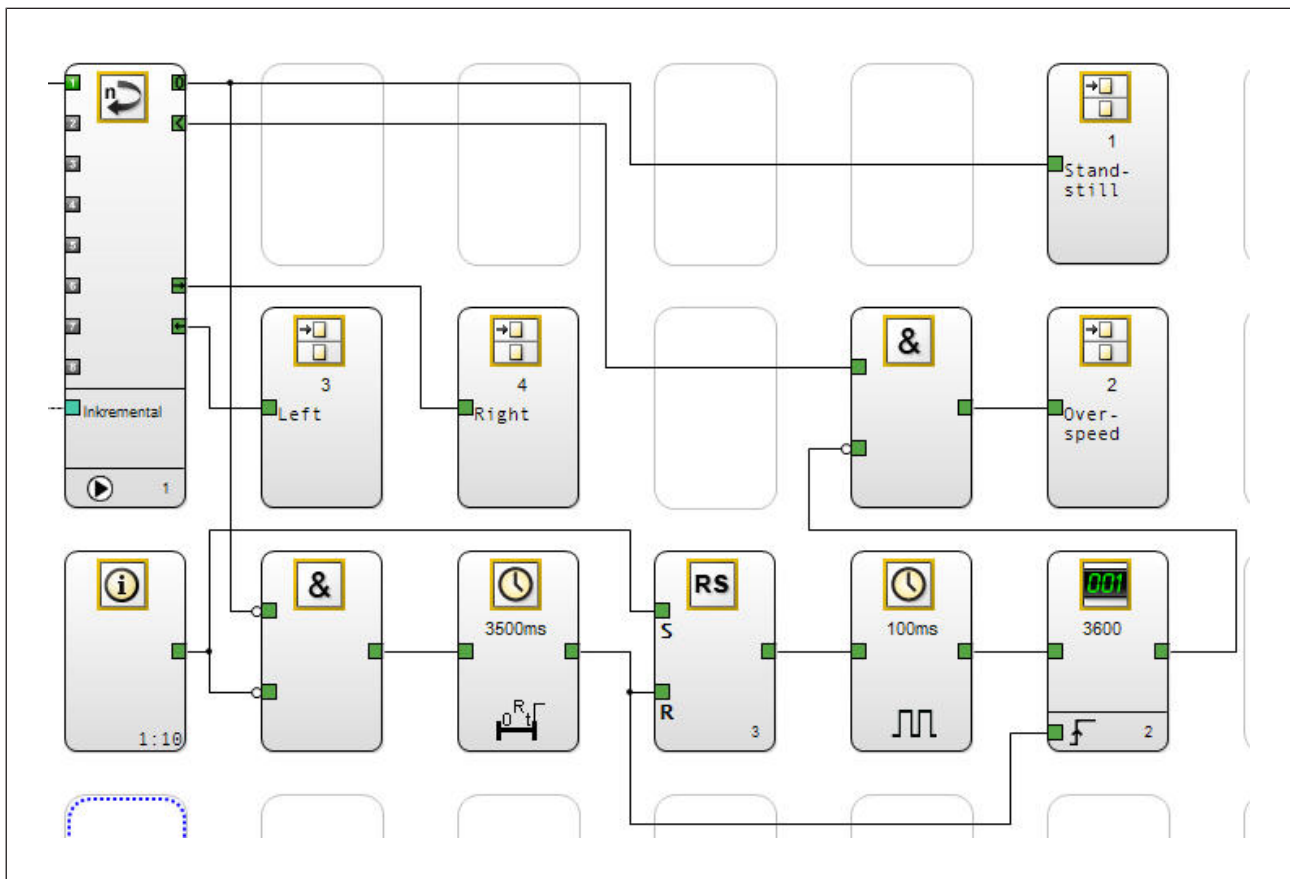

Please note that the direction of rotation must be evaluated for this example!

## Speed monitors PNOZ ms3p

### Example with position control

#### Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", with position control


Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" may be set during position control as a result of jitter on the encoder.

The set bit can be tolerated, i.e. evaluated in the user program in such a way that a shutdown will not occur if the following conditions are met:

- ▶ An additional position control signal must be provided from an external control system (e.g. PLC) and
- ▶ The signal must have the following status conditions:
  - Position control: Signal status = 1
  - Operation: Signal status = 0


During operation, diagnostic bit 10 must be evaluated in the user program in such a way that a set bit leads to a safety-related error reaction (shutdown).

#### Application example:

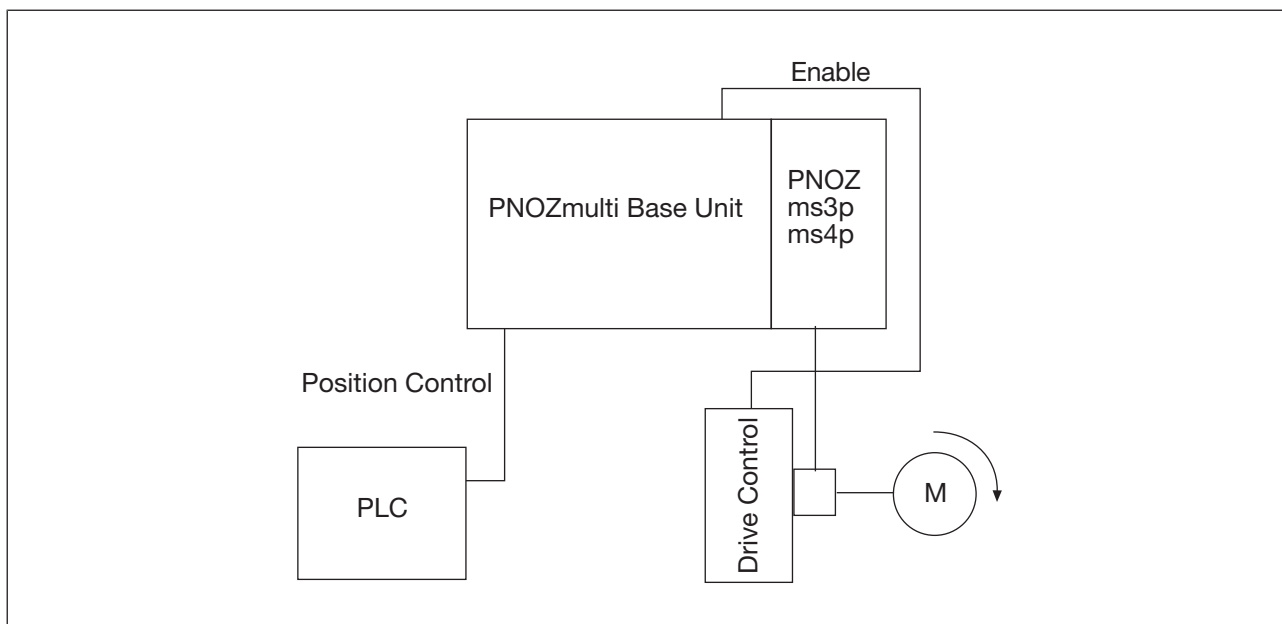

## Speed monitors PNOZ ms3p

Depending on the operating mode, evaluation of diagnostic bit 10 can be implemented in the user program as follows:

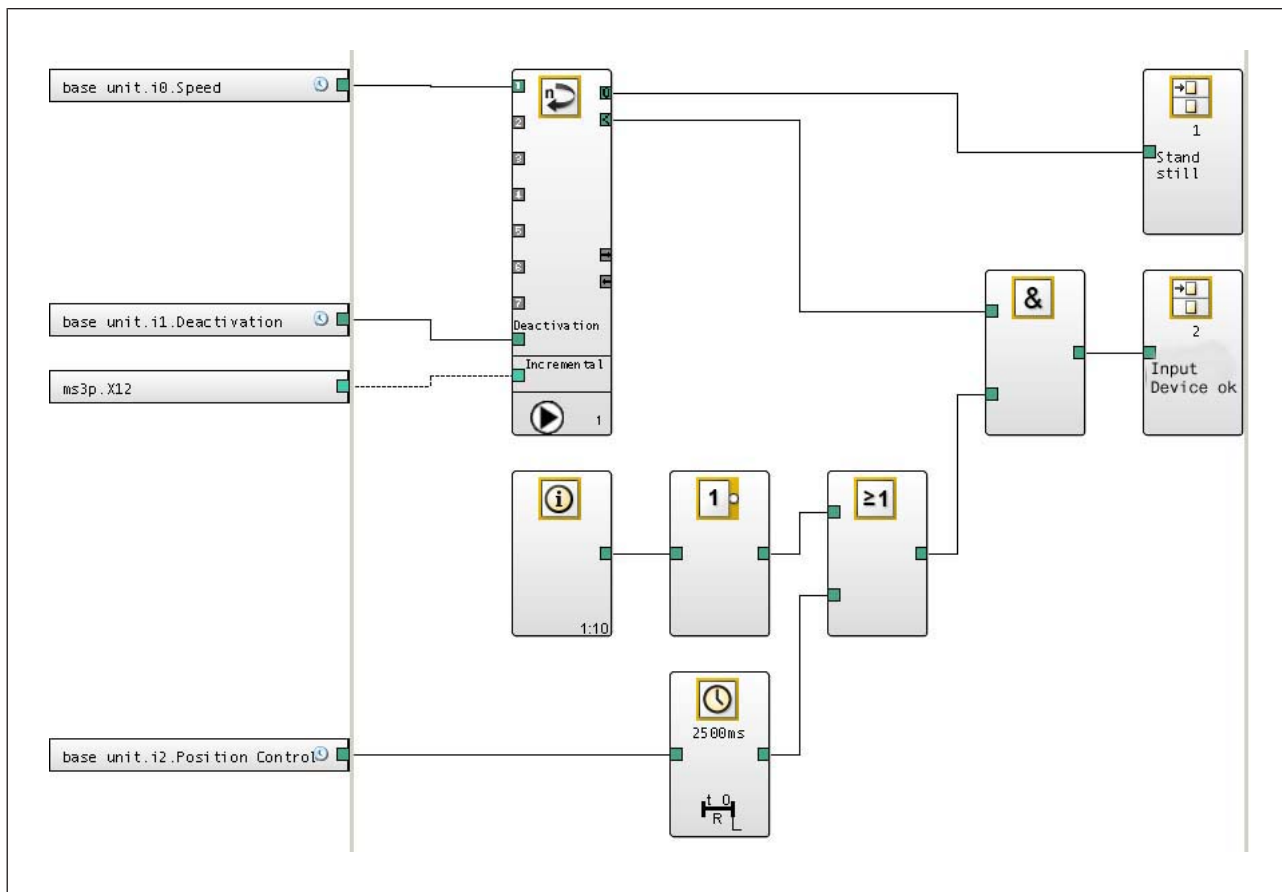

An additional "Position Control" signal is incorporated. This signal indicates whether the relevant axis is in position control (signal status = 1) or in operation (signal status = 0).

The time element with configured switch-off delay operates as a start-up suppressor, as the bit: "Unfeasible or single-channel signal from the incremental encoder" may still be present for 2 s after leaving standstill.

The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

## Speed monitors PNOZ ms3p HTL



### Overview

#### Unit features

Using the product PNOZ ms3p HTL:

Speed monitor for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Monitoring of 2 independent axes
- ▶ Connection per axis
  - 1 incremental encoder
- ▶ Measured variables:
  - Standstill
  - Speed (8 values can be set)
  - Direction of rotation
- ▶ Axis types, start mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
  - Supply voltage
  - Incremental encoder
  - Axis status, standstill and excess speed
  - Faults on the system
- ▶ Incremental encoder connection technology:
  - RJ45 female connector
- ▶ Function to deactivate speed monitoring
- ▶ Galvanic isolation between the connections X1, X12 and X22
- ▶ Max. 4 speed monitors can be connected to the base unit

## Speed monitors

### PNOZ ms3p HTL

#### Front view

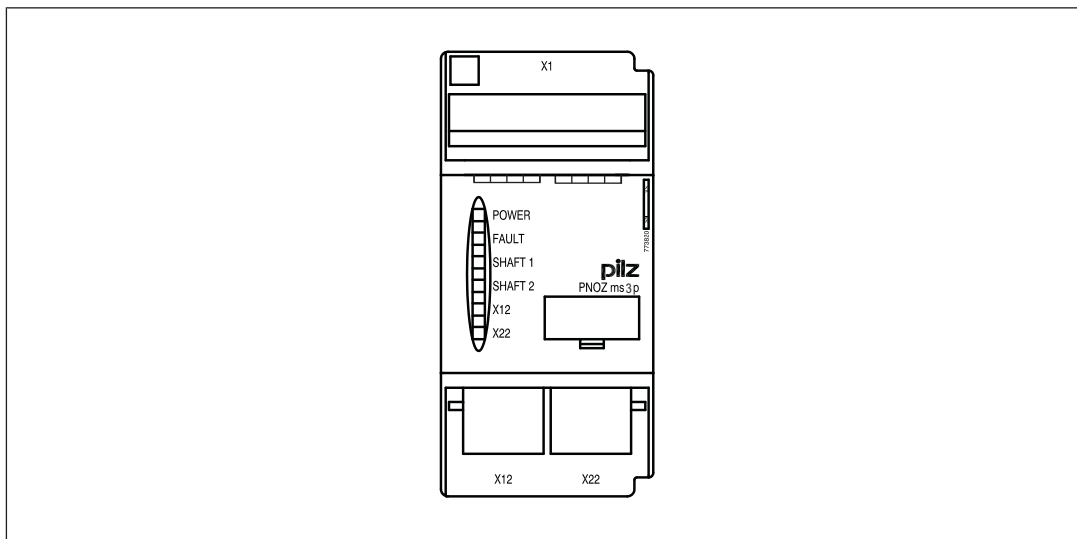

#### Key:

- ▶ X12:
  - Female connector for connecting an incremental encoder to axis 1
- ▶ X22:
  - Female connector for connecting an incremental encoder to axis 2
- ▶ LEDs:
  - POWER
  - FAULT
  - SHAFT 1
  - SHAFT 2
  - X12
  - X22

## Function description


### Operation

The speed monitor can independently monitor two axes for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the implemented safety circuit, the values may be transferred from the base unit to a relay output on the safety system, for example. Incremental encoders may be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.

## Speed monitors PNOZ ms3p HTL

### Block diagram

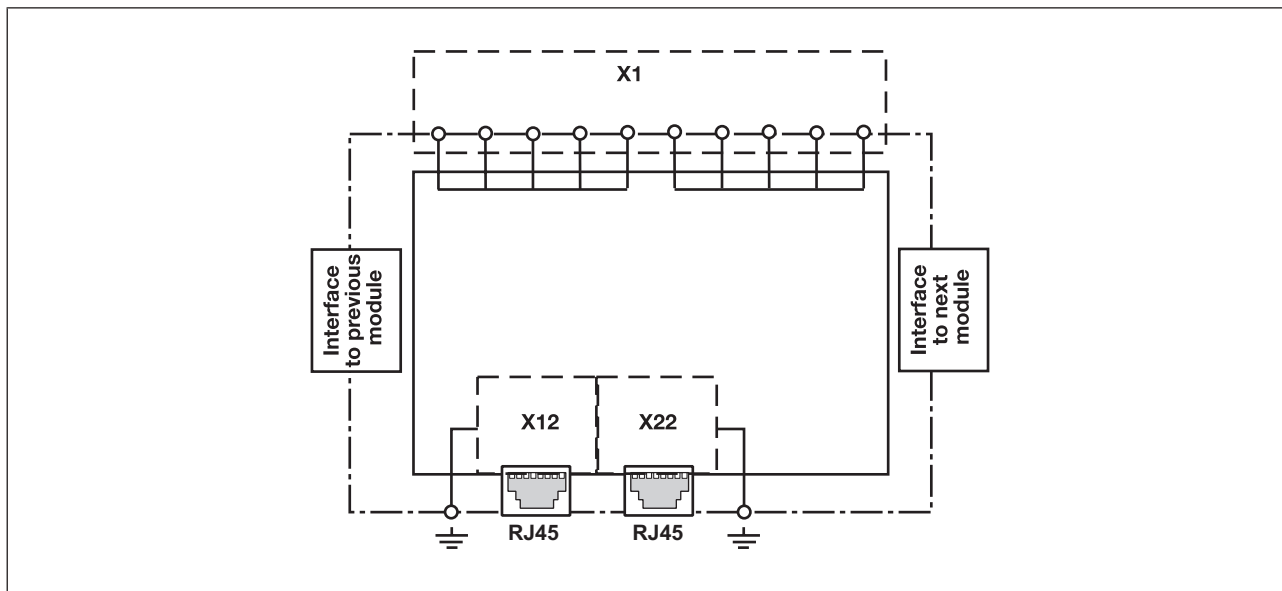

### Incremental encoders

#### Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
  - HTL (12 V – 30 V)
- ▶ Please note the values stated in the technical details

#### Adapter for incremental encoders

The adapter records the data between the encoder and drive and makes it available to the PNOZ ms3p HTL via the RJ45 socket.


Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

## Speed monitors

### PNOZ ms3p HTL

## Installation

### Dimensions

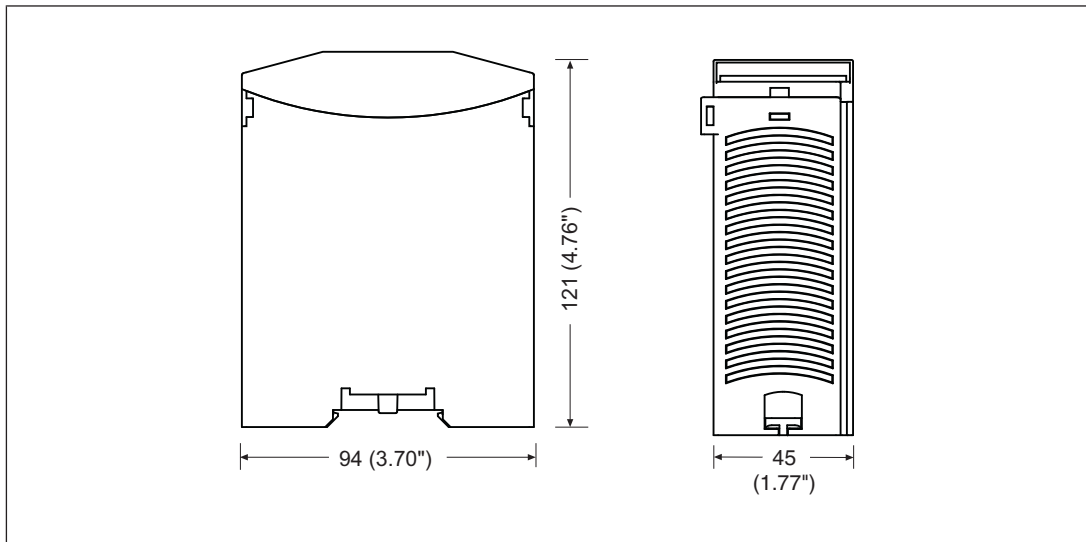

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.


Please note:

- ▶ Information given in the [Technical details \[323\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.



## Speed monitors PNOZ ms3p HTL

### Pin assignment of RJ45 socket

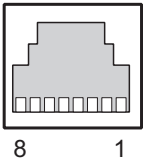RJ45 socket 8-pin	PIN	Track
	1	5 V
	2	0 V
	3	T
	4	A
	5	/A
	6	/Z
	7	B
	8	/B

### Connecting the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors axis 1; the incremental encoder on connector X22 monitors axis 2.
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

## Speed monitors

### PNOZ ms3p HTL

#### Connect the signals from the incremental encoder to the speed monitor

Encoder types: 24 V-HTL

- ▶ Apply 24 VDC supply voltage to incremental encoder only
- ▶ Do not terminate incremental encoder with  $Z0 = 120 \text{ Ohm}$

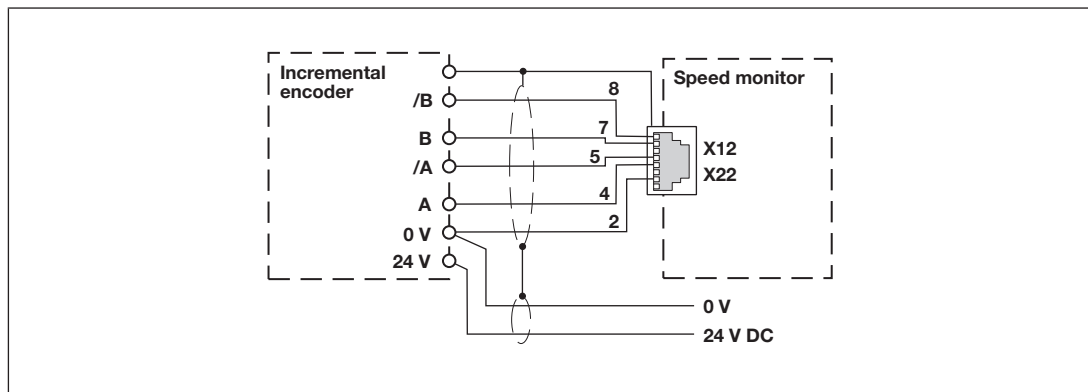


Fig.: Connection to incremental encoder type 24 V-HTL

#### Connect the incremental encoder to the speed monitor via an adapter

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the female RJ45 connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive.
- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under "Connect incremental encoder signals to the speed monitor" and in the adapter operating manual must be observed when connecting the supply voltage.
- ▶ Supply voltage (12 V – 30 V) to incremental encoder only.
- ▶ HTL signals may not be fitted with a terminating resistor.

## Speed monitors PNOZ ms3p HTL

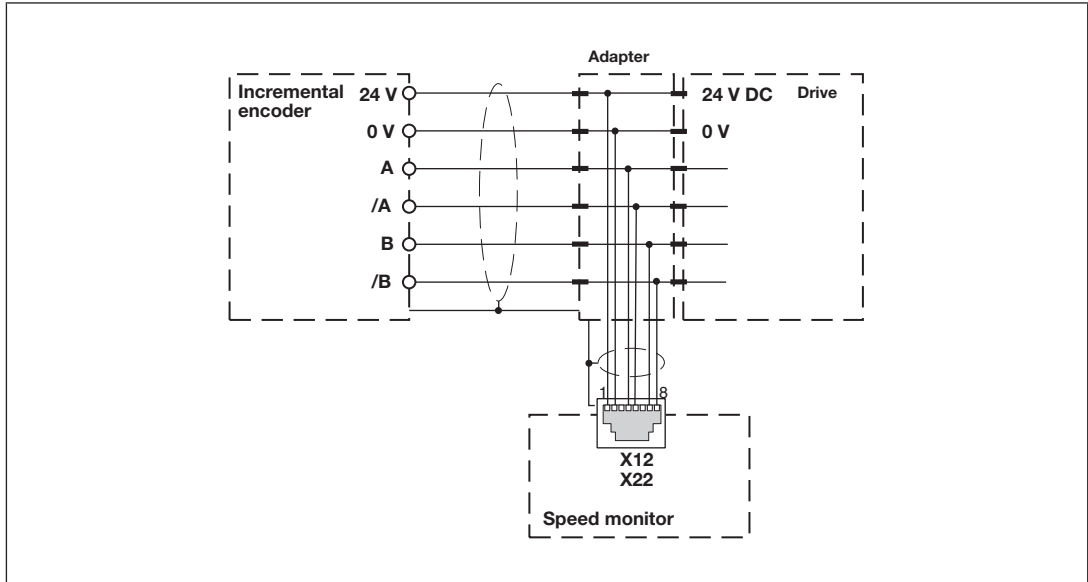


Fig.: Connection via adapter and drive

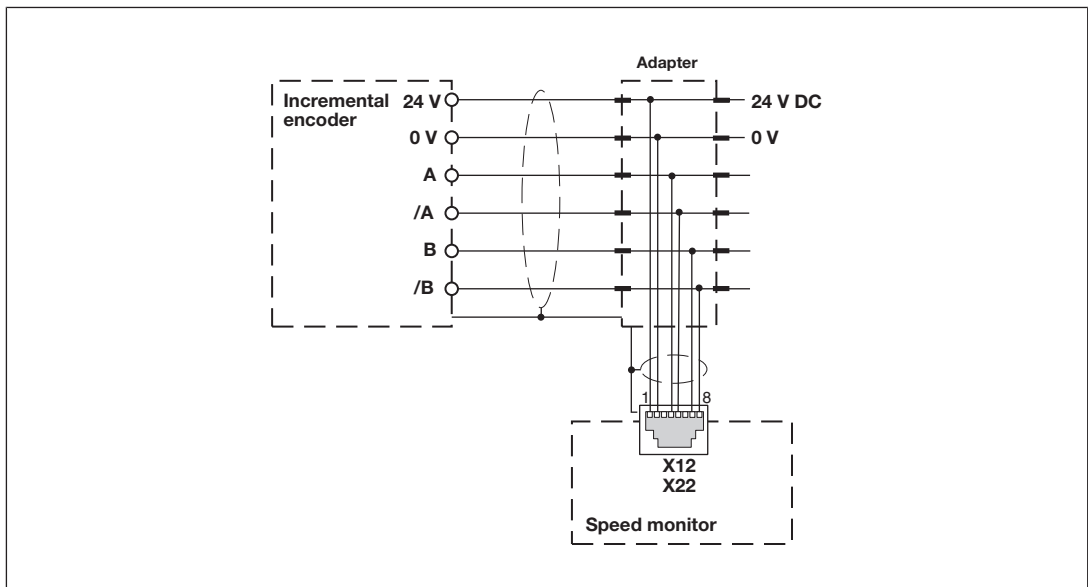


Fig.: Connection via adapter

## Speed monitors PNOZ ms3p HTL

### Technical details

<b>General</b>	
Approvals	<b>BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed</b>
<b>Electrical data</b>	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>5,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>1,0 W</b>
Status indicator	<b>LED</b>
<b>Incremental encoder input</b>	
Number of inputs	<b>2</b>
Connection type	<b>RJ45 female connector, 8-pin</b>
Input signal level	<b>12,0 - 30,0 Vss</b>
Phase position for the differential signals A, /A and B, /B	<b>90° ±30°</b>
Overload protection	<b>-30 - 30 V</b>
Input resistance	<b>10,0 kOhm</b>
Input's frequency range	<b>0 - 200 kHz</b>
Configurable monitoring frequency	
Without hysteresis	<b>0.1 Hz - 200 kHz</b>
With hysteresis	<b>0.2 Hz - 200 kHz</b>
<b>Times</b>	
Configurable switch-off delay	<b>0 - 2.500 ms</b>
Supply interruption before de-energisation	<b>20 ms</b>
Reaction time	
f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms</b>
f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms + 1/f</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>

## Speed monitors PNOZ ms3p HTL

<b>Environmental data</b>	
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>1</b>

## Speed monitors PNOZ ms3p HTL

### Mechanical data

Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	94,0 mm
Width	45,0 mm
Depth	121,0 mm
Weight	211 g

Where standards are undated, the 2009-10 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN IEC 62061 SIL CL	EN IEC 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
Incremental encoder	PL e	Cat. 3	SIL CL 3	6,36E-09	SIL 3	8,45E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

### Order reference

#### Product

Product type	Features	Order No.
PNOZ ms3p HTL	Expansion module, speed monitor	773 825

### Accessories

#### Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783 800
Set screw terminals	1 set of screw terminals	793 800

#### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639

## Speed monitors PNOZ ms3p HTL

### Application examples

#### Examples without position control


**Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", without position control**

Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" must be evaluated in the user program during operation in such a way that a set bit leads to a safety-related error reaction (shutdown).

#### Example 1

Immediate shutdown as soon as diagnostic bit 10 is set.

The bit is evaluated as follows:

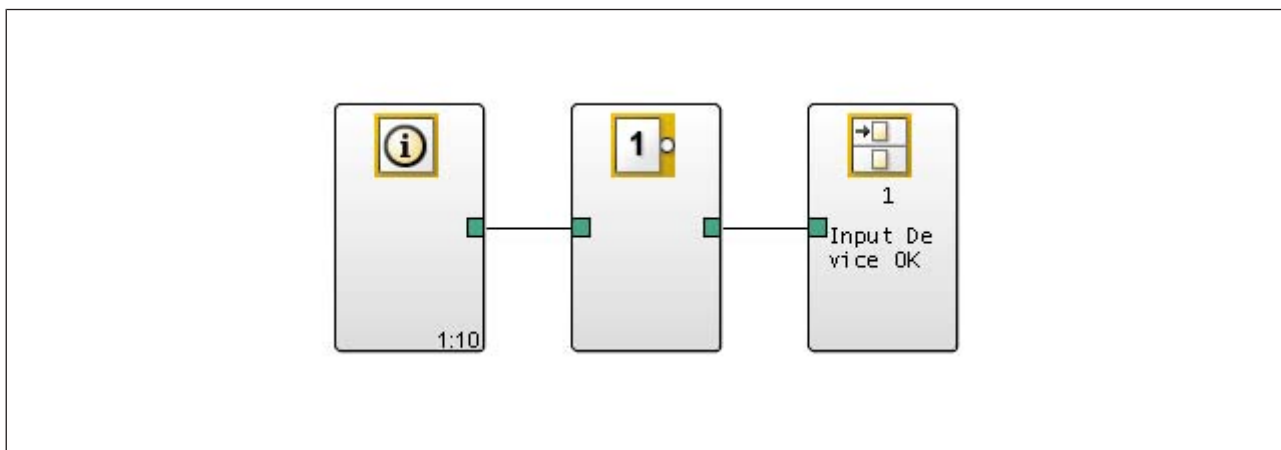


The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

## Speed monitors PNOZ ms3p HTL

### Example 2

A set diagnostic bit 10 can be tolerated for a maximum of 4 hours (occurrence of second error). If no feasible signals above standstill frequency are measured within this time, a shut-down will occur.

In this case, the bit will be evaluated as follows:

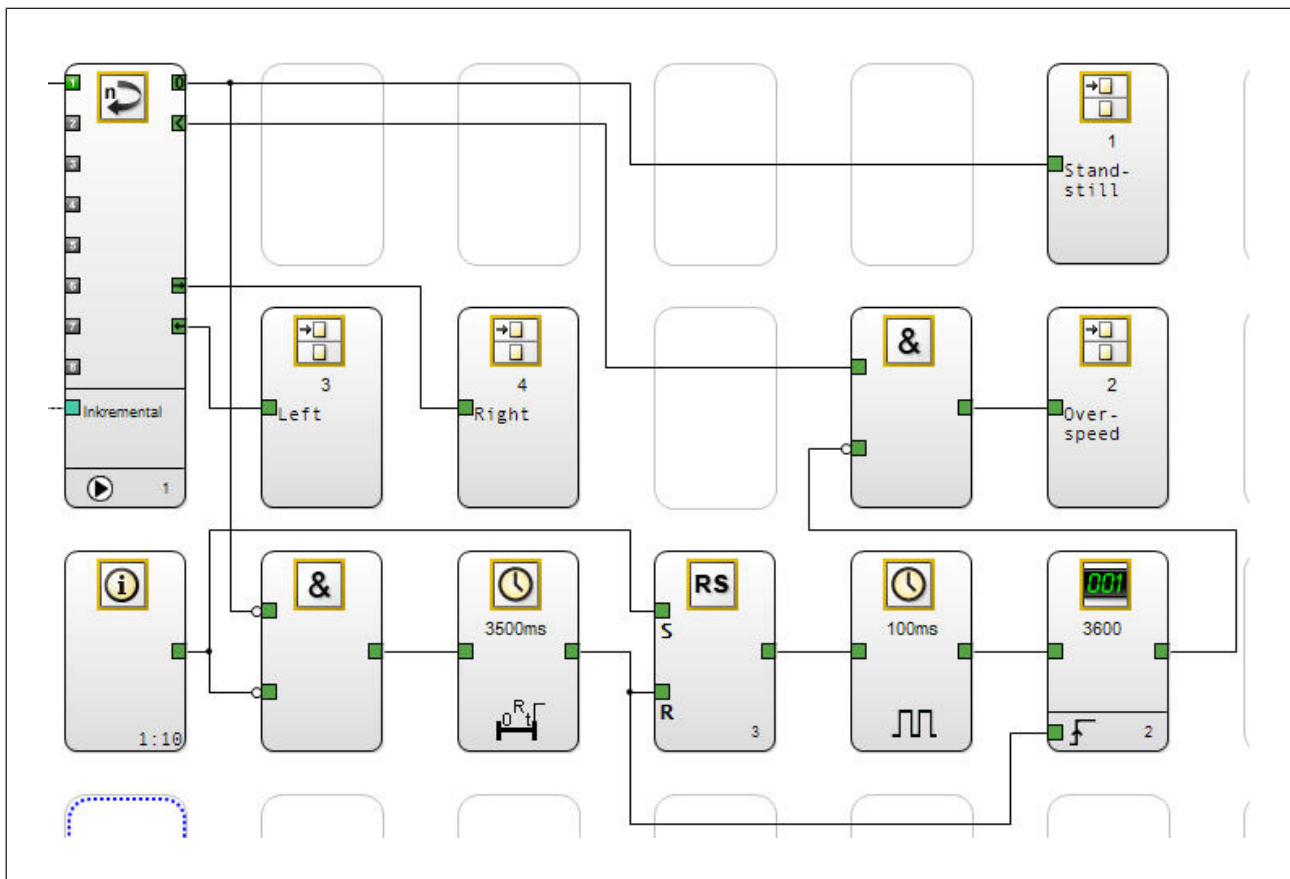

Please note that the direction of rotation must be evaluated for this example!



## Speed monitors PNOZ ms3p HTL

### Example with position control

#### Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", with position control


Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" may be set during position control as a result of jitter on the encoder.

The set bit can be tolerated, i.e. evaluated in the user program in such a way that a shutdown will not occur if the following conditions are met:

- ▶ An additional position control signal must be provided from an external control system (e.g. PLC) and
- ▶ The signal must have the following status conditions:
  - Position control: Signal status = 1
  - Operation: Signal status = 0


During operation, diagnostic bit 10 must be evaluated in the user program in such a way that a set bit leads to a safety-related error reaction (shutdown).

#### Application example:

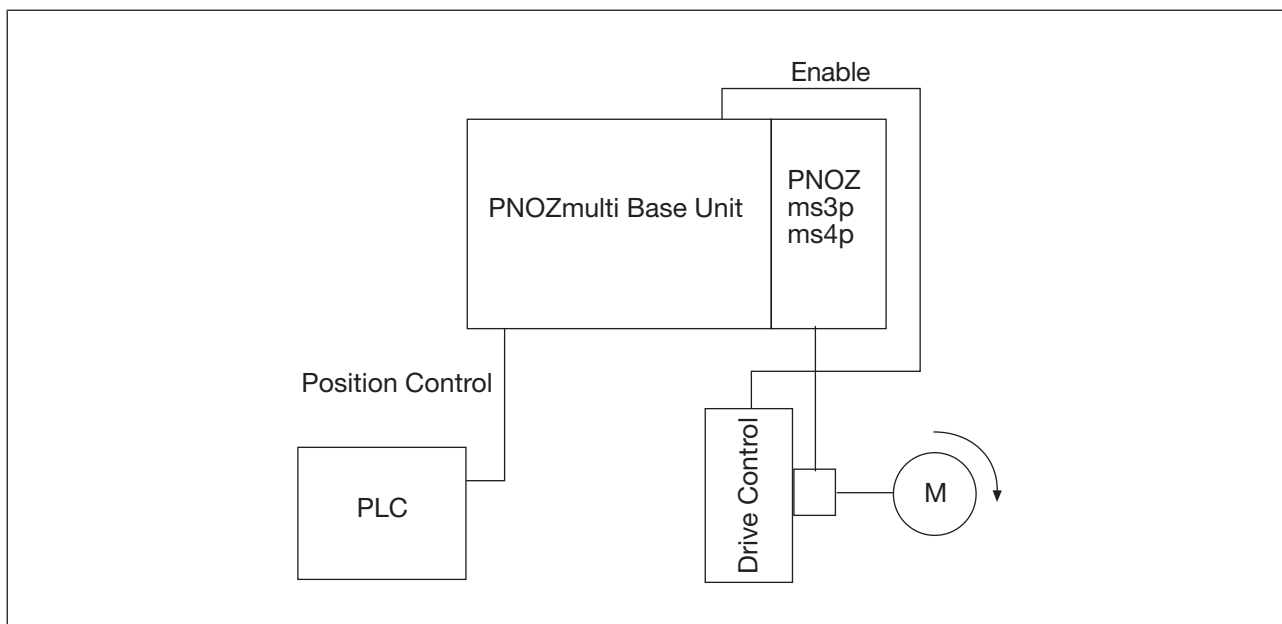

## Speed monitors PNOZ ms3p HTL

Depending on the operating mode, evaluation of diagnostic bit 10 can be implemented in the user program as follows:

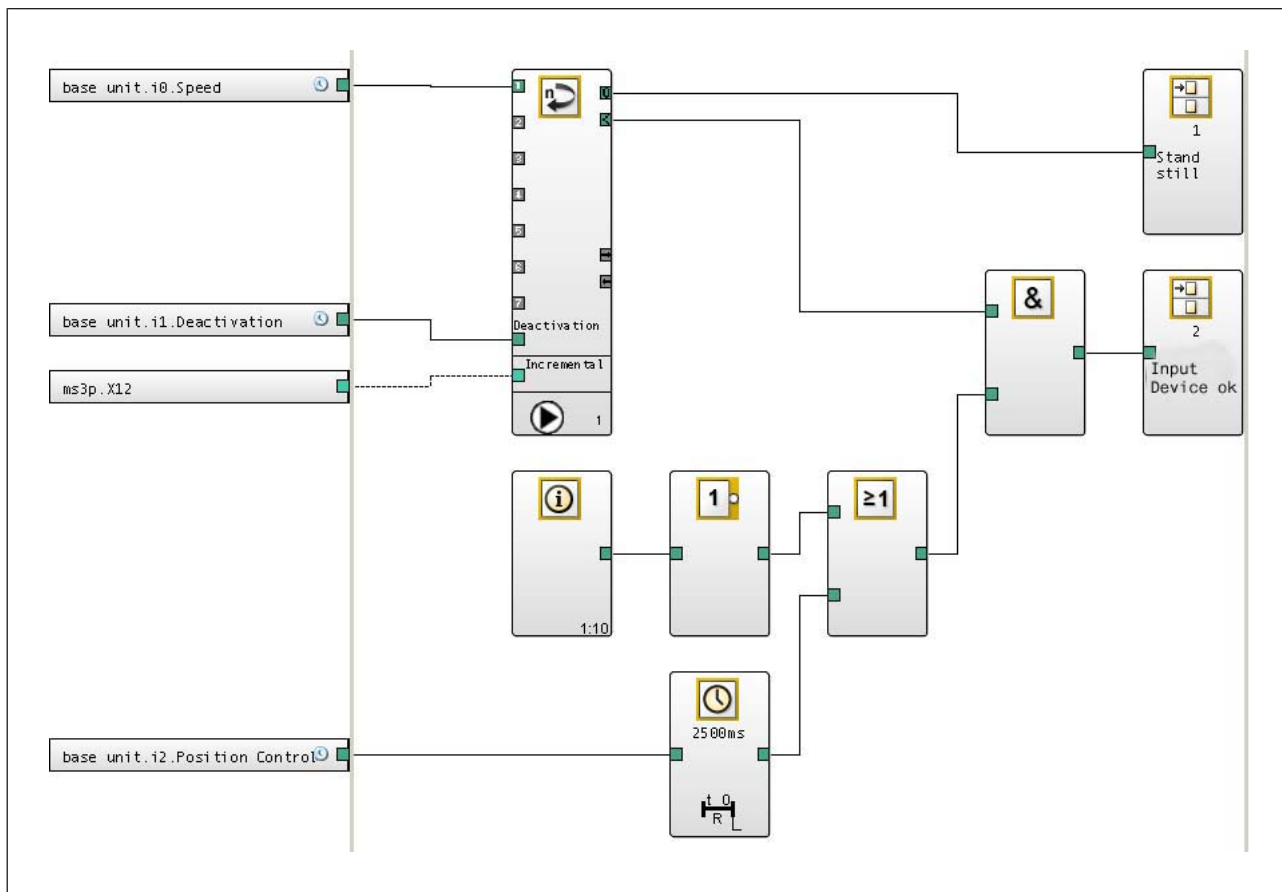

An additional "Position Control" signal is incorporated. This signal indicates whether the relevant axis is in position control (signal status = 1) or in operation (signal status = 0).

The time element with configured switch-off delay operates as a start-up suppressor, as the bit: "Unfeasible or single-channel signal from the incremental encoder" may still be present for 2 s after leaving standstill.

The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

## Speed monitors PNOZ ms3p TTL



### Overview

#### Unit features

Using the product PNOZ ms3p TTL:

Speed monitor for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Monitoring of 2 independent axes
- ▶ Connection per axis
  - 1 incremental encoder
- ▶ Measured variables:
  - Standstill
  - Speed (8 values can be set)
  - Direction of rotation
- ▶ Axis types, start mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
  - Supply voltage
  - Incremental encoder
  - Axis status, standstill and excess speed
  - Faults on the system
- ▶ Incremental encoder connection technology:
  - RJ45 female connector
- ▶ Function to deactivate speed monitoring
- ▶ Galvanic isolation between the connections X1, X12 and X22
- ▶ Max. 4 speed monitors can be connected to the base unit

## Speed monitors

### PNOZ ms3p TTL

#### Front view

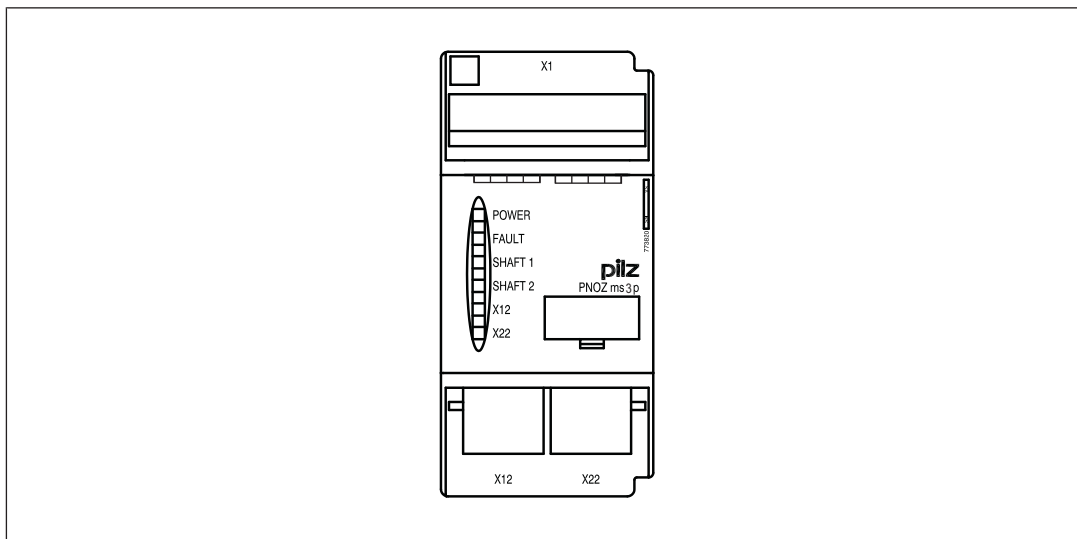

#### Key:

- ▶ X12:
  - Female connector for connecting an incremental encoder to axis 1
- ▶ X22:
  - Female connector for connecting an incremental encoder to axis 2
- ▶ LEDs:
  - POWER
  - FAULT
  - SHAFT 1
  - SHAFT 2
  - X12
  - X22

## Function description

### Operation


The speed monitor can independently monitor two axes for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the implemented safety circuit, the values may be transferred from the base unit to a relay output on the safety system, for example. Incremental encoders may be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.

## Speed monitors

### PNOZ ms3p TTL

#### Block diagram

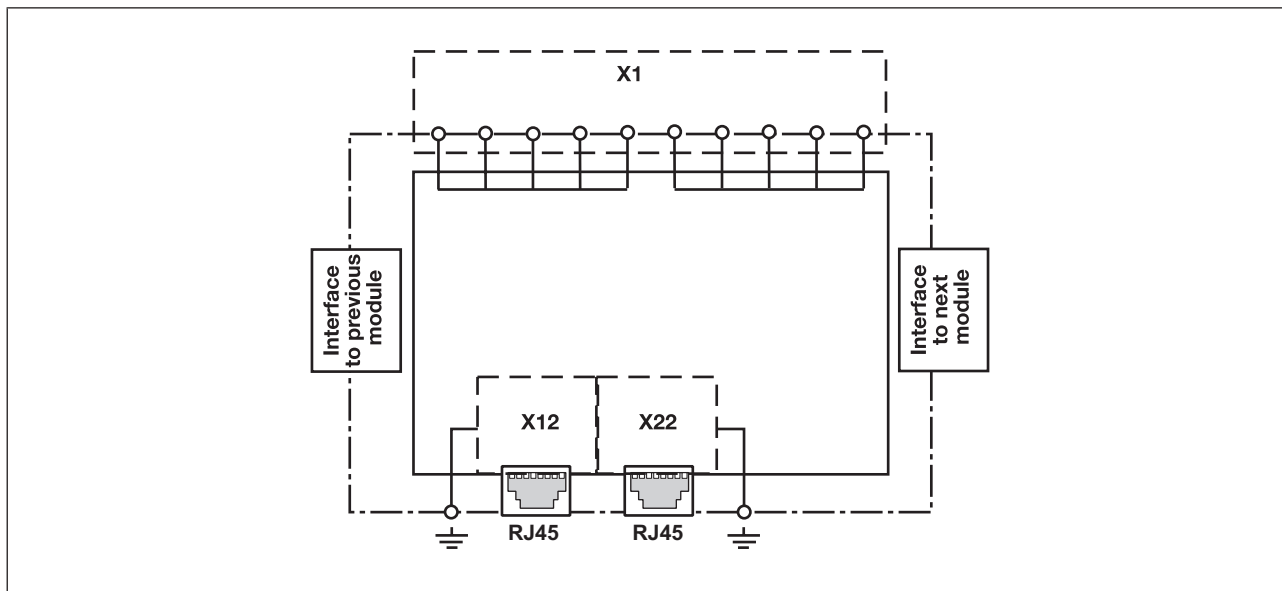

#### Incremental encoders

##### Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
  - Sin/Cos
  - TTL (RS422)
- ▶ Please note the values stated in the technical details

##### Adapter for incremental encoders

The adapter records the data between the encoder and drive and makes it available to the PNOZ ms3p TTL via the RJ45 socket.


Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

## Speed monitors

### PNOZ ms3p TTL

## Installation

### Dimensions

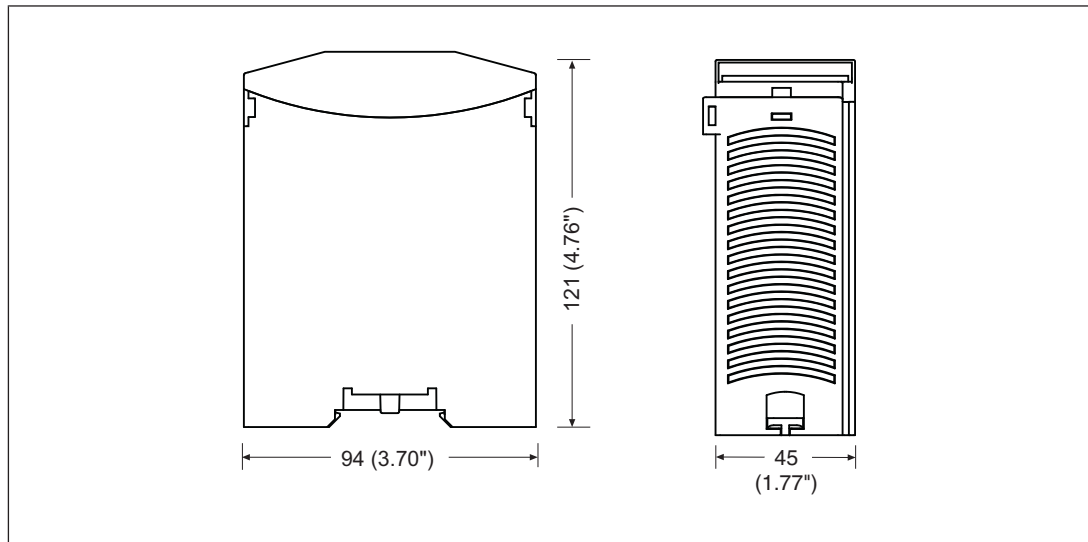

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[323\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

## Speed monitors PNOZ ms3p TTL

### Pin assignment of RJ45 socket

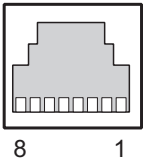RJ45 socket 8-pin	PIN	Track
	1	n.c.
	2	0 V
	3	n.c.
	4	A
	5	/A
	6	n.c.
	7	B
	8	/B

### Connecting the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors axis 1; the incremental encoder on connector X22 monitors axis 2.
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

## Speed monitors

### PNOZ ms3p TTL

#### Connect the signals from the incremental encoder to the speed monitor

Encoder types: 1 Vss, 5 V-TTL

- ▶ Apply 5 VDC to incremental encoder only
- ▶ Do not terminate incremental encoder with  $Z_0 = 120 \text{ Ohm}$

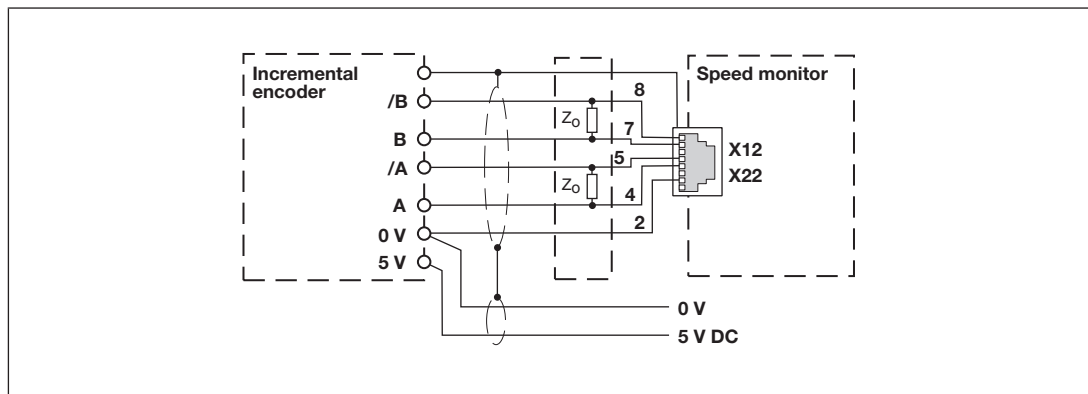


Fig.: Connection to incremental encoder type 1 Vss, 5 V-TTL

#### Connect the incremental encoder to the speed monitor via an adapter

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the female RJ45 connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive. The signal lines can then be terminated directly at the adapter with  $Z_0 = 120 \text{ Ohm}$ .
- ▶ If the signal lines in the drive are already terminated with  $Z_0 = 120 \text{ Ohm}$ , the incremental encoder may no longer be terminated.
- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under "Connect incremental encoder signals to the speed monitor" and in the adapter operating manual must be observed when connecting the supply voltage.
- ▶ Supply only incremental encoder with 5 VDC.



## Speed monitors PNOZ ms3p TTL

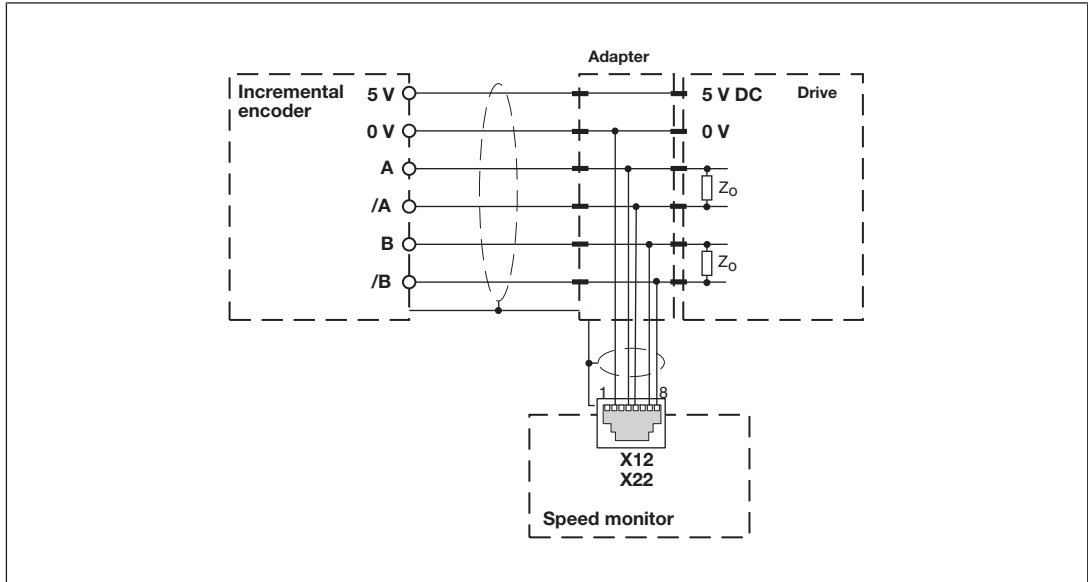


Fig.: Connection via adapter and drive

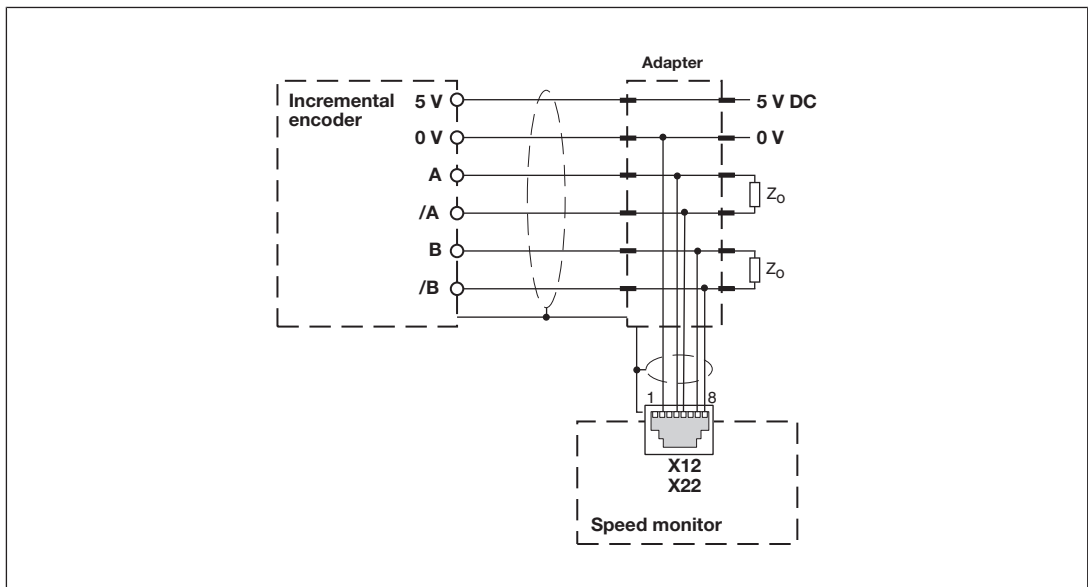


Fig.: Connection via adapter

## Speed monitors PNOZ ms3p TTL

### Technical details

<b>General</b>	
Approvals	<b>BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed</b>
<b>Electrical data</b>	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>5,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>1,0 W</b>
Status indicator	<b>LED</b>
<b>Incremental encoder input</b>	
Number of inputs	<b>2</b>
Connection type	<b>RJ45 female connector, 8-pin</b>
Input signal level	<b>0,5 - 5,0 Vss</b>
Phase position for the differential signals A, /A and B, /B	<b>90° ±30°</b>
Overload protection	<b>-30 - 30 V</b>
Input resistance	<b>10,0 kOhm</b>
Input's frequency range	<b>0 - 500 kHz</b>
Configurable monitoring frequency	
Without hysteresis	<b>0.1 Hz - 500 kHz</b>
With hysteresis	<b>0.2 Hz - 500 kHz</b>
<b>Times</b>	
Configurable switch-off delay	<b>0 - 2.500 ms</b>
Supply interruption before de-energisation	<b>20 ms</b>
Reaction time	
f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms</b>
f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms + 1/f</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>

## Speed monitors PNOZ ms3p TTL

<b>Environmental data</b>	
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>1</b>

## Speed monitors PNOZ ms3p TTL

Mechanical data	
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	94,0 mm
Width	45,0 mm
Depth	121,0 mm
Weight	220 g

Where standards are undated, the 2009-10 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN IEC 62061 SIL CL	EN IEC 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
Incremental encoder	PL e	Cat. 3	SIL CL 3	6,36E-09	SIL 3	8,45E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

### Order reference

#### Product

Product type	Features	Order No.
PNOZ ms3p TTL	Expansion module, speed monitor	773 826

### Accessories

#### Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783 800
Set screw terminals	1 set of screw terminals	793 800

#### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639

## Speed monitors PNOZ ms3p TTL

### Application examples

#### Examples without position control


**Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", without position control**

Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" must be evaluated in the user program during operation in such a way that a set bit leads to a safety-related error reaction (shutdown).

#### Example 1

Immediate shutdown as soon as diagnostic bit 10 is set.

The bit is evaluated as follows:

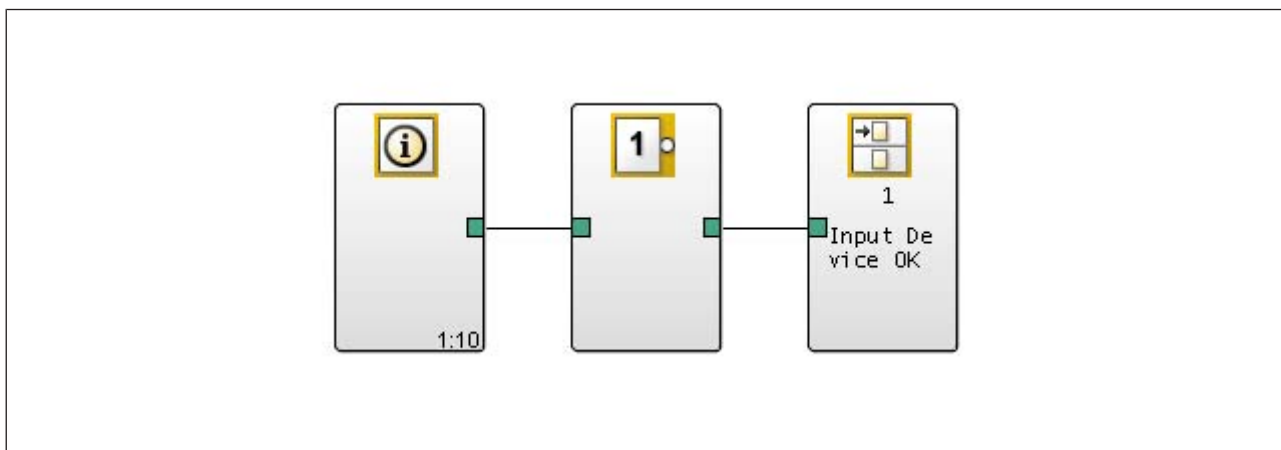


The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

## Speed monitors PNOZ ms3p TTL

### Example 2

A set diagnostic bit 10 can be tolerated for a maximum of 4 hours (occurrence of second error). If no feasible signals above standstill frequency are measured within this time, a shut-down will occur.

In this case, the bit will be evaluated as follows:

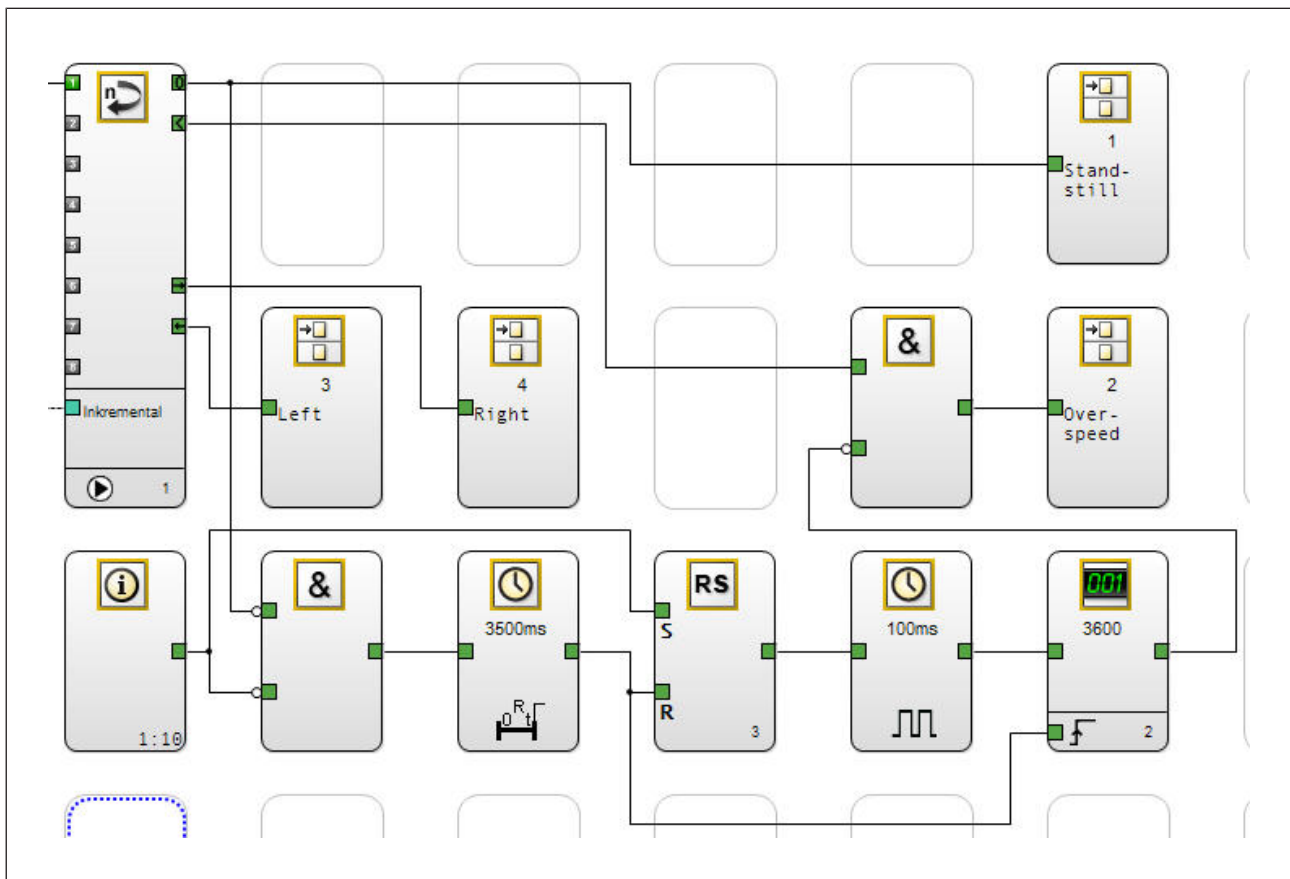

Please note that the direction of rotation must be evaluated for this example!

## Speed monitors PNOZ ms3p TTL

### Example with position control

#### Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", with position control


Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" may be set during position control as a result of jitter on the encoder.

The set bit can be tolerated, i.e. evaluated in the user program in such a way that a shutdown will not occur if the following conditions are met:

- ▶ An additional position control signal must be provided from an external control system (e.g. PLC) and
- ▶ The signal must have the following status conditions:
  - Position control: Signal status = 1
  - Operation: Signal status = 0


During operation, diagnostic bit 10 must be evaluated in the user program in such a way that a set bit leads to a safety-related error reaction (shutdown).

#### Application example:

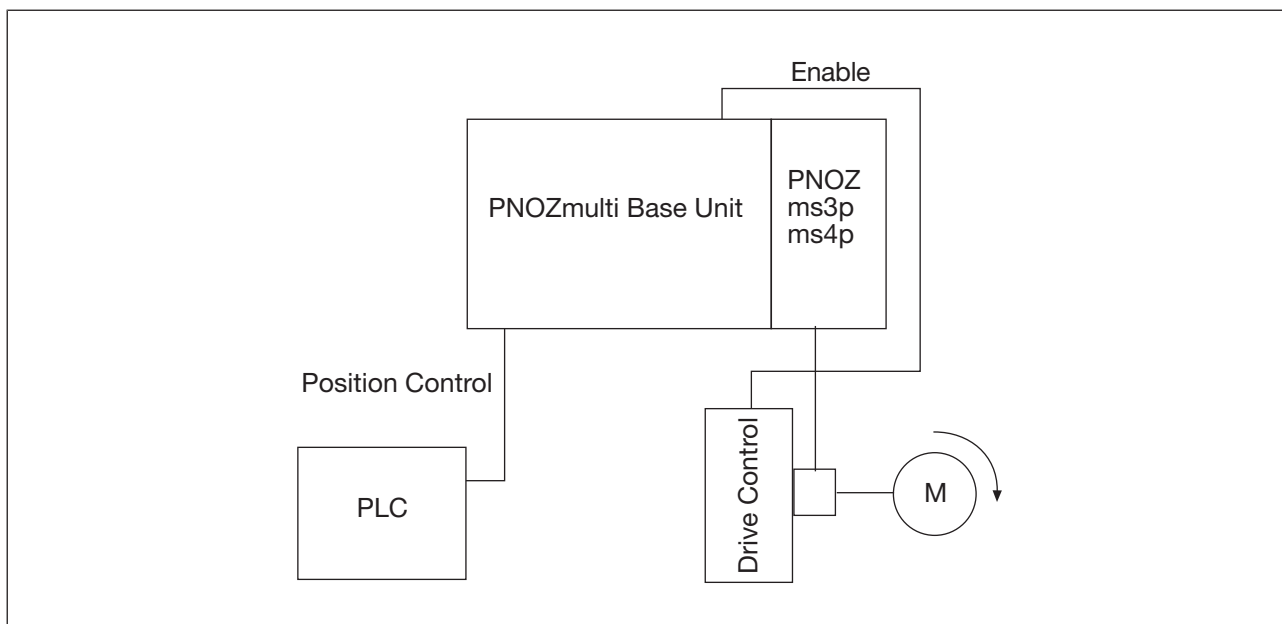

## Speed monitors PNOZ ms3p TTL

Depending on the operating mode, evaluation of diagnostic bit 10 can be implemented in the user program as follows:

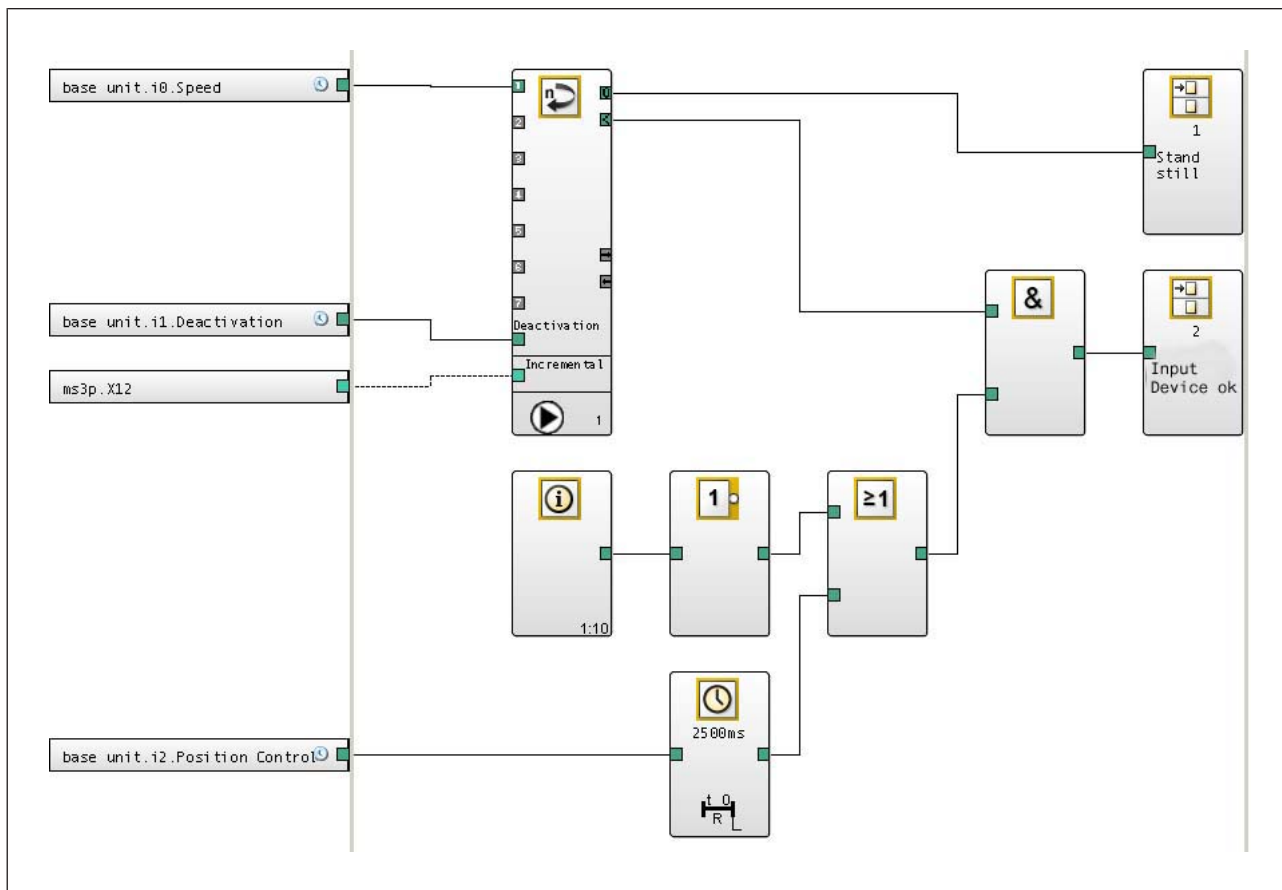

An additional "Position Control" signal is incorporated. This signal indicates whether the relevant axis is in position control (signal status = 1) or in operation (signal status = 0).

The time element with configured switch-off delay operates as a start-up suppressor, as the bit: "Unfeasible or single-channel signal from the incremental encoder" may still be present for 2 s after leaving standstill.

The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.



## Speed monitors

### PNOZ ms4p



## Overview

### Unit features

Using the product PNOZ ms4p:

Speed monitor for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Monitoring of 1 axis
- ▶ Connection: 1 incremental encoder
- ▶ Measured variables:
  - Standstill
  - Speed (16 values can be set)
  - Direction of rotation
- ▶ Axis types, start mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
  - Supply voltage
  - Incremental encoder
  - Axis status, standstill and excess speed
  - Faults on the system
- ▶ Incremental encoder connection technology:
  - RJ45 female connector
- ▶ Function to deactivate speed monitoring
- ▶ Galvanic isolation between the connections X1 and X12
- ▶ Max. 4 speed monitors can be connected to the base unit

## Speed monitors

### PNOZ ms4p

#### Front view

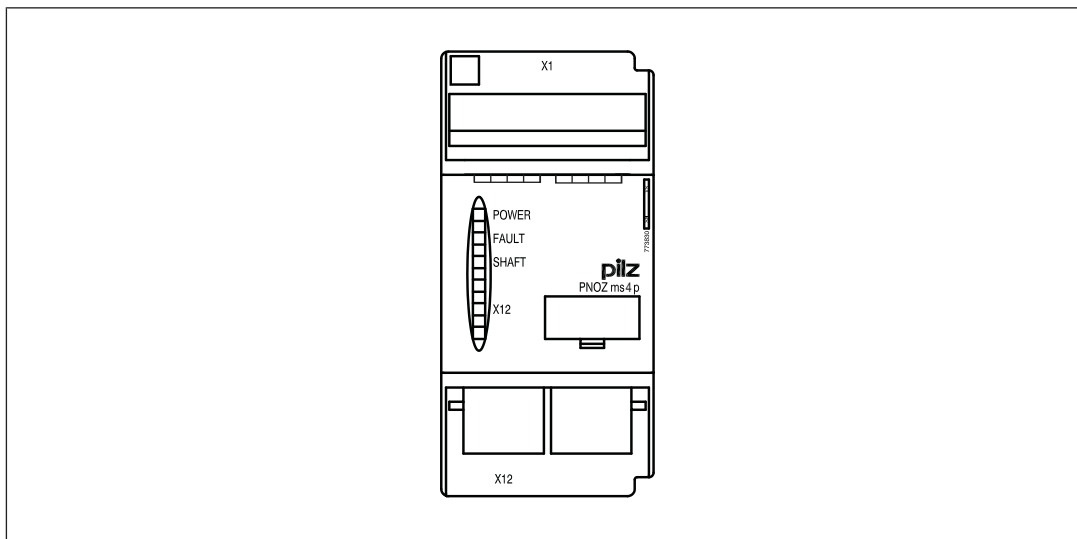


Fig.: Front view of PNOZ ms4p

#### Key:

- ▶ X12:
  - Female connector for connecting an incremental encoder
- ▶ LEDs:
  - POWER
  - FAULT
  - SHAFT
  - X12

## Function description

### Operation


The speed monitor can monitor an axis for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the implemented safety circuit, the values may be transferred from the base unit to a relay output on the safety system, for example. Incremental encoders may be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.

## Speed monitors

### PNOZ ms4p

#### Block diagram

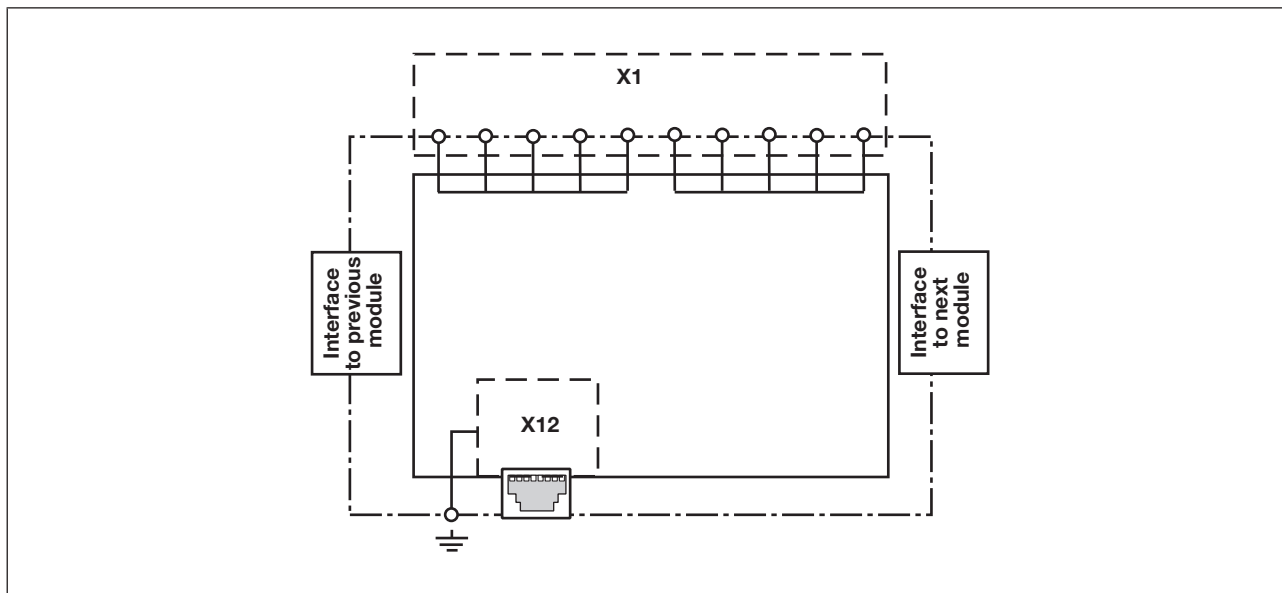

#### Incremental encoders

##### Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
  - Sin/Cos
  - TTL (RS 422)
  - HTL (24 V)
- ▶ Please note the values stated in the technical details

##### Adapter for incremental encoders

The adapter records the data between the encoder and drive and makes it available to the PNOZ ms4p via the RJ45 socket.


Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

## Speed monitors

### PNOZ ms4p

## Installation

### Dimensions

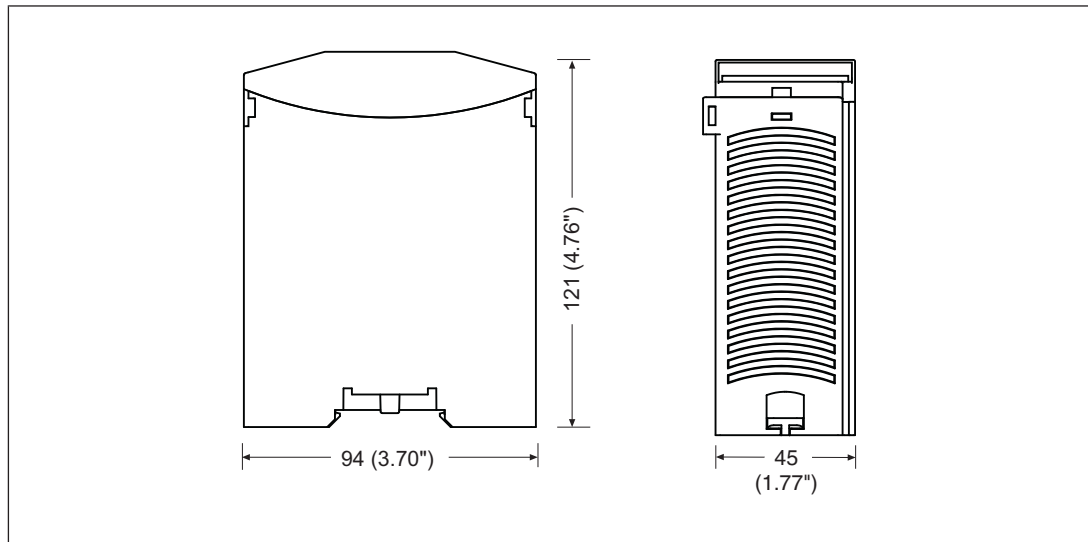

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.


Please note:

- ▶ Information given in the [Technical details \[323\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

## Speed monitors

### PNOZ ms4p

#### Pin assignment of RJ45 socket

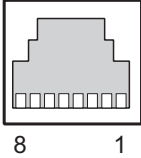RJ45 socket 8-pin	PIN	Track
	1	5 V
	2	0 V
	3	T
	4	A
	5	/A
	6	/Z
	7	B
	8	/B

#### Connecting the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter (e.g. ) or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors the axis
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

## Speed monitors PNOZ ms4p

### Connect the signals from the incremental encoder to the speed monitor

Encoder types: 1 Vss, 5 V-TTL

- ▶ Apply 5 VDC to incremental encoder only
- ▶ Do not terminate incremental encoder with  $Z_0 = 120 \text{ Ohm}$

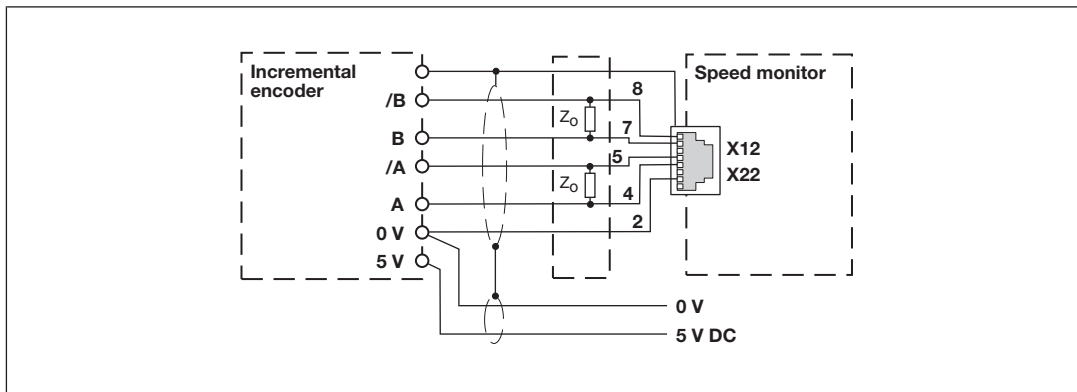


Fig.: Connection to incremental encoder type 1 Vss, 5 V-TTL

Encoder types: 24 V-HTL

- ▶ Apply 24 VDC supply voltage to incremental encoder only
- ▶ Do not terminate incremental encoder with  $Z_0 = 120 \text{ Ohm}$

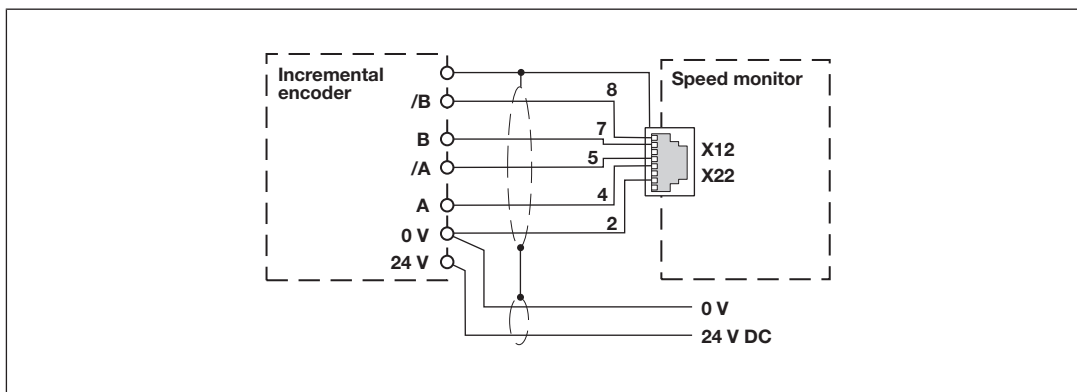


Fig.: Connection to incremental encoder type 24 V-HTL

### Connect the incremental encoder to the speed monitor via an adapter

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the RJ-45 female connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive. The signal lines can then be terminated directly at the adapter with  $Z_0 = 120 \text{ Ohm}$ .
- ▶ If the signal lines in the drive are already terminated with  $Z_0 = 120 \text{ Ohm}$ , the incremental encoder may no longer be terminated.

## Speed monitors PNOZ ms4p

- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under "Connect incremental encoder signals to the speed monitor" and in the adapter operating manual must be observed when connecting the supply voltage.
- ▶ Supply only incremental encoder with 5 VDC. 24 V-HTL signals may not be terminated.

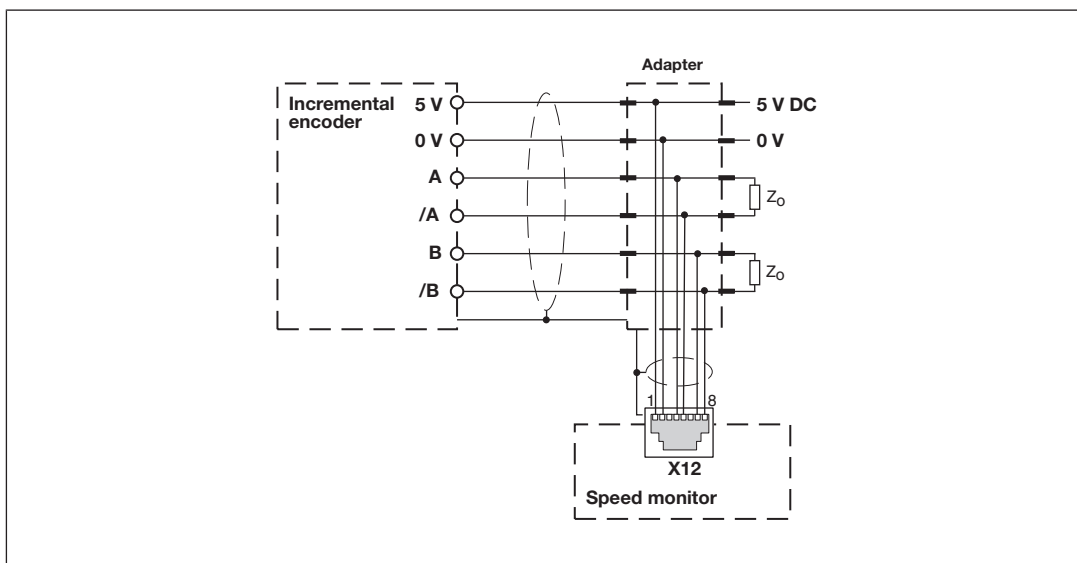


Fig.: Connection via adapter

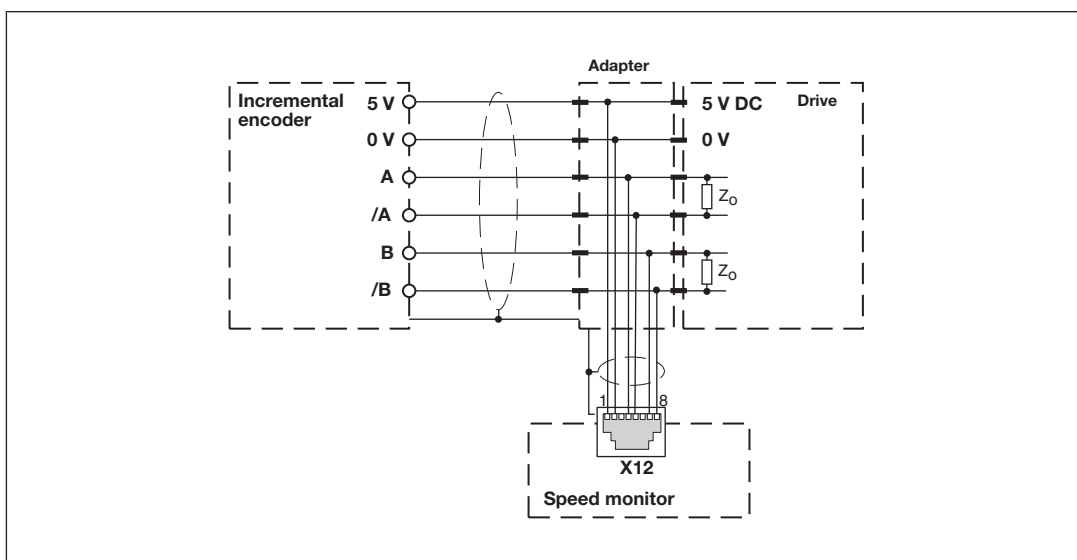


Fig.: Connection via adapter and drive

## Speed monitors

### PNOZ ms4p

#### Technical details

<b>General</b>	
Approvals	BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed
<b>Electrical data</b>	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>5,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>1,0 W</b>
Status indicator	<b>LED</b>
<b>Incremental encoder input</b>	
Number of inputs	<b>1</b>
Connection type	<b>RJ45 female connector, 8-pin</b>
Input signal level	<b>0,5 - 30,0 V<sub>ss</sub></b>
Phase position for the differential signals A, /A and B, /B	<b>90° ±30°</b>
Overload protection	<b>-30 - 30 V</b>
Input resistance	<b>10,0 kOhm</b>
Input's frequency range	<b>0 - 500 kHz</b>
Configurable monitoring frequency	
Without hysteresis	<b>0.1 Hz - 500 kHz</b>
With hysteresis	<b>0.2 Hz - 500 kHz</b>
<b>Times</b>	
Configurable switch-off delay	<b>0 - 2.500 ms</b>
Supply interruption before de-energisation	<b>20 ms</b>
Reaction time	
f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms</b>
f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit	<b>10 ms + 1/f</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>



## Speed monitors

### PNOZ ms4p

<b>Environmental data</b>	
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>1</b>

## Speed monitors PNOZ ms4p

Mechanical data	
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	94,0 mm
Width	45,0 mm
Depth	121,0 mm
Weight	203 g

Where standards are undated, the 2008-12 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN IEC 62061 SIL CL	EN IEC 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
Incremental encoder	PL e	Cat. 3	SIL CL 3	6,36E-09	SIL 3	8,45E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

### Order reference

#### Product

Product type	Features	Order No.
PNOZ ms4p	Expansion module, speed monitor	773 830

### Accessories

#### Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783 800
Set screw terminals	1 set of screw terminals	793 800

#### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639

## Speed monitors


### PNOZ ms4p

## Application examples

### Example without position control

#### Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", without position control

Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" must be evaluated in the user program during operation in such a way that a set bit leads to a safety-related error reaction (shutdown).

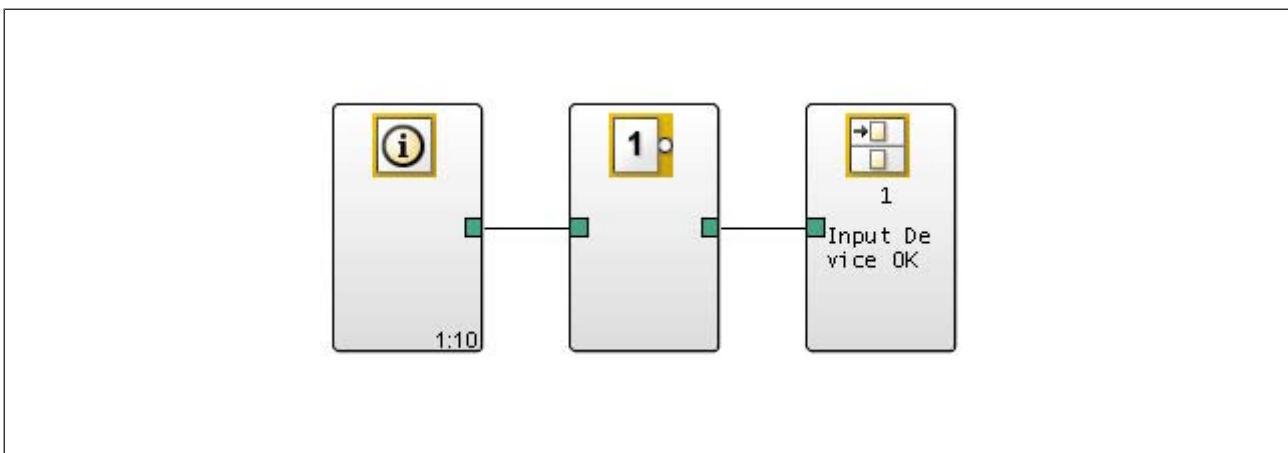

The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

### Example with position control

#### Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", with position control

Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" may be set during position control as a result of jitter on the encoder.


The set bit can be tolerated, i.e. evaluated in the user program in such a way that a shutdown will not occur if the following conditions are met:

- ▶ An additional position control signal must be provided from an external control system (e.g. PLC) and
- ▶ The signal must have the following status conditions:
  - Position control: Signal status = 1
  - Operation: Signal status = 0


During operation, diagnostic bit 10 must be evaluated in the user program in such a way that a set bit leads to a safety-related error reaction (shutdown).

## Speed monitors PNOZ ms4p

### Application example:

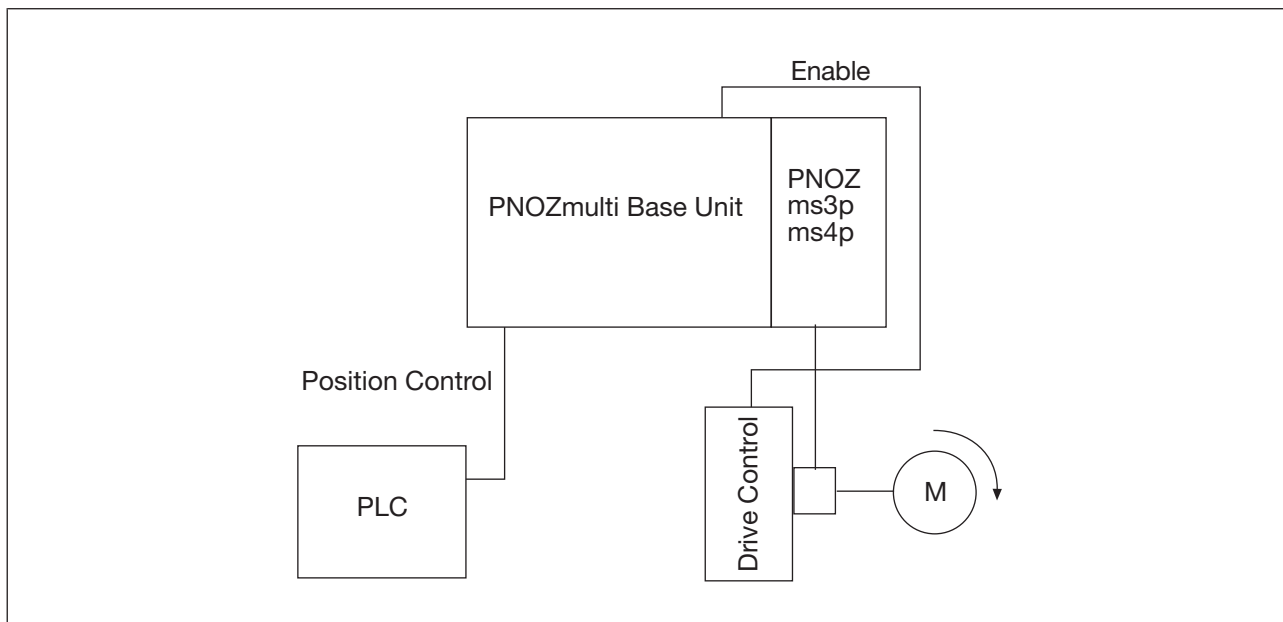

Depending on the operating mode, evaluation of diagnostic bit 10 can be implemented in the user program as follows:

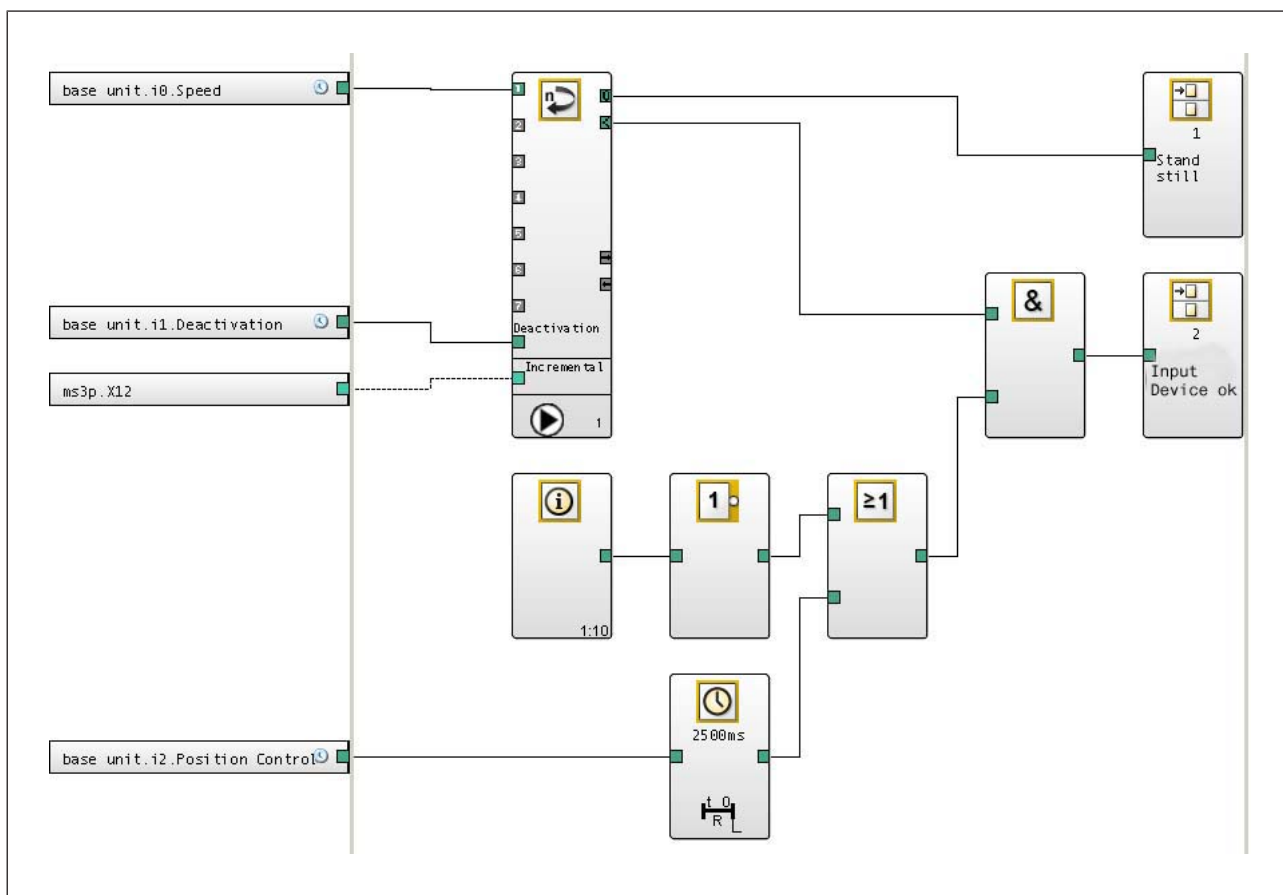

## Speed monitors

### PNOZ ms4p

---

An additional "Position Control" signal is incorporated. This signal indicates whether the relevant axis is in position control (signal status = 1) or in operation (signal status = 0).

The time element with configured switch-off delay operates as a start-up suppressor, as the bit: "Unfeasible or single-channel signal from the incremental encoder" may still be present for 2 s after leaving standstill.

The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

## Fieldbus modules

### PNOZ mc0p

---



## Overview

### Unit features

Using the product PNOZ mc0p:

Power supply used to supply voltage to the fieldbus modules PNOZ mc5p or PNOZ mc5.1p LWL.


The product has the following features:

- ▶ Interface to connect the base unit and a fieldbus module
- ▶ Galvanic isolation
- ▶ Max. 1 fieldbus module (PNOZ mc5p or PNOZ mc5.1p LWL) can be connected
- ▶ Supply voltage 24 V DC
- ▶ Status indicators
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Fieldbus modules

### PNOZ mc0p

#### Front view

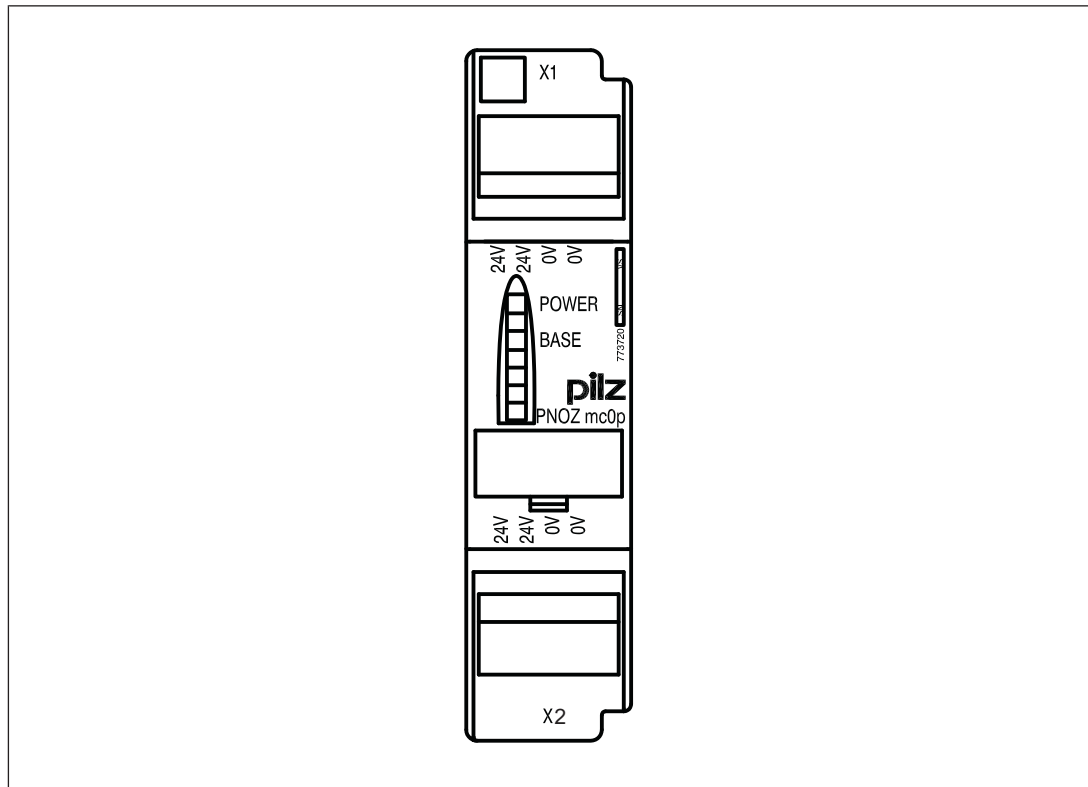


#### Function description

##### Functions

The PNOZ mc0p power supply provides the fieldbus module with the necessary internal supply voltage. This way the fieldbus module remains available even when the base unit is switched off. The power supply is connected to the base unit and fieldbus module via jumpers. When the 24 VDC supply voltage is applied, the “POWER” LED is lit. The “BASE” LED is lit when supply voltage is applied to the base unit.


**Fieldbus modules**  
PNOZ mc0p

**Block diagram**

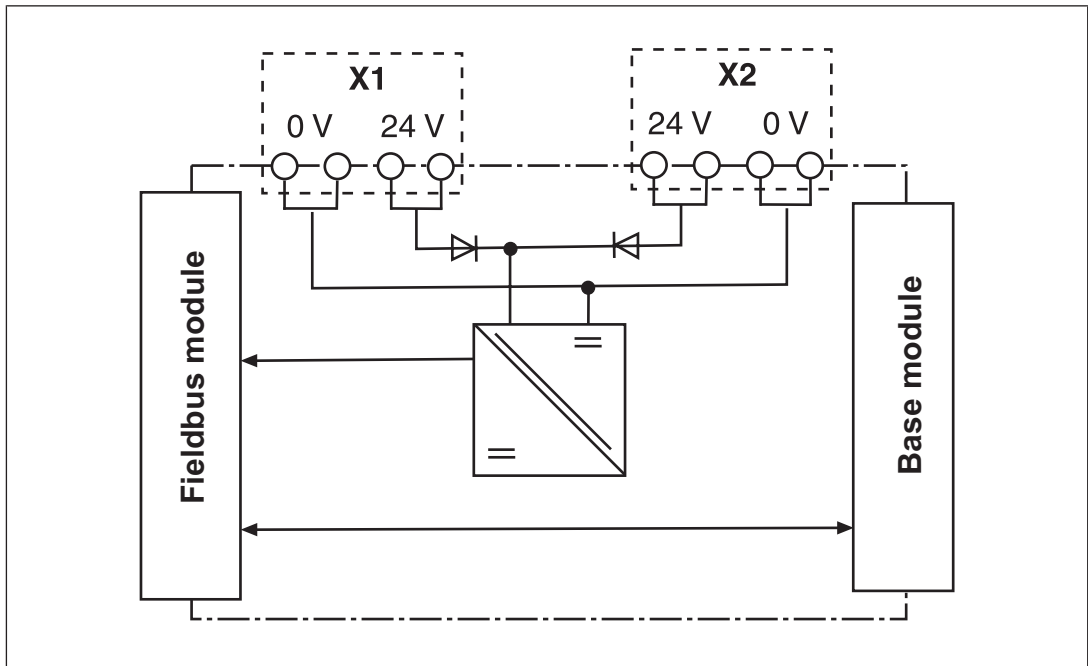

**Installation**

**Dimensions in mm**

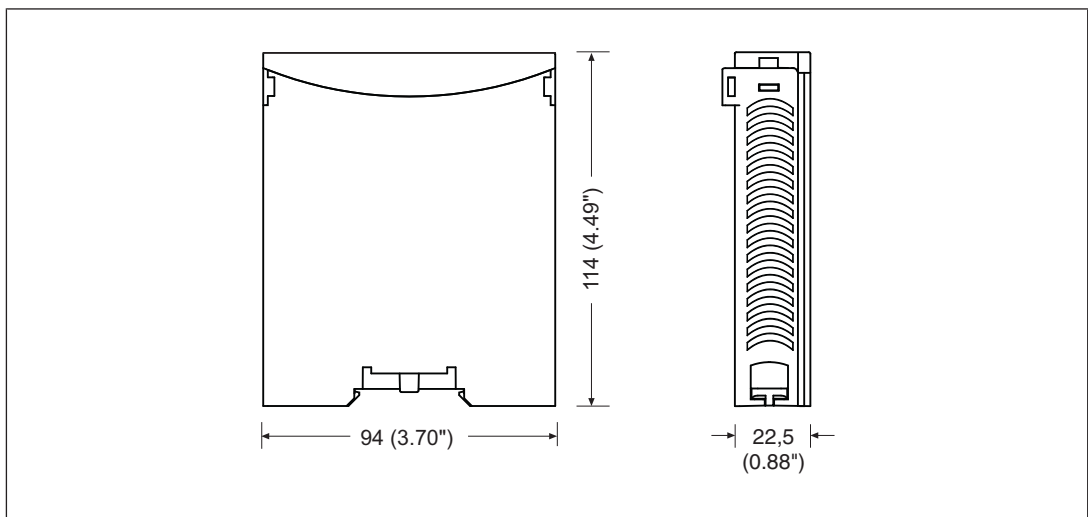



## Fieldbus modules

### PNOZ mc0p

## Commissioning

### General wiring guidelines

Please note:

- ▶ The PNOZ mc0p can be supplied by a separate power supply (see [Connection example](#) [388]). The power supply must meet the regulations for extra low voltages with protective separation (SELV, PELV).
- ▶ The torque setting of the screws on the connection terminals is specified under [Technical details](#) [388].
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Information given in the [Technical details](#) [388] must be followed.

### Connection


Supply voltage	AC	DC
<p><b>Supply voltage from Interbus master only:</b></p> <p>Connect the supply voltage to <b>X1</b> or <b>X2</b>.</p> <p>The fieldbus connection is maintained if the base unit is switched off.</p> <p>When the Interbus master is restarted, the power supply to the base unit must be reset.</p>	/	
<p><b>Supply voltage from Interbus master and base unit:</b></p> <p>Example:</p> <p>Connect the supply voltage from the base unit to <b>X1</b>.</p> <p>Connect the supply voltage from the Interbus master to <b>X2</b>.</p> <p>The fieldbus connection is maintained if the base unit is switched off.</p> <p>When the Interbus master is restarted, the fieldbus is available immediately.</p>	/	

## Fieldbus modules

### PNOZ mc0p

#### Connection example

Redundant power supply

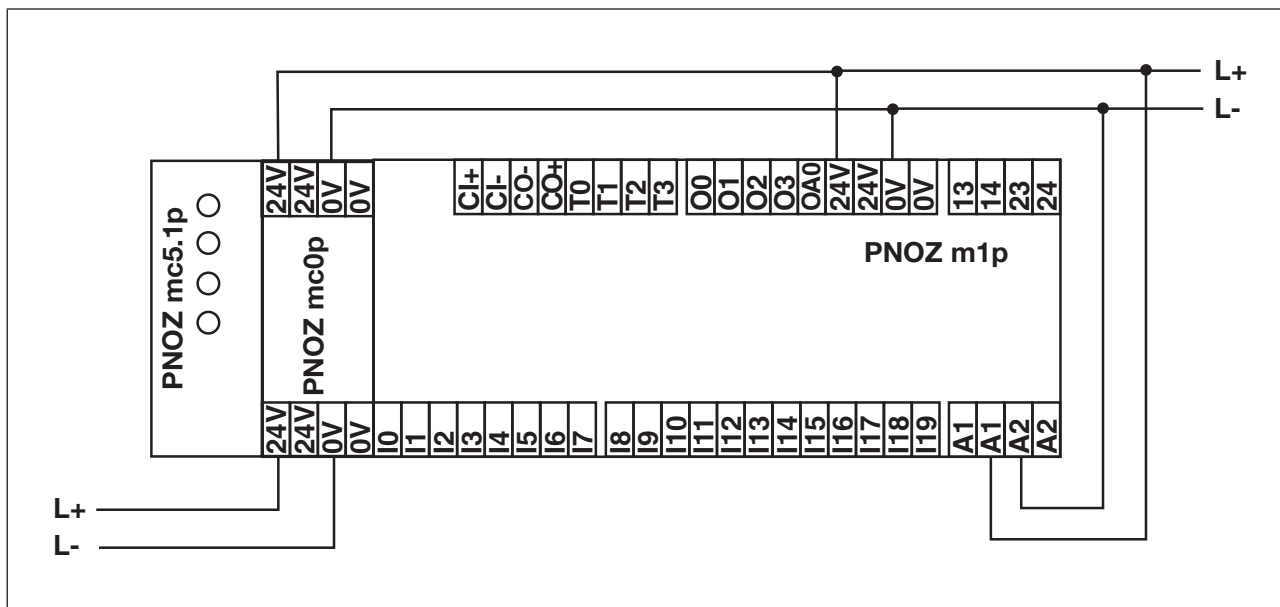

#### Technical details

##### General

Approvals **CCC, CE, EAC (Eurasian), cULus Listed**

##### Electrical data

Supply voltage

for	<b>Module supply</b>
Voltage	<b>24,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>5,0 W</b>
Residual ripple DC	<b>5 %</b>
Potential isolation	<b>yes</b>

Status indicator **LED**

##### Times

Supply interruption before de-energisation **20 ms**

##### Environmental data

Ambient temperature

In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 55 °C</b>

## Fieldbus modules

### PNOZ mc0p

<b>Environmental data</b>	
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>Module and system voltage</b>
Type of potential isolation	<b>Functional insulation</b>
Rated surge voltage	<b>500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>

## Fieldbus modules PNOZ mc0p

Mechanical data	
Conductor cross section with screw terminals	
1 core flexible	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm
Stripping length with screw terminals	7 mm
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	0,25 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm <sup>2</sup> , 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	94,0 mm
Width	22,5 mm
Depth	121,0 mm
Weight	125 g

Where standards are undated, the 2007-05 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order No.
PNOZ mc0p	Expansion module, power supply for fieldbus modules	773 720

### Accessories

#### Jumper

Product type	Features	Order No.
KOP-XE	Jumper	774 639

#### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 400
Set screw terminals	1 set of screw terminals	793 400

## Fieldbus modules

### PNOZ mc1p

---



## Overview


### Unit features

Using the product PNOZ mc1p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:


- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
  - 16 auxiliary outputs
- ▶ Status indicators
- ▶ Coated version:

Increased environmental requirements (see [Technical details](#) [ 395])
- ▶ Plug-in connection terminals:

either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Fieldbus modules PNOZ mc1p

### Front view

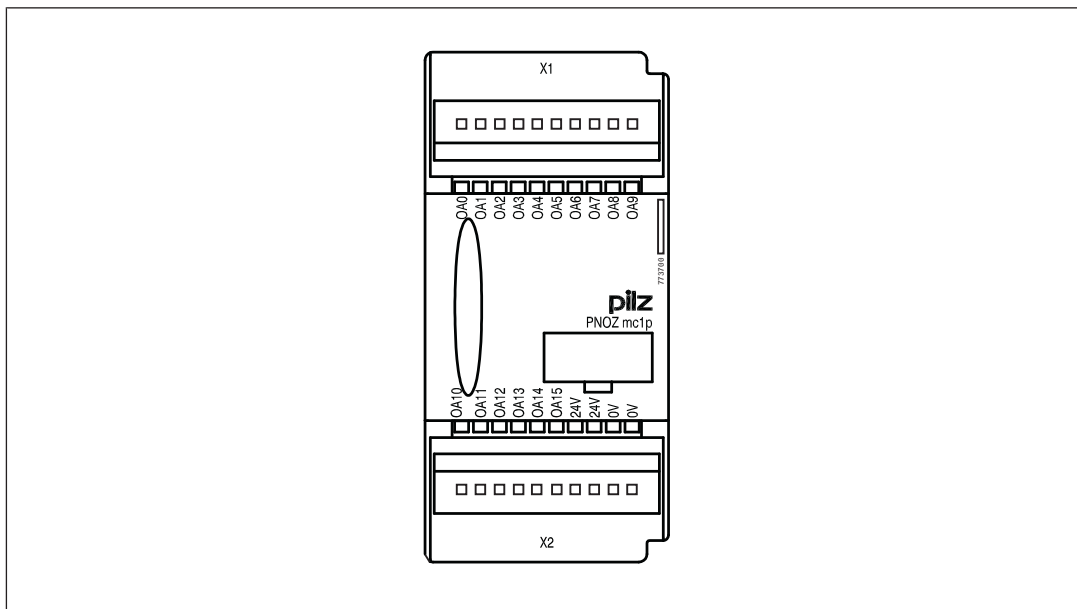

### Function description

#### Functions


The expansion module operates as a signal module with non-safety-related outputs.

The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.


## Fieldbus modules PNOZ mc1p

### Block diagram

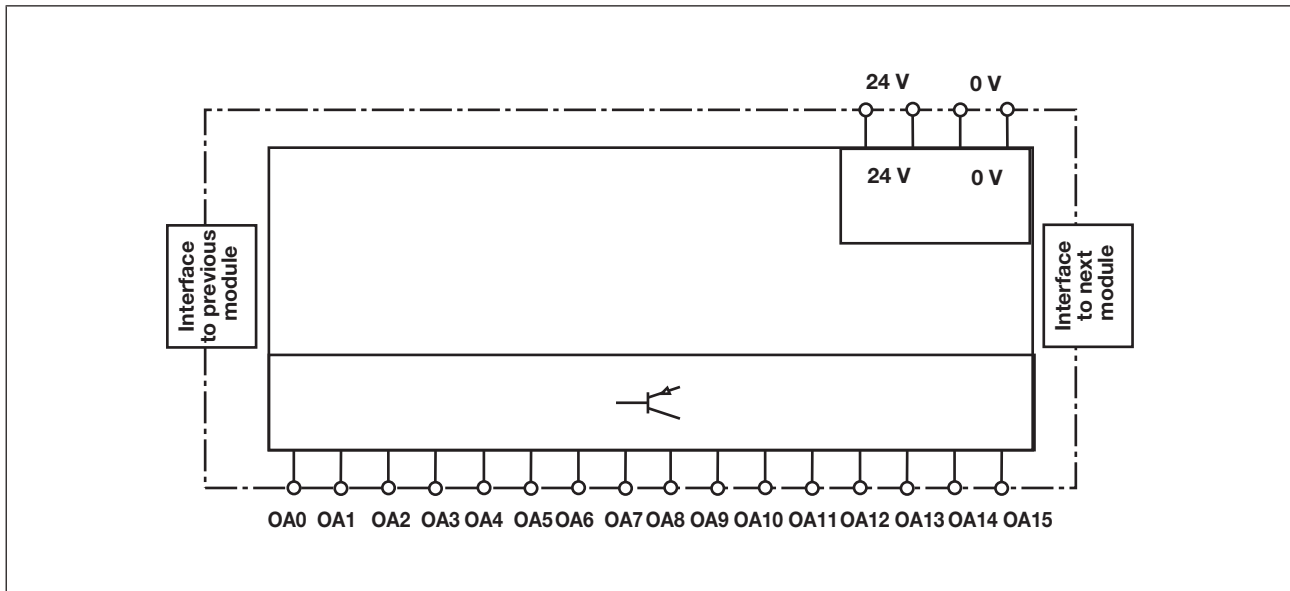

### Installation

#### Dimensions

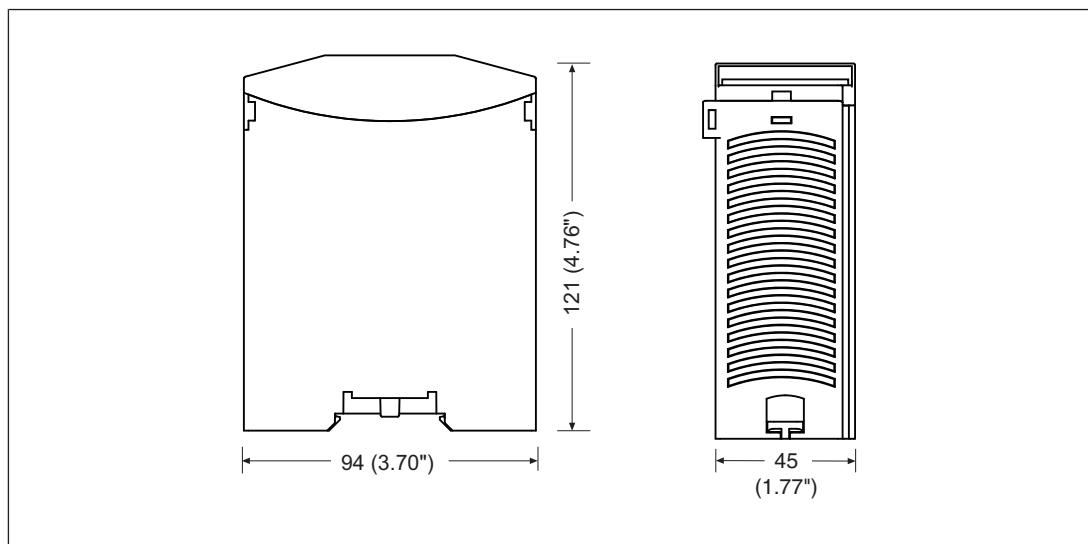

## Fieldbus modules PNOZ mc1p

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator.

Please note:

- ▶ 2 connection terminals are available for each of the supply connections 24 V and 0 V. This means that the supply voltage can be looped through several connections. The current at each terminal may not exceed 3 A.
- ▶ Outputs OA0 to OA15 are auxiliary outputs using semiconductor technology.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Information given in the [Technical details \[395\]](#) must be followed.

#### Connection

Supply voltage	AC	DC

Supply voltage

--	--	--

Semiconductor outputs



**Fieldbus modules**  
PNOZ mc1p

**Technical details**

<b>General</b>	<b>773700</b>	<b>773705</b>
Approvals	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed	BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
<b>Electrical data</b>	<b>773700</b>	<b>773705</b>
Supply voltage		
for	<b>Supply to the SC outputs</b>	<b>Supply to the SC outputs</b>
Voltage	<b>24 V</b>	<b>24 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>192,0 W</b>	<b>192,0 W</b>
Potential isolation	<b>yes</b>	<b>yes</b>
Supply voltage		
for	<b>Module supply</b>	<b>Module supply</b>
internal	<b>Via base unit</b>	<b>Via base unit</b>
Voltage	<b>5,0 V</b>	<b>5,0 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>	<b>-2 %/+2 %</b>
Power consumption	<b>0,6 W</b>	<b>0,6 W</b>
Status indicator	<b>LED</b>	<b>LED</b>
<b>Semiconductor outputs (standard)</b>	<b>773700</b>	<b>773705</b>
Number	<b>16</b>	<b>16</b>
Switching capability		
Voltage	<b>24 V</b>	<b>24 V</b>
Current	<b>0,50 A</b>	<b>0,50 A</b>
Power	<b>12,0 W</b>	<b>12,0 W</b>
Max. permitted overall performance of semiconductor outputs at an ambient temperature of > 50 °C	–	<b>144 W</b>
Galvanic isolation	<b>yes</b>	<b>yes</b>
Short circuit-proof	<b>yes</b>	<b>yes</b>
Residual current at "0"	<b>0,5 mA</b>	<b>0,5 mA</b>
Signal level at "1"	<b>UB - 0.5 VDC at 0.5 A</b>	<b>UB - 0.5 VDC at 0.5 A</b>
<b>Times</b>	<b>773700</b>	<b>773705</b>
Switch-on delay	<b>5,00 s</b>	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>	<b>20 ms</b>

## Fieldbus modules PNOZ mc1p

<b>Environmental data</b>	<b>773700</b>	<b>773705</b>
<b>Ambient temperature</b>		
In accordance with the standard	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>	<b>-25 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>	–
<b>Storage temperature</b>		
In accordance with the standard	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>	<b>-25 - 70 °C</b>
<b>Climatic suitability</b>		
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>	<b>Short-term</b>
EMC	<b>EN 61131-2</b>	<b>EN 61131-2</b>
<b>Vibration</b>		
In accordance with the standard	<b>EN 60068-2-6</b>	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>	<b>1g</b>
<b>Corrosive gas check</b>		
SO <sub>2</sub> : Concentration 10 ppm, duration 10 days, passive	–	<b>DIN V 40046-36</b>
H <sub>2</sub> S: Concentration 1 ppm, duration 10 days, passive	–	<b>DIN V 40046-37</b>
<b>Shock stress</b>		
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>
<b>Airgap creepage</b>		
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>30 V</b>	<b>30 V</b>
<b>Protection type</b>		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>
<b>Mechanical data</b>	<b>773700</b>	<b>773705</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>

## Fieldbus modules

### PNOZ mc1p

Mechanical data	773700	773705
DIN rail		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
Material		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals		
1 core flexible	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Torque setting with screw terminals	<b>0,25 Nm</b>	<b>0,25 Nm</b>
Stripping length with screw terminals	<b>7 mm</b>	<b>7 mm</b>
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>	<b>0,25 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
1 core flexible with crimp connector	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>	<b>0,25 - 0,75 mm<sup>2</sup>, 24 - 20 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>1</b>	<b>1</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>	<b>9 mm</b>
Dimensions		
Height	<b>94,0 mm</b>	<b>94,0 mm</b>
Width	<b>45,0 mm</b>	<b>45,0 mm</b>
Depth	<b>121,0 mm</b>	<b>121,0 mm</b>
Weight	<b>164 g</b>	<b>166 g</b>

Where standards are undated, the 2008-03 latest editions shall apply.

**Fieldbus modules****PNOZ mc1p****Order reference****Product**

Product type	Features	Order No.
PNOZ mc1p	Expansion module, 16 semiconductor outputs, standard	773 700
PNOZ mc1p coated version	Expansion module, 16 semiconductor outputs, standard, coated version	773 705

**Accessories****Terminator, jumper**

Product type	Features	Order No.
PNOZmulti bus terminator	Terminator	779 110
PNOZmulti bus terminator coated	Terminator, coated version	779 112
KOP-XE	Jumper	774 639
KOP-XE coated	Jumper, coated version	774 640

**Connection terminals**

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 700
Set screw terminals	1 set of screw terminals	793 700

## Fieldbus modules PNOZ mc2.1p

---



### Overview

#### Unit features

Using the product PNOZ mc2.1p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Network protocols: EtherCAT
- ▶ supports CANopen over EtherCAT (DS301 V4.02-compliant)
- ▶ Status indicators for communication with EtherCAT and for errors
- ▶ The data length and the content of the PDOs can be freely configured from EtherCAT-Master (max. 148 Bytes TxPDO and 20 Bytes RxPDO). The data are described in the document entitled "Communication Interfaces".
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus EtherCAT . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc2.1p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Fieldbus modules


### PNOZ mc2.1p

#### Front view

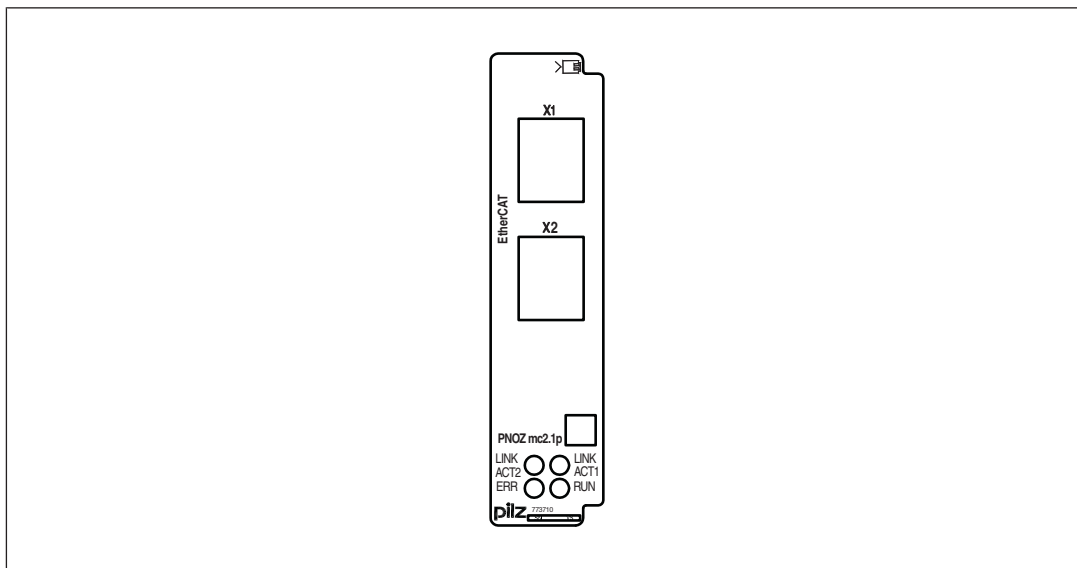

#### Legend:

- ▶ X1: EtherCAT IN
- ▶ X2: EtherCAT OUT
- ▶ LEDs:
  - LINK ACT1
  - LINK ACT2
  - ERR
  - RUN

**EtherCAT**  is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany

## Function description

### Operation

The virtual inputs and outputs that are to be transferred via EtherCAT are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mc2.1p are connected via a jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mc2.1p is configured and started automatically.

The connection to EtherCAT is made via the two RJ45 sockets.

LEDs indicate the status of the expansion module on EtherCAT.

The configuration is described in detail in the PNOZmulti Configurator's online help.

## Fieldbus modules

### PNOZ mc2.1p

#### Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

#### Assigning the inputs/outputs in the PNOZmulti Configurator to the EtherCAT inputs/outputs


Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data EtherCAT	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data EtherCAT	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

## Fieldbus modules


### PNOZ mc2.1p

#### Block diagram

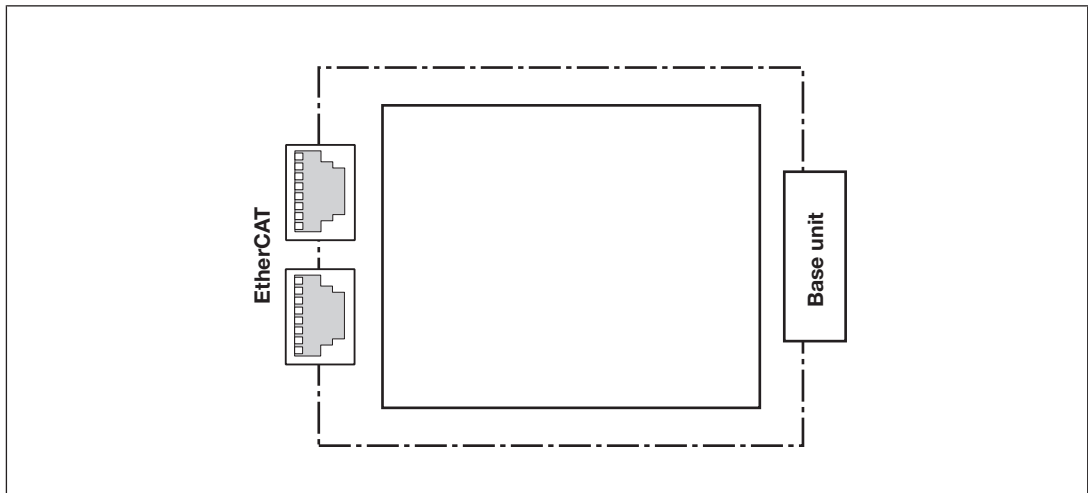

#### Installation

##### Dimensions in mm

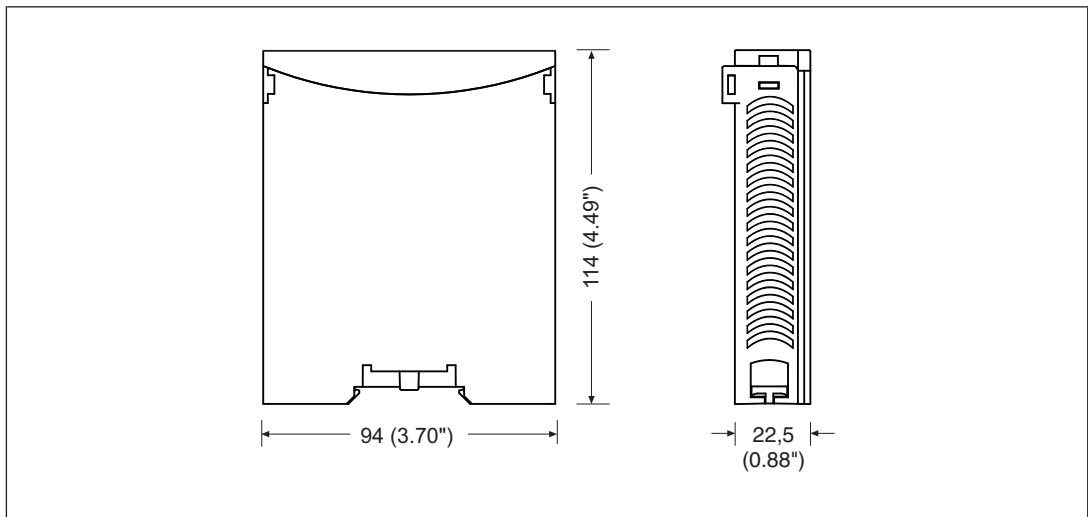

#### Commissioning

##### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

It is possible to define which inputs and outputs on the safety system will communicate with EtherCAT.

Please note:



## Fieldbus modules

### PNOZ mc2.1p


- ▶ Information given in the [Technical details \[404\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to EtherCAT:

- ▶ The following minimum requirements of the connection cable and connector must be met:
  - Only use standard industrial Ethernet cable and connectors.
  - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
  - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:
 

Ensure the requirements for the industrial use of EtherCAT are met, as stated in the Installation Manual published by the User Group.

### Interface assignment

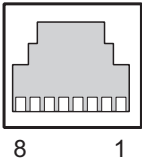RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

### Preparing for operation

- ▶ Install Device Description File
 

Install the *Device Description File* in your configuration software. You can only then use the PNOZ mc2.1p.
- ▶ Connect the supply voltage to the base unit:
 


Terminals **24 V** and **A1 (+)**: + 24 VDC

Terminals **0 V** and **A2 (-)**: 0 V

## Fieldbus modules

### PNOZ mc2.1p

#### Connection example

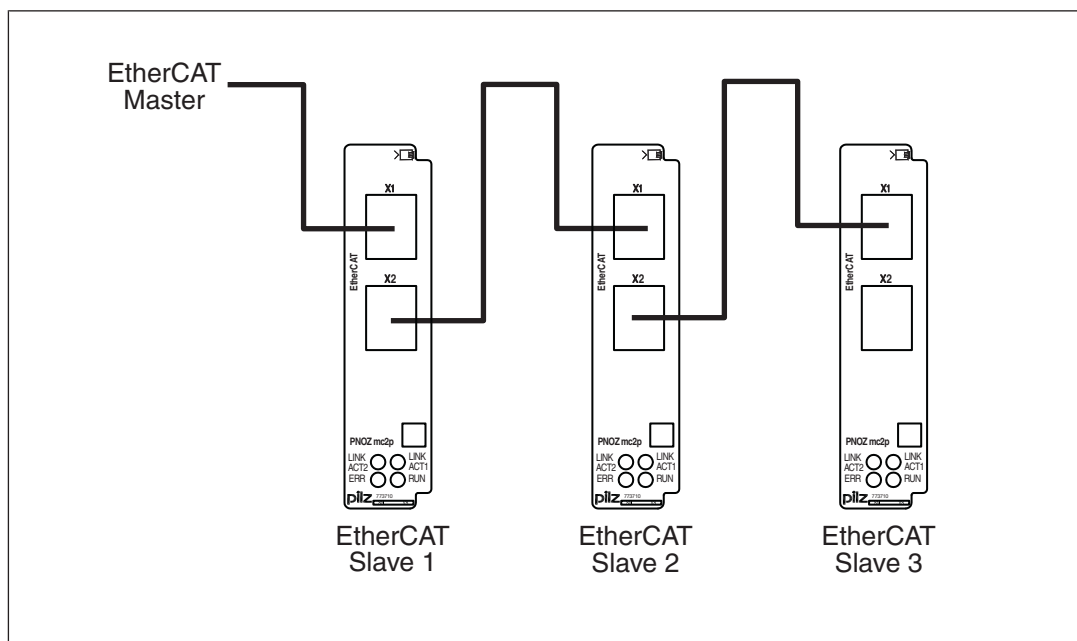

#### Technical details

General	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	5,0 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	1,6 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	EtherCAT
Device type	Slave
Log	CANopen over EtherCAT
Transmission rates	100 MBit/s
Connection	RJ45
Galvanic isolation	yes
Test voltage	500 V AC
Times	
Supply interruption before de-energisation	20 ms

**Fieldbus modules****PNOZ mc2.1p**

<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>

## Fieldbus modules

### PNOZ mc2.1p

#### Mechanical data

##### Dimensions

Height	<b>94,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>114,0 mm</b>

Weight	<b>140 g</b>
--------	--------------

Where standards are undated, the 2011-09 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order No.
PNOZ mc2.1p	Fieldbus module, EtherCAT	773 713

## Accessories

### Jumper

Product type	Features	Order No.
KOP-XE	Jumper	774 639

## Fieldbus modules

### PNOZ mc3p

---



## Overview

### Unit features

Using the product PNOZ mc3p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for PROFIBUS-DP
- ▶ Station addresses from 0 ... 99, selected via rotary switch
- ▶ Status indicators for communication with PROFIBUS-DP and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus PROFIBUS-DP . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc3p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Fieldbus modules

### PNOZ mc3p

#### Front view

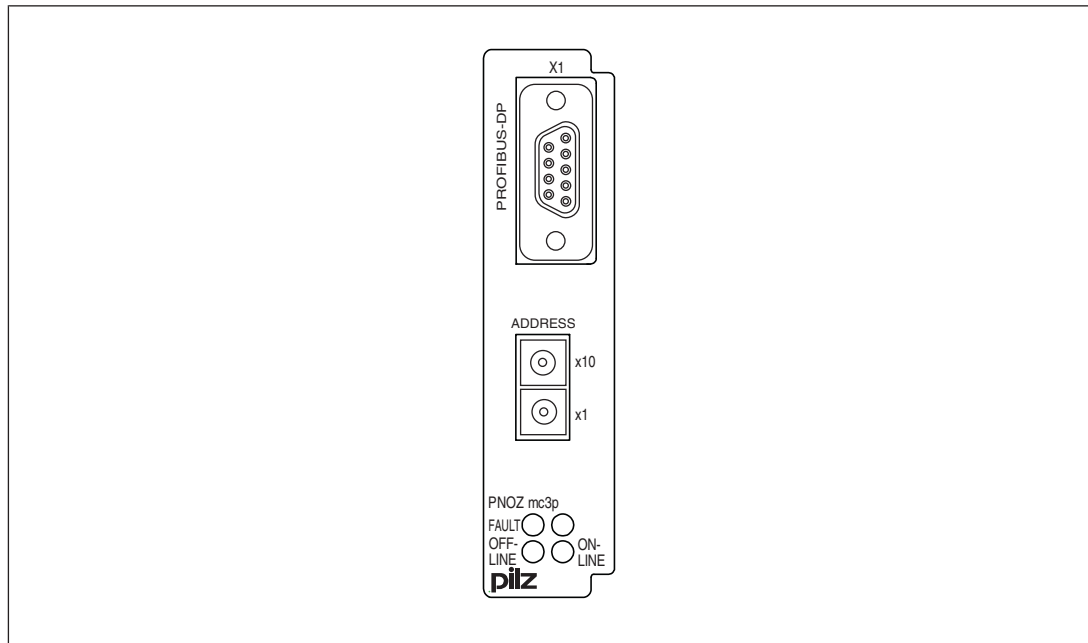

#### Key:

- ▶ X1:  
PROFIBUS-DP interface (female 9-pin D-Sub connector)
- ▶ LEDs:
  - FAULT
  - OFFLINE
  - ONLINE

## Function description

### Functions

The virtual inputs and outputs that are to be transferred via PROFIBUS are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mc3p are connected via a jumper. The expansion module PNOZ mc3p is also supplied with voltage via this jumper.

The station address is set via rotary switches. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mc3p is configured and started automatically.

LEDs indicate the status of the expansion module on PROFIBUS.

The configuration is described in detail in the PNOZmulti Configurator's online help.

## Fieldbus modules

### PNOZ mc3p

#### Input and output data

The data is structured as follows:

- ▶ Input area
 

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.
- ▶ Output range
 

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.
- ▶ Output range only: Byte 3
 

Bits 0 ... 4: Status of LEDs on the PNOZmulti

  - Bit 0: OFAULT
  - Bit 1: IFAULT
  - Bit 2: FAULT
  - Bit 3: DIAG
  - Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".


#### Assigning the inputs/outputs in the PNOZmulti Configurator to the EtherCAT inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data PROFIBUS-DP	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data PROFIBUS-DP	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


## Fieldbus modules PNOZ mc3p

### Block diagram

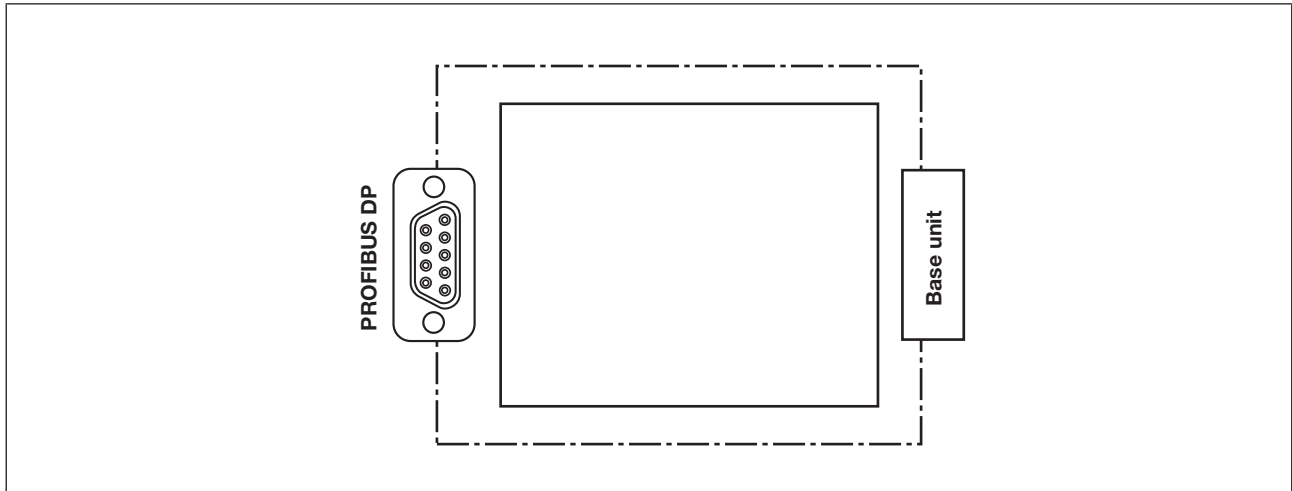

### Installation

#### Dimensions in mm

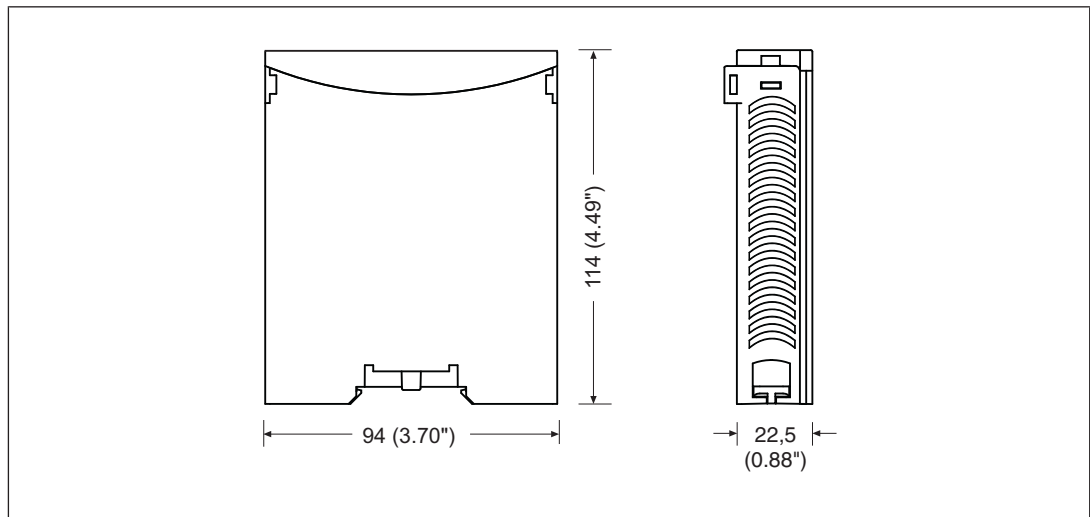



## Fieldbus modules

### PNOZ mc3p

## Commissioning

### Wiring

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[413\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.


#### Connecting the supply voltage

Connect the supply voltage to the base unit:

- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V

#### PROFIBUS DP interface

It is possible to define which outputs on the control system will communicate with PROFIBUS-DP. The connection to PROFIBUS-DP is made via a female 9-pin D-Sub connector in accordance with the guidelines of the PROFIBUS User Group (PNO).

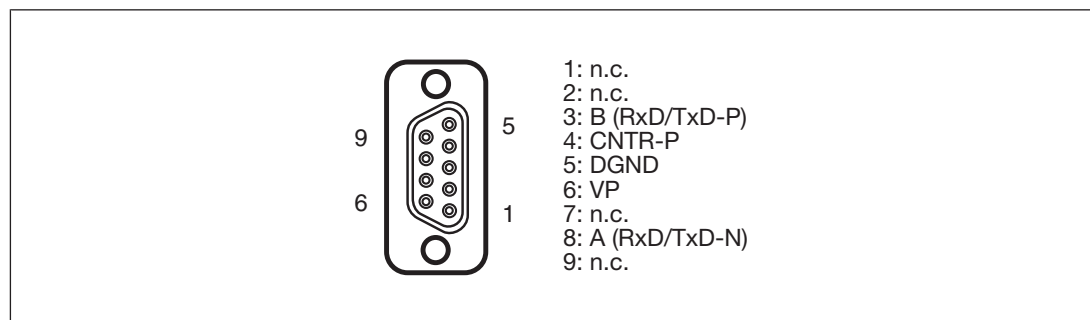

n.c. = not connected

Please note the following when connecting to PROFIBUS-DP:

- ▶ Only use metal plugs or metallised plastic plugs
- ▶ Twisted pair, screened cable must be used to connect the interfaces


## Fieldbus modules

### PNOZ mc3p


#### Preparing for operation

##### Setting the station address

The station address of the expansion module PNOZ mc3p is set between 0 ... 99 (decimal) via two rotary switches x1 and x10.

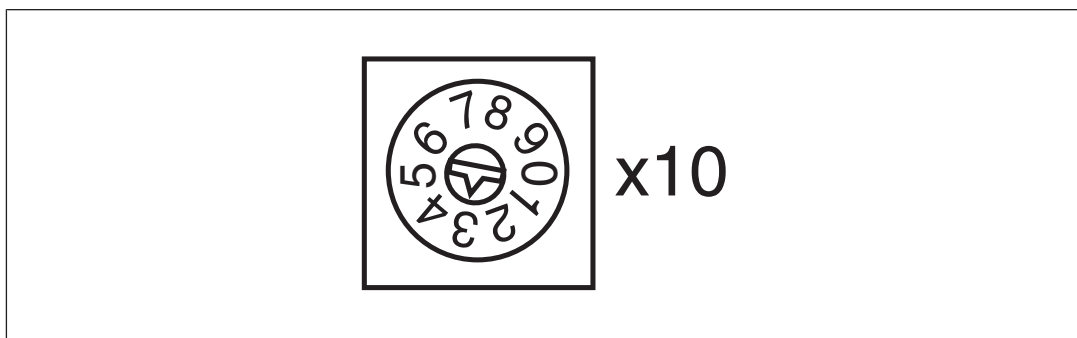

- ▶ On the upper rotary switch x10, use a small screwdriver to set the tens digit for the address ("3" in the example).

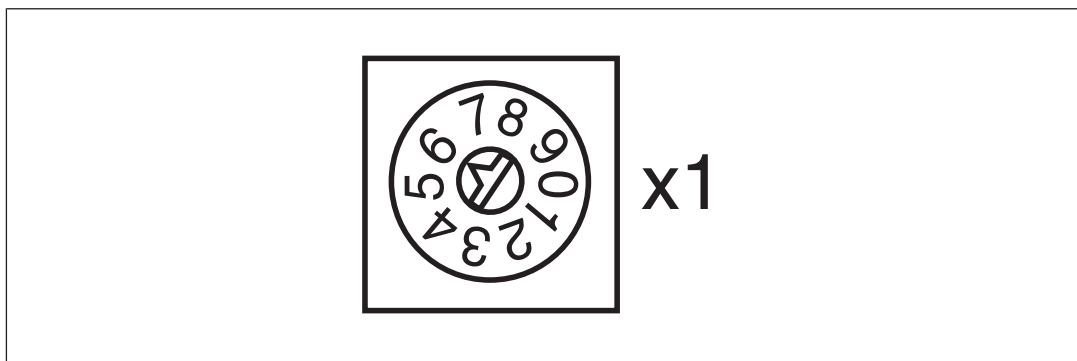


- ▶ On the lower rotary switch x1, set the ones digit for the address ("6" in the example). Station address 36 is set in the diagrams as an example.

##### Download modified project to the control system PNOZmulti

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

## Fieldbus modules PNOZ mc3p

### Connection example

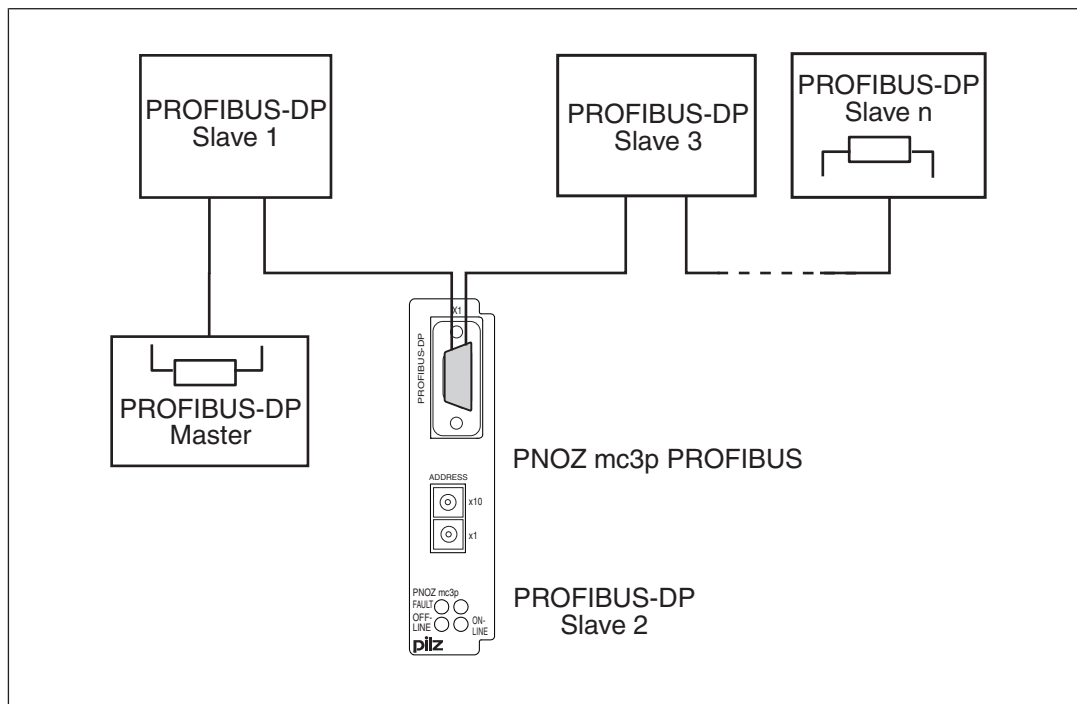

### Technical details

General	
Approvals	CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed
Electrical data	
Supply voltage	<b>Module supply</b>
for internal	<b>Via base unit</b>
Voltage	<b>5,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>2,5 W</b>
Status indicator	<b>LED</b>
Fieldbus interface	
Fieldbus interface	<b>PROFIBUS DP</b>
Device type	<b>Slave</b>
Station address	<b>0 - 99d</b>
Transmission rate	<b>9,6 kBit/s - 12 MBit/s</b>
Connection	<b>9-pin D-Sub female connector</b>
Galvanic isolation	<b>yes</b>
Test voltage	<b>500 V AC</b>

## Fieldbus modules

### PNOZ mc3p

<b>Times</b>	
Supply interruption before de-energisation	<b>20 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>

## Fieldbus modules

### PNOZ mc3p

#### Mechanical data

##### Dimensions

Height	<b>94,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>119,0 mm</b>

Weight	<b>119 g</b>
--------	--------------

Where standards are undated, the 2011-09 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order No.
PNOZ mc3p	Fieldbus module, PROFIBUS-DP	773 732

## Accessories

### Jumper

Product type	Features	Order No.
KOP-XE	Jumper	774 639

## Fieldbus modules

### PNOZ mc4p

---




## Overview

### Unit features

Using the product PNOZ mc4p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for DeviceNet
- ▶ Station addresses from 0 ... 63 can be selected via DIP switches
- ▶ Status indicators for communication with DeviceNet and for errors
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.
- ▶ Coated version:  
Increased environmental requirements (see [Technical details](#) [ 422])

## Fieldbus modules

### PNOZ mc4p

#### Front view

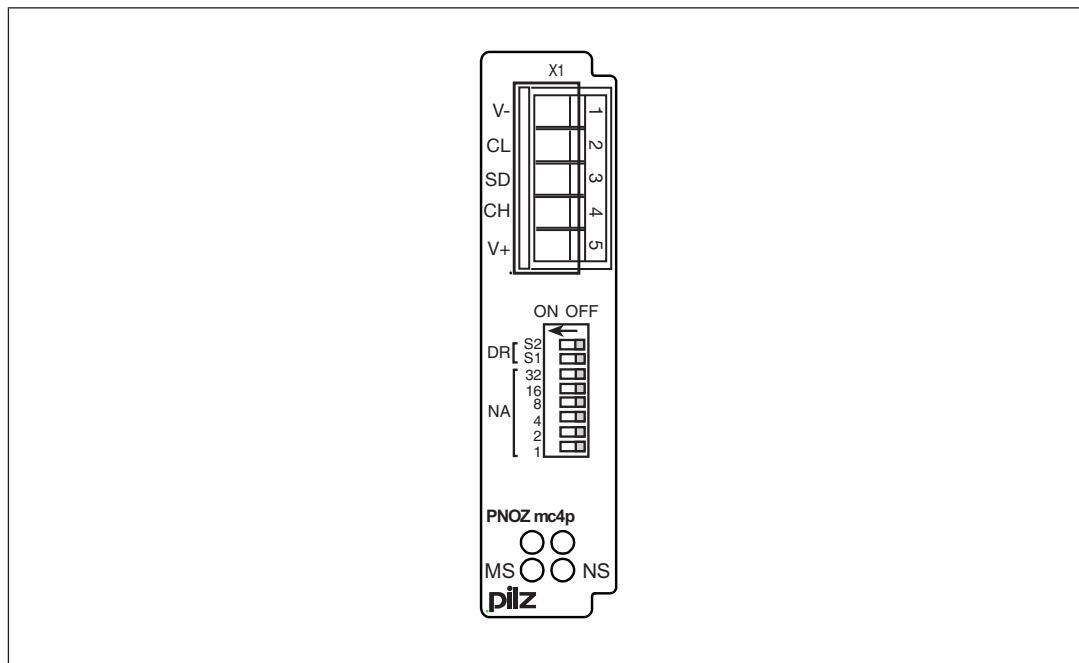

#### Legend:

- ▶ X1: DeviceNet interface (5-pin screw connector)
- ▶ LED:
  - Power
  - NS
  - MS

## Function description

### Operation

The virtual inputs and outputs that are to be transferred via DeviceNet are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mc4p are connected via a jumper. The expansion module PNOZ mc4p is also supplied with voltage via this jumper.

The station address and the transmission rate are set using DIP switches. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mc4p is configured and started automatically.

LEDs indicate the status of the expansion module on DeviceNet.

The configuration is described in detail in the PNOZmulti Configurator's online help.

## Fieldbus modules

### PNOZ mc4p

#### Input and output data

The data is structured as follows:

- ▶ Input area
 

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.
- ▶ Output range
 

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.
- ▶ Output range only: Byte 3
 

Bits 0 ... 4: Status of LEDs on the PNOZmulti

  - Bit 0: OFAULT
  - Bit 1: IFAULT
  - Bit 2: FAULT
  - Bit 3: DIAG
  - Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

#### Assigning the inputs/outputs in the PNOZmulti Configurator to the DeviceNet inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data DeviceNet	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data DeviceNet	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7


The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")



## Fieldbus modules


### PNOZ mc4p

#### Block diagram

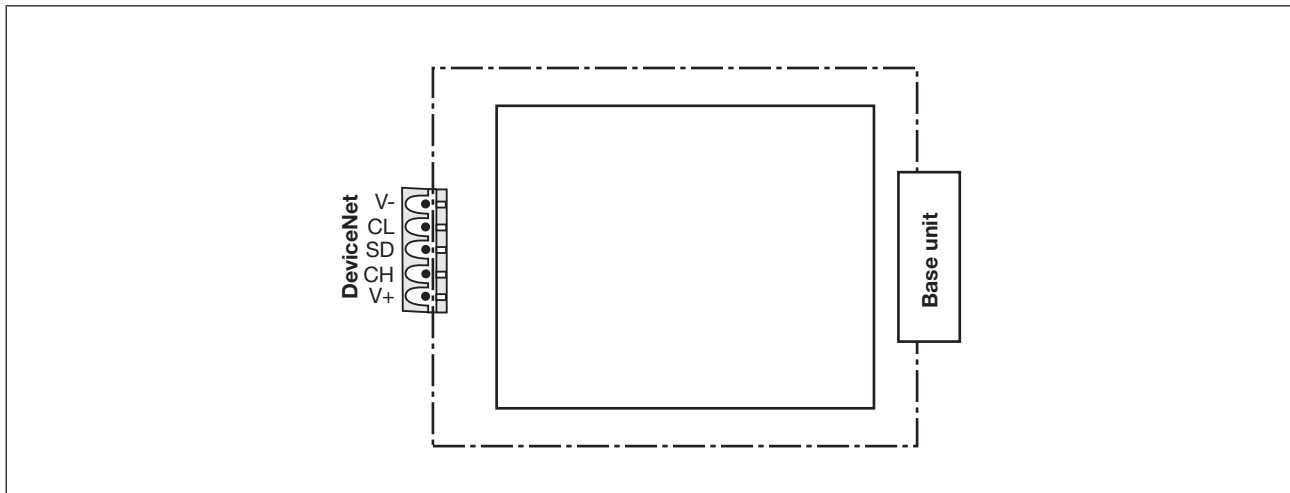

#### Installation

##### Dimensions in mm

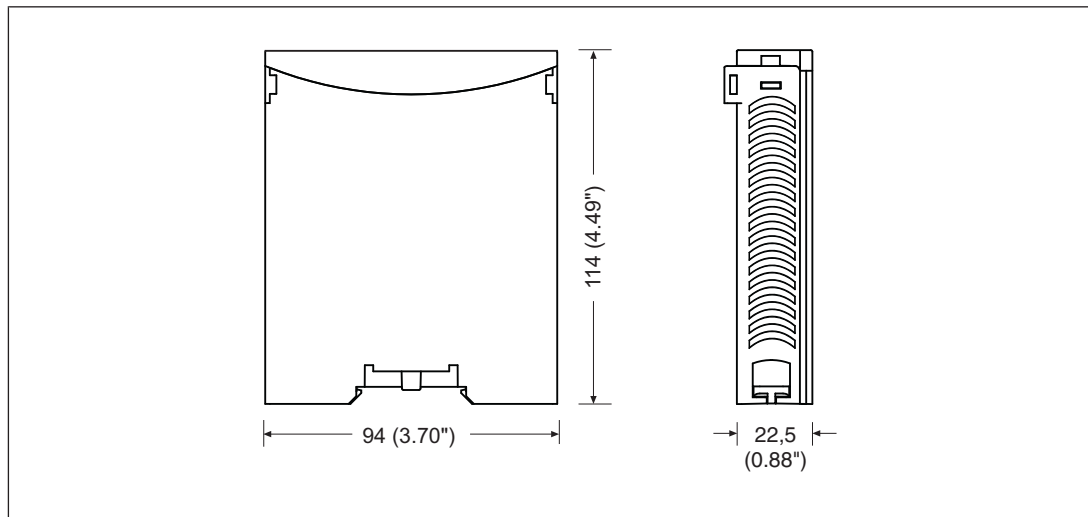

#### Commissioning

##### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[422\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.

## Fieldbus modules

### PNOZ mc4p

- ▶ The power supply must meet the regulations for extra low voltages with protective separation.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.


#### Connecting the supply voltage

Connect the supply voltage to the base unit:

- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V

#### DeviceNet interface

It is possible to define which outputs on the control system will communicate with DeviceNet. The connection to DeviceNet is made via a 5-pin screw connector.

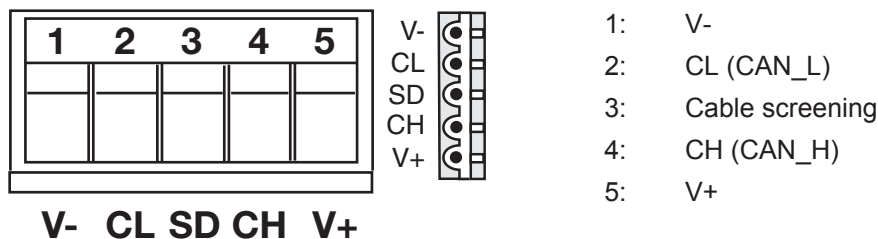

#### Termination DeviceNet

To minimise cable reflection and to guarantee a defined rest signal on the transmission line, DeviceNet must be terminated at both ends.

#### Setting the transmission rate

Set the transmission rate using DIP switches S1 and S2 (DR).

Transmission rate	DIP switch	
	S1	S2
125 kBit/s	Off	Off
250 kBit/s	On	Off
500 kBit/s	Off	On
---	On	On

## Fieldbus modules

### PNOZ mc4p

#### Setting the station address


The station address of the expansion module PNOZ mc4p is set from 0 ... 63 (binary) using DIP switches 1 to 32.

Station address	DIP switch					
	32	16	8	4	2	1
0	Off	Off	Off	Off	Off	Off
1	Off	Off	Off	Off	Off	On
2	Off	Off	Off	Off	On	Off
3	Off	Off	Off	Off	On	On
...	...	...	...	...	...	...
62	On	On	On	On	On	Off
63	On	On	On	On	On	On

#### Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

#### Connection example

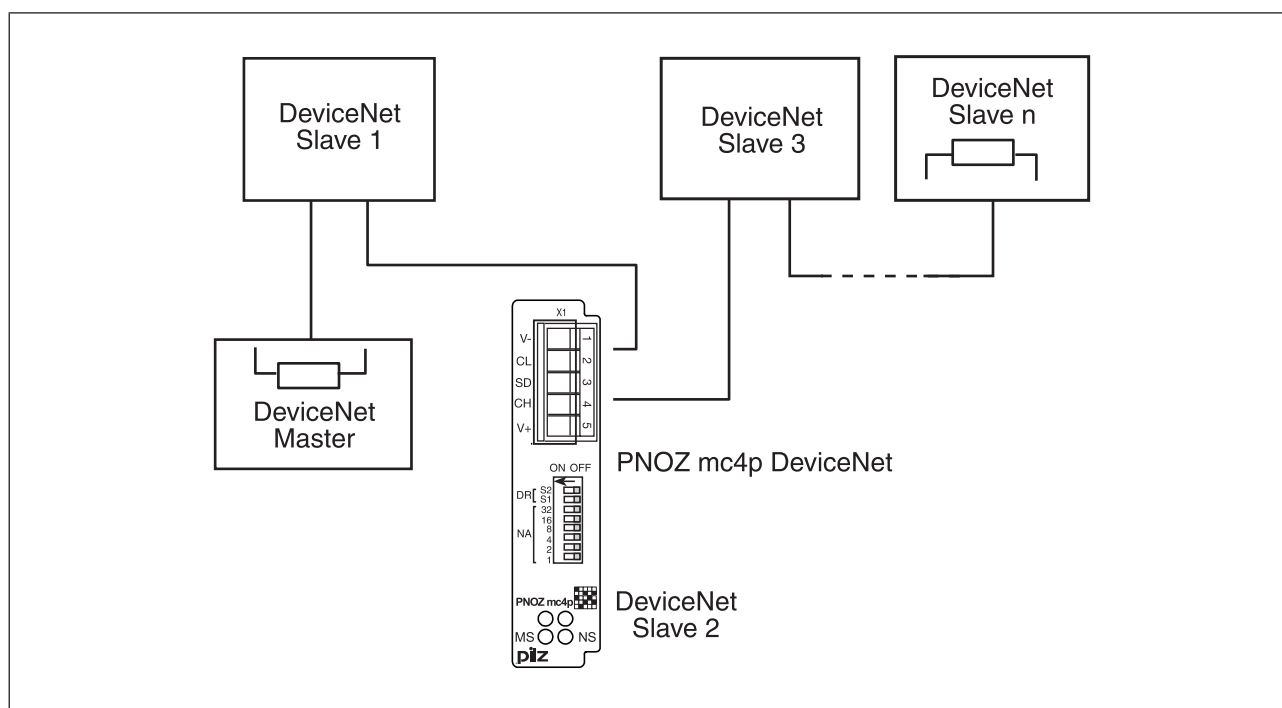

## Fieldbus modules

### PNOZ mc4p

#### Technical Details

<b>General</b>	<b>773711</b>	<b>773729</b>
Approvals	CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed	CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed
<b>Electrical data</b>	<b>773711</b>	<b>773729</b>
Supply voltage		
for	<b>Module supply</b>	<b>Module supply</b>
internal	<b>Via base unit</b>	<b>Via base unit</b>
Voltage	<b>5,0 V</b>	<b>5,0 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>	<b>-2 %/+2 %</b>
Power consumption	<b>1,0 W</b>	<b>1,6 W</b>
Status indicator	<b>LED</b>	<b>LED</b>
<b>Fieldbus interface</b>	<b>773711</b>	<b>773729</b>
Fieldbus interface	<b>DeviceNet</b>	<b>DeviceNet</b>
External supply (DC)	<b>24 V</b>	<b>24 V</b>
Power consumption	<b>0,75 W</b>	<b>0,75 W</b>
Device type	<b>Slave</b>	<b>Slave</b>
Station address	<b>0 ... 63d</b>	<b>0 ... 63d</b>
Transmission rates	<b>125 kBit/s, 250 kBit/s, 500 kBit/s</b>	<b>125 kBit/s, 250 kBit/s, 500 kBit/s</b>
Connection	<b>5-pin Combicon plug-in connector</b>	<b>5-pin Combicon plug-in connector</b>
Galvanic isolation	<b>yes</b>	<b>yes</b>
Test voltage	<b>500 V AC</b>	<b>500 V AC</b>
<b>Times</b>	<b>773711</b>	<b>773729</b>
Supply interruption before de-energisation	<b>20 ms</b>	<b>20 ms</b>
<b>Environmental data</b>	<b>773711</b>	<b>773729</b>
Ambient temperature		
In accordance with the standard	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>	<b>0 - 50 °C</b>
Storage temperature		
In accordance with the standard	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>	<b>-25 - 70 °C</b>
Climatic suitability		
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>	<b>Short-term</b>
EMC	<b>EN 61131-2</b>	<b>EN 61131-2</b>

## Fieldbus modules PNOZ mc4p

<b>Environmental data</b>	<b>773711</b>	<b>773729</b>
<b>Vibration</b>		
In accordance with the standard	<b>EN 60068-2-6</b>	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>	<b>1g</b>
<b>Shock stress</b>		
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>
<b>Airgap creepage</b>		
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>30 V</b>	<b>30 V</b>
<b>Protection type</b>		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>
<b>Mechanical data</b>	<b>773711</b>	<b>773729</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>
<b>DIN rail</b>		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
<b>Material</b>		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
<b>Dimensions</b>		
Height	<b>94,0 mm</b>	<b>94,0 mm</b>
Width	<b>22,5 mm</b>	<b>22,5 mm</b>
Depth	<b>122,0 mm</b>	<b>122,0 mm</b>
Weight	<b>110 g</b>	<b>143 g</b>

Where standards are undated, the 2010-05 latest editions shall apply.

## Fieldbus modules

### PNOZ mc4p

---

#### Order reference

##### Product

Product type	Features	Order No.
PNOZ mc4p	Fieldbus module, DeviceNet	773 711
PNOZ mc4p coated version	Fieldbus module, DeviceNet, coated version	773 729

##### Accessories

##### Jumper

Product type	Features	Order No.
KOP-XE	Jumper	774 639

## Fieldbus modules PNOZ mc5p

---



### Overview

#### Unit features

Using the product PNOZ mc5p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti .


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for INTERBUS
- ▶ Transmission rate, selectable between 500 kBit/s and 2 MBit/s
- ▶ Status indicators for communication with INTERBUS and for errors
- ▶ Max. 1 PNOZ mc5p can be connected to the base unit
- ▶ In the PNOZmulti Configurator, 24 inputs (standard) and 24 outputs (standard) can be configured for communication via a fieldbus.
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Fieldbus modules

### PNOZ mc5p

#### Front view

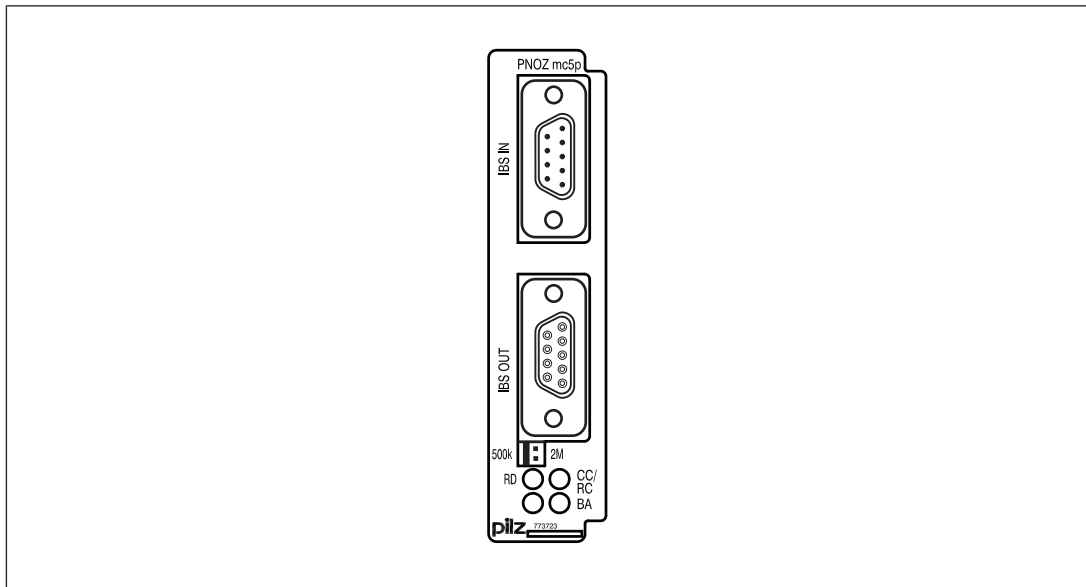

#### Function description

##### Functions

The data to be transferred via INTERBUS is selected and configured in the PNOZmulti Configurator. The base unit and PNOZ fieldbus module PNOZ mc5p are connected via a jumper. The fieldbus module is also supplied with voltage PNOZ mc5p via this jumper. After the supply voltage is switched on or the safety system PNOZmulti is reset, the fieldbus module PNOZ mc5p is configured and started automatically.

##### Input and output data

The data is structured as follows:

- ▶ Input area
  - The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.
- ▶ Output range
  - The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.
- ▶ Output range only: Byte 3
  - Bits 0 ... 4: Status of LEDs on the PNOZmulti
    - Bit 0: OFAULT
    - Bit 1: IFAULT



## Fieldbus modules

### PNOZ mc5p

- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN
- Bit 5: Data is being exchanged.


Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

### Assigning the inputs/outputs in the PNOZmulti Configurator to the INTERBUS inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data INTERBUS	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data INTERBUS	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


### Block diagram

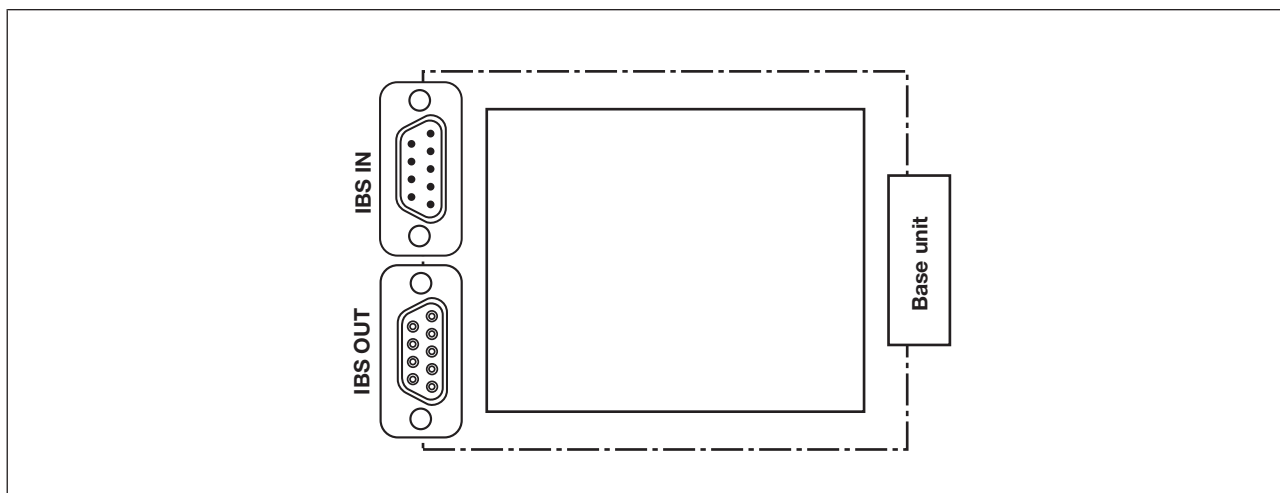

## Fieldbus modules PNOZ mc5p

### Installation

#### Dimensions in mm

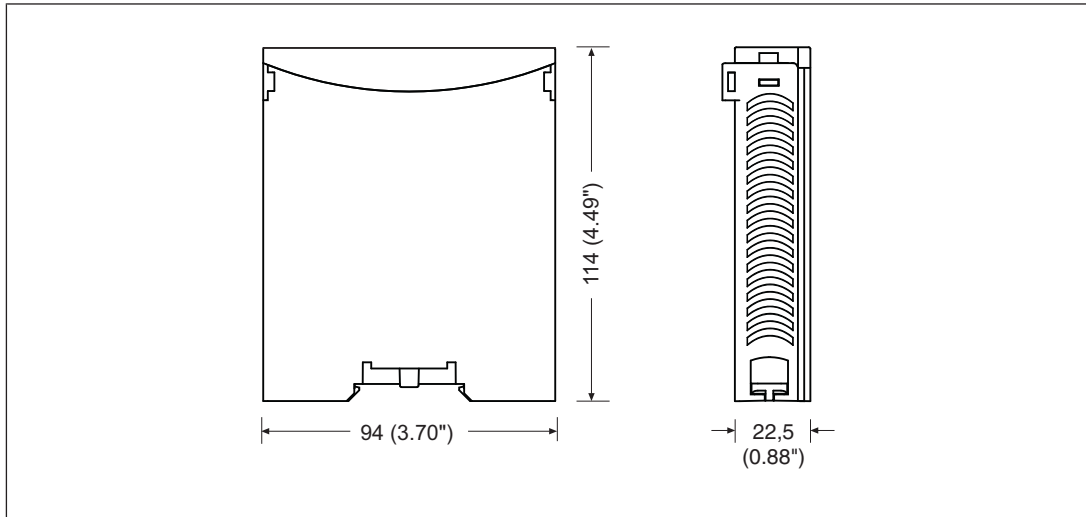


### Commissioning

#### Preparing for commissioning

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

It is possible to define which outputs on the safety system will communicate with INTERBUS. The connection to INTERBUS is made via two female 9-pin D-Sub screw connectors

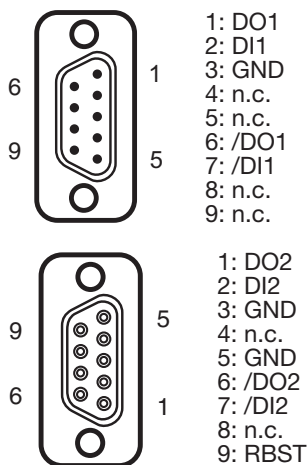

n. c. = not connected

## Fieldbus modules

### PNOZ mc5p

---

Please note:

- ▶ Information given in the "Technical details" must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to INTERBUS:

- ▶ Only use metal plugs or metallised plastic plugs
- ▶ Twisted pair, screened cable must be used to connect the interfaces

#### Setting the transmission rate

The transmission rate is set using a jumper. You can choose between 500 kBit/s and 2 MBit/s.

500 kBit/s:            500k  2M

2 MBit/s                500k  2M

#### Connecting the supply voltage

Connect the supply voltage to the base unit:


- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V

#### Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

## Fieldbus modules PNOZ mc5p

### Connection example

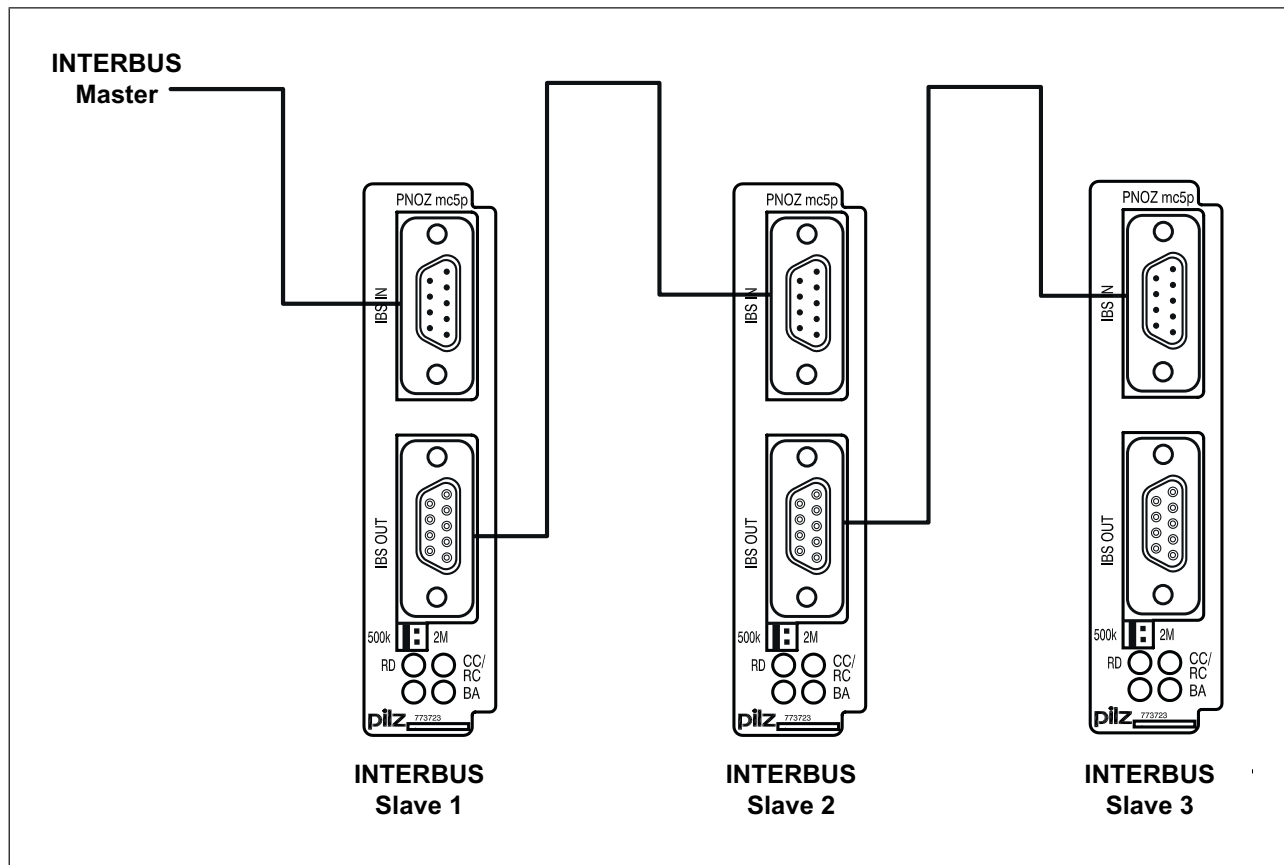

### Technical Details

#### General

Approvals

CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed

#### Electrical data

Supply voltage

for

**Module supply**

internal

**Via base unit**

Voltage

**5,0 V**

Kind

**DC**

Voltage tolerance

**-2 %/+2 %**

Power consumption

**2,5 W**

Status indicator

**LED**

#### Fieldbus interface

Fieldbus interface

**Interbus S**

Device type

**Slave**

## Fieldbus modules

### PNOZ mc5p

<b>Fieldbus interface</b>	
Transmission rates	<b>2 MBit/s, 500 kBit/s</b>
Connection IBS IN	<b>9-pin D-Sub male connector</b>
Connection IBS OUT	<b>9-pin D-Sub female connector</b>
Galvanic isolation	<b>yes</b>
Test voltage	<b>500 V AC</b>
<b>Times</b>	
Supply interruption before de-energisation	<b>20 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>

## Fieldbus modules

### PNOZ mc5p

#### Mechanical data

##### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

##### Material

Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>

##### Dimensions

Height	<b>94,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>119,0 mm</b>

##### Weight

**155 g**

Where standards are undated, the 2007-05 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order No.
PNOZ mc5p	Fieldbus module, INTERBUS	773 723

## Accessories

### Jumper

Product type	Features	Order No.
KOP-XE	Jumper	774 639

## Fieldbus modules

### PNOZ mc5.1p

---



## Overview

### Unit features

Using the product PNOZ mc5.1p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti .


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for INTERBUS with fibre-optic cable
- ▶ Transmission rate, selectable between 500 kBit/s and 2 MBit/s
- ▶ Status indicators for communication with INTERBUS and for errors
- ▶ F-SMA connection technology
- ▶ Max. 1 PNOZ mc5.1p can be connected to the base unit
- ▶ In the PNOZmulti Configurator, 24 inputs (standard) and 24 outputs (standard) can be configured for communication via a fieldbus.
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Fieldbus modules

### PNOZ mc5.1p

#### Front view

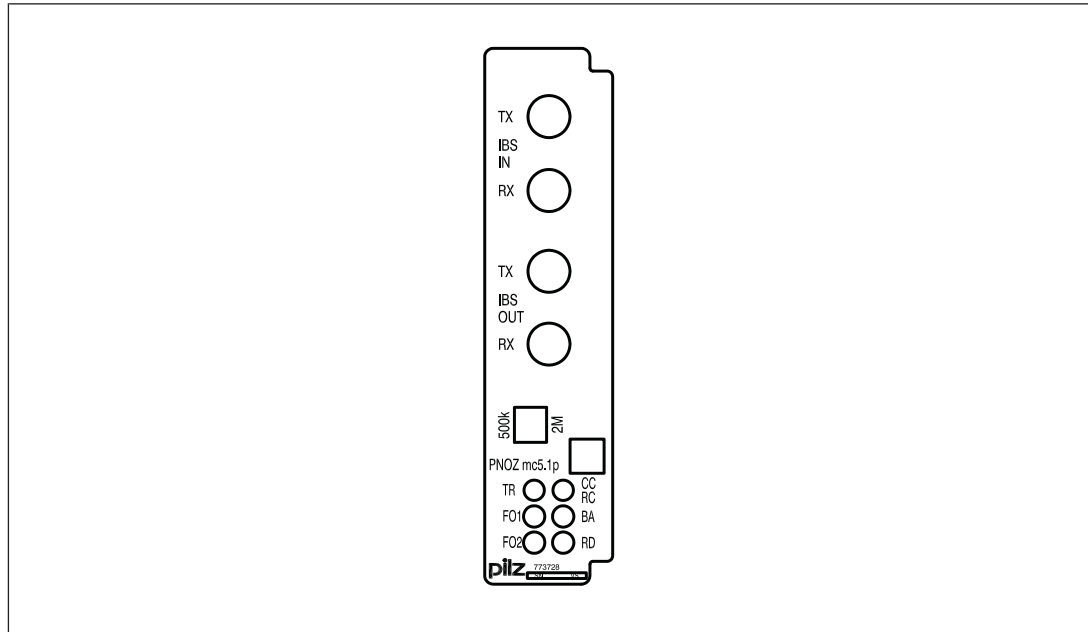

#### Legend

<b>IBS IN</b>	Remote bus IN
TX	Transmitter
RX	Receiver
<b>IBS OUT</b>	Remote bus OUT
TX	Transmitter
RX	Receiver
<b>LEDs:</b>	CR/CC, BA, RD, TR, FO1, FO2

## Function description

### Functions

The data to be transferred via INTERBUS LWL is selected and configured in the PNOZmulti Configurator. The base unit and PNOZ fieldbus module PNOZ mc5.1p are connected via a jumper. The fieldbus module is also supplied with voltage PNOZ mc5.1p via this jumper. After the supply voltage is switched on or the safety system PNOZmulti is re-set, the fieldbus module PNOZ mc5.1p is configured and started automatically.



## Fieldbus modules

### PNOZ mc5.1p

#### Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

#### Assigning the inputs/outputs in the PNOZmulti Configurator to the INTERBUS inputs/outputs


Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data INTERBUS LWL	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data INTERBUS LWL	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

## Fieldbus modules


### PNOZ mc5.1p

#### Block diagram

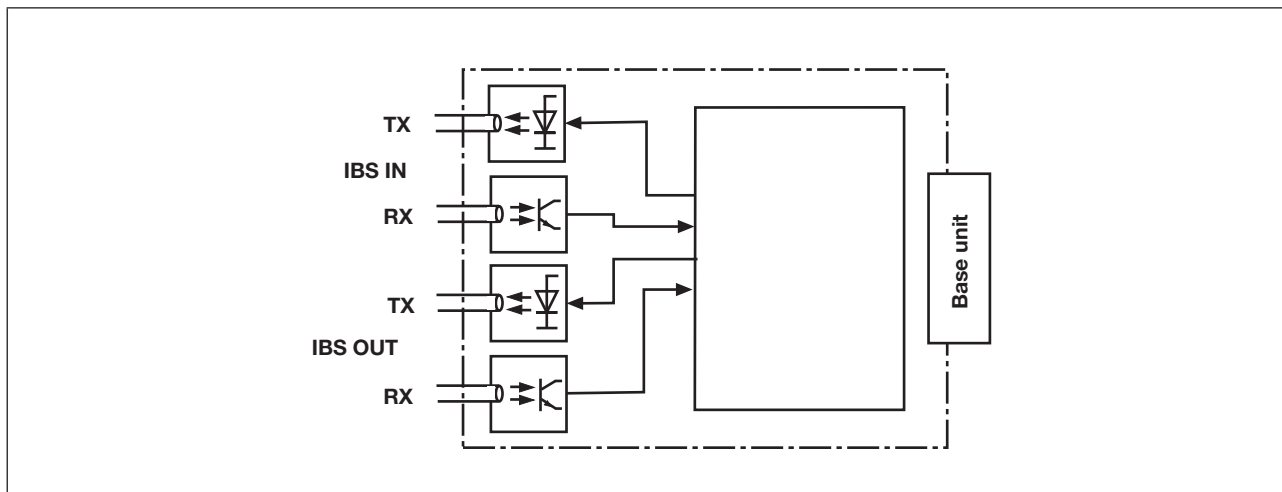

#### Installation

##### Dimensions in mm

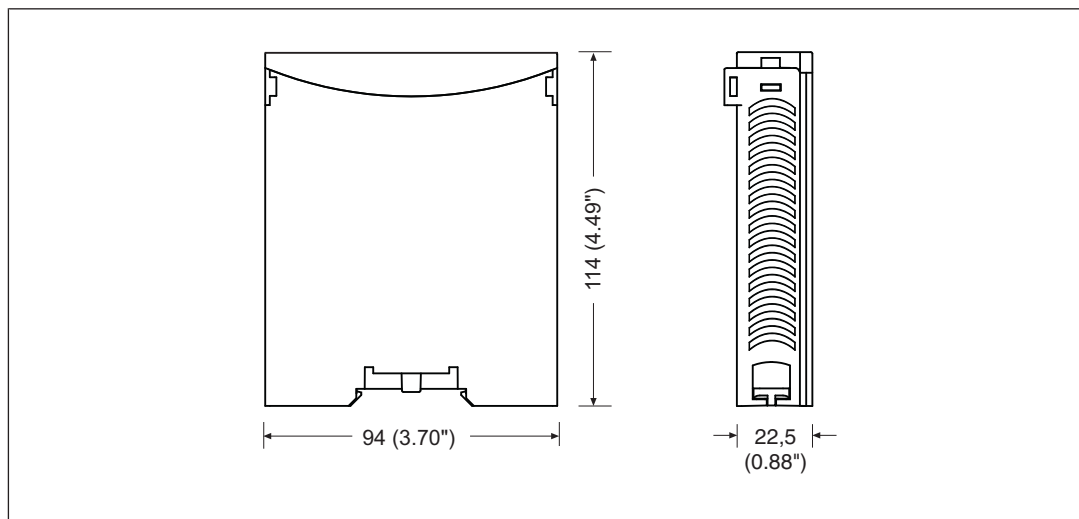

#### Commissioning

##### Preparing for commissioning

Please note the following when preparing for commissioning:

The fieldbus module PNOZ mc5.1p features F-SMA connection technology for fibre-optic cables. The visible light of the FO sender LED presents no danger to human skin or eyes. Do, however, avoid extended periods of direct eye contact with the LED.

## Fieldbus modules


### PNOZ mc5.1p

Use only the following fibre-optic cables:


- ▶ Polymer fibre, fibre type 980/1000 µm
- ▶ HCS fibre, fibre type 200/230 µm

#### Preparing for operation

- ▶ Connect fibre-optic cable
  - Connect the FO cable to the F-SMA plug-in connector on the transmitter and receiver.
  - Hand-tighten the union nut in a clockwise direction.

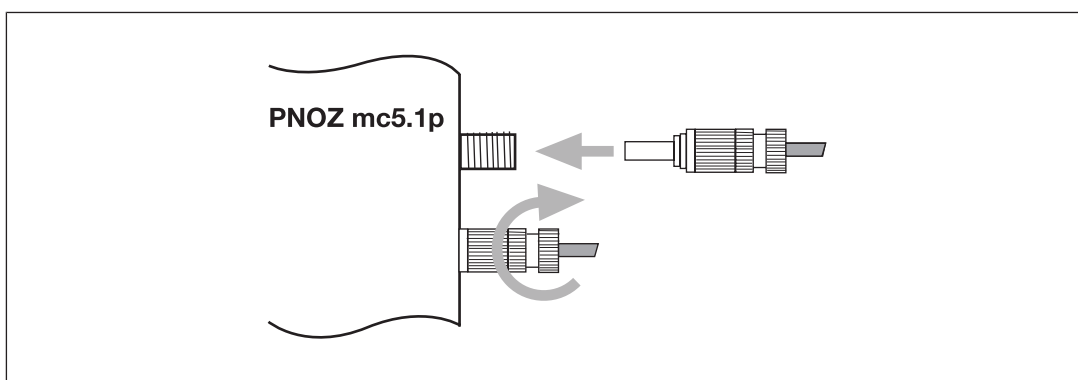

- ▶ Connect the TX transmitter of the IBS OUT remote bus to the RX receiver of the IBS IN remote bus.
- ▶ Connect the RX receiver of the IBS OUT remote bus to the TX transmitter of the IBS IN remote bus.

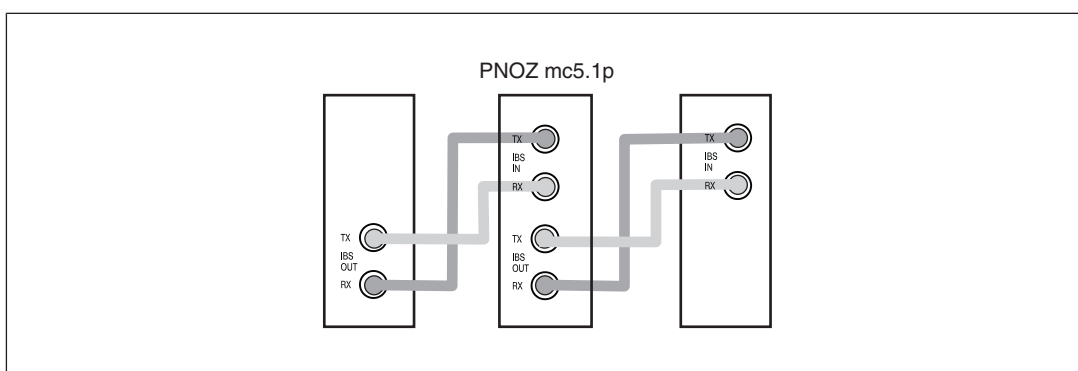


## Fieldbus modules

### PNOZ mc5.1p

#### INTERBUS interface

It is possible to define which inputs and outputs on the safety system will communicate with INTERBUS FO. The PNOZ mc5.1p features RX and TX F-SMA screw connections for IBS IN and RX and TX for IBS OUT for connecting to the INTERBUS FO.

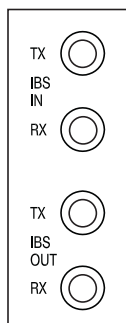

**IBS IN:** Remote bus IN

**TX:** Transmitter

**RX:** Receiver

**IBS OUT:** Remote bus OUT

**TX:** Transmitter

**RX:** Receiver

#### Setting the transmission rate

The transmission rate is set using a jumper. You can choose between 500 kBit/s and 2 MBit/s.

500 kBit/s:            500k  2M

2 MBit/s                500k  2M

#### Connecting the supply voltage

Connect the supply voltage to the base unit:

- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V


#### Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

## Fieldbus modules PNOZ mc5.1p

### Connection example

The sender and receiver of the incoming and outgoing remote buses are configured in a crossover formation. Cover unused connections with a protective cap.

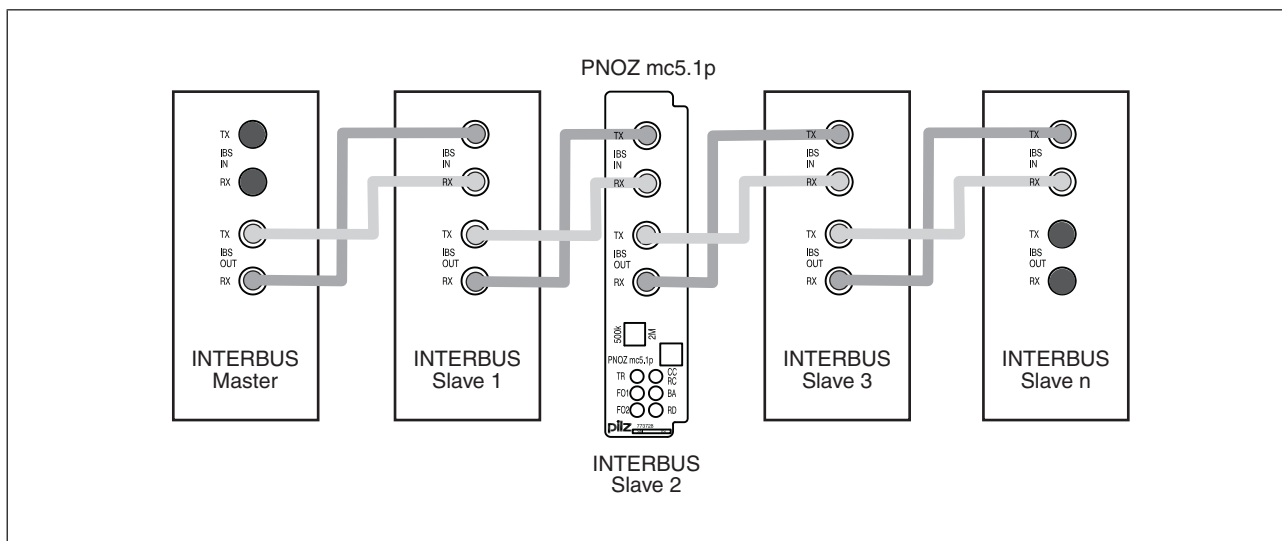

### Technical Details

General	
Approvals	CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed
Electrical data	
Supply voltage	
for internal Voltage	<b>Module supply</b> <b>Via base unit</b> <b>5,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>2,0 W</b>
Status indicator	<b>LED</b>
Fieldbus interface	
Fieldbus interface	<b>INTERBUS LWL</b>
Device type	<b>Slave</b>
Transmission rates	<b>2 MBit/s, 500 kBit/s</b>
Connection	<b>F-SMA connector</b>
Times	
Supply interruption before de-energisation	<b>20 ms</b>

**Fieldbus modules****PNOZ mc5.1p**

<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>

## Fieldbus modules

### PNOZ mc5.1p

#### Mechanical data

##### Dimensions

Height	<b>94,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>121,0 mm</b>

Weight	<b>145 g</b>
--------	--------------

Where standards are undated, the 2007-05 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order No.
PNOZ mc5.1p	Fieldbus module, INTERBUS FO	773 728

## Accessories

### Jumper

Product type	Features	Order No.
KOP-XE	Jumper	774 639

## Fieldbus modules

### PNOZ mc6p/mc6.1p




## Overview

### Unit features

Using the product PNOZ mc6p/mc6.1p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:


- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for CANopen
- ▶ Station addresses from 0 ... 99, selected via rotary switch
- ▶ Transmission rate selected via rotary switch (1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s)
- ▶ Status indicators for communication with CANopen and for errors
- ▶ Supported protocols:
  - PNOZ mc6p:** CiA DS-301 V3.0
  - PNOZ mc6.1p:** CiA DS-301 V4.0.2
- ▶ **PNOZ mc6.1p:** Default COB-ID has been adapted for RPDO 3 (400 h) and TPDO 3 (380 h)
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus CANopen . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc6p/mc6.1p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.
- ▶ Coated version:
  - Increased environmental requirements (see [Technical details](#)  449])



## Fieldbus modules

### PNOZ mc6p/mc6.1p

#### Front view

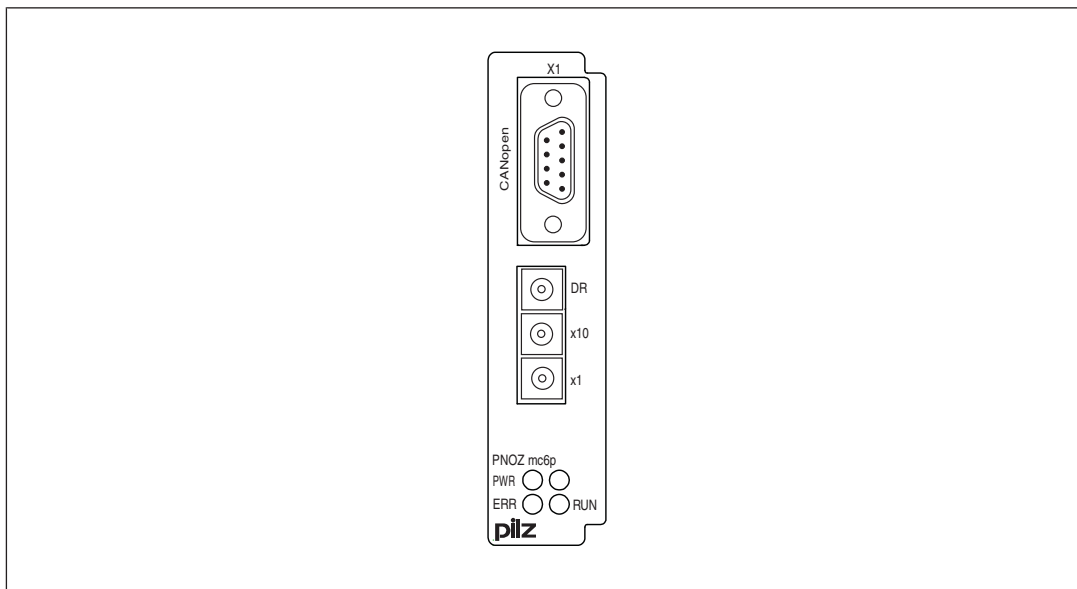

#### Key

- ▶ X1: CANopen interface (male 9-pin D-Sub connector)
- ▶ LED:
  - Power
  - Run
  - Error

## Function description

### Operation

The virtual inputs and outputs that are to be transferred via CANopen are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mc6p/mc6.1p are connected via a jumper. The station address and the transmission rate are set using rotary switches. The fieldbus module is also supplied with voltage via this jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mc6p/mc6.1p is configured and started automatically.

LEDs indicate the status of the expansion module on CANopen.

The configuration is described in detail in the PNOZmulti Configurator's online help.

## Fieldbus modules

### PNOZ mc6p/mc6.1p

#### Input and output data

The data is structured as follows:

- ▶ Input area
 

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.
- ▶ Output range
 

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.
- ▶ Output range only: Byte 3
 

Bits 0 ... 4: Status of LEDs on the PNOZmulti

  - Bit 0: OFAULT
  - Bit 1: IFAULT
  - Bit 2: FAULT
  - Bit 3: DIAG
  - Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".


#### Assigning the inputs/outputs in the PNOZmulti Configurator to the CANopen inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data CANopen	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data CANopen	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


## Fieldbus modules PNOZ mc6p/mc6.1p

### Block diagram

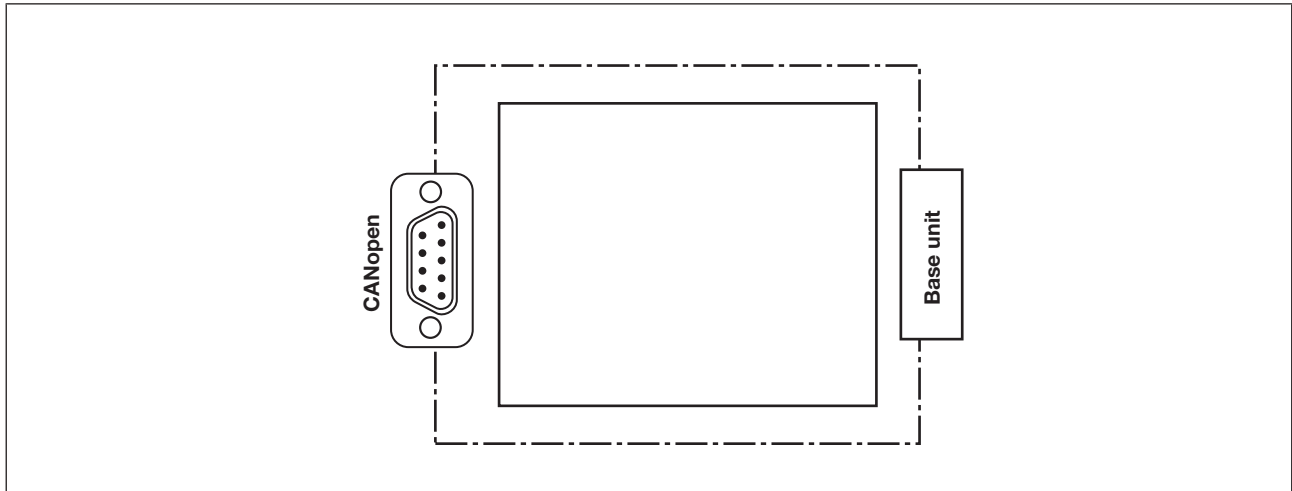

### Installation

#### Dimensions in mm

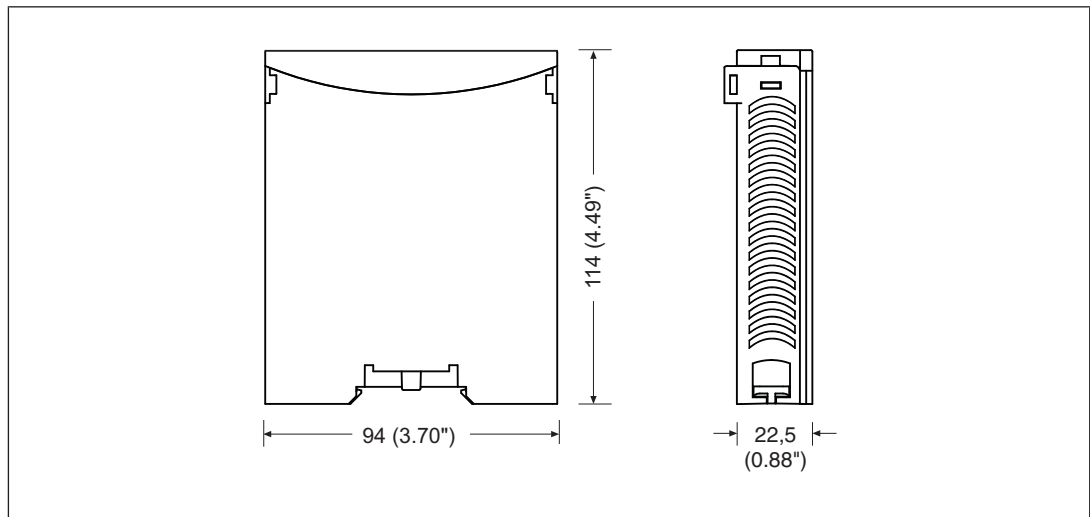

## Fieldbus modules

### PNOZ mc6p/mc6.1p

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[449\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.


### Connecting the supply voltage

Connect the supply voltage to the base unit:

- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V

### CANopen interface

The connection to CANopen is made via a male 9-pin D-Sub connector.

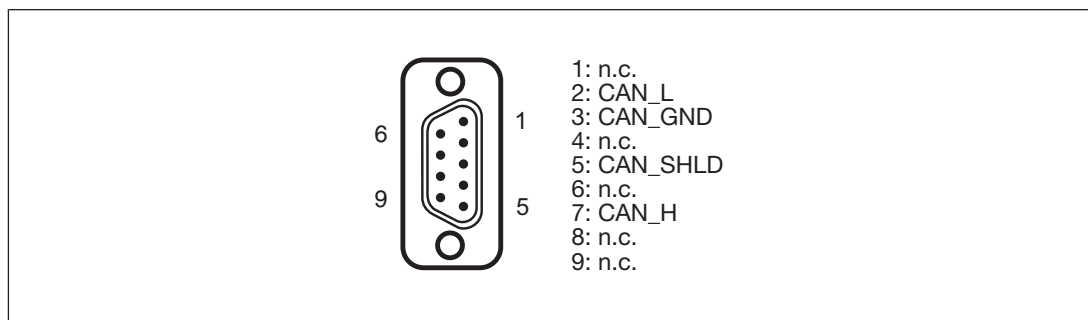

n.c. = not connected

Please note the following when connecting to CANopen:

- ▶ Only use metal plugs or metallised plastic plugs
- ▶ Twisted pair, screened cable must be used to connect the interfaces

### CANopen termination

To minimise cable reflection and to guarantee a defined rest signal on the transmission line, CANopen must be terminated at both ends.

## Fieldbus modules

### PNOZ mc6p/mc6.1p

### Preparing for operation

#### Setting the transmission rate




- ▶ On the upper rotary switch DR, use a small screwdriver to set the transmission rate (in the example, "3" corresponds to 50 kBit/s).

Switch setting	0	1	2	3	4	5	6	7	8	9
Transmission rate	-	10 kBit/s	20 kBit/s	50 kBit/s	125 kBit/s	250 kBit/s	500 kBit/s	800 kBit/s	1 MBit/s	-

#### Setting the station address


The station address of the expansion module PNOZ mc6p/mc6.1p is set between 0 ... 99 (decimal) via two rotary switches x1 and x10.

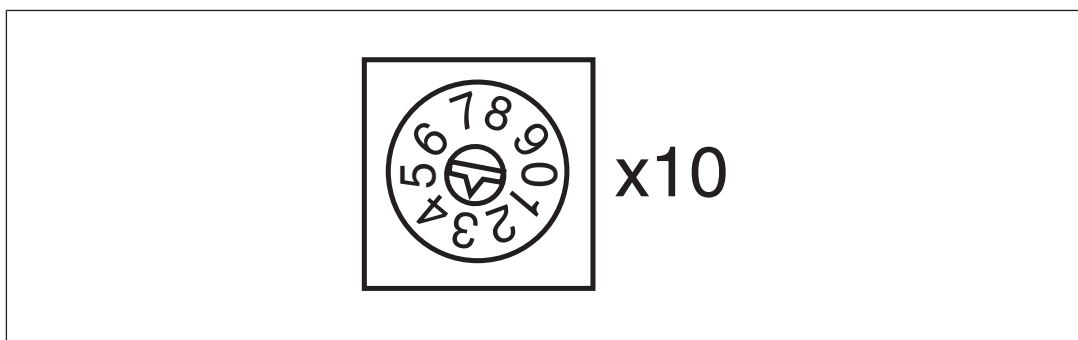

- ▶ On the middle rotary switch x10, use a small screwdriver to set the tens digit for the address ("3" in the example).

## Fieldbus modules

### PNOZ mc6p/mc6.1p

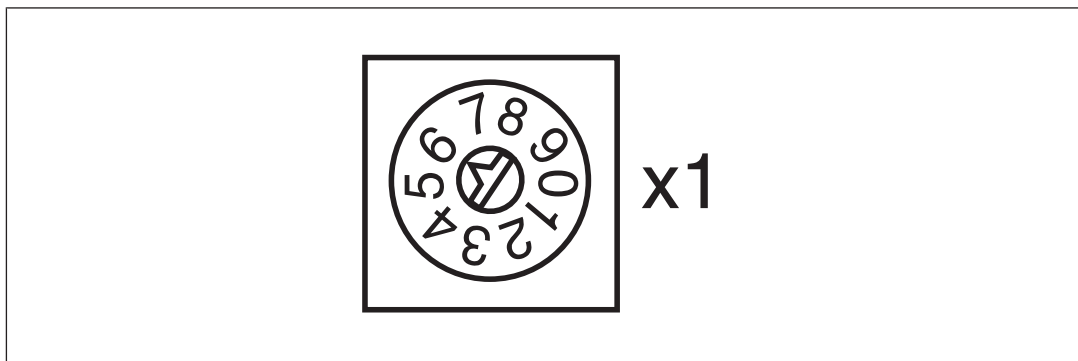


- ▶ On the lower rotary switch x1, set the ones digit for the address ("6" in the example). Station address 36 is set in the diagrams as an example.

#### Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

#### Connection example

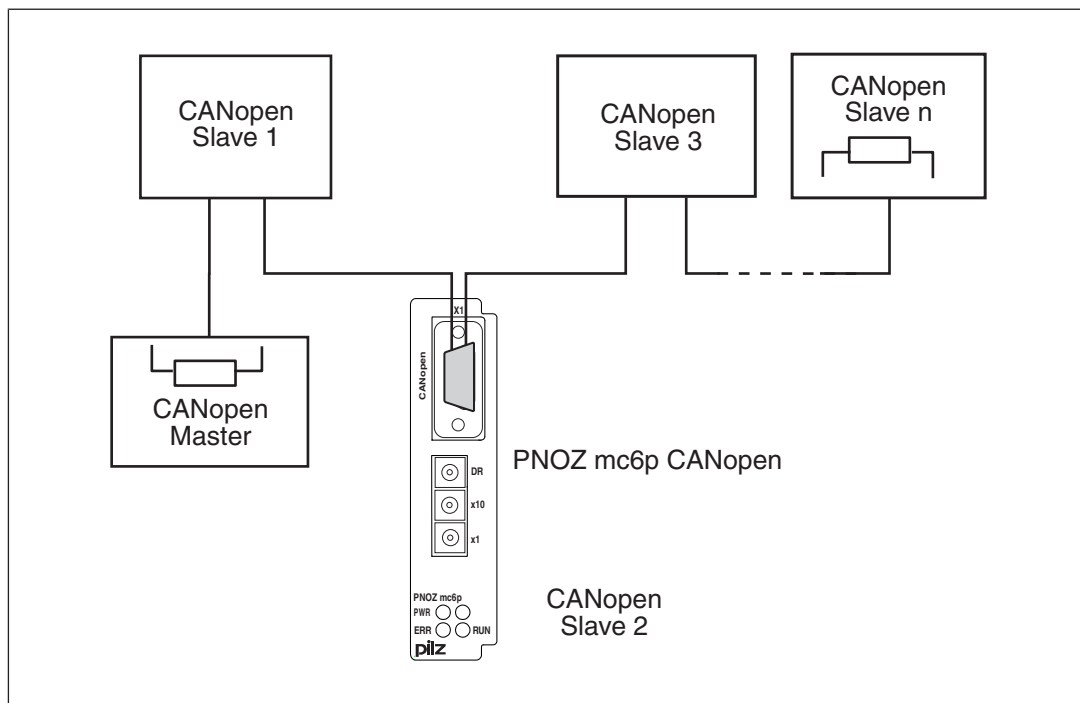

## Fieldbus modules PNOZ mc6p/mc6.1p

### Technical details

General	773712	773727	773733
Approvals	CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed	CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed	CCC, CE, EAC (Eurasian), cULus Listed
<b>Electrical data</b>	<b>773712</b>	<b>773727</b>	<b>773733</b>
Supply voltage			
for	<b>Module supply</b>	<b>Module supply</b>	<b>Module supply</b>
internal	<b>Via base unit</b>	<b>Via base unit</b>	<b>Via base unit</b>
Voltage	<b>5,0 V</b>	<b>5,0 V</b>	<b>5,0 V</b>
Kind	<b>DC</b>	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>	<b>-2 %/+2 %</b>	<b>-2 %/+2 %</b>
Power consumption	<b>1,0 W</b>	<b>2,5 W</b>	<b>1,0 W</b>
Status indicator	<b>LED</b>	<b>LED</b>	<b>LED</b>
<b>Fieldbus interface</b>	<b>773712</b>	<b>773727</b>	<b>773733</b>
Fieldbus interface	<b>CANopen</b>	<b>CANopen</b>	<b>CANopen</b>
Device type	<b>Slave</b>	<b>Slave</b>	<b>Slave</b>
Log	<b>CiA DS-301 V3.0</b>	<b>CiA DS-301 V3.0</b>	<b>CiA DS-301 V4.02</b>
Station address	<b>0 - 99d</b>	<b>0 - 99d</b>	<b>0 - 99d</b>
Transmission rates	<b>1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s</b>	<b>1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s</b>	<b>1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s</b>
Connection	<b>9-pin D-Sub male connector</b>	<b>9-pin D-Sub male connector</b>	<b>9-pin D-Sub male connector</b>
Galvanic isolation	<b>yes</b>	<b>yes</b>	<b>yes</b>
Test voltage	<b>500 V AC</b>	<b>500 V AC</b>	<b>500 V AC</b>
<b>Times</b>	<b>773712</b>	<b>773727</b>	<b>773733</b>
Supply interruption before de-energisation	<b>20 ms</b>	<b>20 ms</b>	<b>20 ms</b>
<b>Environmental data</b>	<b>773712</b>	<b>773727</b>	<b>773733</b>
Ambient temperature			
In accordance with the standard	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>	<b>0 - 50 °C</b>	<b>0 - 60 °C</b>
Storage temperature			
In accordance with the standard	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>	<b>-25 - 70 °C</b>	<b>-25 - 70 °C</b>
Climatic suitability			
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>

## Fieldbus modules PNOZ mc6p/mc6.1p

<b>Environmental data</b>	<b>773712</b>	<b>773727</b>	<b>773733</b>
Condensation during operation	<b>Not permitted</b>	<b>Short-term</b>	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Vibration			
In accordance with the standard	<b>EN 60068-2-6</b>	<b>EN 60068-2-6</b>	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>	<b>10,0 - 150,0 Hz</b>	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>	<b>1g</b>	<b>1g</b>
Corrosive gas check			
SO <sub>2</sub> : Concentration 10 ppm, duration 10 days, passive	–	<b>DIN V 40046-36</b>	–
H <sub>2</sub> S: Concentration 1 ppm, duration 10 days, passive	–	<b>DIN V 40046-37</b>	–
Shock stress			
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>	<b>2000 m</b>
Airgap creepage			
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>30 V</b>	<b>30 V</b>	<b>30 V</b>
Protection type			
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>	<b>IP20</b>
<b>Mechanical data</b>	<b>773712</b>	<b>773727</b>	<b>773733</b>
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>
DIN rail			
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>	<b>27 mm</b>
Material			
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>



## Fieldbus modules PNOZ mc6p/mc6.1p

Mechanical data	773712	773727	773733
Dimensions			
Height	94,0 mm	94,0 mm	94,0 mm
Width	22,5 mm	22,5 mm	22,5 mm
Depth	119,0 mm	119,0 mm	119,0 mm
Weight	110 g	145 g	110 g

Where standards are undated, the 2011-09 latest editions shall apply.

### Order reference

#### Product

Product type	Features	Order No.
PNOZ mc6p	Fieldbus module, CANopen, protocol: CiA DS-301 V3.0	773 712
PNOZ mc6p coated version	Fieldbus module, CANopen, coated version, protocol: CiA DS-301 V3.0	773 727
PNOZ mc6.1p	Fieldbus module, CANopen, protocol: CiA DS-301 4.0.2	773 733

### Accessories


#### Jumper

Product type	Features	Order No.
KOP-XE	Jumper	774 639
KOP-XE coated	Jumper, coated version	774 640

## Fieldbus modules

### PNOZ mc7p

---

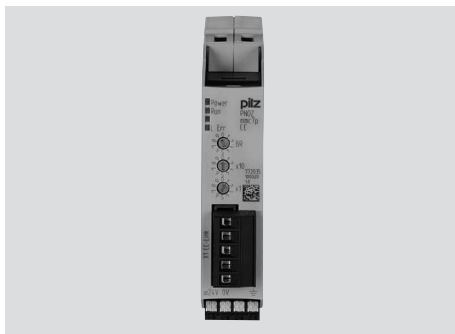

## Overview

### Unit features

Using the product PNOZ mc7p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for CC-Link
- ▶ Station addresses from 0 ... 63, selected via rotary switch
- ▶ Station type: Remote Device
- ▶ Occupied stations: 2
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus CC-Link . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc7p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Fieldbus modules

### PNOZ mc7p

#### Front view

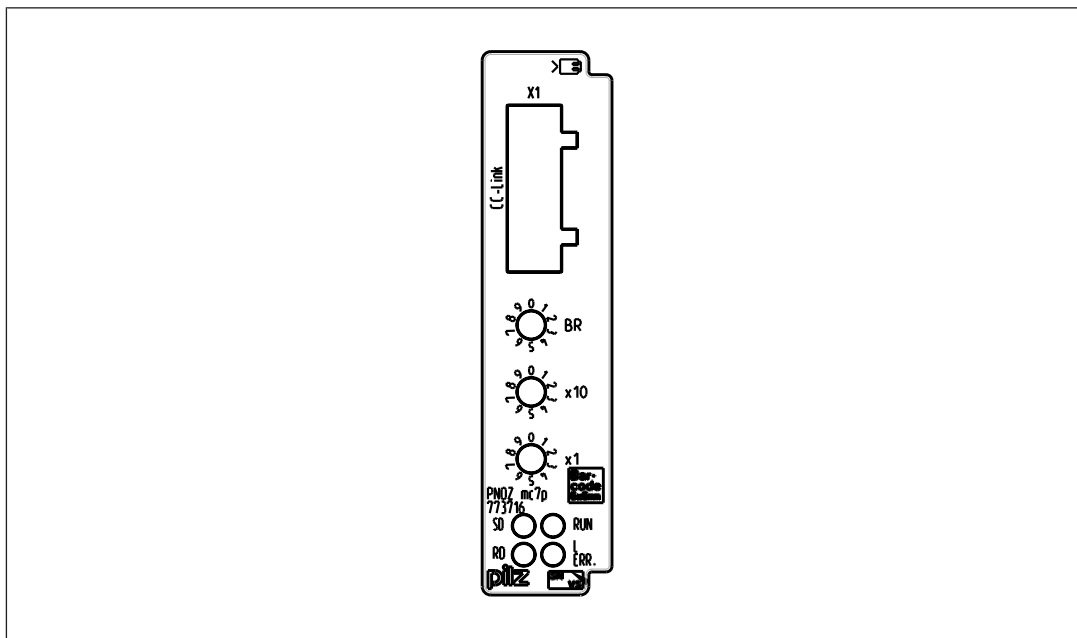

#### Legend:

- ▶ LED:
  - Run
  - SD
  - RD
  - L Err

## Function description

### Functions

The virtual inputs and outputs that are to be transferred via the fieldbus CC-Link are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mc7p are connected via a jumper. The fieldbus module is also supplied with voltage via this jumper. After the supply voltage is switched on or the control system PNOZmulti is reset, the fieldbus module PNOZ mc7p is configured and started automatically.

LEDs indicate the status of the fieldbus module on the fieldbus CC-Link .

The configuration is described in detail in the PNOZmulti Configurator's online help.

## Fieldbus modules PNOZ mc7p

### Input and output data

The data is structured as follows:

- ▶ Input area
  - Inputs on PNOZmulti Configurator: i00 ... i23
  - Input data CC-Link: RY0n, RY1n with n = 0 ... F

Example: i23 -> RY17

n	F	E	D	C	B	A	9	8	7	6	5	4	3	2	1	0
<b>RY0n</b>	i15	i14	i13	i12	i11	i10	i09	i08	i07	i06	i05	i04	i03	i02	i01	i00
<b>RY1n</b>	-	-	-	-	-	-	-	-	i23	i22	i21	i20	i19	i18	i17	i16

- ▶ Output range
  - Outputs on PNOZmulti Configurator: o00 ... o23
  - Output data CC-Link: RXn, RX1n with n = 0 ... F


Example: o22 -> Rx16

n	F	E	D	C	B	A	9	8	7	6	5	4	3	2	1	0
<b>RX 0n</b>	o15	o14	o13	o12	o11	o10	o09	o08	o07	o06	o05	o04	o03	o02	o01	o00
<b>RX 1n</b>	-	-	-	-	-	-	-	-	o23	o22	o21	o20	o19	o18	o17	o16

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

Detailed information on data exchange is available in the document "Communication Interfaces PNOZmulti 2" in the section entitled "Fieldbus modules".

### Block diagram

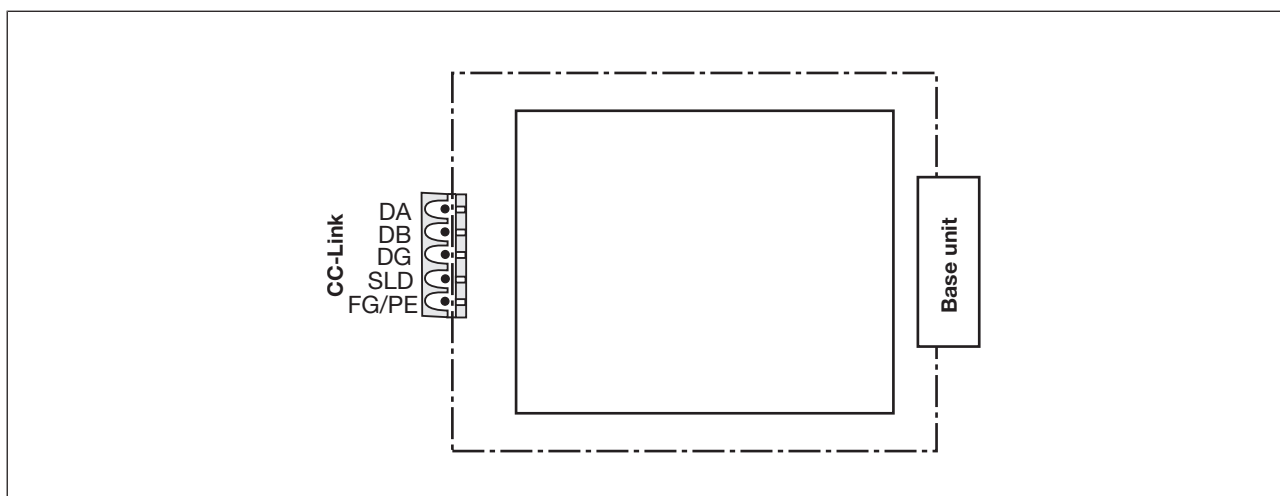


## Fieldbus modules

### PNOZ mc7p

## Installation

### Dimensions in mm

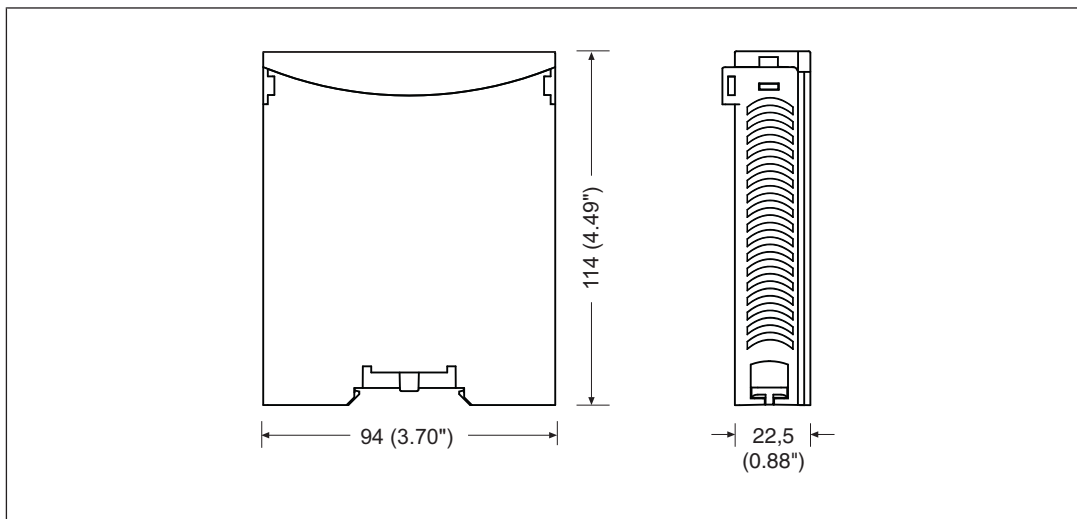

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:


- ▶ Information given in the [Technical details \[457\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.

## Fieldbus modules

### PNOZ mc7p

#### Interface assignment

It is possible to define which outputs on the safety system will communicate with CC-Link. The connection to CC-Link is made via a 5-pin screw connector.

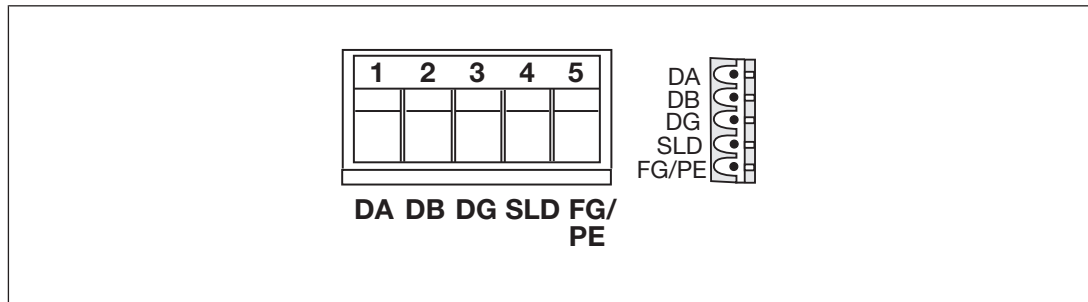

- 1: DA (Channel A)
- 2: DB (Channel B)
- 3: DG (Earth)
- 4: SLD (Cable shield)
- 5: FG/PE (Functional earth)


#### Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

## Fieldbus modules

### PNOZ mc7p

#### Connection example

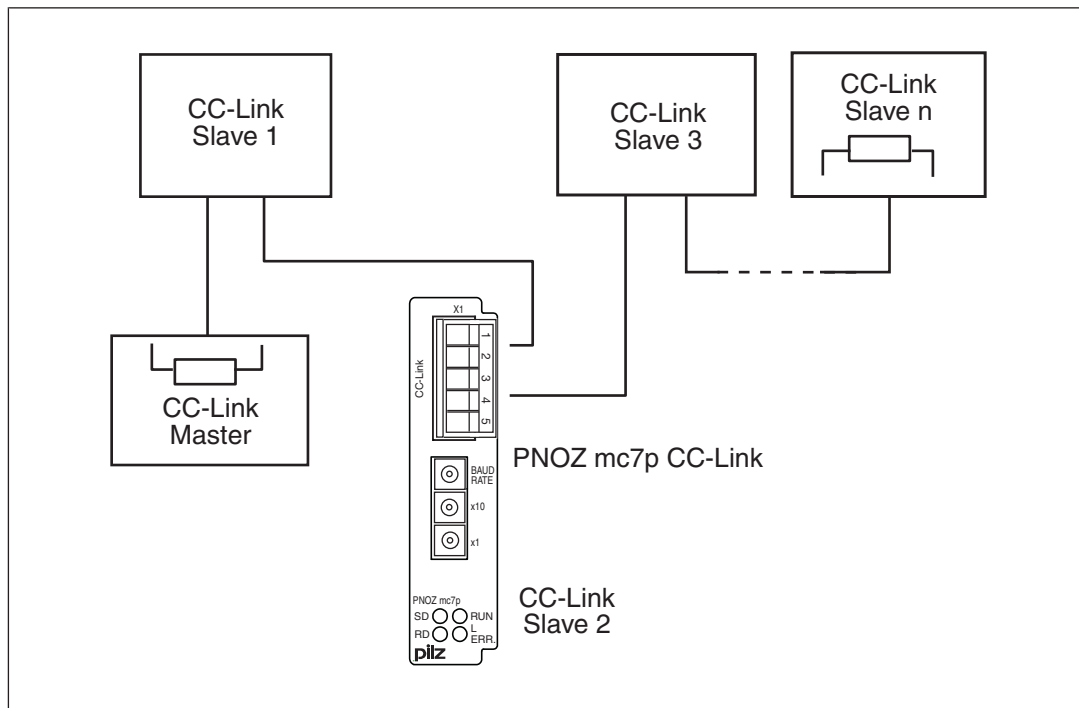

#### Technical Details

General	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
Electrical data	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>5,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>2,5 W</b>
Status indicator	<b>LED</b>
Fieldbus interface	
Fieldbus interface	<b>CC-Link V1.10</b>
Device type	<b>Slave</b>
Station address	<b>0 ... 63d</b>
Transmission rates	<b>10 MBit/s, 156 kbit/s, 2,5 MBit/s, 5 MBit/s, 625 kbit/s</b>
Connection	<b>5-pin Combicon plug-in connector</b>
Assigned stations	<b>2</b>
Galvanic isolation	<b>yes</b>

## Fieldbus modules

### PNOZ mc7p

<b>Fieldbus interface</b>	
Test voltage	<b>500 V AC</b>
<b>Times</b>	
Supply interruption before de-energisation	<b>20 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>Fieldbus and module voltage</b>
Type of potential isolation	<b>Functional insulation</b>
Rated surge voltage	<b>500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>



## Fieldbus modules PNOZ mc7p

### Mechanical data

#### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

#### Material

Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>

#### Dimensions

Height	<b>94,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>122,0 mm</b>

Weight	<b>110 g</b>
--------	--------------

Where standards are undated, the 2012-03 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order no.
PNOZ mc7p	Fieldbus module, CC-Link	773 716

## Accessories

### Jumper

Product type	Features	Order No.
KOP-XE	Jumper	774 639

## Fieldbus modules PNOZ mc8p

---



### Overview

#### Unit features

Using the product PNOZ mc8p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti .

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for Ethernet/IP and Modbus TCP
- ▶ Transmission rate 10 MBit/s (10BaseT) and 100 MBit/s (100BaseTX), full and half duplex
- ▶ IP address is set via DIP switches on the front of the unit
- ▶ Status indicators for communication and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus EtherNet/IP, Modbus TCP . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc8p can be connected to the base unit
- ▶ For details of the PNOZmulti base units that can be connected, please refer to the document "PNOZmulti System Expansion".

## Fieldbus modules PNOZ mc8p

### Front view

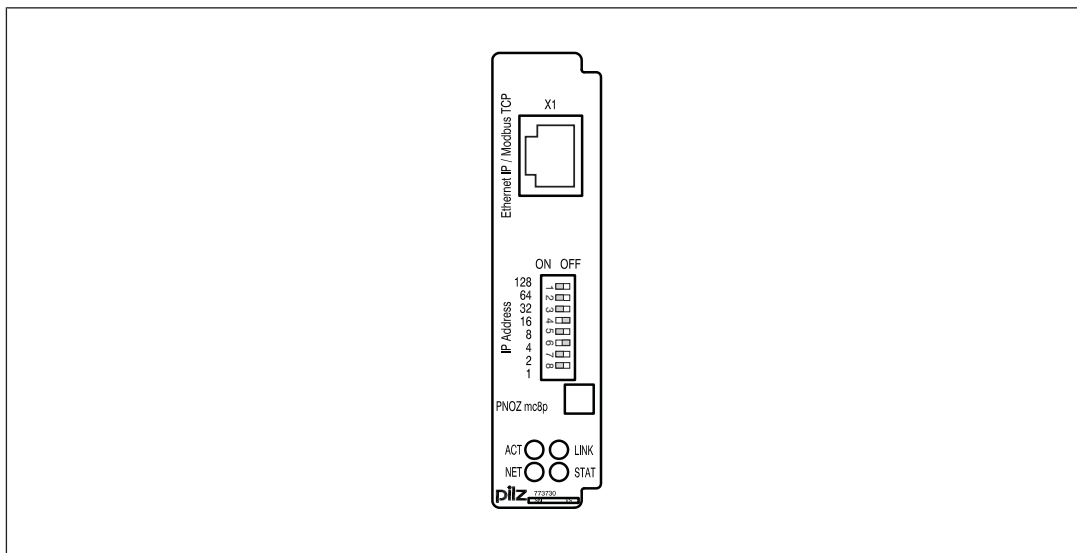

### Legend

- X1: EtherNet/IP, Modbus TCP interface
- IP address: for setting the IP address
- LEDs: ACT, LINK, STAT, NET

EtherNet/IP™ is registered trademark and patented technology, licensed by ODVA.

## Function description

### Functions

The virtual inputs and outputs that are to be transferred via the fieldbus EtherNet/IP, Modbus TCP are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mc8p are connected via a jumper. The fieldbus module is also supplied with voltage via this jumper. After the supply voltage is switched on or the control system PNOZmulti is reset, the fieldbus module PNOZ mc8p is configured and started automatically.

LEDs indicate the status of the fieldbus module on the fieldbus EtherNet/IP, Modbus TCP.

The configuration is described in detail in the PNOZmulti Configurator's online help.

## Fieldbus modules

### PNOZ mc8p

#### Data exchange

Twenty bytes always must be sent and received for communication with the PNOZmulti.

#### Ethernet/IP

The input/output data from the PNOZmulti can be polled using the assembly object (Class 04h).

- ▶ Data from the PNOZmulti are requested with instance 64h.
- ▶ Instance 96h writes the data from the Ethernet IP scanner to the PNOZmulti.

#### Modbus TCP

No connection needs to be configured for the PNOZ mc8p. Port 502 is used in accordance with the Modbus TCP specification.

The Modbus TCP supports the following function codes:

3,16 and 23 (refer to the document "PNOZmulti Communication Interfaces" for details of additional function codes)

The address input range begins with Register 0. The address output range begins with Register 1024. The Byte sequence for a Word is High Byte/Low Byte

Word	
Left Byte	Right Byte
Low Byte (Bit 7 ... 00)	High Byte (Bit 15 ... 08)

#### Input and output data

The data is structured as follows:

##### Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number I12.

Virtual inputs PNOZmulti Configurator	I0 ... I7	I8 ... I15	I16 ... I23	...	I120...I127
EtherNet/IP, Modbus TCP	Byte 0: Bit 0 ... 7	Byte 1: Bit 0 ... 7	Byte 2: Bit 0 ... 7	...	Byte 15: Bit 0 ... 7

## Fieldbus modules PNOZ mc8p

### Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. O0, O5... .

The status of output O0 is stored in bit 0 of byte 0; the status of output O5 is stored in bit 5 of byte 0 etc.


Virtual inputs PNOZmulti Configurator	O0 ... O7	O8 ... O15	O16 ... O23	...	O120... O127
EtherNet/IP, Modbus TCP	Byte 0: Bit 0 ... 7	Byte 1: Bit 0 ... 7	Byte 2: Bit 0 ... 7	...	Byte 15: Bit 0 ... 7

- ▶ Bits 0 ... 4: Status of LEDs on the PNOZmulti
  - Bit 0: OFAULT
  - Bit 1: IFAULT
  - Bit 2: FAULT
  - Bit 3: DIAG
  - Bit 4: RUN
- ▶ Data exchange is displayed in Bit 5.
- ▶ Polling the payload data: 2 Bytes with the table number and segment number are sent by the Master for access to the payload data table (15 Bytes are returned to the Master).

Detailed information on data exchange is available in the document "Communication Interfaces", under "Fieldbus modules".

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces", under "Fieldbus modules").

### Block diagram

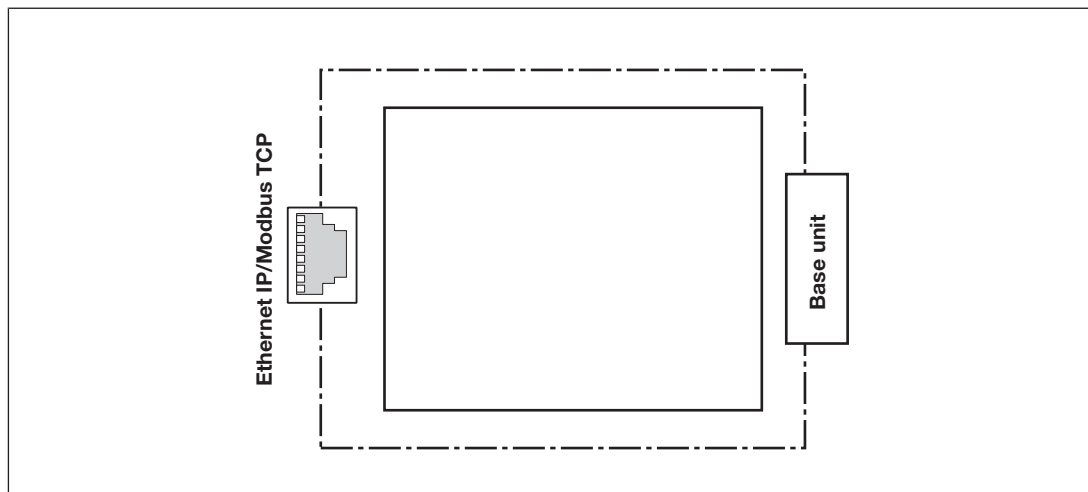


## Fieldbus modules

### PNOZ mc8p

## Installation

### Dimensions in mm

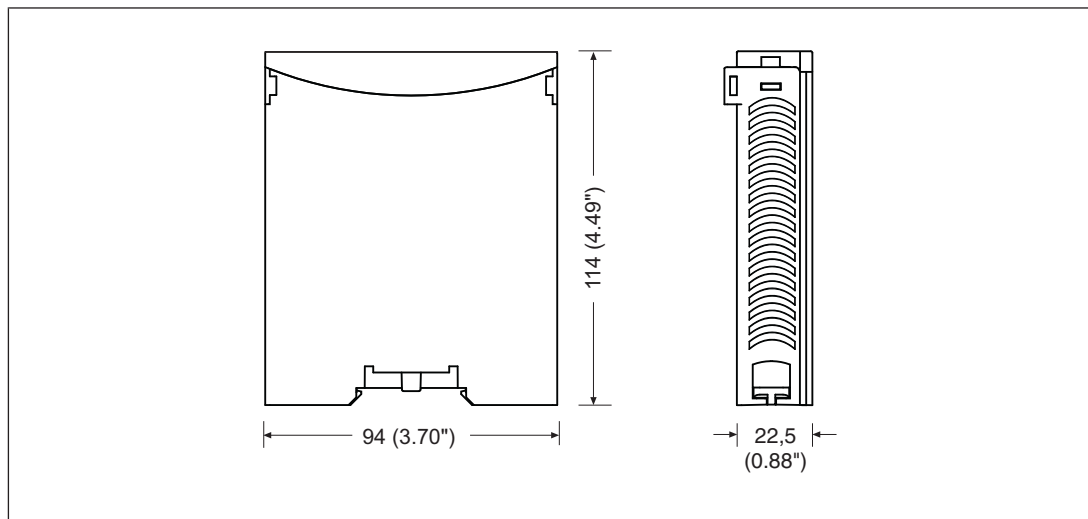

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator. It is possible to define which inputs and outputs on the safety system will communicate with EtherNet/IP, Modbus TCP.

Please note:

- ▶ Information given in the "[Technical details \[467\]](#)" must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to EtherNet/IP, Modbus TCP:

- ▶ The following minimum requirements of the connection cable and connector must be met:
  - Only use standard industrial Ethernet cable and connectors.
  - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
  - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:

Ensure the requirements for the industrial use of EtherNet/IP, Modbus TCP are met, as stated in the Installation Manual published by the User Group.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.

## Fieldbus modules

### PNOZ mc8p


- ▶ The power supply must meet the regulations for extra low voltages with protective separation.

### Connecting the supply voltage

Connect the supply voltage to the base unit:

- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V

### Interface assignment

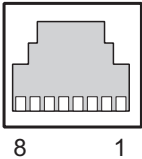RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.


n.c.: Not connected

### Set IP address

The IP address of the fieldbus module PNOZ mc8p is set using the DIP switch on the front.

- ▶ The first three bytes of the IP address are: 192.168.1.
- ▶ Subnet mask: 255.255.255.0.
- ▶ The last byte of the IP address is configured (value range: 1 ...255).

Example: DIP switch: 00010100 (20 decimal)

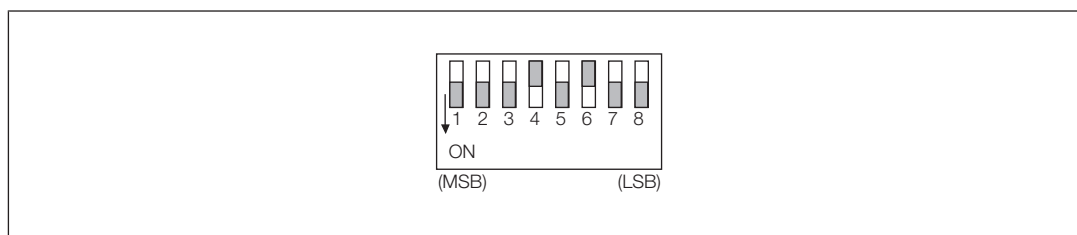

IP address: 192.168.0.20

## Fieldbus modules

### PNOZ mc8p

---

#### Change IP settings

Once the IP addresses of the computer and PNOZ mc8p have been configured, you can change the IP settings of the PNOZ mc8p.

- ▶ Connect the PNOZ mc8p to the computer.
- ▶ Call up the following html page: <http://192.168.0.20/config.htm>
- ▶ Configure the settings for the PNOZ mc8p.

Example:

IP address: 172.16.216.139

Subnet mask: 255.255.0.0

Gateway address: --

DNS1 address: --

DNS1 address: --

Host name: ---

Domain name: --

SMTP server: --


DHCP enabled: No

- ▶ Click on **Store Configuration**. The settings are transferred to the expansion module.
- ▶ Switch off the supply voltage.
- ▶ Set all DIP switches to zero.
- ▶ Switch on the supply voltage. The new IP address for the unit is now set.



## Fieldbus modules PNOZ mc8p

### Connection example

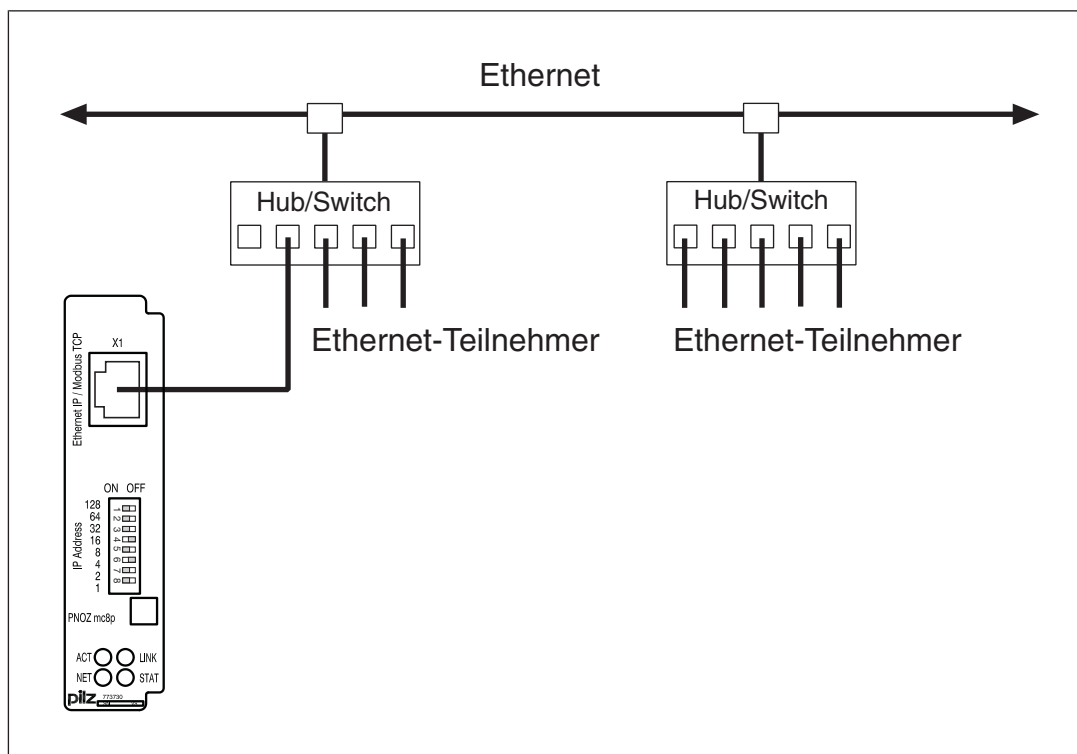

### Technical Details

General	773730	773734
Approvals	CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed	CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
Electrical data	773730	773734
Supply voltage		
for	<b>Module supply</b>	<b>Module supply</b>
internal	<b>Via base unit</b>	<b>Via base unit</b>
Voltage	<b>5,0 V</b>	<b>5,0 V</b>
Kind	<b>DC</b>	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>	<b>-2 %/+2 %</b>
Power consumption	<b>2,5 W</b>	<b>2,5 W</b>
Status indicator	<b>LED</b>	<b>LED</b>
Fieldbus interface	773730	773734
Fieldbus interface	<b>Ethernet IP, Modbus TCP</b>	<b>Ethernet IP, Modbus TCP</b>
Device type	<b>Slave</b>	<b>Slave</b>
Transmission rates	<b>10 MBit/s, 100 MBit/s</b>	<b>10 MBit/s, 100 MBit/s</b>
Connection	<b>RJ45</b>	<b>RJ45</b>
Galvanic isolation	<b>yes</b>	<b>yes</b>

## Fieldbus modules

### PNOZ mc8p

<b>Fieldbus interface</b>	<b>773730</b>	<b>773734</b>
Test voltage	<b>500 V AC</b>	<b>500 V AC</b>
<b>Times</b>	<b>773730</b>	<b>773734</b>
Supply interruption before de-energisation	<b>20 ms</b>	<b>20 ms</b>
<b>Environmental data</b>	<b>773730</b>	<b>773734</b>
Ambient temperature		
In accordance with the standard	<b>EN 60068-2-14</b>	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>	<b>-25 - 60 °C</b>
Forced convection in control cabinet off	<b>50 °C</b>	<b>50 °C</b>
Storage temperature		
In accordance with the standard	<b>EN 60068-2-1/-2</b>	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>	<b>-25 - 70 °C</b>
Climatic suitability		
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>	<b>Short-term</b>
EMC	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Vibration		
In accordance with the standard	<b>EN 60068-2-6</b>	<b>EN 60068-2-6</b>
Frequency	<b>5,0 - 500,0 Hz</b>	<b>5,0 - 500,0 Hz</b>
Acceleration	<b>1g</b>	<b>1g</b>
Broadband noise		
In accordance with the standard	–	<b>EN 60068-2-64</b>
Frequency	–	<b>5 - 500 Hz</b>
Acceleration	–	<b>1,9grms</b>
Shock stress		
In accordance with the standard	<b>EN 60068-2-27</b>	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>	<b>15g</b>
Duration	<b>11 ms</b>	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>	<b>2000 m</b>
Airgap creepage		
In accordance with the standard	<b>EN 61131-2</b>	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>	<b>III</b>
Pollution degree	<b>2</b>	<b>2</b>
Rated insulation voltage	<b>30 V</b>	<b>30 V</b>

## Fieldbus modules PNOZ mc8p

Environmental data	773730	773734
Protection type		
In accordance with the standard	<b>EN 60529</b>	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>	<b>IP54</b>
Housing	<b>IP20</b>	<b>IP20</b>
Terminals	<b>IP20</b>	<b>IP20</b>
Mechanical data	773730	773734
Mounting position	<b>Horizontal on top hat rail</b>	<b>Horizontal on top hat rail</b>
DIN rail		
Top hat rail	<b>35 x 7,5 EN 50022</b>	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>	<b>27 mm</b>
Material		
Bottom	<b>PPO UL 94 V0</b>	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>	<b>ABS UL 94 V0</b>
Dimensions		
Height	<b>94,0 mm</b>	<b>94,0 mm</b>
Width	<b>22,5 mm</b>	<b>22,5 mm</b>
Depth	<b>114,0 mm</b>	<b>114,0 mm</b>
Weight	<b>137 g</b>	<b>140 g</b>

Where standards are undated, the 2009-10 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order No.
PNOZ mc8p	Fieldbus module, Ethernet/IP, Modbus TCP	773 730
PNOZ mc8p coated version	Fieldbus module, Ethernet/IP, Modbus TCP	773 734

### Accessories

#### Jumper

Product type	Features	Order No.
KOP-XE	Jumper	774 639
KOP-XE coated	Jumper, coated version	774 640

## Fieldbus modules

### PNOZ mc9p

---



## Overview

### Unit features

Using the product PNOZ mc9p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti .


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for PROFINET IO
- ▶ Transmission rate 100 MBit/s (100BaseTX), full and half duplex
- ▶ Status indicators for communication and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus PROFINET . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc9p can be connected to the base unit
- ▶ For details of the PNOZmulti base units that can be connected, please refer to the document "PNOZmulti System Expansion".

## Fieldbus modules

### PNOZ mc9p

#### Front view

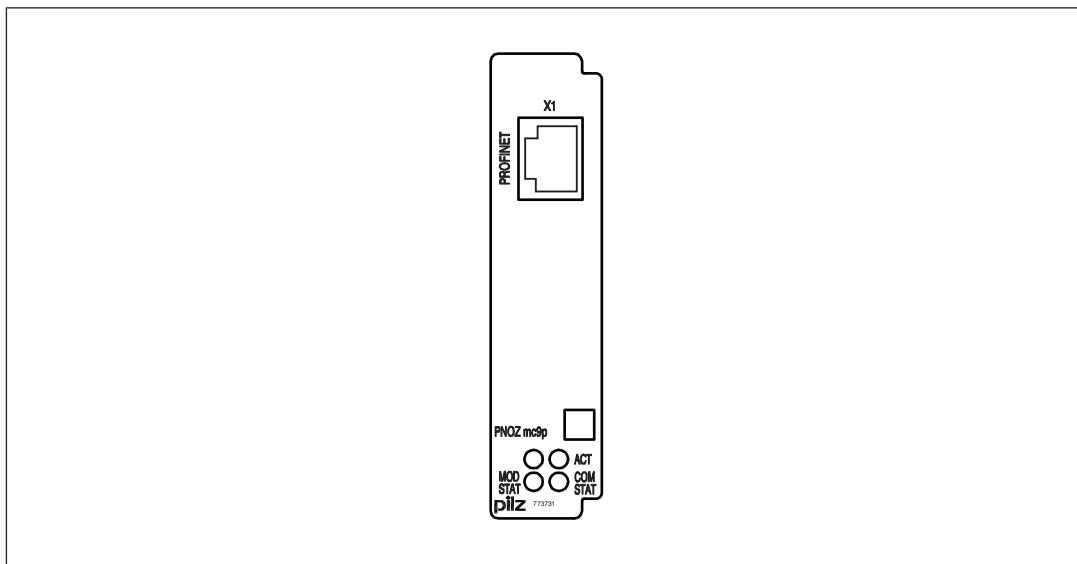

#### Legend:

- ▶ X1: Profinet interface
- ▶ LED:
  - ACT
  - COM STAT
  - MOD STAT

## Function description

### Functions

The virtual inputs and outputs that are to be transferred via the fieldbus PROFINET are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mc9p are connected via a jumper. The fieldbus module is also supplied with voltage via this jumper. After the supply voltage is switched on or the control system PNOZmulti is reset, the fieldbus module PNOZ mc9p is configured and started automatically.

LEDs indicate the status of the fieldbus module on the fieldbus PROFINET .

The configuration is described in detail in the PNOZmulti Configurator's online help.

## Fieldbus modules

### PNOZ mc9p

#### Input and output data

32 bytes must always be sent and received for communication with the PNOZmulti. Only the first 20 bytes are used (see document "PNOZmulti Communication Interfaces").

The data is structured as follows:

#### Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number I12.

Virtual inputs PNOZmulti Configurator	I0 ... I7	I8 ... I15	I16 ... I23	...	I120...I127
PROFINET	Byte 0: Bit 0 ... 7	Byte 1: Bit 0 ... 7	Byte 2: Bit 0 ... 7	...	Byte 15: Bit 0 ... 7

#### Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. O0, O5... .

The status of output O0 is stored in bit 0 of byte 0; the status of output O5 is stored in bit 5 of byte 0 etc.

Virtual inputs PNOZmulti Configurator	O0 ... O7	O8 ... O15	O16 ... O23	...	O120... O127
PROFINET	Byte 0: Bit 0 ... 7	Byte 1: Bit 0 ... 7	Byte 2: Bit 0 ... 7	...	Byte 15: Bit 0 ... 7

- ▶ Bits 0 ... 4: Status of LEDs on the PNOZmulti
  - Bit 0: OFAULT
  - Bit 1: IFAULT
  - Bit 2: FAULT
  - Bit 3: DIAG
  - Bit 4: RUN
- ▶ Data exchange is displayed in Bit 5.
- ▶ Polling the payload data: 2 Bytes with the table number and segment number are sent by the Master for access to the payload data table (15 Bytes are returned to the Master).


Detailed information on data exchange is available in the document "Communication Interfaces", under "Fieldbus modules".

The number of virtual inputs and outputs can be extended to 128 (see document "PNOZmulti Communication Interfaces", under "Fieldbus modules")

## Fieldbus modules


### PNOZ mc9p

#### Block diagram

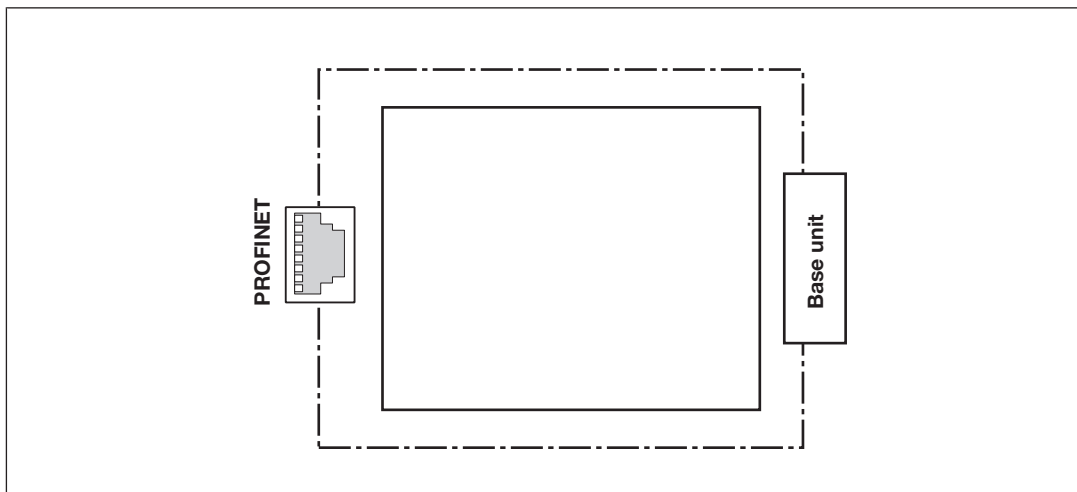

#### Installation

##### Dimensions in mm

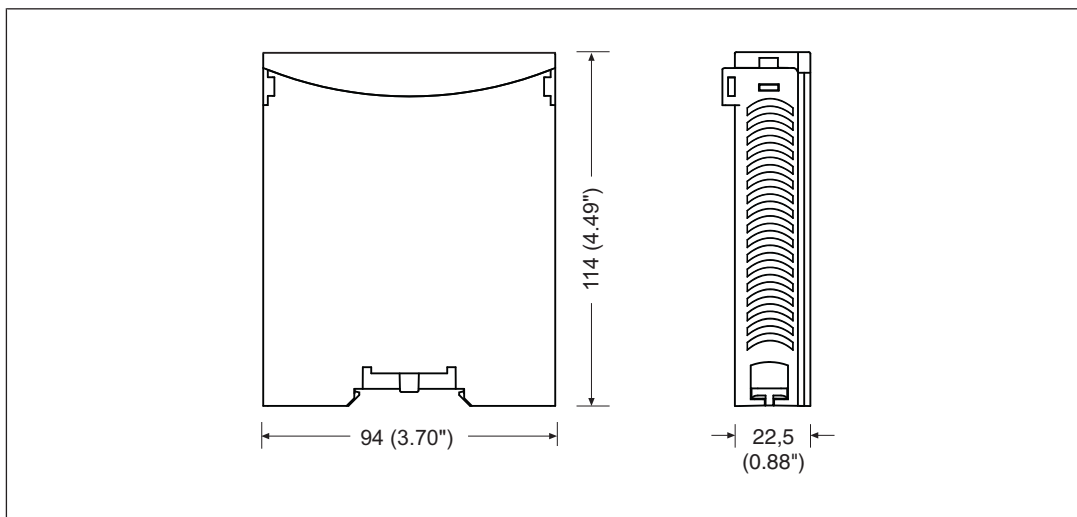

#### Commissioning

##### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator. It is possible to define which inputs and outputs on the safety system will communicate with PROFINET.

Please note:

- ▶ Information given in the "[Technical details](#)  476" must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

## Fieldbus modules


### PNOZ mc9p

Please note the following when connecting to PROFINET:

- ▶ The following minimum requirements of the connection cable and connector must be met:
  - Only use standard industrial Ethernet cable and connectors.
  - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
  - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:
 

Ensure the requirements for the industrial use of PROFINET are met, as stated in the Installation Manual published by the User Group.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.

### Interface assignment

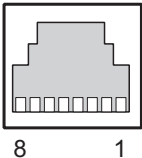RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

### Preparing for operation

#### Assign unit name

The unit name is assigned in the PNOZmulti Configurator. When selecting the PNOZ mc9p, enter the unit name under **Equipment Identifier**.

- ▶ You can also assign the unit name through the IO Controller. In this case, insert a "\$" symbol in front of the unit name in the PNOZmulti Configurator, under **Equipment Identifier**.



## Fieldbus modules

### PNOZ mc9p

---

- ▶ The unit name on the Ethernet subnet must be unique. It must comply with the DNS conventions:
  - Max. 127 characters (letters, numbers, hyphen or period)
  - Max. 63 characters between two periods
- ▶ The following characters are invalid: ä ö ü ( ) \_ / space
- ▶ The unit name may not
  - Begin or end with the "-" character.
  - Have the form n.n.n.n (n = 0 ... 999).
  - Start with the sequence "port-xyz-" (x, y, z = 0 ... 9).

#### Install GSD file

Install the GSD file. The GSD file is available on the Internet at [www.pilz.de](http://www.pilz.de).

#### Set IP address

There are two options:

- ▶ Automatic assignment of the IP address with the Dynamic Host Configuration Protocol (DHCP)
- ▶ Assignment of the IP address by the IO controller before system startup based on the unique unit name.

#### Connecting the supply voltage


Connect the supply voltage to the base unit:

- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V

## Fieldbus modules

### PNOZ mc9p

#### Connection example

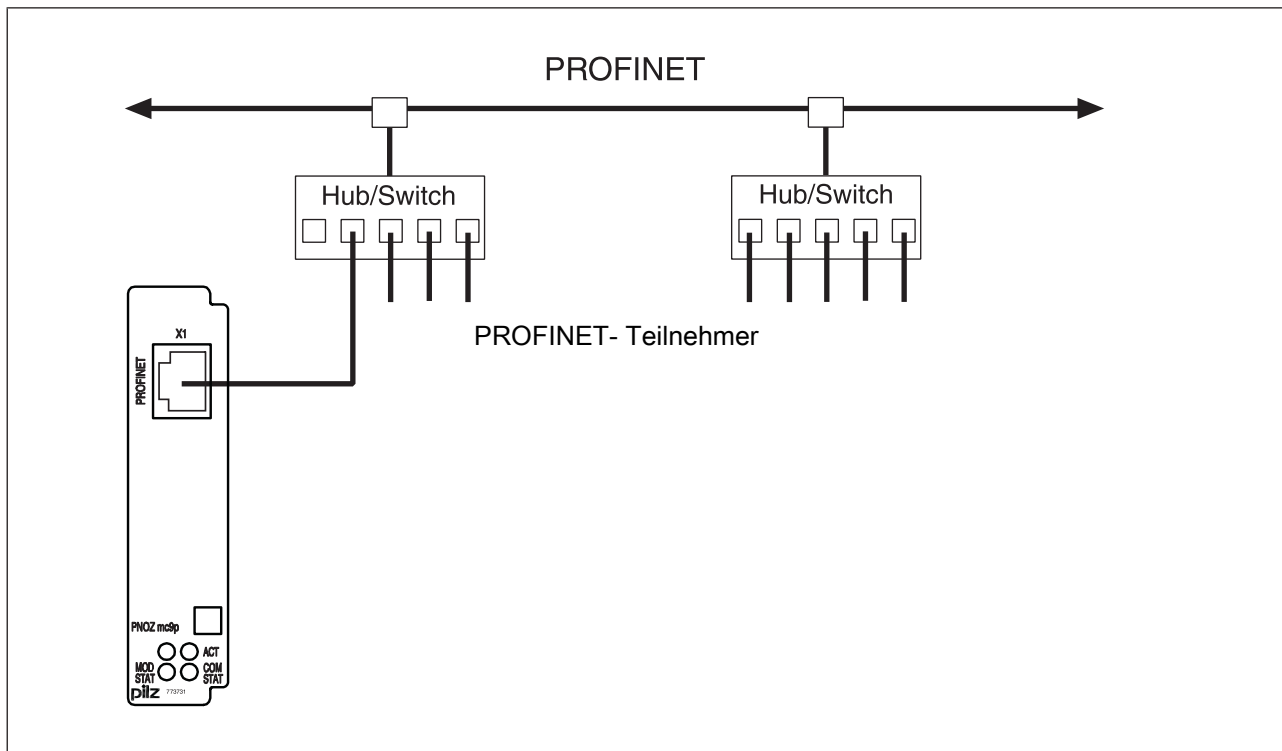

#### Technical details

##### General

Approvals **CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed**

##### Electrical data

Supply voltage

for

internal

Voltage

Kind

Voltage tolerance

Power consumption

**Module supply**

**Via base unit**

**5,0 V**

**DC**

**-2 %/+2 %**

**2,5 W**

Status indicator

**LED**

##### Fieldbus interface

Fieldbus interface

**PROFINET IO**

Device type

**Slave**

Transmission rates

**100 MBit/s**

Connection

**RJ45**

Galvanic isolation

**yes**

## Fieldbus modules PNOZ mc9p

<b>Fieldbus interface</b>	
Test voltage	<b>500 V AC</b>
<b>Times</b>	
Supply interruption before de-energisation	<b>20 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>50 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

## Fieldbus modules

### PNOZ mc9p

Mechanical data	
Material	
Bottom	PPO UL 94 V0
Front	ABS UL 94 V0
Dimensions	
Height	94,0 mm
Width	22,5 mm
Depth	114,0 mm
Weight	135 g

Where standards are undated, the 2009-10 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order No.
PNOZ mc9p	Fieldbus module, PROFINET IO	773 731

## Accessories


### Jumper

Product type	Features	Order No.
KOP-XE	Jumper	774 639

## Fieldbus modules

### PNOZ mc10p

---

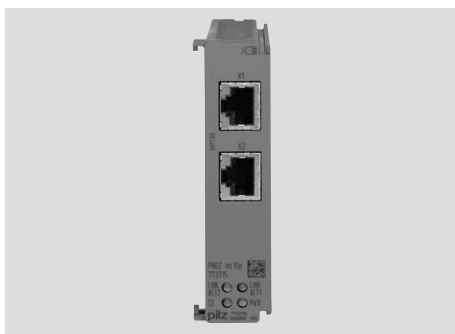

## Overview

### Unit features

Using the product PNOZ mc10p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for sercos III
- ▶ Status indicators for communication with sercos III and for errors
- ▶ Delivery configuration with IP address: 192.168.1.64 and Sercos address: 64
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus sercos III . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc10p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Fieldbus modules

### PNOZ mc10p

#### Front view

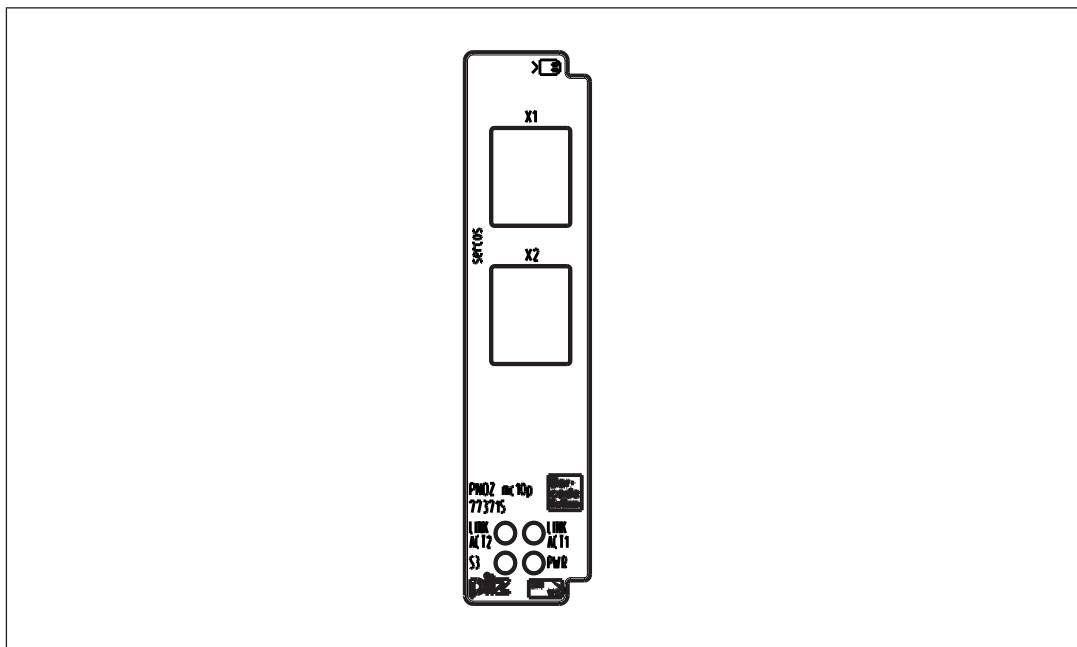

#### Legend

- ▶ X1, X2: sercos III interfaces
- ▶ LED:
  - LINK ACT1
  - LINK ACT2
  - PWR
  - S3

## Function description

### Functions

The virtual inputs and outputs that are to be transferred via the fieldbus sercos III are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mc10p are connected via a jumper. The fieldbus module is also supplied with voltage via this jumper. After the supply voltage is switched on or the control system PNOZmulti is reset, the fieldbus module PNOZ mc10p is configured and started automatically.

LEDs indicate the status of the fieldbus module on the fieldbus sercos III .

The configuration is described in detail in the PNOZmulti Configurator's online help.

## Fieldbus modules

### PNOZ mc10p

#### Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".


#### Assigning the inputs/outputs in the PNOZmulti Configurator to the sercos III inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data sercos III	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data sercos III	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


## Fieldbus modules PNOZ mc10p

### Block diagram

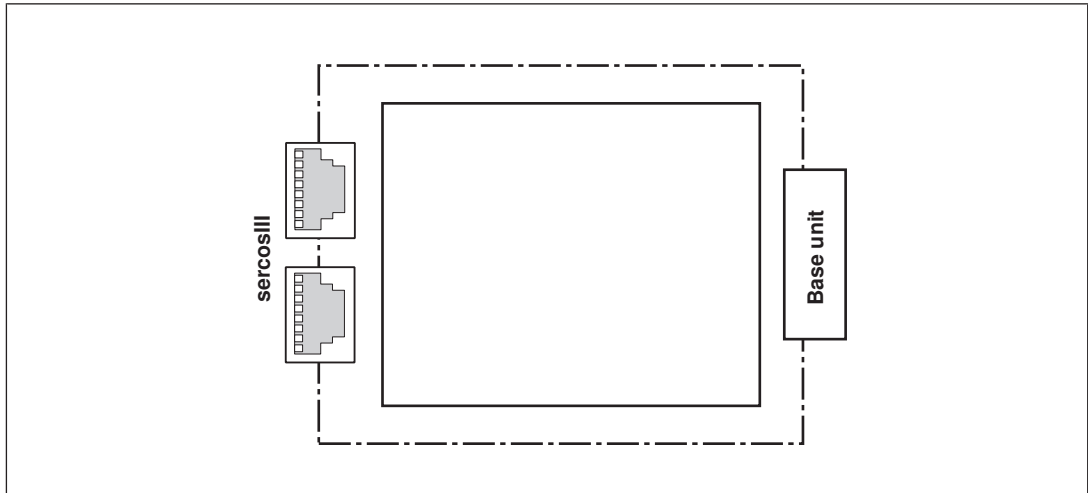

### Installation

#### Dimensions in mm

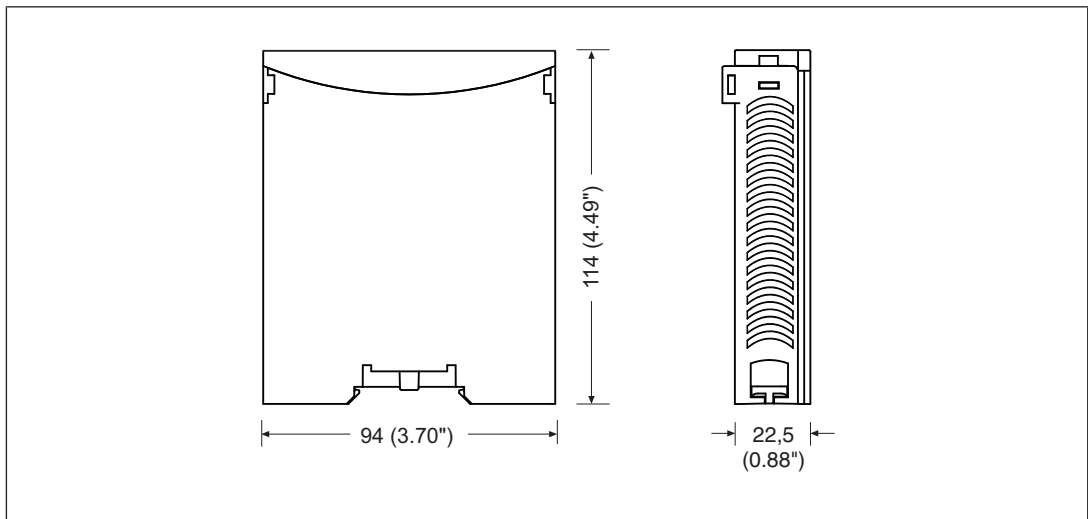



## Fieldbus modules

### PNOZ mc10p

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

It is possible to define which inputs and outputs on the safety system will communicate with sercos III.

Please note:


- ▶ Information given in the “Technical details” must be followed.
- ▶ Use copper wire that can withstand 75 °C.

Please note the following when connecting to sercos III:

- ▶ The following minimum requirements of the connection cable and connector must be met:
  - Only use standard industrial Ethernet cable and connectors.
  - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
  - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:

Ensure the requirements for the industrial use of sercos III are met, as stated in the Installation Manual published by the User Group.


### Interface assignment

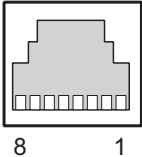RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

## Fieldbus modules PNOZ mc10p

### Connection example

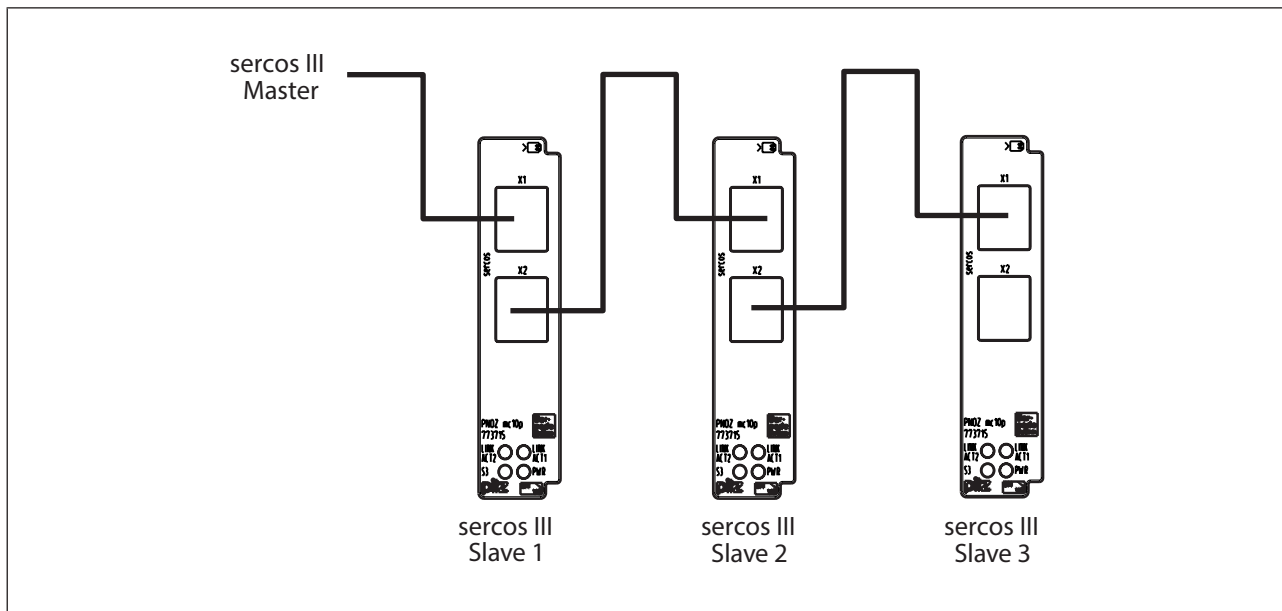

### Technical details

General	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
Electrical data	
Supply voltage	<b>Module supply</b> <b>Via base unit</b> <b>5,0 V</b> <b>DC</b> <b>-2 %/+2 %</b> <b>2,5 W</b>
for	
internal	
Voltage	
Kind	
Voltage tolerance	
Power consumption	
Status indicator	LED
Fieldbus interface	
Fieldbus interface	sercos III
Device type	Slave
Transmission rates	100 MBit/s
Connection	RJ45
Galvanic isolation	yes
Test voltage	500 V AC
Times	
Supply interruption before de-energisation	20 ms

## Fieldbus modules

### PNOZ mc10p

#### Environmental data

##### Ambient temperature

In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>

##### Storage temperature

In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>

##### Climatic suitability

In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>

##### Condensation during operation

**Not permitted**

##### EMC

**EN 61131-2**

##### Vibration

In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>

##### Shock stress

In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>

##### Max. operating height above sea level

**2000 m**

##### Airgap creepage

In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>

##### Rated insulation voltage

**30 V**

##### Protection type

In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

#### Mechanical data

##### Mounting position

**Horizontal on top hat rail**

##### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

##### Material

Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>

## Fieldbus modules

### PNOZ mc10p

Mechanical data	
Dimensions	
Height	94,0 mm
Width	22,5 mm
Depth	114,0 mm
Weight	125 g

Where standards are undated, the 2012-04 latest editions shall apply.

### Order reference

Order reference		
Product type	Features	Order no.
PNOZ mc10p	Fieldbus module, sercos III	773 715

### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639

## Fieldbus modules

### PNOZ mc12p



## Overview

### Unit features

Using the product PNOZ mc12p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for Ethernet POWERLINK (Ethernet POWERLINK V 2 protocol)
- ▶ Station addresses from 1 ... 239, selected via rotary switch
- ▶ The minimum cycle time for an application of 20 Byte Output and 50 Byte Input is 350µs. The minimum cycle time is 500 µs at the maximum PDO size of 240 Byte Input and 20 Byte Output (the inputs and outputs in this case are viewed from the Managing Node).
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus Ethernet POWERLINK . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc12p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Fieldbus modules

### PNOZ mc12p

#### Front view

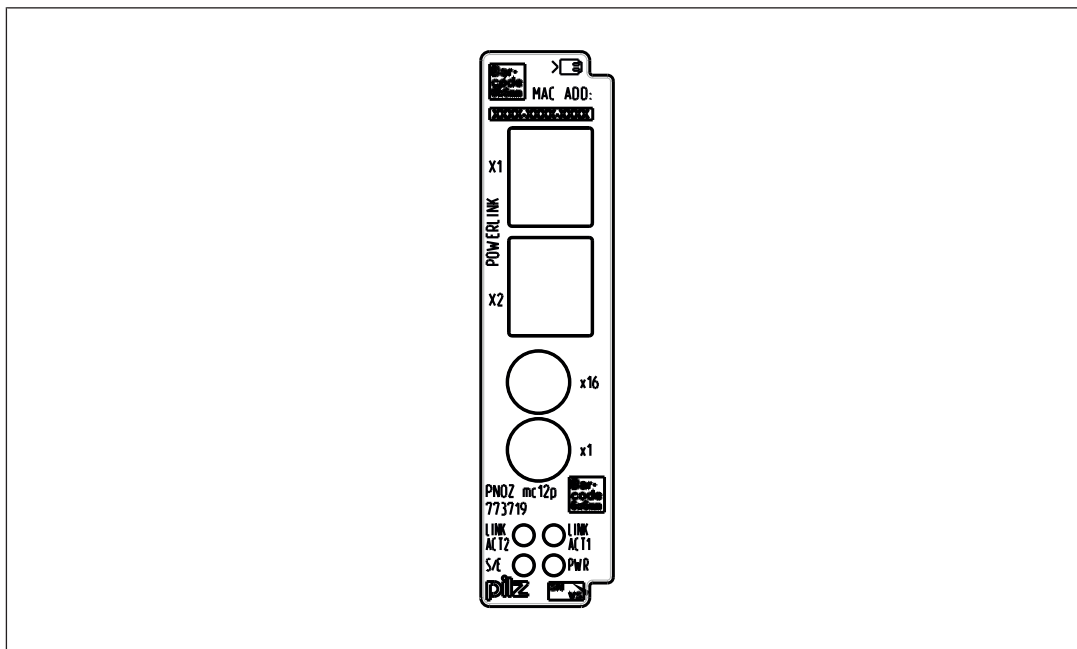

#### Legend:

- ▶ X1, X2 Ethernet POWERLINK interfaces
- ▶ LED:
  - LINK ACT1
  - LINK ACT2
  - PWR
  - S/E (Status/Error)

## Function description

### Functions

The virtual inputs and outputs that are to be transferred via the fieldbus Ethernet POWERLINK are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mc12p are connected via a jumper. The fieldbus module is also supplied with voltage via this jumper. After the supply voltage is switched on or the control system PNOZmulti is reset, the fieldbus module PNOZ mc12p is configured and started automatically.

LEDs indicate the status of the fieldbus module on the fieldbus Ethernet POWERLINK . The configuration is described in detail in the PNOZmulti Configurator's online help.

## Fieldbus modules

### PNOZ mc12p

#### Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the Managing Node and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of SDO 2100:02 has the number i12.

Virtual inputs PNOZmulti Configurator	I0 ... I7	I8 ... I15	I16 ... I23
Ethernet POWER-LINK	SDO 2100:01: Bit 0 ... 7	SDO 2100:02: Bit 0 ... 7	SDO 2100:03: Bit 0 ... 7

▶ Output range


The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The state of output o0 is stored in Bit 0 of SDO 2000:01.

Virtual outputs PNOZmulti Configurator	O0 ... O7	O8 ... O15	O16 ... O23
Ethernet POWER-LINK	SDO 2000:01: Bit 0 ... 7	SDO 2000:02: Bit 0 ... 7	SDO 2000:03: Bit 0 ... 7

Detailed information on data exchange is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

#### Block diagram

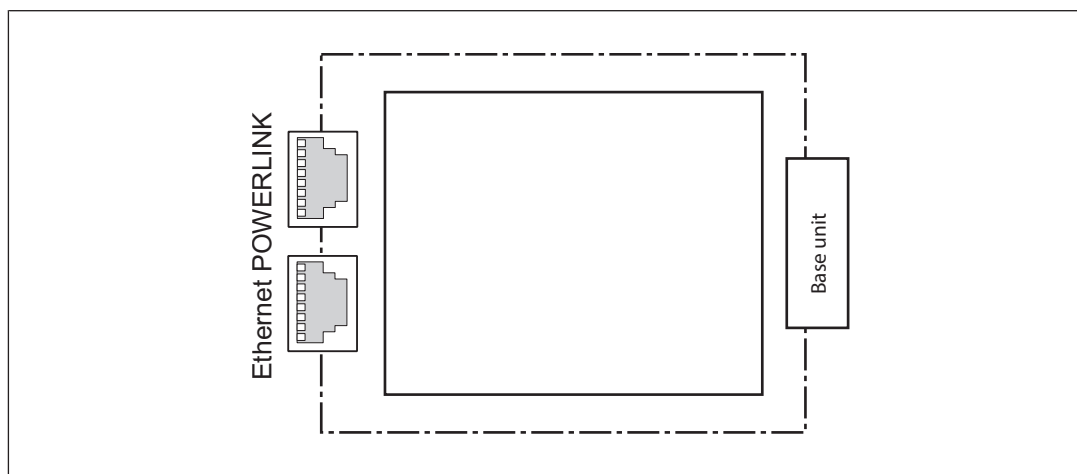


## Fieldbus modules

### PNOZ mc12p

## Installation

### Dimensions in mm

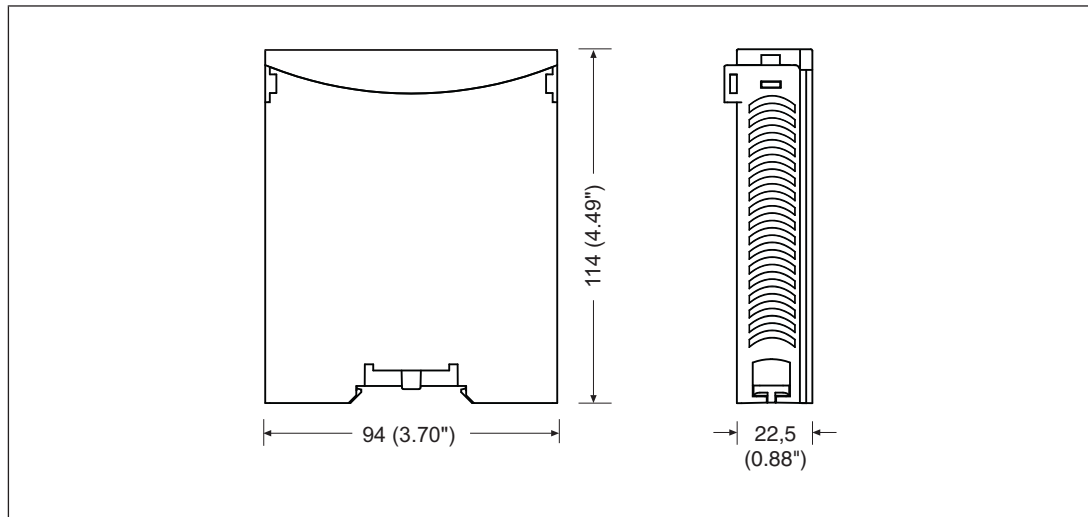

## Commissioning

### Wiring

The wiring is defined in the circuit diagram of the PNOZmulti Configurator. It is possible to define which inputs and outputs on the safety system will communicate with Ethernet POWERLINK.

Please note:

- ▶ Information given in the [Technical details \[492\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to Ethernet POWERLINK:


- ▶ The following minimum requirements of the connection cable and connector must be met:
  - Only use standard industrial Ethernet cable and connectors.
  - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
  - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:

Ensure the requirements for the industrial use of Ethernet POWERLINK are met, as stated in the Installation Manual published by the User Group.




## Fieldbus modules PNOZ mc12p

### Interface assignment

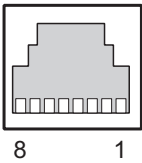RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

### Connection example

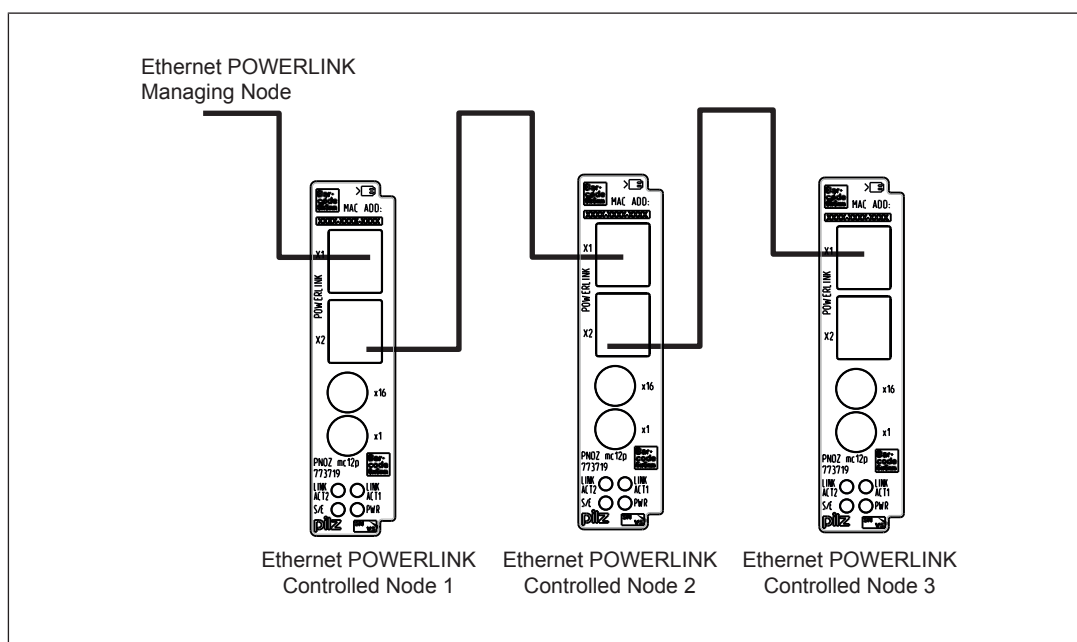

## Fieldbus modules

### PNOZ mc12p

#### Technical Details

<b>General</b>	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
<b>Electrical data</b>	
Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>5,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>1,6 W</b>
Status indicator	<b>LED</b>
<b>Fieldbus interface</b>	
Fieldbus interface	<b>Ethernet POWERLINK V2</b>
Device type	<b>Controlled Node</b>
Transmission rates	<b>100 MBit/s</b>
Connection	<b>RJ45</b>
Galvanic isolation	<b>yes</b>
<b>Times</b>	
Supply interruption before de-energisation	<b>20 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>

## Fieldbus modules

### PNOZ mc12p

#### Environmental data

##### Airgap creepage

In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>III</b>
Pollution degree	<b>2</b>

Rated insulation voltage	<b>25 V</b>
--------------------------	-------------

##### Protection type

In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

#### Potential isolation

Potential isolation between	<b>Fieldbus and module voltage</b>
-----------------------------	------------------------------------

Type of potential isolation	<b>Functional insulation</b>
-----------------------------	------------------------------

Rated surge voltage	<b>500 V</b>
---------------------	--------------

#### Mechanical data

Mounting position	<b>Horizontal on top hat rail</b>
-------------------	-----------------------------------

##### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

##### Material

Bottom	<b>PPO UL 94 V0</b>
Front	<b>ABS UL 94 V0</b>

##### Dimensions

Height	<b>94,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>114,0 mm</b>

Weight	<b>115 g</b>
--------	--------------

Where standards are undated, the 2012-06 latest editions shall apply.

## Fieldbus modules

### PNOZ mc12p

---

#### Order reference

#### Product

Product type	Features	Order No.
PNOZ mc12p	Fieldbus module, Ethernet POWERLINK	773 719

#### Accessories

#### Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639



---

<b>Contents</b>	<b>Page</b>
Base units	497
Link modules	566
Communication modules	589
Fieldbus modules	605

## Base units PNOZ mm0p

---



### Overview

#### Unit features

Using the product PNOZ mm0p:

Base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
  - 4 safety outputs
  - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ 12 inputs for connecting, for example:
  - E-STOP pushbuttons
  - Two-hand button
  - Safety gate limit switches
  - Start buttons
  - Light beam devices
  - Scanners
  - Enabling switches
  - PSEN
  - Operating mode selector switches
  - Safety mats
- ▶ 8 configurable inputs/outputs
  - Can be configured as:
    - Inputs (see above for connection options)
  - or
  - Outputs for standard applications

## Base units PNOZ mm0p

---

- ▶ 4 configurable outputs  
Can be configured as:
  - Outputs for standard applicationsor
  - Test pulse outputs
- ▶ LED indicator for:
  - Error messages
  - Diagnostics
  - Supply voltage
  - Output circuits
  - Input circuits
- ▶ Display for:
  - Error messages
  - State of supply voltage
  - State of the inputs and outputs
  - Status information
  - Unit information
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Plug-in connection terminals:  
Either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Rotary knob for menu control

### Chip card


To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).



## Base units PNOZ mm0p

### Front view

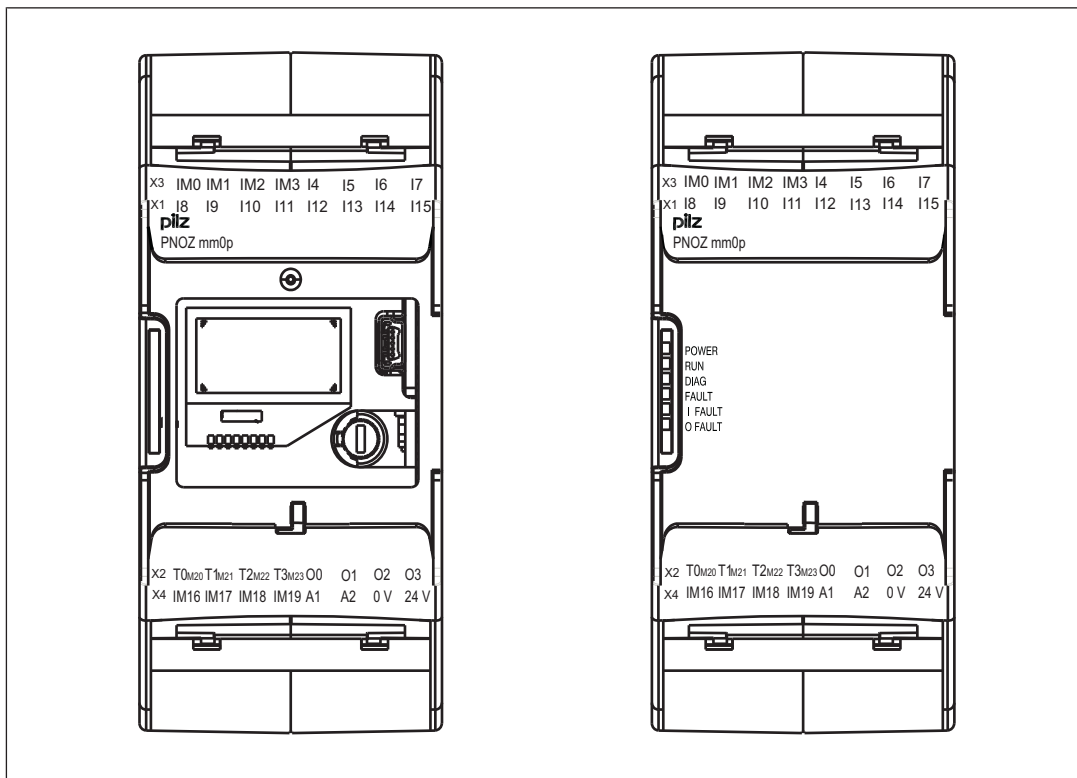

Front view with and without cover

### Legend

- X1: Inputs I8 ... I15
- X1: Configurable test pulse/auxiliary outputs T0M20 ... T3M23
- Semiconductor outputs O0 ... O3
- X3: Configurable inputs/outputs IM0 – IM3
- Inputs I4 ... I7
- X4: Configurable inputs/outputs IM16 – IM19
- Supply connections
- LEDs: PWR
- RUN
- DIAG
- FAULT
- I FAULT
- O FAULT

## Base units PNOZ mm0p

### Function description

#### Functions

The function of the safety system's inputs and outputs depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits and switch the outputs accordingly.

The LEDs indicate the status of the PNOZmulti safety system.


The LC display indicates the status of the inputs/outputs and the supply voltage.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

#### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion \[📖 29\]](#)".

#### Block diagram

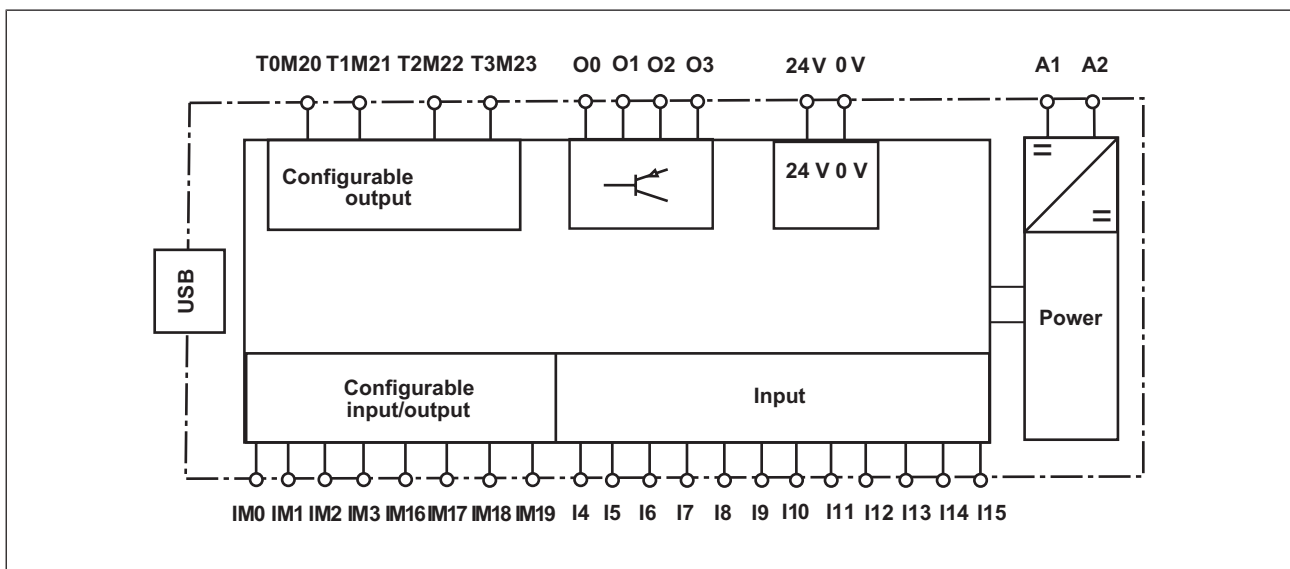


## Base units PNOZ mm0p

### Installation

#### Dimensions

\*with spring-loaded terminals

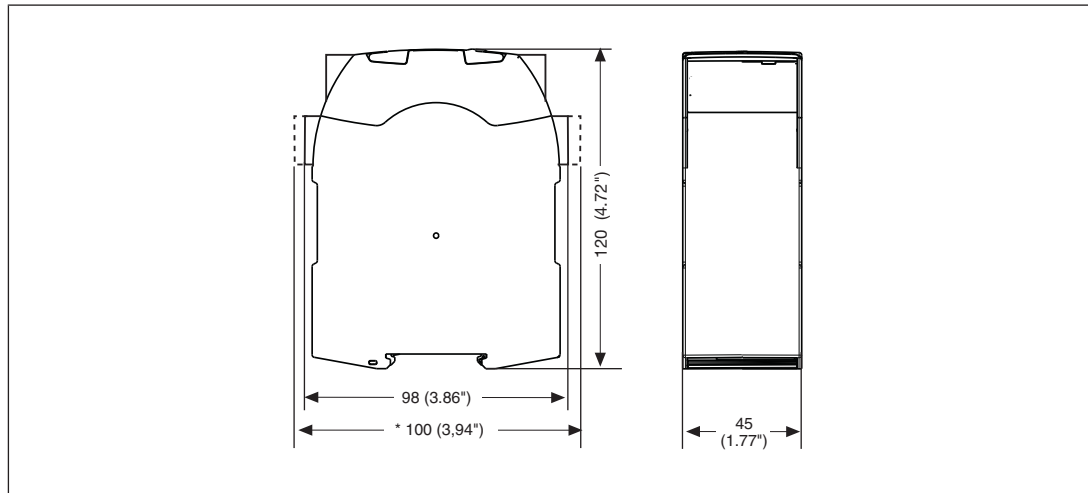

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[506\]](#) must be followed.
- ▶ Outputs O0 to O3 are semiconductor outputs
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Sufficient fuse protection must be provided on all output contacts with inductive loads.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.  
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.  
Test pulses that are used for the safety mat may not be reused for other purposes.


## Base units PNOZ mm0p

### Preparing for operation

#### Function test during commissioning

#### Using the chip card

Make sure that you do not bend the chip card as you insert it into the chip card slot.

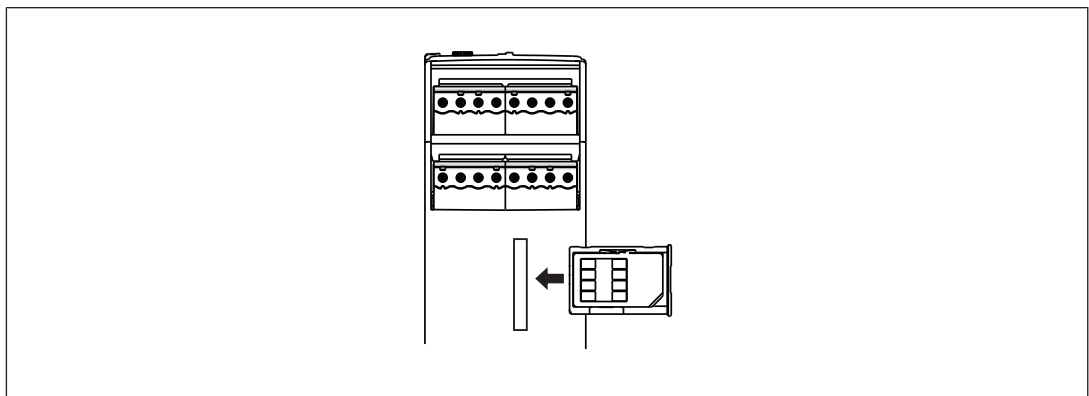

### Commissioning the PNOZmulti safety system

Procedure:

- ▶ Wire the inputs and outputs on the base unit in accordance with the circuit diagram.
- ▶ Connect the supply voltage:
  - Supply voltage for the control system:
    - Terminal A1: + 24 VDC
    - Terminal A2: 0 V
  - Supply voltage for the semiconductor outputs:
    - 24 V terminal: + 24 VDC
    - 0V terminal: 0 V

Please note: The supply voltage for the semiconductor outputs must always be present, even if you are not using the semiconductor outputs.

### Load project from chip card

Procedure:

- ▶ Insert the chip card containing the current project into the card slot on the base unit.
- ▶ Switch on the supply voltage. The LC display shows the project name, CRC sum and the date the project was created. Please check this information.
- ▶ Load the project by pressing the rotary knob. For the project to be downloaded, the rotary knob must be held down for between 3 and 8 seconds. Once the project has been successfully downloaded, the status of the inputs and outputs will be shown on the display.

## Base units PNOZ mm0p

### Load project via USB port

Procedure:

- ▶ Insert a chip card into the card slot on the base unit.
- ▶ Connect the computer containing the PNOZmulti Configurator to the base unit via the USB port.
- ▶ Switch on the supply voltage.
- ▶ Download the project (see PNOZmulti Configurator's online help).
- ▶ Once the project has been successfully downloaded, the status of the inputs and outputs and the supply voltage will be shown on the display. The "RUN" LED will be lit.

### Connection

Supply voltage	AC	DC
For the safety system		
For the semiconductor outputs Must always be present, even if the semiconductor outputs are not used		

Input circuit	Single-channel	Dual-channel
E-STOP <b>without</b> detection of shorts across contacts		
E-STOP <b>with</b> detection of shorts across contacts		

## Base units PNOZ mm0p

Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts
Redundant output		
Single output		
Single output with advanced fault detection*		


\*Two loads may be connected to each safety output with advanced fault detection, even on applications in accordance with EN IEC 62061, SIL CL 3. Prerequisite: Feedback loop is connected, shorts across contacts and external power sources are excluded (e.g. through separate multicore cables). Please note that, in the event of an error in the feedback loop, the safety system switches to a safe condition and shuts down **all** the outputs.

## Base units PNOZ mm0p

Feedback loop	Redundant output
Contacts from external contactors	

### Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (IM18), feedback loop (IM16)

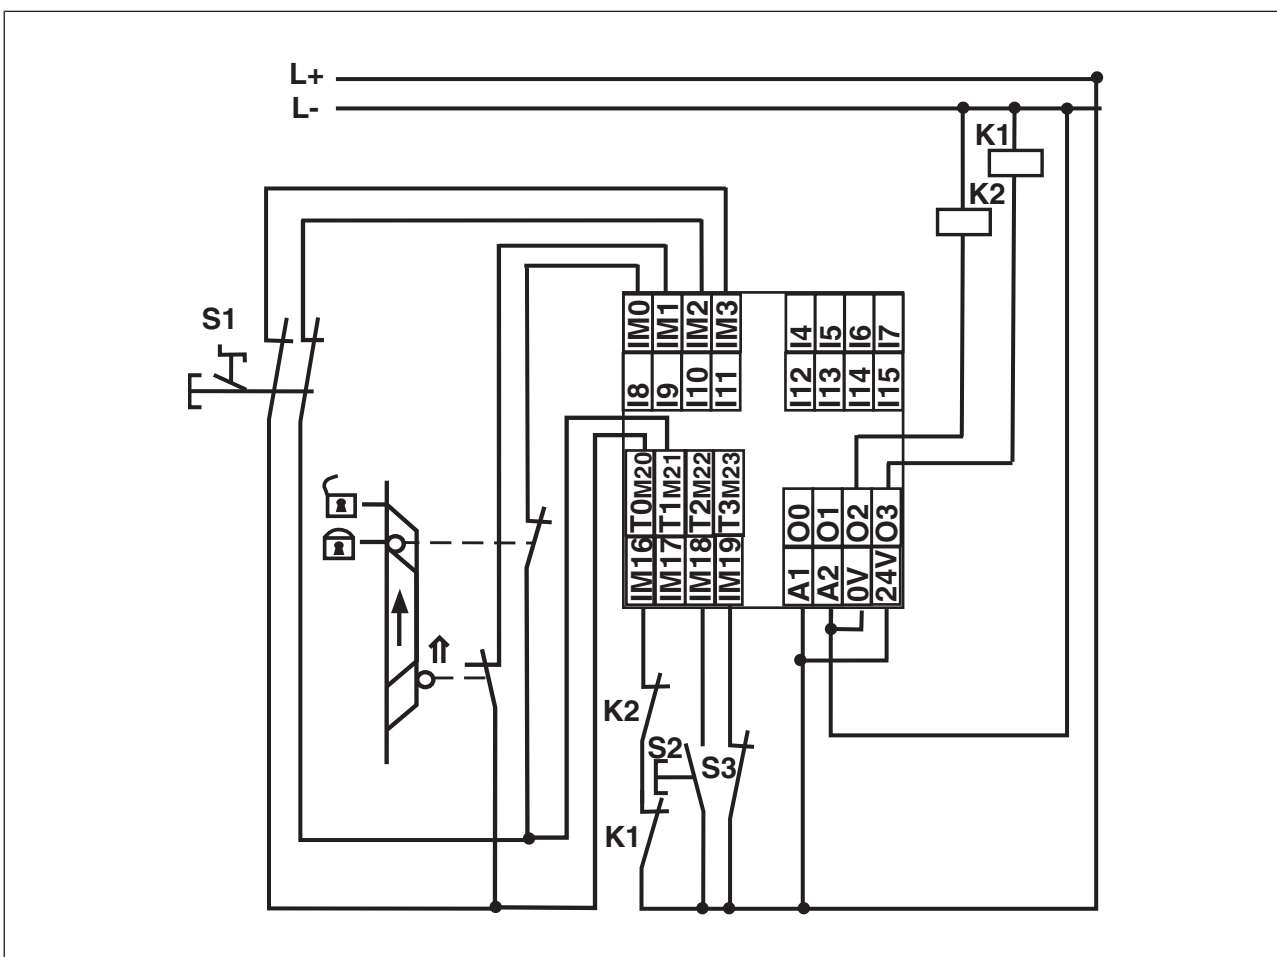

## Base units PNOZ mm0p

### Technical details

General	
Approvals	BG, CCC, CE, EAC (Eurasian), KCC, TÜV, cULus Listed
Electrical data	
Supply voltage	
for	<b>Supply to the system</b>
Voltage	<b>24,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>35,0 W</b>
Output of external power supply (DC) at no load	<b>8,0 W</b>
Residual ripple DC	<b>5 %</b>
Supply voltage	
for	<b>Supply to the SC outputs</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>192,0 W</b>
Status indicator	<b>Display, LED</b>
Configurable inputs/outputs (inputs or auxiliary outputs)	
Number	<b>8</b>
Galvanic isolation	<b>No</b>
Configurable inputs	
Input voltage in accordance with EN 61131-2 Type 1	<b>24,0 V</b>
Input current at rated voltage	<b>5 mA</b>
Min. pulse duration	<b>16 ms</b>
Pulse suppression	<b>0,6 ms</b>
Signal level at "1"	<b>15 ... 30 V DC</b>
Signal level at "0"	<b>-3 ... +5 V DC</b>
Maximum input delay	<b>4,0 ms</b>
Configurable auxiliary outputs	
Voltage	<b>24,0 V</b>
Output current	<b>75 mA</b>
Power	<b>1,8 W</b>
Short circuit-proof	<b>yes</b>
Residual current at "0"	<b>0,5 mA</b>
Voltage at "1"	<b>UB - 2 V at 0.1 A</b>
Inputs	
Number	<b>12</b>



## Base units PNOZ mm0p

<b>Inputs</b>	
Signal level at "0"	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC
Input voltage in accordance with EN 61131-2 Type 1	24 V DC
Input current at rated voltage	5 mA
Min. pulse duration	16 ms
Pulse suppression	0,6 ms
Maximum input delay	4 ms
Potential isolation	No
<b>Semiconductor outputs</b>	
Number	4
Switching capability	
Voltage	24 V
Current	2,0 A
Power	48 W
Signal level at "1"	UB - 0.5 VDC at 2 A
Residual current at "0"	0,5 mA
Max. capacitive load	1 µF
Max. duration of off time during self test	330 µs
Switch-off delay	30 ms
Potential isolation	yes
Short circuit-proof	yes
<b>Test pulse outputs</b>	
Number of test pulse outputs	4
Voltage	24 V
Current	0,1 A
Max. duration of off time during self test	5 ms
Short circuit-proof	yes
Potential isolation	No
<b>Times</b>	
Switch-on delay	5,00 s
Supply interruption before de-energisation	20 ms
Simultaneity, channel 1 and 2 max.	3 s
Simultaneity in the two-hand circuit	0,5 s
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
In accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C

## Base units PNOZ mm0p

<b>Environmental data</b>	
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1 g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15 g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Rated impulse withstand voltage	<b>2,50 kV</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>SC output and system voltage</b>
Type of potential isolation	<b>Basic insulation</b>
Rated surge voltage	<b>2500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Max. cable length	
Max. cable length per input	<b>1,0 km</b>
Sum of individual cable lengths at the test pulse output	<b>2 km</b>

## Base units PNOZ mm0p

### Mechanical data

Material	
Bottom	PC
Front	PC
Top	PC
1 core flexible	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,20 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
Torque setting with screw terminals	0,50 Nm
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector	
	0,20 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9,0 mm
Dimensions	
Height	100,0 mm
Width	45,0 mm
Depth	120,0 mm
Weight	226 g

Where standards are undated, the 2010-08 latest editions shall apply.

### Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
------	----------------	-------------------------	-------------------------------	-----------------	---------------------------------	--

#### Logic

CPU	2-channel	PL e	Cat. 4	SIL CL 3	1,54E-09	20
<b>Input</b>						
SC inputs	1-channel	PL d	Cat. 2	SIL CL 2	3,95E-09	20
SC inputs	2-channel	PL e	Cat. 4	SIL CL 3	4,61E-10	20
SC inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,86E-09	20
SC inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	3,95E-10	20

## Base units PNOZ mm0p


### Output

SC outputs	<b>1-channel with advanced fault detection</b>	<b>PL e</b>	<b>Cat. 4</b>	<b>SIL CL 3</b>	<b>7,65E-10</b>	<b>20</b>
SC outputs	<b>1-channel</b>	<b>PL d</b>	<b>Cat. 2</b>	<b>SIL CL 2</b>	<b>8,90E-10</b>	<b>20</b>
SC outputs	<b>2-channel</b>	<b>PL e</b>	<b>Cat. 4</b>	<b>SIL CL 3</b>	<b>7,86E-10</b>	<b>20</b>

All the units used within a safety function must be considered when calculating the safety characteristic data.


### Supplementary data

#### Maximum capacitive load C (μF) with load current I (A) at the semiconductor outputs

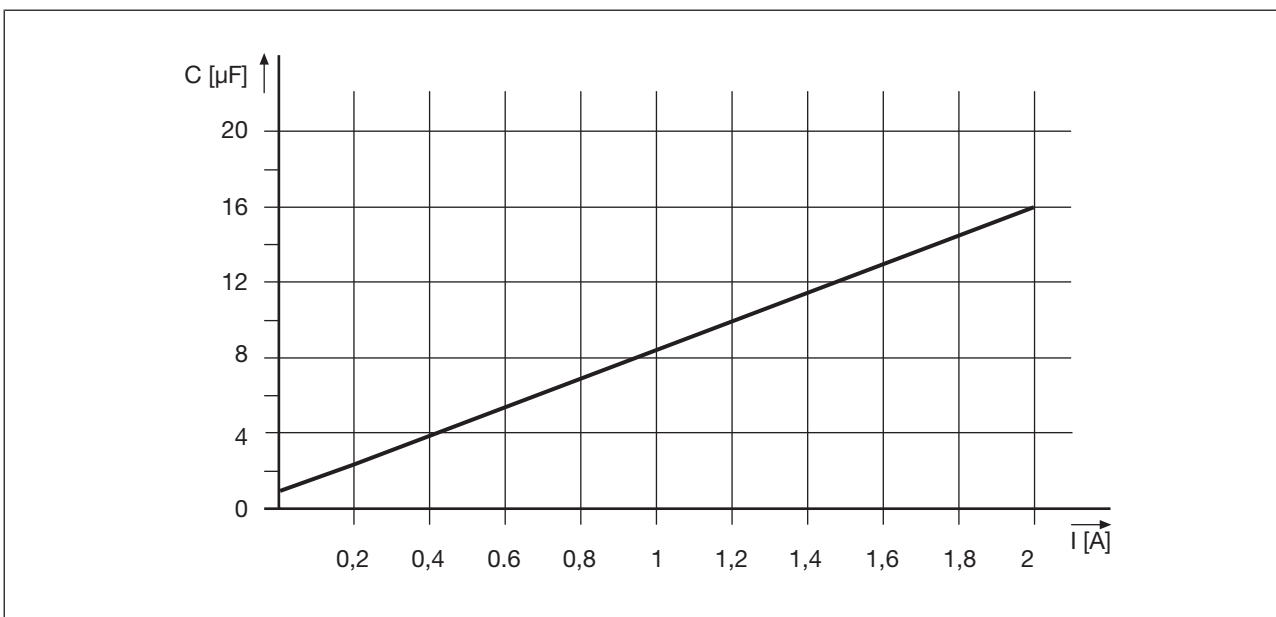

## Base units PNOZ mm0p

### Maximum permitted total current of the semiconductor outputs

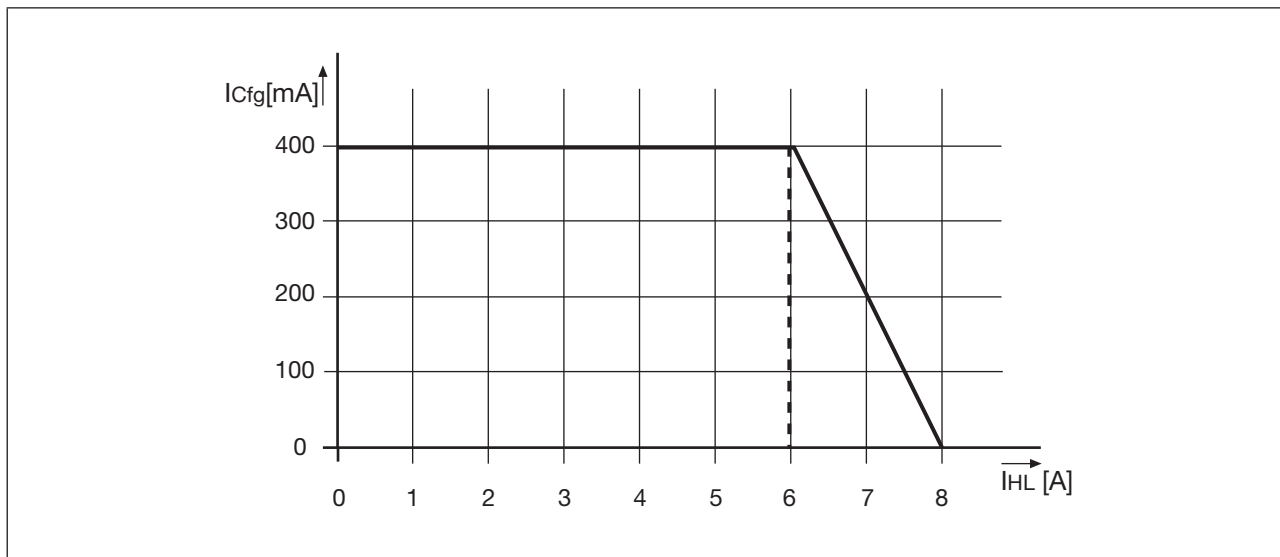

$I_{Cfg}$ : Total current of the configurable semiconductor outputs (auxiliary outputs)

$I_{HL}$ : Total current: Semiconductor outputs (safety outputs)

### Order reference

Order reference		
Product type	Features	Order no.
PNOZ mm0p	Base unit	772 000

### Terminals

Product type	Features	Order no.
PNOZ s Set1 spring loaded terminals	1 set of spring-loaded terminals	751 008
PNOZ s Set1 screw terminals	1 set of screw terminals	750 008

### Cable

Product type	Features	Order no.
PSSu A USB-CAB03	Mini USB cable, 3 m	312 992
PSSu A USB-CAB05	Mini USB cable, 5 m	312 993

## Base units PNOZ mm0p-T

---



### Overview

#### Unit features

Using the product PNOZ mm0p-T:

Base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
  - 4 safety outputs
  - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ 12 inputs for connecting, for example:
  - E-STOP pushbuttons
  - Two-hand pushbuttons
  - Safety gate limit switches
  - Reset buttons
  - Light beam devices
  - Scanners
  - Enabling switches
  - PSEN
  - Operating mode selector switches
  - Pressure sensitive mats
- ▶ 8 configurable inputs/outputs
  - Can be configured as:
    - Inputs (see above for connection options)
  - or
  - Outputs for standard applications

## Base units

### PNOZ mm0p-T

---

- ▶ 4 configurable outputs  
Can be configured as:
  - Outputs for standard applicationsor
  - Test pulse outputs
- ▶ LED for:
  - Error messages
  - Diagnostics
  - Supply voltage
  - State of the inputs
  - State of the outputs
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Plug-in connection terminals:  
Either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Pushbutton to change the operating status and download the project.
- ▶ Coated version:  
Increased environmental requirements (see [Technical details](#) [ 521])

### Chip card


To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

## Base units

### PNOZ mm0p-T

#### Front view

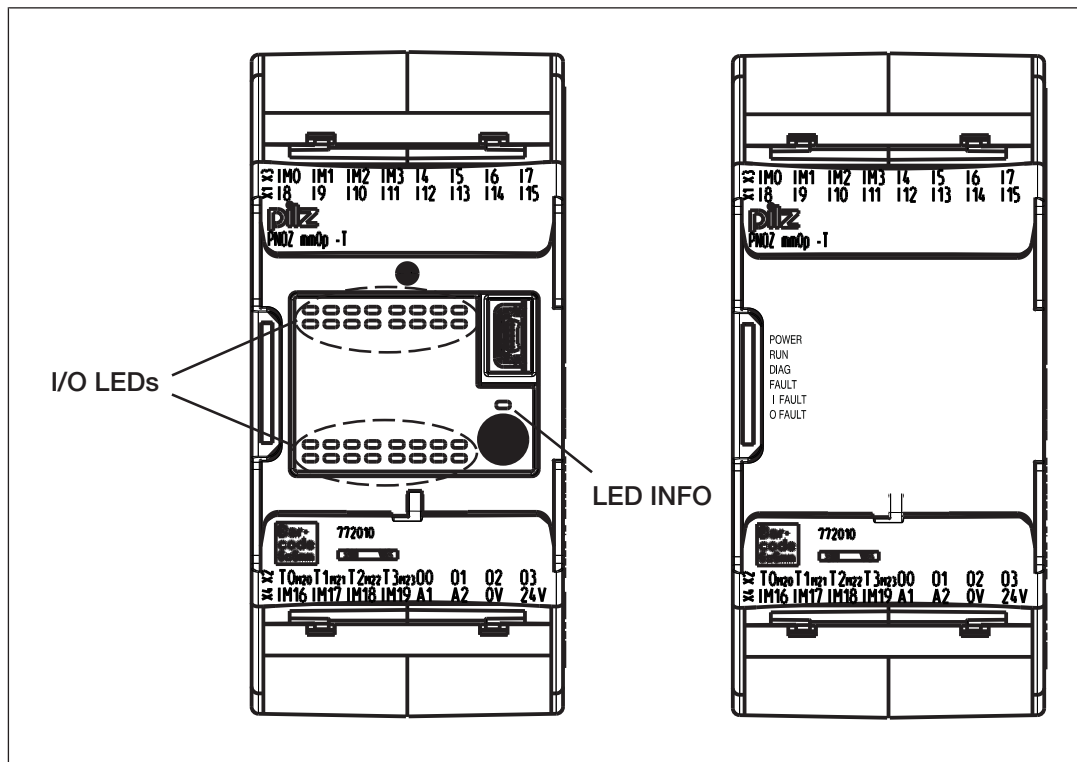

Front view with and without cover

#### Legend

- ▶ X1:
  - Inputs I8 ... I15
- ▶ X2:
  - Configurable test pulse/auxiliary outputs T0M20 ... T3M23
  - Semiconductor outputs O0 ... O3
- ▶ X3:
  - Configurable inputs/outputs IM0 – IM3
  - Inputs I4 ... I7
- ▶ X4:
  - Configurable inputs/outputs IM16 – IM19
  - Supply connections
- ▶ LEDs:
  - POWER
  - RUN



## Base units PNOZ mm0p-T

- DIAG
- FAULT
- I FAULT
- O FAULT
- INFO
- I/O

### Function description

#### Functions

The function of the safety system's inputs and outputs depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits and switch the outputs accordingly.


The LEDs indicate the status of the safety system plus the inputs and outputs.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

#### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion \[📖 29\]](#)".

#### Block diagram

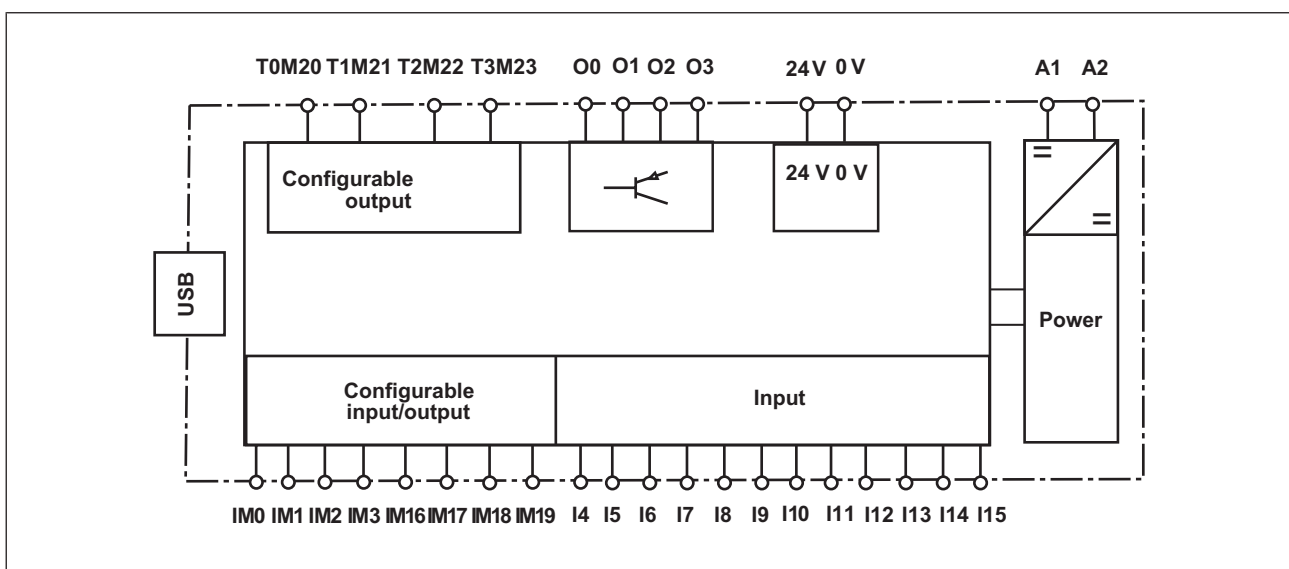


## Base units PNOZ mm0p-T

### Installation

#### Dimensions

\*with spring-loaded terminals

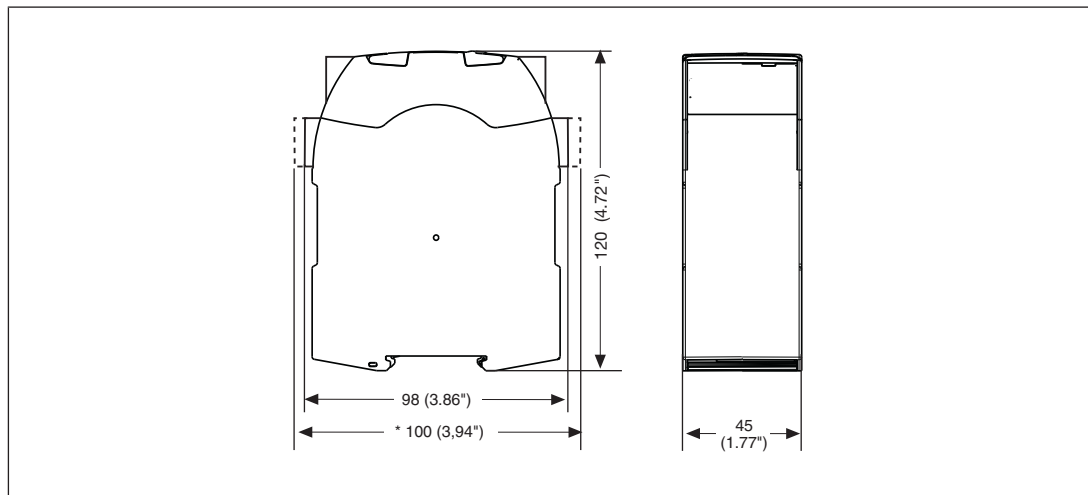

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[521\]](#) must be followed.
- ▶ Outputs O0 to O3 are semiconductor outputs
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Sufficient fuse protection must be provided on all output contacts with inductive loads.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.  
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.  
Test pulses that are used for the safety mat may not be reused for other purposes.


## Base units PNOZ mm0p-T

### Preparing for operation

#### Function test during commissioning

#### Using the chip card

Make sure that you do not bend the chip card as you insert it into the chip card slot.

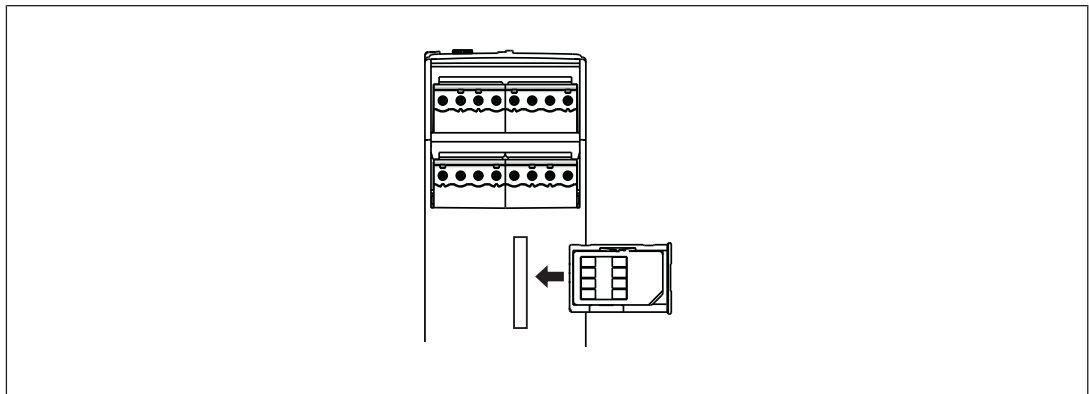

### Commissioning the PNOZmulti safety system

Procedure:

- ▶ Wire the inputs and outputs on the base unit in accordance with the circuit diagram.
- ▶ Connect the supply voltage:
  - Supply voltage for the control system:
    - Terminal A1: + 24 VDC
    - Terminal A2: 0 V
  - Supply voltage for the semiconductor outputs:
    - 24 V terminal: + 24 VDC
    - 0V terminal: 0 V

Please note: The supply voltage for the semiconductor outputs must always be present, even if you are not using the semiconductor outputs.

### Load project from chip card

Procedure:

- ▶ Insert the chip card containing the current project into the card slot on the base unit.
- ▶ Switch on the supply voltage. The INFO LED lights when a new or modified project is present.

## Base units PNOZ mm0p-T

- ▶ Load the project by pressing the pushbutton. For the project to be downloaded, the pushbutton must be held down for between 4 and 8 seconds. Release the pushbutton while the INFO LED flashes rapidly.  
If you hold the pushbutton down for too long, the process will be aborted and the project will not be downloaded.

### Load project via USB port

Procedure:









- ▶ Insert a chip card into the card slot on the base unit.
- ▶ Connect the computer containing the PNOZmulti Configurator to the base unit via the USB port.
- ▶ Switch on the supply voltage.
- ▶ Download the project (see PNOZmulti Configurator's online help).
- ▶ Once the project has been successfully downloaded, the status of the inputs and outputs and the supply voltage will be shown via the LEDs. The "RUN" LED is lit.

### Connection

Supply voltage	AC	DC
For the safety system		
For the semiconductor outputs Must always be present, even if the semiconductor outputs are not used		

Input circuit	Single-channel	Dual-channel
E-STOP <b>without</b> detection of shorts across contacts		
E-STOP <b>with</b> detection of shorts across contacts		

## Base units PNOZ mm0p-T

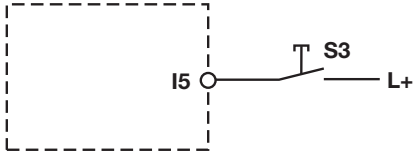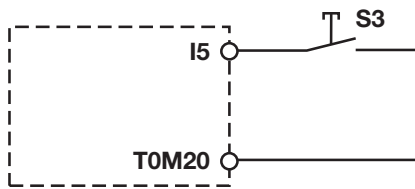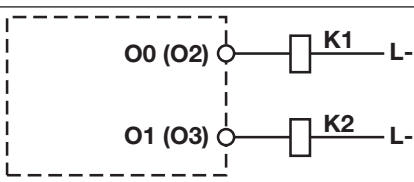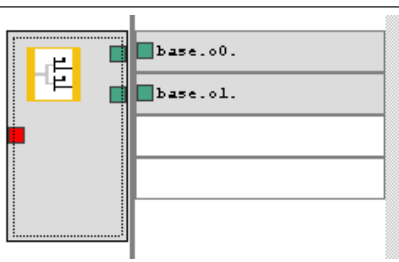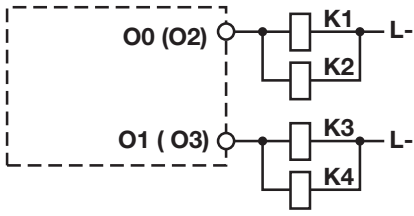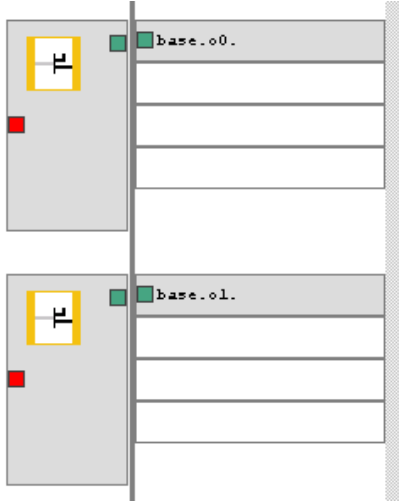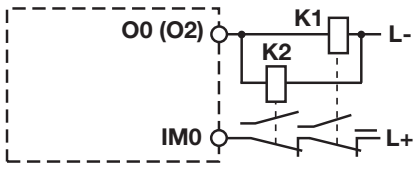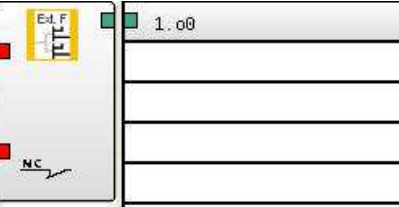Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts
		
Redundant output		
Single output		
Single output with advanced fault detection*		


\*Two loads may be connected to each safety output with advanced fault detection, even on applications in accordance with EN IEC 62061, SIL CL 3. Prerequisite: Feedback loop is connected, shorts across contacts and external power sources are excluded (e.g. through separate multicore cables). Please note that, in the event of an error in the feedback loop, the safety system switches to a safe condition and shuts down **all** the outputs.

## Base units PNOZ mm0p-T

Feedback loop	Redundant output
Contacts from external contactors	

### Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (IM18), feedback loop (IM16)

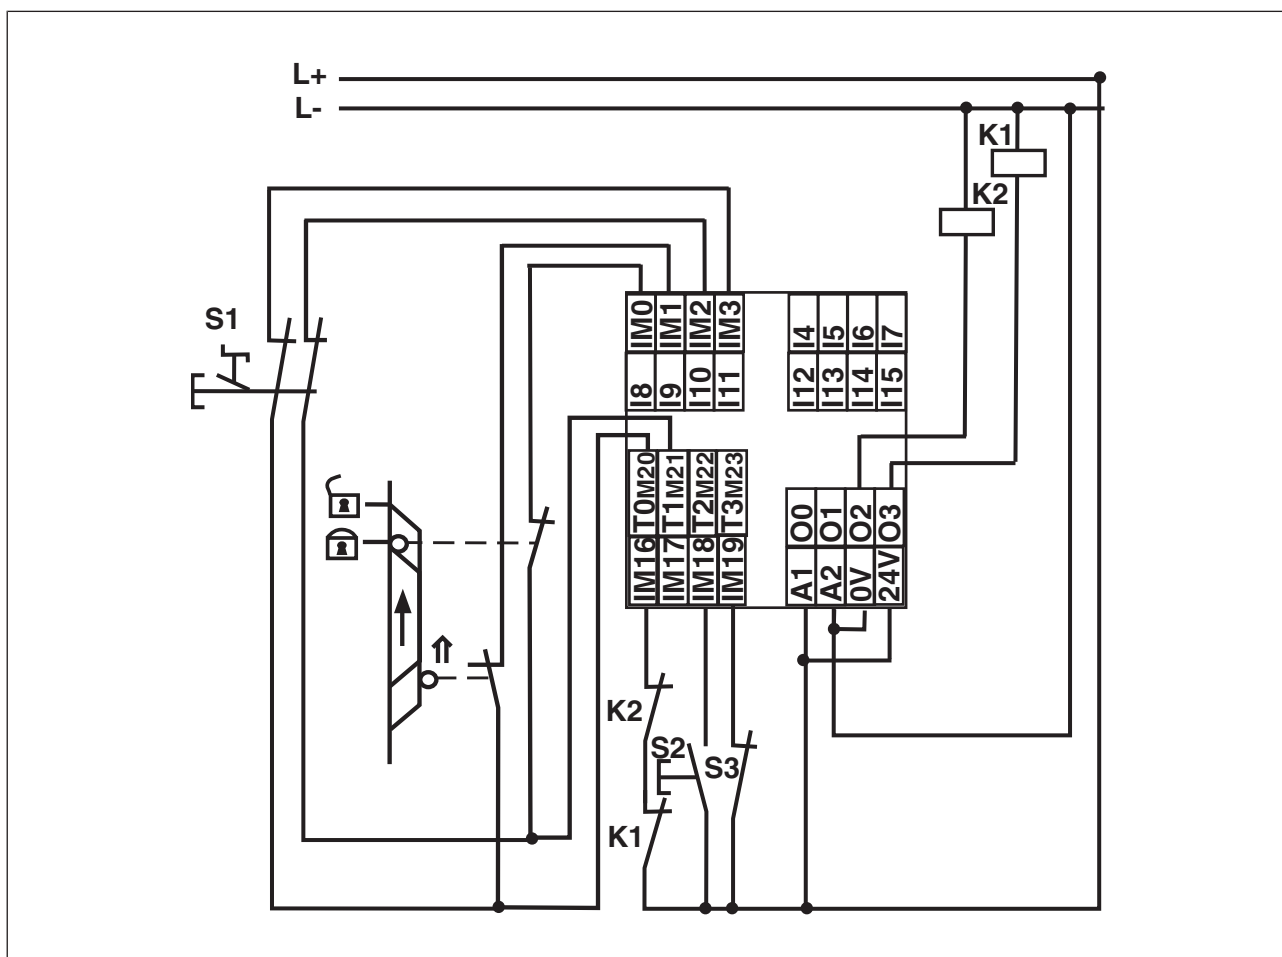

## Base units PNOZ mm0p-T

### Technical details

<b>General</b>	
Approvals	BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed
<b>Electrical data</b>	
Supply voltage	
for	<b>Supply to the system</b>
Voltage	<b>24,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>35,0 W</b>
Output of external power supply (DC) at no load	<b>8,0 W</b>
Residual ripple DC	<b>5 %</b>
Supply voltage	
for	<b>Supply to the SC outputs</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>192,0 W</b>
Potential isolation	<b>yes</b>
Status indicator	<b>LED</b>
<b>Configurable inputs/outputs (inputs or auxiliary outputs)</b>	
Number	<b>8</b>
Potential isolation	<b>No</b>
Galvanic isolation	<b>No</b>
Configurable inputs	
Input voltage in accordance with EN 61131-2 Type 1	<b>24,0 V</b>
Input current at rated voltage	<b>5 mA</b>
Min. pulse duration	<b>16 ms</b>
Pulse suppression	<b>0,6 ms</b>
Signal level at "1"	<b>15 ... 30 V DC</b>
Signal level at "0"	<b>-3 ... +5 V DC</b>
Maximum input delay	<b>4,0 ms</b>
Configurable auxiliary outputs	
Voltage	<b>24,0 V</b>
Output current	<b>75 mA</b>
Power	<b>1,8 W</b>
Short circuit-proof	<b>yes</b>
Residual current at "0"	<b>0,5 mA</b>
Voltage at "1"	<b>UB - 2 V at 0.1 A</b>

## Base units PNOZ mm0p-T

<b>Inputs</b>	
Number	12
Signal level at "0"	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC
Input voltage in accordance with EN 61131-2 Type 1	24 V DC
Input current at rated voltage	5 mA
Input current range	2,5 - 5,3 mA
Min. pulse duration	16 ms
Pulse suppression	0,6 ms
Maximum input delay	4 ms
Potential isolation	No
<b>Semiconductor outputs</b>	
Number	4
Switching capability	
Voltage	24 V
Current	2,0 A
Power	48 W
Voltage	24 V
Current	1 A
Power	24 W
Signal level at "1"	UB - 0.5 VDC at 2 A
Residual current at "0"	0,5 mA
Max. capacitive load	1 µF
Max. duration of off time during self test	330 µs
Switch-off delay	30 ms
Potential isolation	yes
Short circuit-proof	yes
<b>Test pulse outputs</b>	
Number of test pulse outputs	4
Voltage	24 V
Current	0,1 A
Max. duration of off time during self test	5 ms
Short circuit-proof	yes
Potential isolation	No
<b>Times</b>	
Switch-on delay	5,00 s
Supply interruption before de-energisation	20 ms
Simultaneity, channel 1 and 2 max.	3 s
Simultaneity in the two-hand circuit	0,5 s



## Base units PNOZ mm0p-T

<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>-25 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Short-term (only with separated extra low voltage)</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1 g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Number of shocks	<b>3</b>
Acceleration	<b>15 g</b>
Duration	<b>11 ms</b>
In accordance with the standard	<b>EN 60068-2-27</b>
Number of shocks	<b>500</b>
Acceleration	<b>25 g</b>
Duration	<b>6 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Rated impulse withstand voltage	<b>2,50 kV</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>SC output and system voltage</b>
Type of potential isolation	<b>Basic insulation</b>
Rated surge voltage	<b>2500 V</b>

## Base units PNOZ mm0p-T

<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Max. cable length	
Max. cable length per input	<b>1,0 km</b>
Sum of individual cable lengths at the test pulse output	<b>2 km</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals	<b>0,50 Nm</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector	<b>0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>2</b>
Stripping length with spring-loaded terminals	<b>9,0 mm</b>
Dimensions	
Height	<b>100,0 mm</b>
Width	<b>45,0 mm</b>
Depth	<b>120,0 mm</b>
Weight	<b>230 g</b>

Where standards are undated, the 2012-07 latest editions shall apply.

## Base units PNOZ mm0p-T

### Safety characteristic data


Unit	Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
<b>Logic</b>						
CPU	2-channel	PL e	Cat. 4	SIL CL 3	1,54E-09	20
<b>Input</b>						
SC inputs	1-channel	PL d	Cat. 2	SIL CL 2	3,95E-09	20
SC inputs	2-channel	PL e	Cat. 4	SIL CL 3	4,61E-10	20
SC inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	3,95E-10	20
<b>Output</b>						
SC outputs	1-channel with advanced fault detection	PL e	Cat. 4	SIL CL 3	7,65E-10	20
SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	8,90E-10	20
SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	7,86E-10	20

All the units used within a safety function must be considered when calculating the safety characteristic data.


## Base units PNOZ mm0p-T

### Supplementary data

#### Maximum capacitive load $C$ ( $\mu\text{F}$ ) with load current $I$ (A) at the semiconductor outputs

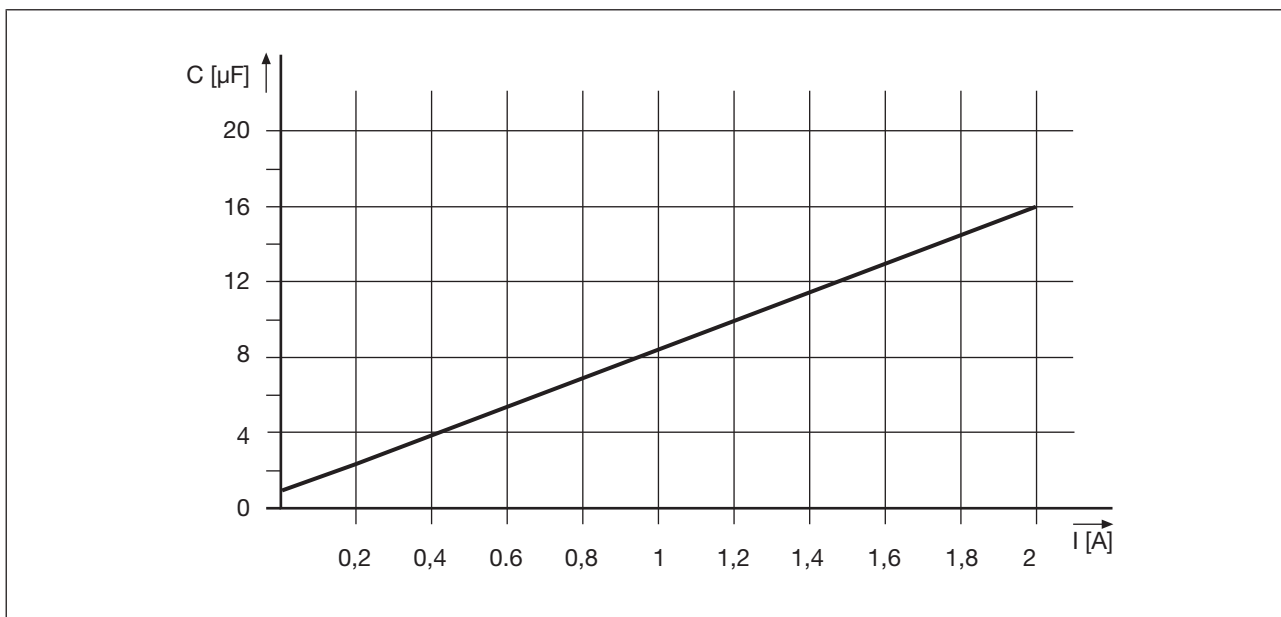

#### Maximum permitted total current of the semiconductor outputs

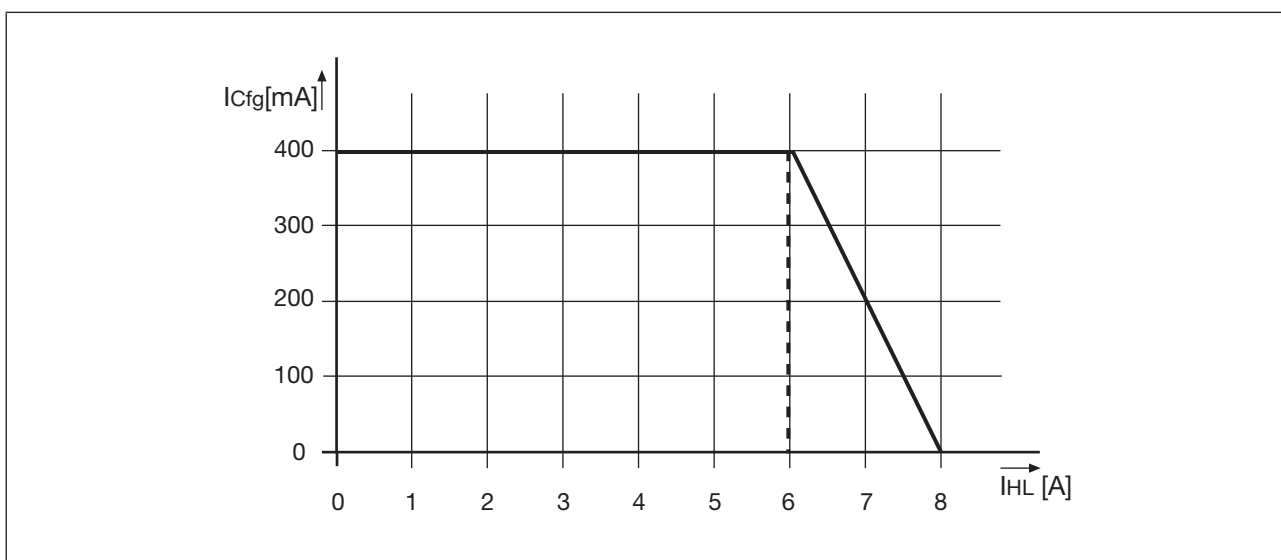

$I_{C_{fg}}$ : Total current of the configurable semiconductor outputs (auxiliary outputs)

$I_{HL}$ : Total current: Semiconductor outputs (safety outputs)

## Base units

### PNOZ mm0p-T

#### Order reference

Order reference		
Product type	Features	Order no.
PNOZ mm0p-T	Base unit	772 010

#### Terminals

Product type	Features	Order no.
PNOZ s Set1 spring loaded terminals	1 set of spring-loaded terminals	751 008
PNOZ s Set1 screw terminals	1 set of screw terminals	750 008

#### Cable

Product type	Features	Order no.
PSSu A USB-CAB03	Mini USB cable, 3 m	312 992
PSSu A USB-CAB05	Mini USB cable, 5 m	312 993

## Base units PNOZ mm0.1p

---



### Overview

#### Unit features

Using the product PNOZ mm0.1p:

PNOZmulti Mini base unit

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
  - 4 safety outputs
  - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ 12 inputs for connecting, for example:
  - E-STOP pushbuttons
  - Two-hand button
  - Safety gate limit switches
  - Start buttons
  - Light beam devices
  - Scanners
  - Enabling switches
  - PSEN
  - Operating mode selector switches
  - Safety mats
- ▶ 8 configurable inputs/outputs
  - Can be configured as:
    - Inputs (see above for connection options)
  - or
  - Outputs for standard applications

## Base units

### PNOZ mm0.1p

---

- ▶ 4 configurable outputs  
Can be configured as:
  - Outputs for standard applicationsor
  - Test pulse outputs
- ▶ LED indicator for:
  - Error messages
  - Diagnostics
  - Supply voltage
  - Output circuits
  - Input circuits
- ▶ Display for:
  - Error messages
  - State of supply voltage
  - State of the inputs and outputs
  - Status information
  - Unit information
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Plug-in connection terminals:  
Either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Rotary knob for menu control
- ▶ Expansion modules can be connected  
(please refer to the document "PNOZmulti System Expansion" for details of the type and number that can be connected)


### Chip card

To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

## Base units PNOZ mm0.1p

### Front view

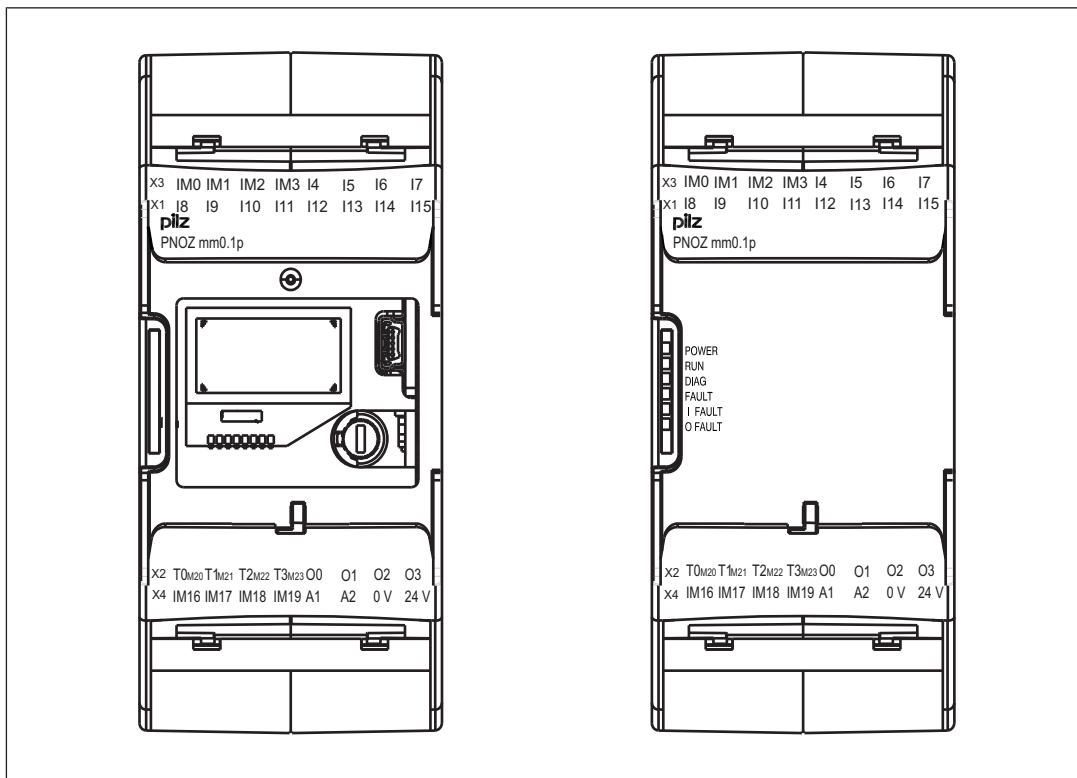

Front view with and without cover

### Legend

- X1: Inputs I8 ... I15
- X1: Configurable test pulse/auxiliary outputs T0M20 ... T3M23
- Semiconductor outputs O0 ... O3
- X3: Configurable inputs/outputs IM0 – IM3
- Inputs I4 ... I7
- X4: Configurable inputs/outputs IM16 – IM19
- Supply connections
- LEDs: PWR
- RUN
- DIAG
- FAULT
- I FAULT
- O FAULT



## Base units PNOZ mm0.1p

### Function description

#### Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.


The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

#### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion \[📖 29\]](#)".

#### Block diagram

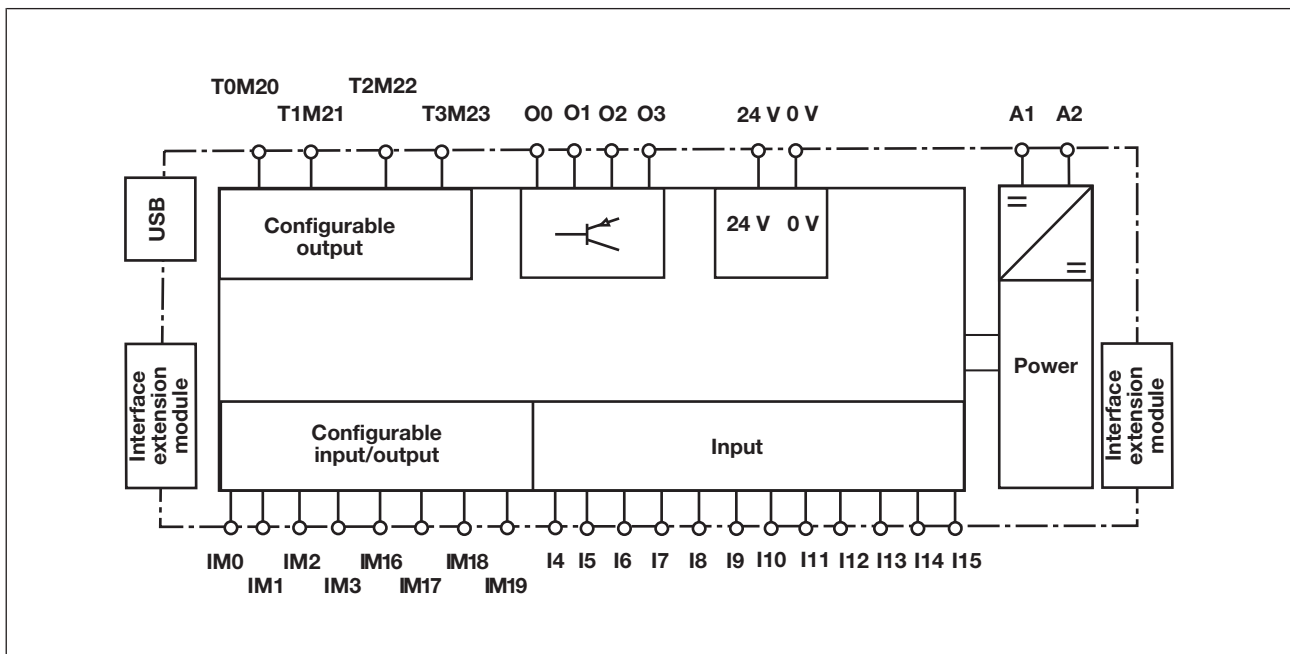


## Base units PNOZ mm0.1p

### Installation

#### Dimensions

\*with spring-loaded terminals

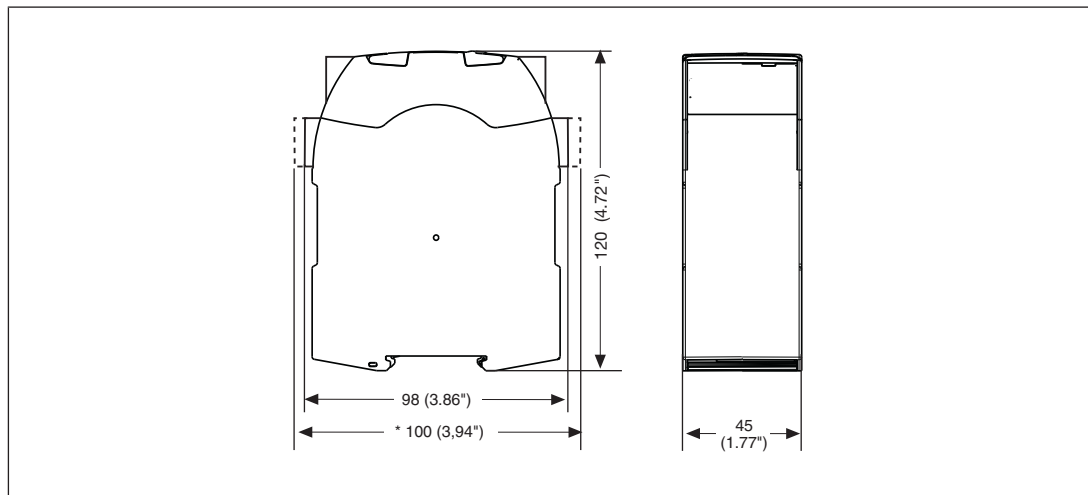

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[537\]](#) must be followed.
- ▶ Outputs O0 to O3 are semiconductor outputs
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Sufficient fuse protection must be provided on all output contacts with inductive loads.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.  
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.  
Test pulses that are used for the safety mat may not be reused for other purposes.


## Base units PNOZ mm0.1p

### Preparing for operation

#### Function test during commissioning

#### Using the chip card

Make sure that you do not bend the chip card as you insert it into the chip card slot.

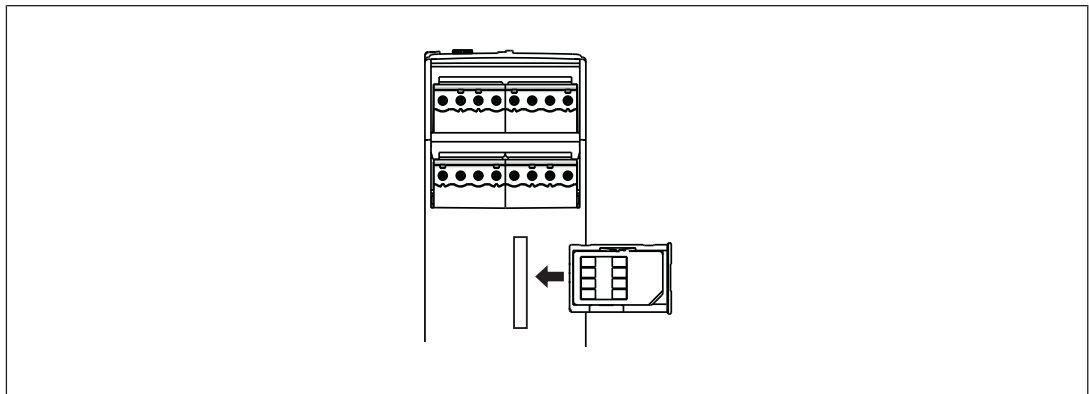

### Commissioning the PNOZmulti safety system

Procedure:

- ▶ Wire the inputs and outputs on the base unit in accordance with the circuit diagram.
- ▶ Connect the supply voltage:
  - Supply voltage for the control system:
    - Terminal A1: + 24 VDC
    - Terminal A2: 0 V
  - Supply voltage for the semiconductor outputs:
    - 24 V terminal: + 24 VDC
    - 0V terminal: 0 V

Please note: The supply voltage for the semiconductor outputs must always be present, even if you are not using the semiconductor outputs.

### Load project from chip card

Procedure:

- ▶ Insert the chip card containing the current project into the card slot on the base unit.
- ▶ Switch on the supply voltage. The LC display shows the project name, CRC sum and the date the project was created. Please check this information.
- ▶ Load the project by pressing the rotary knob. For the project to be downloaded, the rotary knob must be held down for between 3 and 8 seconds. Once the project has been successfully downloaded, the status of the inputs and outputs will be shown on the display.

## Base units PNOZ mm0.1p

### Load project via USB port

Procedure:

- ▶ Insert a chip card into the card slot on the base unit.
- ▶ Connect the computer containing the PNOZmulti Configurator to the base unit via the USB port.
- ▶ Switch on the supply voltage.
- ▶ Download the project (see PNOZmulti Configurator's online help).
- ▶ Once the project has been successfully downloaded, the status of the inputs and outputs and the supply voltage will be shown on the display. The "RUN" LED will be lit.

### Connection

Supply voltage	AC	DC
For the safety system		
For the semiconductor outputs Must always be present, even if the semiconductor outputs are not used		

Input circuit	Single-channel	Dual-channel
E-STOP <b>without</b> detection of shorts across contacts		
E-STOP <b>with</b> detection of shorts across contacts		

## Base units PNOZ mm0.1p

Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts
Redundant output		
Single output		
Single output with advanced fault detection*		


\*Two loads may be connected to each safety output with advanced fault detection, even on applications in accordance with EN IEC 62061, SIL CL 3. Prerequisite: Feedback loop is connected, shorts across contacts and external power sources are excluded (e.g. through separate multicore cables). Please note that, in the event of an error in the feedback loop, the safety system switches to a safe condition and shuts down **all** the outputs.

## Base units PNOZ mm0.1p

Feedback loop	Redundant output
Contacts from external contactors	

### Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (IM18), feedback loop (IM16)

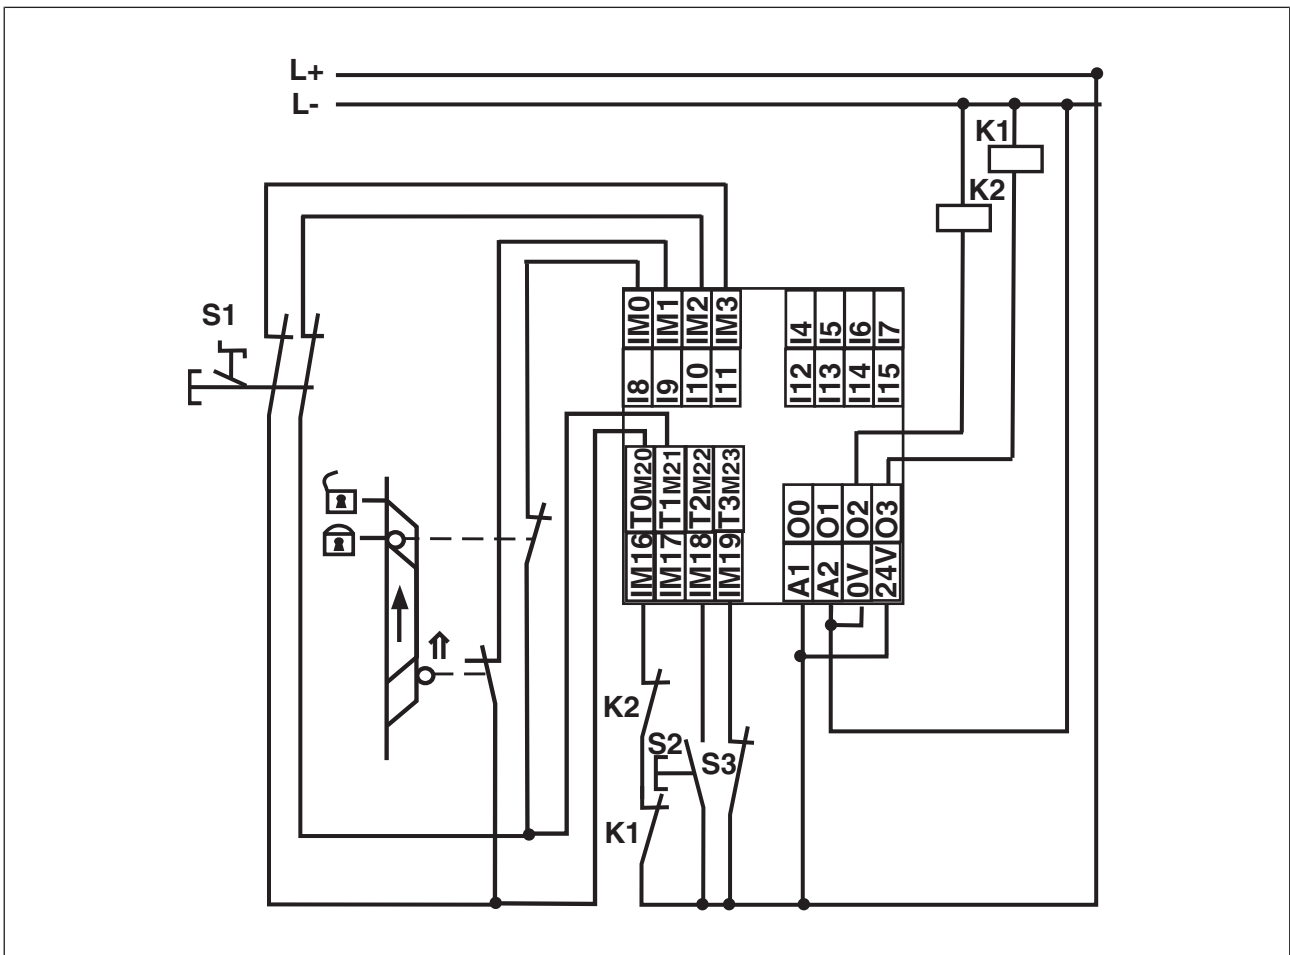

## Base units PNOZ mm0.1p

### Technical details

General	
Approvals	BG, CCC, CE, EAC (Eurasian), KCC, TÜV, cULus Listed
Electrical data	
Supply voltage	
for	<b>Supply to the system</b>
Voltage	<b>24,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>35,0 W</b>
Output of external power supply (DC) at no load	<b>8,0 W</b>
Residual ripple DC	<b>5 %</b>
Supply voltage	
for	<b>Supply to the SC outputs</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>192,0 W</b>
Status indicator	<b>Display, LED</b>
Configurable inputs/outputs (inputs or auxiliary outputs)	
Number	<b>8</b>
Galvanic isolation	<b>No</b>
Configurable inputs	
Input voltage in accordance with EN 61131-2 Type 1	<b>24,0 V</b>
Input current at rated voltage	<b>5 mA</b>
Min. pulse duration	<b>16 ms</b>
Pulse suppression	<b>0,6 ms</b>
Signal level at "1"	<b>15 ... 30 V DC</b>
Signal level at "0"	<b>-3 ... +5 V DC</b>
Maximum input delay	<b>4,0 ms</b>
Configurable auxiliary outputs	
Voltage	<b>24,0 V</b>
Output current	<b>75 mA</b>
Power	<b>1,8 W</b>
Short circuit-proof	<b>yes</b>
Residual current at "0"	<b>0,5 mA</b>
Voltage at "1"	<b>UB - 2 V at 0.1 A</b>

## Base units PNOZ mm0.1p

<b>Inputs</b>	
Number	<b>12</b>
Signal level at "0"	<b>-3 - +5 V DC</b>
Signal level at "1"	<b>15 - 30 V DC</b>
Input voltage in accordance with EN 61131-2 Type 1	<b>24 V DC</b>
Input current at rated voltage	<b>5 mA</b>
Min. pulse duration	<b>16 ms</b>
Pulse suppression	<b>0,6 ms</b>
Maximum input delay	<b>4 ms</b>
Potential isolation	<b>No</b>
<b>Semiconductor outputs</b>	
Number	<b>4</b>
Switching capability	
Voltage	<b>24 V</b>
Current	<b>2,0 A</b>
Power	<b>48 W</b>
Signal level at "1"	<b>UB - 0.5 VDC at 2 A</b>
Residual current at "0"	<b>0,5 mA</b>
Max. capacitive load	<b>1 µF</b>
Max. duration of off time during self test	<b>330 µs</b>
Switch-off delay	<b>30 ms</b>
Potential isolation	<b>yes</b>
Short circuit-proof	<b>yes</b>
<b>Test pulse outputs</b>	
Number of test pulse outputs	<b>4</b>
Voltage	<b>24 V</b>
Current	<b>0,1 A</b>
Max. duration of off time during self test	<b>5 ms</b>
Short circuit-proof	<b>yes</b>
Potential isolation	<b>No</b>
<b>Times</b>	
Switch-on delay	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>
Simultaneity, channel 1 and 2 max.	<b>3 s</b>
Simultaneity in the two-hand circuit	<b>0,5 s</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>



## Base units PNOZ mm0.1p

<b>Environmental data</b>	
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Rated impulse withstand voltage	<b>2,50 kV</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>SC output and system voltage</b>
Type of potential isolation	<b>Basic insulation</b>
Rated surge voltage	<b>2500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Max. cable length	
Max. cable length per input	<b>1,0 km</b>
Sum of individual cable lengths at the test pulse output	<b>2 km</b>

## Base units PNOZ mm0.1p

Mechanical data	
Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,20 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
Torque setting with screw terminals	0,50 Nm
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	0,20 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	100,0 mm
Width	45,0 mm
Depth	120,0 mm
Weight	231 g

Where standards are undated, the 2010-08 latest editions shall apply.

## Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
<b>Logic</b>						
CPU	2-channel	PL e	Cat. 4	SIL CL 3	1,54E-09	20
Expansion right	–	PL e	Cat. 4	SIL CL 3	2,13E-10	20
Expansion left	–	PL e	Cat. 4	SIL CL 3	2,38E-10	20
<b>Input</b>						
SC inputs	1-channel	PL d	Cat. 2	SIL CL 2	3,95E-09	20
SC inputs	2-channel	PL e	Cat. 4	SIL CL 3	4,61E-10	20
SC inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,86E-09	20
SC inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	3,95E-10	20

## Base units

### PNOZ mm0.1p


#### Output

SC outputs	<b>1-channel with advanced fault detection</b>	<b>PL e</b>	<b>Cat. 4</b>	<b>SIL CL 3</b>	<b>7,65E-10</b>	<b>20</b>
SC outputs	<b>1-channel</b>	<b>PL d</b>	<b>Cat. 2</b>	<b>SIL CL 2</b>	<b>8,90E-10</b>	<b>20</b>
SC outputs	<b>2-channel</b>	<b>PL e</b>	<b>Cat. 4</b>	<b>SIL CL 3</b>	<b>7,86E-10</b>	<b>20</b>

All the units used within a safety function must be considered when calculating the safety characteristic data.

## Supplementary data


### Maximum capacitive load C (μF) with load current I (A) at the semiconductor outputs

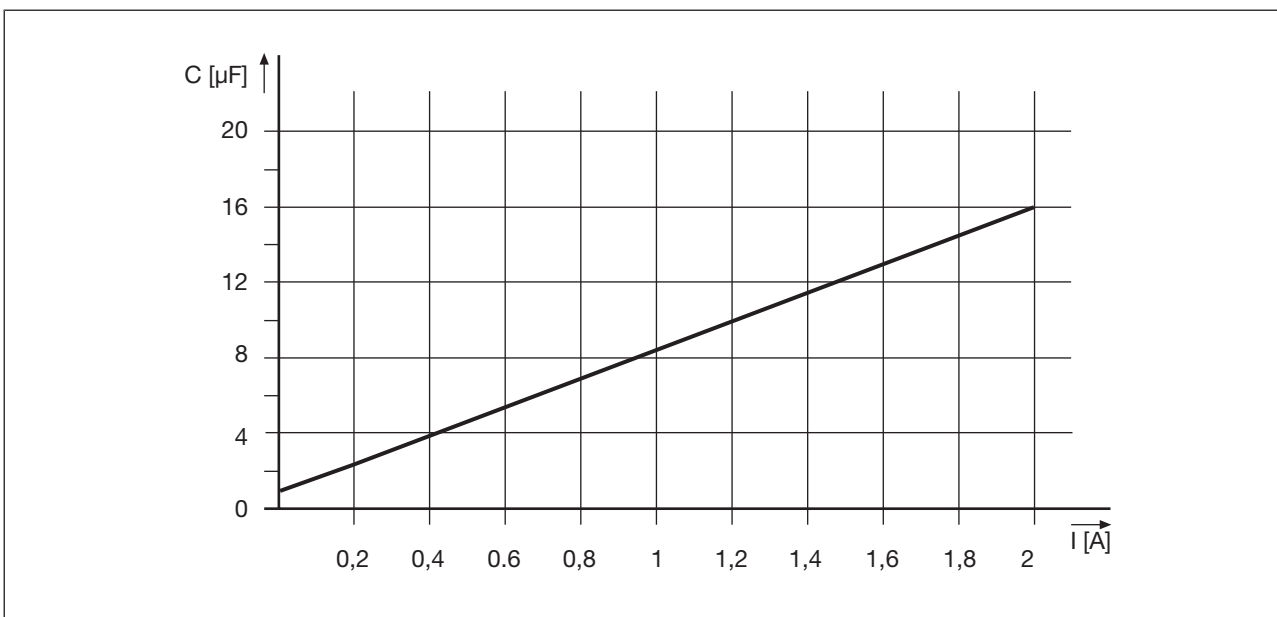

## Base units

### PNOZ mm0.1p

#### Maximum permitted total current of the semiconductor outputs

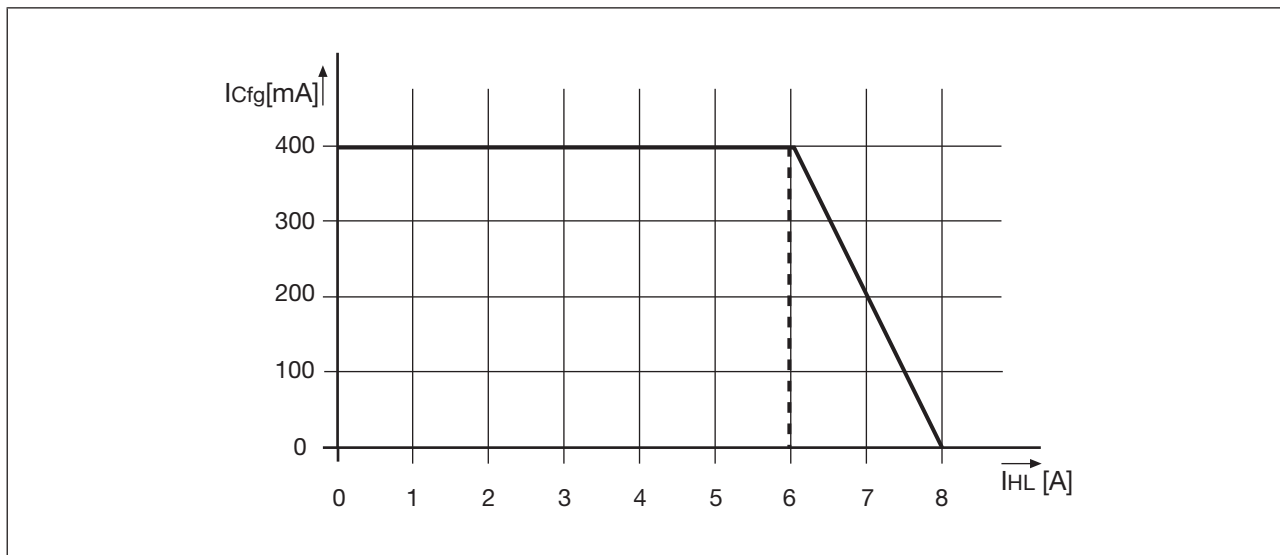

$I_{Cfg}$ : Total current of the configurable semiconductor outputs (auxiliary outputs)

$I_{HL}$ : Total current: Semiconductor outputs (safety outputs)

## Order reference

### Product

Product type	Features	Order No.
PNOZ mm0.1p	Base unit	772 001

## Accessories

### Terminator

Product type	Features	Order No.
PNOZ s terminator plug	Right terminator, yellow, x10	750 010
PNOZ mm0.xp terminator left	Left terminator, black/yellow, x1	779 261

### Cable

Product type	Features	Order no.
PSSu A USB-CAB03	Mini USB cable, 3 m	312 992
PSSu A USB-CAB05	Mini USB cable, 5 m	312 993

## Base units PNOZ mm0.1p

---

### Terminals

Product type	Features	Order no.
PNOZ s Set1 spring loaded terminals	1 set of spring-loaded terminals	751 008
PNOZ s Set1 screw terminals	1 set of screw terminals	750 008

## Base units PNOZ mm0.2p

---



### Overview

#### Unit features

Using the product PNOZ mm0.2p:

PNOZmulti Mini base unit

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
  - 4 safety outputs
  - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ 12 inputs for connecting, for example:
  - E-STOP pushbuttons
  - Two-hand button
  - Safety gate limit switches
  - Start buttons
  - Light beam devices
  - Scanners
  - Enabling switches
  - PSEN
  - Operating mode selector switches
  - Safety mats
- ▶ 8 configurable inputs/outputs
  - Can be configured as:
    - Inputs (see above for connection options)
  - or
  - Outputs for standard applications

## Base units

### PNOZ mm0.2p

---

- ▶ 4 configurable outputs  
Can be configured as:
  - Outputs for standard applicationsor
  - Test pulse outputs
- ▶ LED indicator for:
  - Error messages
  - Diagnostics
  - Supply voltage
  - Output circuits
  - Input circuits
- ▶ Display for:
  - Error messages
  - State of supply voltage
  - State of the inputs and outputs
  - Status information
  - Unit information
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Plug-in connection terminals:  
Either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Rotary knob for menu control
- ▶ Expansion modules can be connected  
(please refer to the document "PNOZmulti System Expansion" for details of the type and number that can be connected)
- ▶ Integrated interface (RJ45 socket) for safe connection of two configurable control systems:
  - Connection options:
    - Two PNOZmulti Mini base unitsor
    - One PNOZmulti Mini base unit with one PNOZmulti base unit  
(both the units to be connected need either an integrated interface or a link module)
  - Point-to-point connection via 4-core shielded, twisted-pair cable
  - 32 virtual inputs and 32 virtual outputs for data transfer


## Base units PNOZ mm0.2p

### Chip card

To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

### Front view

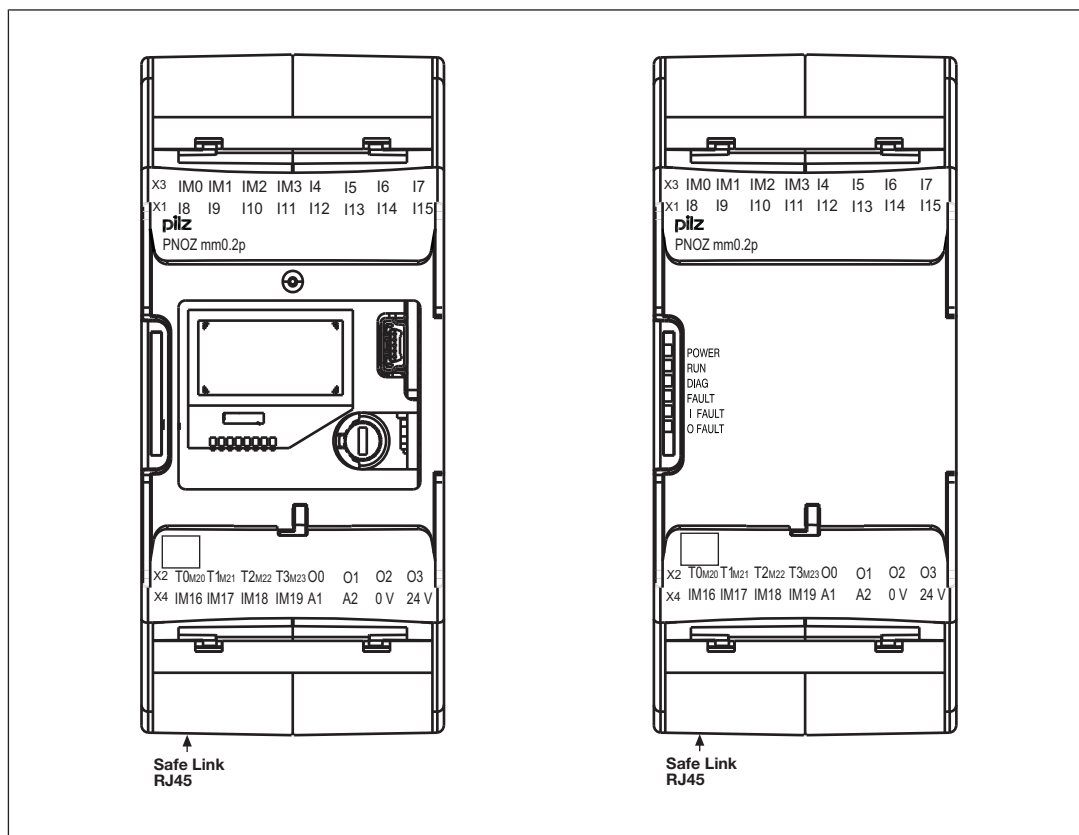

Front view with and without cover

### Legend

- X1: Inputs I8 ... I15
- X1: Configurable test pulse/auxiliary outputs T0M20 ... T3M23
- Semiconductor outputs O0 ... O3
- X3: Configurable inputs/outputs IM0 – IM3
- Inputs I4 ... I7
- X4: Configurable inputs/outputs IM16 – IM19
- Supply connections



## Base units

### PNOZ mm0.2p

---

LEDs: PWR  
RUN  
DIAG  
FAULT  
I FAULT  
O FAULT

- ▶ Safe Link RJ45  
RJ45 socket for connection of 2 base units

## Function description


### Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion](#) [ 29]".

### Connection of two base units

The integrated interface for connection of 2 base units is used to safely transfer the input information from 32 virtual inputs and 32 virtual outputs between two PNOZmulti systems.

Each base unit needs either an integrated interface or a link module for the connection.

#### Data exchange:

- ▶ Data is exchanged cyclically.
- ▶ At the end of the PNOZmulti cycle, each base unit sends its output data to the other base unit or to the link module on the other base unit.
- ▶ At the same time the base unit reads the input data from the other base unit.

## Base units PNOZ mm0.2p

### Connection of multiple base units:

Any number of base units can be connected via link modules or via the integrated interface. Each base unit needs a link module or an integrated interface for the connection between two base units.

However, only a maximum of 4 link modules may be connected to any one base unit.

### Data transmission time:

The  $t_{\text{BUS}}$  data transmission time is the time between the virtual output at base unit 1 being set and the virtual input at base unit 2 becoming available (see "Technical details").

### The maximum reaction time for series connection of n base units

This is the time between the activation of a safety function at the input on one base unit and the switching of an output on the connected base unit.

- ▶ The maximum reaction time  $t_{\text{SUM}}$  includes the following times:

$t_{\text{ON}}$ : Input delay = 4 ms

$t_{\text{COND}}$ : Switch-off delay of semiconductor output = 30 ms

$t_{\text{REL}}$ : Switch-off delay of relay output = 50 ms

$t_{\text{BUS}}$ : Data transmission time between two base units = 35 ms

n: Number of connections between base units

The maximum reaction time  $t_{\text{SUM}}$  for series connection of n base units

- ▶ On semiconductor outputs:

$$t_{\text{SUM}} = t_{\text{ON}} + (n * t_{\text{BUS}}) + t_{\text{COND}}$$

- ▶ On relay outputs:


$$t_{\text{SUM}} = t_{\text{ON}} + (n * t_{\text{BUS}}) + t_{\text{REL}}$$

- ▶ Input delay and switch-off delay are only included once in the reaction time. The data transmission time is multiplied by the number of connections.
- ▶ Please refer to the connection examples under "Preparing for operation".


### Virtual inputs and outputs:

Inputs and outputs for both PNOZmulti systems are assigned in the PNOZmulti Configurator. Inputs and outputs with the same number are assigned to each other, e.g. output o5 on one PNOZmulti system to input i5 on the other PNOZmulti system.

## Base units PNOZ mm0.2p

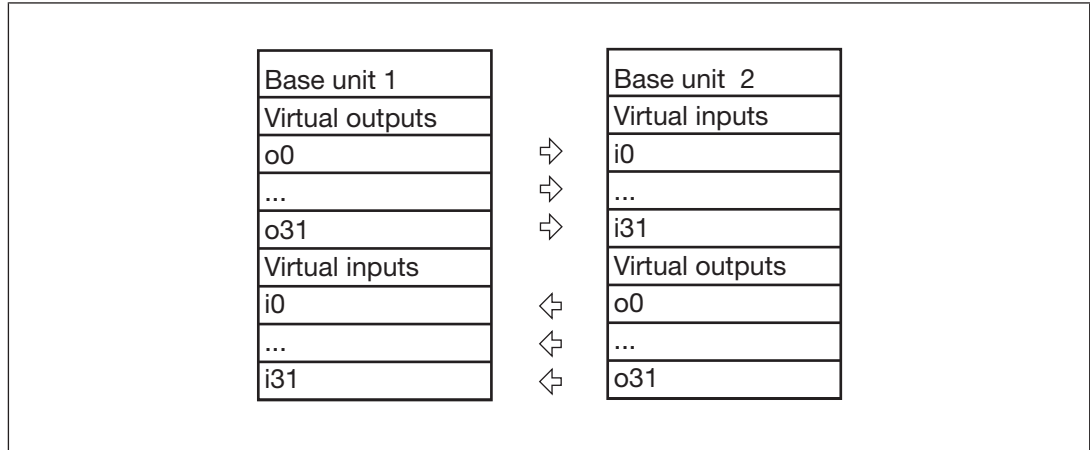

### Block diagram

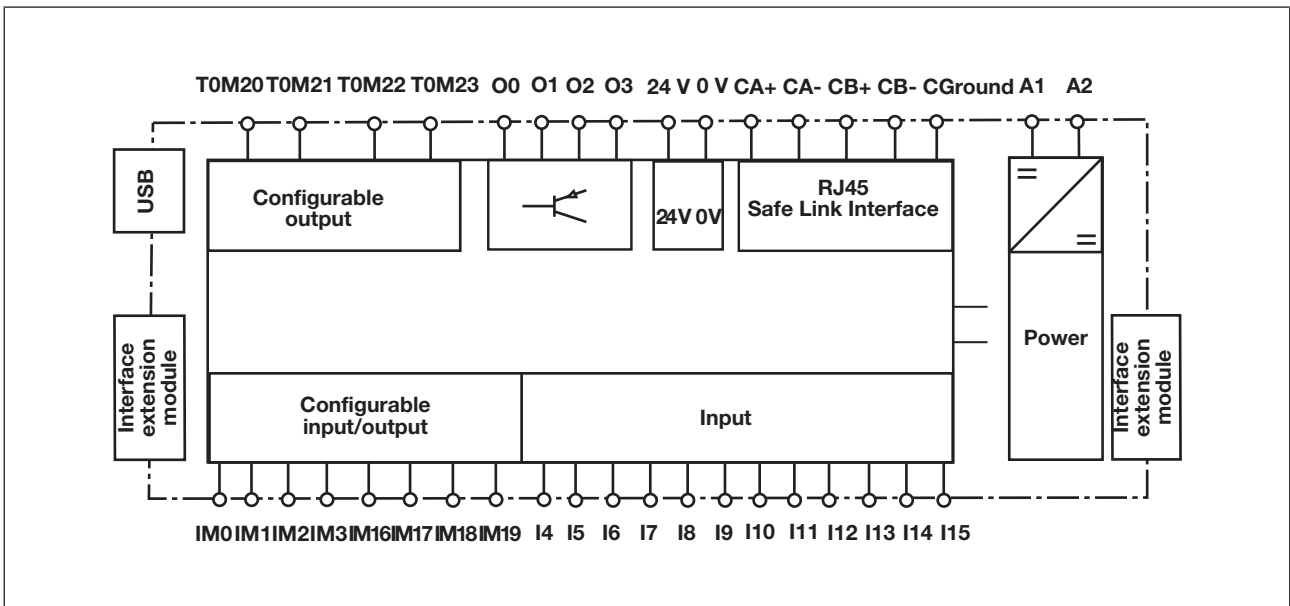


## Base units PNOZ mm0.2p

### Installation

#### Dimensions

\*with spring-loaded terminals

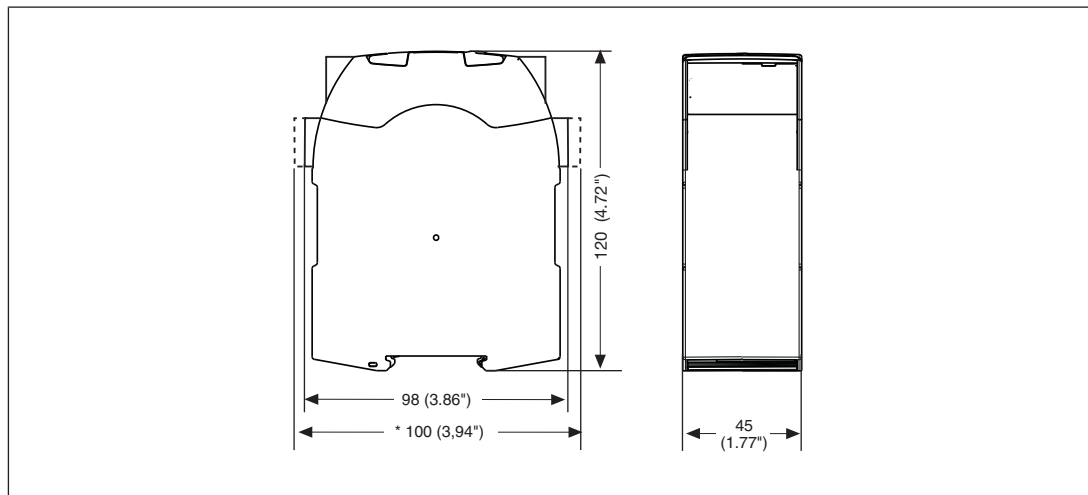

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[558\]](#) must be followed.
- ▶ Outputs O0 to O3 are semiconductor outputs
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Sufficient fuse protection must be provided on all output contacts with inductive loads.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.  
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.  
Test pulses that are used for the safety mat may not be reused for other purposes.

## Base units

### PNOZ mm0.2p

When connecting two base units via the integrated interface please note:


- ▶ The max. cable length between two base units on a connection with
  - one link module PNOZ ml1p <V2.0: 100 m
  - one link module PNOZ ml1p from V2.0, PNOZ mml1p or one base unit PNOZ mm0.2p: 1000 m
- ▶ Connect the inputs and outputs via the two interfaces using 4-core shielded cable. The cables must be twisted in pairs (see "Preparing for operation").
- ▶ Note the crossover cabling, e.g. CA+ with CB+.
- ▶ The cables must be classified into a minimum of Category 5 in accordance with ISO/IEC 11801.

## Preparing for operation

### Function test during commissioning

### Using the chip card

Make sure that you do not bend the chip card as you insert it into the chip card slot.

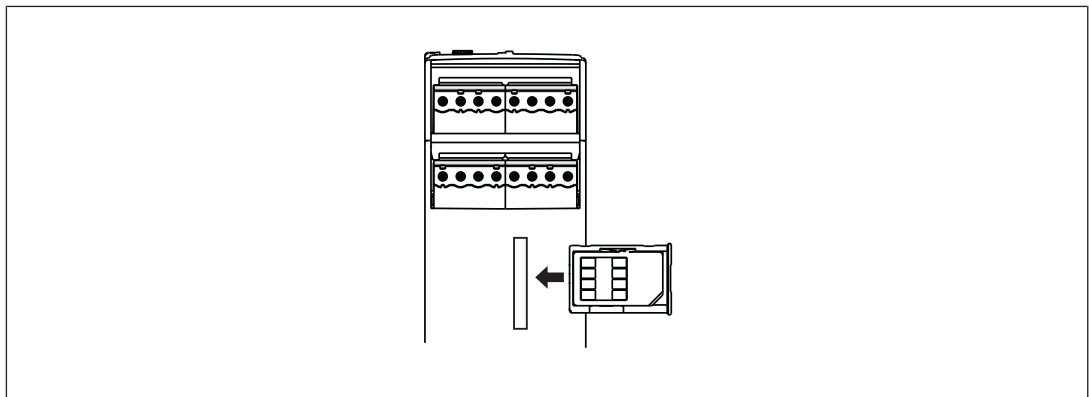

## Commissioning the PNOZmulti safety system

Procedure:

- ▶ Wire the inputs and outputs on the base unit in accordance with the circuit diagram.
- ▶ Connect the supply voltage:
  - Supply voltage for the control system:
    - Terminal A1: + 24 VDC
    - Terminal A2: 0 V
  - Supply voltage for the semiconductor outputs:
    - 24 V terminal: + 24 VDC
    - 0V terminal: 0 V

## Base units PNOZ mm0.2p

Please note: The supply voltage for the semiconductor outputs must always be present, even if you are not using the semiconductor outputs.

### Load project from chip card

Procedure:



- ▶ Insert the chip card containing the current project into the card slot on the base unit.
- ▶ Switch on the supply voltage. The LC display shows the project name, CRC sum and the date the project was created. Please check this information.
- ▶ Load the project by pressing the rotary knob. For the project to be downloaded, the rotary knob must be held down for between 3 and 8 seconds. Once the project has been successfully downloaded, the status of the inputs and outputs will be shown on the display.

### Load project via USB port

Procedure:

- ▶ Insert a chip card into the card slot on the base unit.
- ▶ Connect the computer containing the PNOZmulti Configurator to the base unit via the USB port.
- ▶ Switch on the supply voltage.
- ▶ Download the project (see PNOZmulti Configurator's online help).
- ▶ Once the project has been successfully downloaded, the status of the inputs and outputs and the supply voltage will be shown on the display. The "RUN" LED will be lit.


### Connection

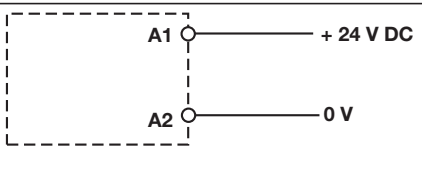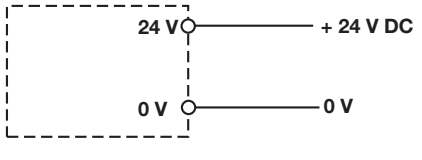Supply voltage	AC	DC
For the safety system	/	
For the semiconductor outputs Must always be present, even if the semiconductor outputs are not used	/	


## Base units PNOZ mm0.2p

Input circuit	Single-channel	Dual-channel
E-STOP <b>without</b> detection of shorts across contacts		
E-STOP <b>with</b> detection of shorts across contacts		
Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts
Redundant output		
Single output		

## Base units PNOZ mm0.2p

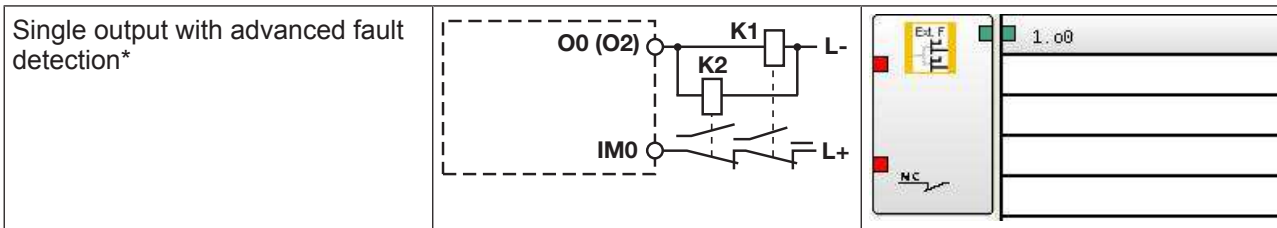

\*Two loads may be connected to each safety output with advanced fault detection, even on applications in accordance with EN IEC 62061, SIL CL 3. Prerequisite: Feedback loop is connected, shorts across contacts and external power sources are excluded (e.g. through separate multicore cables). Please note that, in the event of an error in the feedback loop, the safety system switches to a safe condition and shuts down **all** the outputs.

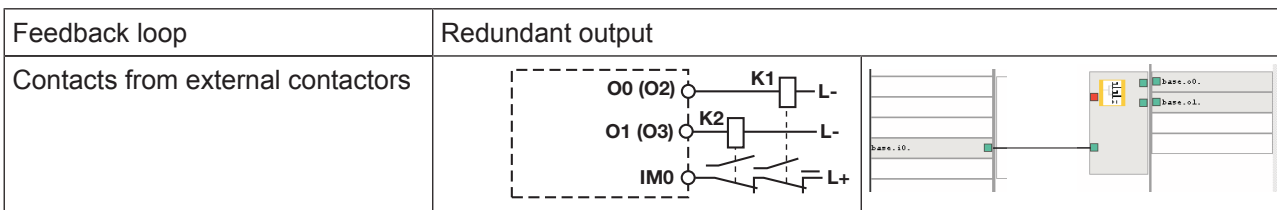

### Connection of two base units


#### Interface assignment

RJ45 socket 8-pin	PIN	Layout
	1	CA+
	2	CA-
	3	CB+
	4	n.c.
	5	n.c.
	6	CB-
	7	n.c.
	8	n.c.
	Shield	CGround




## Base units PNOZ mm0.2p

### Connection

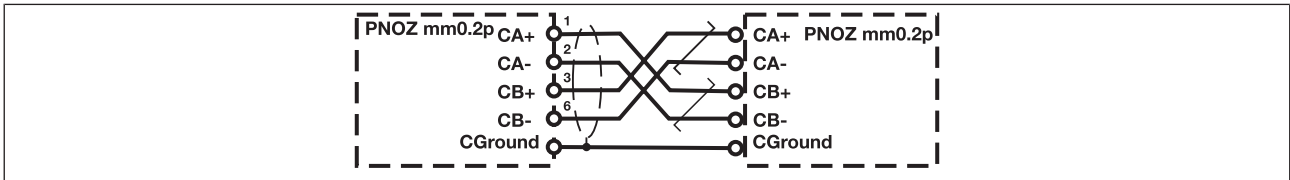

Connection of two base units PNOZmulti Mini via the integrated interface

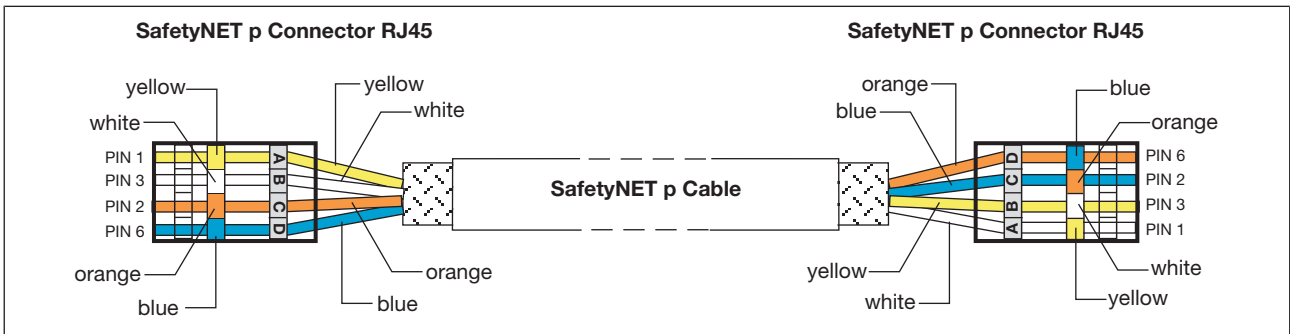


- Connection cable configuration when using:
- 2 plug-in connectors "SafetyNET p Connector RJ45"
  - 1 connection cable "SafetyNET p Cable"
- (available as accessory, see order reference)

## Base units PNOZ mm0.2p

### Connection examples

Dual-channel E-STOP and safety gate wiring, monitored start (IM18), feedback loop (IM16)

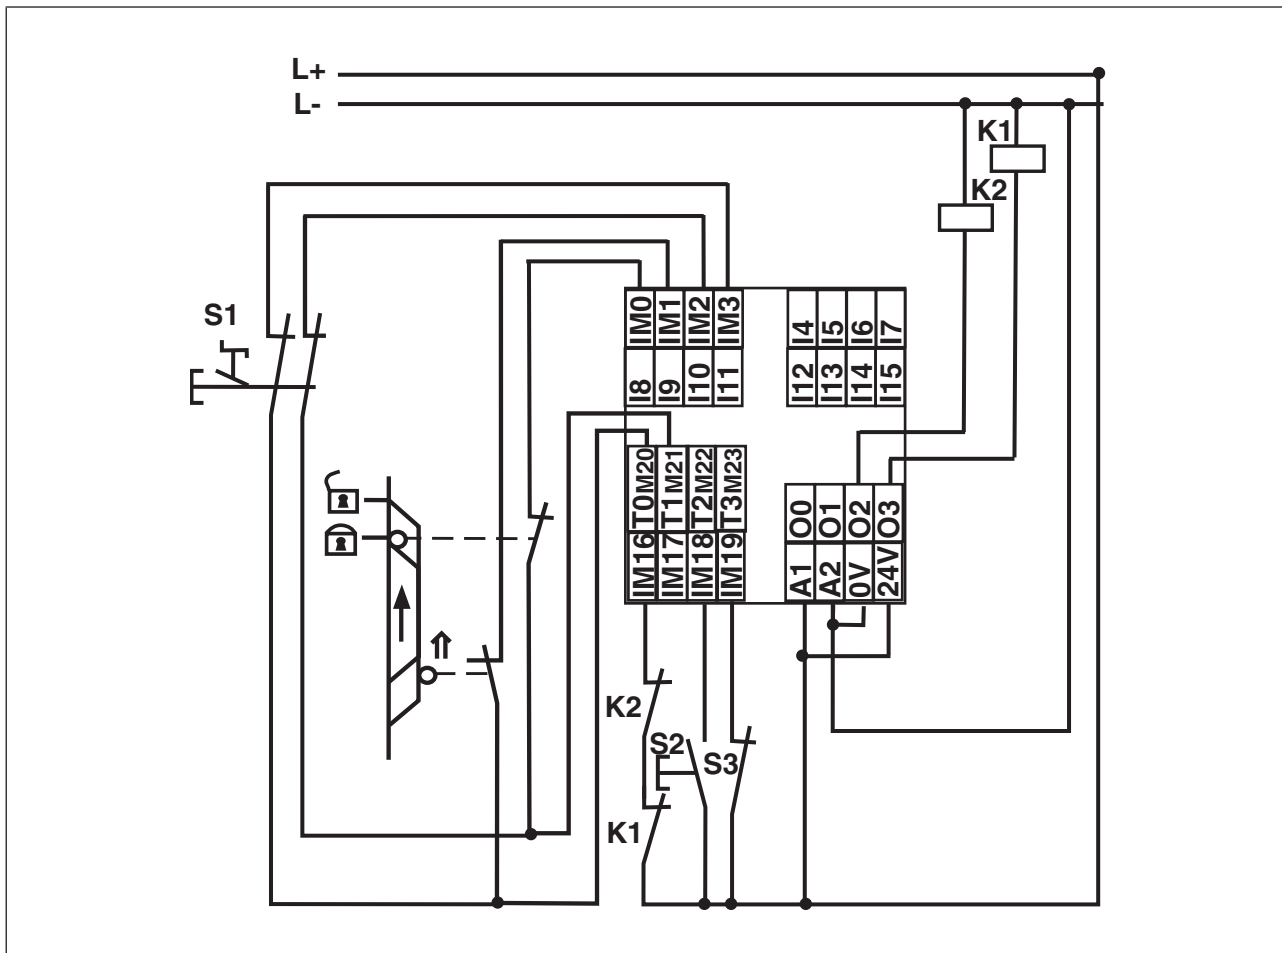

## Base units PNOZ mm0.2p

### Connection of multiple base units via the integrated interface

#### Example 1: Series connection of 3 base units

Reaction time  $t_{SUM}$  between base unit Base 1 and Base 2:

Input delay  $t_{ON}$  at I4 and I6 + data transmission time  $1 * t_{BUS}$  through link module/interface + switch-off delay  $t_{COND}$  of the semiconductor output at O0

$$t_{SUM} = t_{ON} + (n * t_{BUS}) + t_{COND}$$


$$t_{SUM} = 4 \text{ ms} + (1 * 35 \text{ ms}) + 30 \text{ ms} = 69 \text{ ms}$$

Reaction time  $t_{SUM}$  between base unit Base 1 and Base 3:

Input delay  $t_{ON}$  at I4 und I6 + data transmission time  $2 * t_{BUS}$  through link modules/interfaces + switch-off delay  $t_{COND}$  of the semiconductor output at O1

$$t_{SUM} = t_{ON} + (n * t_{BUS}) + t_{COND}$$

$$t_{SUM} = 4 \text{ ms} + (2 * 35 \text{ ms}) + 30 \text{ ms} = 104 \text{ ms}$$

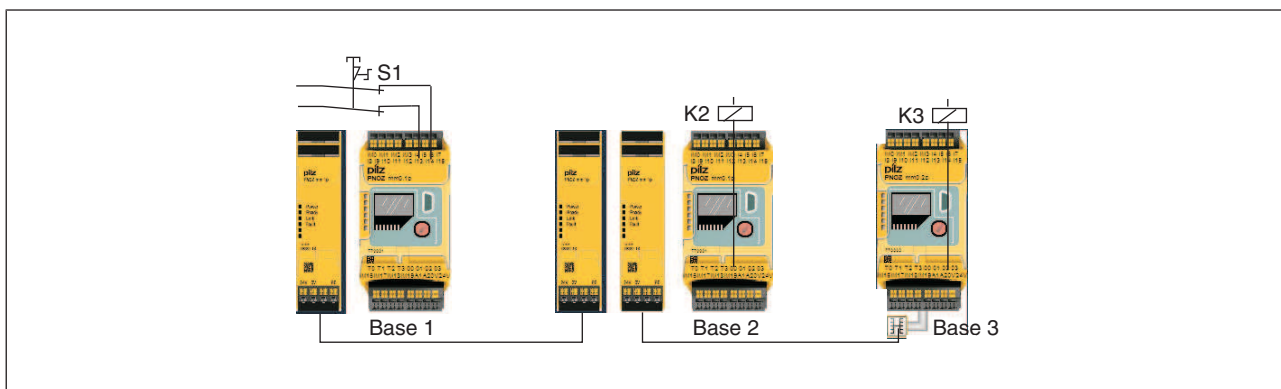


## Base units PNOZ mm0.2p

### Example 2: Connection of 5 base units

The reaction times are calculated in the same way as application example 1. After pressing S1 on Base 1, the semiconductor outputs switch after the following reaction times  $t_{SUM}$ :

- O0 on Base 2: 69 ms
- O1 on Base 3: 104 ms
- O0 on Base 4: 139 ms
- O0 on Base 5: 104 ms

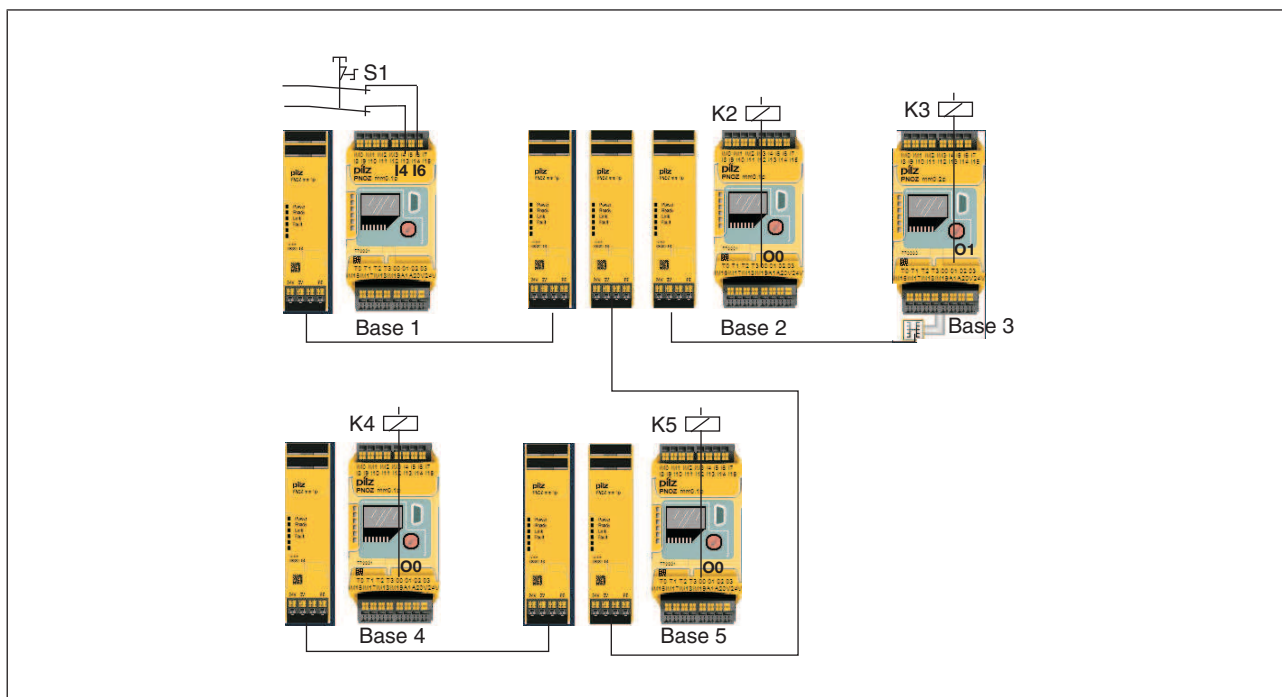

## Technical details

### General

Approvals

BG, CCC, CE, EAC (Eurasian), KCC, TÜV, cULus Listed

### Electrical data

Supply voltage

for

Supply to the system

Voltage

24,0 V

Kind

DC

Voltage tolerance

-15 %/+20 %

Output of external power supply (DC)

35,0 W

Output of external power supply (DC) at no load

8,0 W

Residual ripple DC

5 %

## Base units PNOZ mm0.2p

### Electrical data

Supply voltage	
for	<b>Supply to the SC outputs</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>192,0 W</b>
Status indicator	<b>Display, LED</b>

### Configurable inputs/outputs (inputs or auxiliary outputs)

Number	<b>8</b>
Galvanic isolation	<b>No</b>
Configurable inputs	
Input voltage in accordance with EN 61131-2 Type 1	<b>24,0 V</b>
Input current at rated voltage	<b>5 mA</b>
Min. pulse duration	<b>16 ms</b>
Pulse suppression	<b>0,6 ms</b>
Signal level at "1"	<b>15 ... 30 V DC</b>
Signal level at "0"	<b>-3 ... +5 V DC</b>
Maximum input delay	<b>4,0 ms</b>
Configurable auxiliary outputs	
Voltage	<b>24,0 V</b>
Output current	<b>75 mA</b>
Power	<b>1,8 W</b>
Short circuit-proof	<b>yes</b>
Residual current at "0"	<b>0,5 mA</b>
Voltage at "1"	<b>UB - 2 V at 0.1 A</b>

### Virtual inputs

Number of virtual inputs	<b>32</b>
--------------------------	-----------

### Inputs

Number	<b>12</b>
Signal level at "0"	<b>-3 - +5 V DC</b>
Signal level at "1"	<b>15 - 30 V DC</b>
Input voltage in accordance with EN 61131-2 Type 1	<b>24 V DC</b>
Input current at rated voltage	<b>5 mA</b>
Min. pulse duration	<b>16 ms</b>
Pulse suppression	<b>0,6 ms</b>
Maximum input delay	<b>4 ms</b>
Potential isolation	<b>No</b>

### Virtual outputs

Number of virtual outputs	<b>32</b>
---------------------------	-----------

## Base units PNOZ mm0.2p

<b>Semiconductor outputs</b>	
Number	<b>4</b>
Switching capability	
Voltage	<b>24 V</b>
Current	<b>2,0 A</b>
Power	<b>48 W</b>
Signal level at "1"	<b>UB - 0.5 VDC at 2 A</b>
Residual current at "0"	<b>0,5 mA</b>
Max. capacitive load	<b>1 µF</b>
Max. duration of off time during self test	<b>330 µs</b>
Switch-off delay	<b>30 ms</b>
Potential isolation	<b>yes</b>
Short circuit-proof	<b>yes</b>
<b>Test pulse outputs</b>	
Number of test pulse outputs	<b>4</b>
Voltage	<b>24 V</b>
Current	<b>0,1 A</b>
Max. duration of off time during self test	<b>5 ms</b>
Short circuit-proof	<b>yes</b>
Potential isolation	<b>No</b>
<b>Times</b>	
Switch-on delay	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>
Simultaneity, channel 1 and 2 max.	<b>3 s</b>
Simultaneity in the two-hand circuit	<b>0,5 s</b>
Max. data transmission time	<b>35 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>

## Base units PNOZ mm0.2p

### Environmental data

#### Vibration

In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1 g</b>

#### Shock stress

In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15 g</b>
Duration	<b>11 ms</b>

Max. operating height above sea level	<b>2000 m</b>
---------------------------------------	---------------

#### Airgap creepage

In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>

Rated insulation voltage	<b>30 V</b>
--------------------------	-------------

Rated impulse withstand voltage	<b>2,50 kV</b>
---------------------------------	----------------

#### Protection type

In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

### Potential isolation

Potential isolation between	<b>SC output and system voltage</b>
-----------------------------	-------------------------------------

Type of potential isolation	<b>Basic insulation</b>
-----------------------------	-------------------------

Rated surge voltage	<b>2500 V</b>
---------------------	---------------

### Mechanical data

Mounting position	<b>Horizontal on top hat rail</b>
-------------------	-----------------------------------

#### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

#### Max. cable length

Max. cable length per input	<b>1,0 km</b>
Sum of individual cable lengths at the test pulse output	<b>2 km</b>

Max. cable length between two link modules	<b>1 km</b>
--	-------------

#### Material

Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>

## Base units

### PNOZ mm0.2p

#### Mechanical data

1 core flexible	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,20 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
Torque setting with screw terminals	0,50 Nm
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector	0,20 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9,0 mm
Dimensions	
Height	100,0 mm
Width	45,0 mm
Depth	120,0 mm
Weight	236 g

Where standards are undated, the 2011-01 latest editions shall apply.

## Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
------	----------------	----------------------------	----------------------------------	--------------------	------------------------------------	---

#### Logic

CPU	2-channel	PL e	Cat. 4	SIL CL 3	1,54E-09	20
Expansion right	–	PL e	Cat. 4	SIL CL 3	2,13E-10	20
Expansion left	–	PL e	Cat. 4	SIL CL 3	2,38E-10	20
Link interface	–	PL e	Cat. 4	SIL CL 3	6,53E-10	20

#### Input

SC inputs	1-channel	PL d	Cat. 2	SIL CL 2	3,95E-09	20
SC inputs	2-channel	PL e	Cat. 4	SIL CL 3	4,61E-10	20
SC inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,86E-09	20
SC inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	3,95E-10	20



## Base units PNOZ mm0.2p


### Output

SC outputs	<b>1-channel with advanced fault detection</b>	<b>PL e</b>	<b>Cat. 4</b>	<b>SIL CL 3</b>	<b>7,65E-10</b>	<b>20</b>
SC outputs	<b>1-channel</b>	<b>PL d</b>	<b>Cat. 2</b>	<b>SIL CL 2</b>	<b>8,90E-10</b>	<b>20</b>
SC outputs	<b>2-channel</b>	<b>PL e</b>	<b>Cat. 4</b>	<b>SIL CL 3</b>	<b>7,86E-10</b>	<b>20</b>

All the units used within a safety function must be considered when calculating the safety characteristic data.

### Supplementary data


#### Maximum capacitive load C (μF) with load current I (A) at the semiconductor outputs

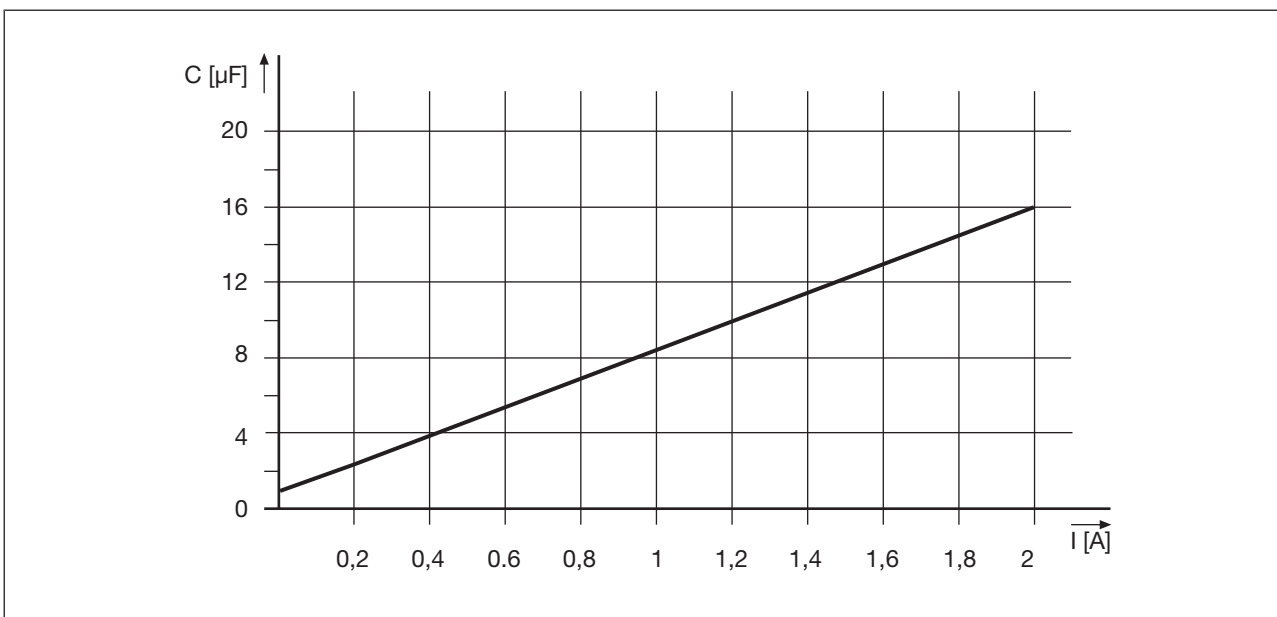

## Base units

### PNOZ mm0.2p

#### Maximum permitted total current of the semiconductor outputs

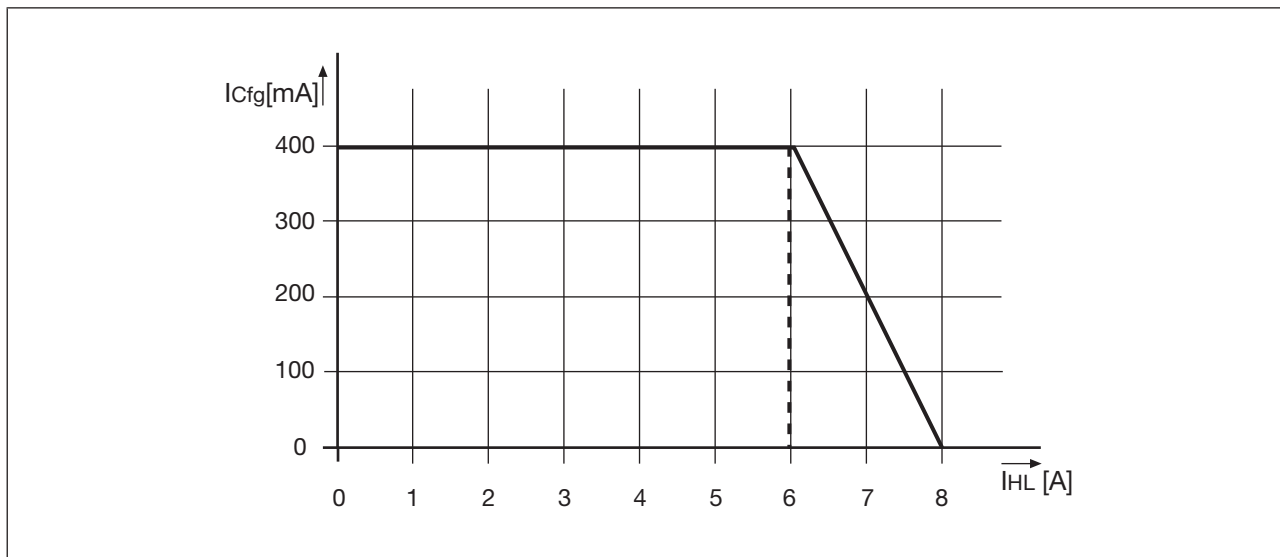

$I_{Cfg}$ : Total current of the configurable semiconductor outputs (auxiliary outputs)

$I_{HL}$ : Total current: Semiconductor outputs (safety outputs)

#### Order reference

Order reference		
Product Type	Features	Order no.
PNOZ mm0.2p	Base unit	772 002

#### Terminals

Product type	Features	Order no.
PNOZ s Set1 spring loaded terminals	1 set of spring-loaded terminals	751 008
PNOZ s Set1 screw terminals	1 set of screw terminals	750 008

#### Terminator

Product type	Features	Order No.
PNOZ s terminator plug	Right terminator, yellow, x10	750 010
PNOZ mm0.xp terminator left	Left terminator, black/yellow, x1	779 261

## Base units PNOZ mm0.2p

---

Order reference: Cable		
Product Type	Features	Order no.
PSSu A USB-CAB03	Mini USB cable, 3 m	312 992
PSSu A USB-CAB05	Mini USB cable, 5 m	312 993
SafetyNET p Connector RJ45	RJ45 plug-in connector	380 400
SafetyNET p Cable	SafetyNET p cable, 1 - 500 m	380 000

## Link modules PNOZ mml1p

---



### Overview

#### Unit features

Using the product PNOZ mml1p:


Link module to safely connect two configurable control systems PNOZmulti Mini.

The product has the following features:

- ▶ Connection options:
  - Two PNOZmulti Mini base units
  - or
  - One PNOZmulti Mini base unit with one PNOZmulti base unit
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Point-to-point connection via 4-core shielded and twisted-pair cable
- ▶ 32 virtual inputs and 32 virtual outputs
- ▶ Status indicators
- ▶ LED indicators for
  - Operating status
  - Error
  - Connection status
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)

## Link modules PNOZ mml1p

### Front view

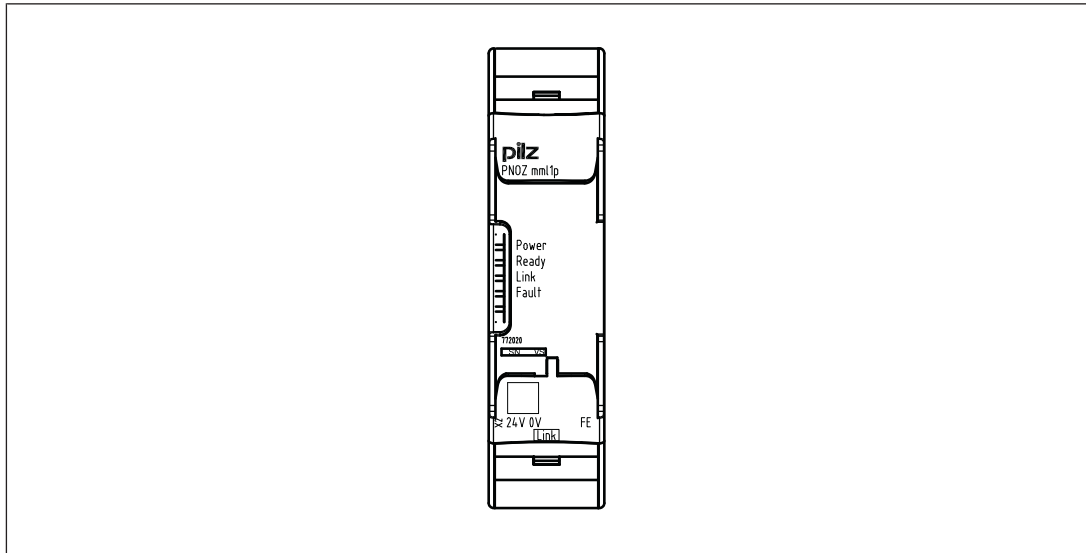

#### Key:

- ▶ X2:
  - 0 V, 24 V: Supply connections
  - FE: Functional earth
- ▶ Link:
  - Connection
- ▶ LEDs:
  - Power
  - Ready
  - Link
  - Fault

## Function Description

### Functions

The link module PNOZ mml1p is used to safely transfer the input information from 32 virtual inputs and 32 virtual outputs between two PNOZmulti systems. One link module is assigned to each base unit. Data is exchanged cyclically.

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

## Link modules PNOZ mml1p

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

### Data exchange:

- ▶ Data is exchanged cyclically.
- ▶ After the end of a PNOZmulti cycle, each base unit sends its output data to its link module. This output data is immediately sent to the link module on the other base unit.
- ▶ At the same time, the base unit reads the input data from the link module.

### Connection of multiple base units:

Any number of base units can be connected via link modules. Two link modules are required for a connection between two base units. However, only a maximum of 4 link modules may be connected to any one base unit.

### Data transmission time:

The  $t_{\text{BUS}}$  data transmission time is the time between the virtual output at base unit 1 being set and the virtual input at base unit 2 becoming available (see "Technical details").

### The maximum reaction time for series connection of n base units

This is the time between the activation of a safety function at the input on one base unit and the switching of an output on the connected base unit.

- ▶ The maximum reaction time  $t_{\text{SUM}}$  includes the following times:

$t_{\text{ON}}$ : Input delay = 4 ms

$t_{\text{COND}}$ : Switch-off delay of semiconductor output = 30 ms

$t_{\text{REL}}$ : Switch-off delay of relay output = 50 ms

$t_{\text{BUS}}$ : Data transmission time between two base units = 35 ms

n: Number of connections between base units

The maximum reaction time  $t_{\text{SUM}}$  for series connection of n base units

- ▶ On semiconductor outputs:

$$t_{\text{SUM}} = t_{\text{ON}} + (n * t_{\text{BUS}}) + t_{\text{COND}}$$

- ▶ On relay outputs:


$$t_{\text{SUM}} = t_{\text{ON}} + (n * t_{\text{BUS}}) + t_{\text{REL}}$$

- ▶ Input delay and switch-off delay are only included once in the reaction time. The data transmission time between the link modules is multiplied by the number of connections.
- ▶ Please refer to the connection examples under "Preparing for operation".


## Link modules PNOZ mml1p

### Virtual inputs and outputs:

Inputs and outputs for both PNOZmulti systems are assigned in the PNOZmulti Configurator. Inputs and outputs with the same number are assigned to each other, e.g. output o5 on one PNOZmulti system to input i5 on the other PNOZmulti system.

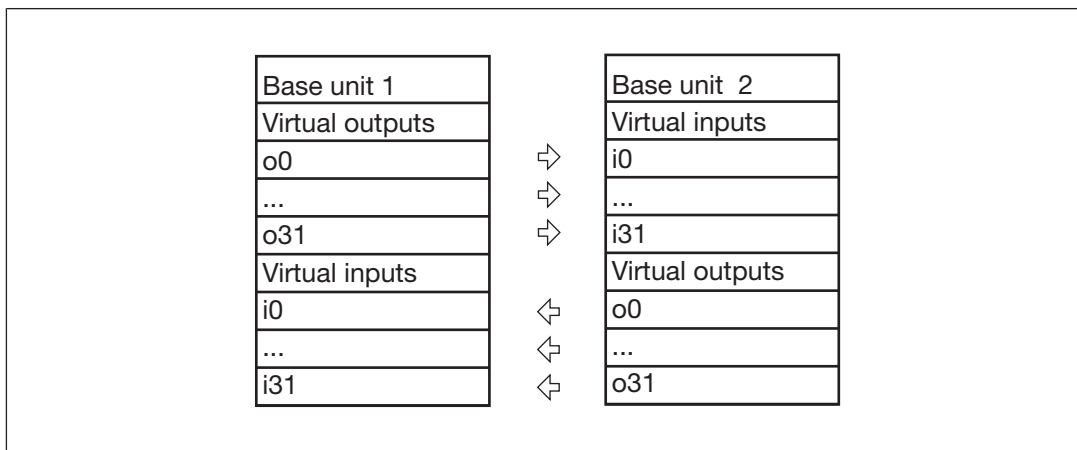


### Block diagram

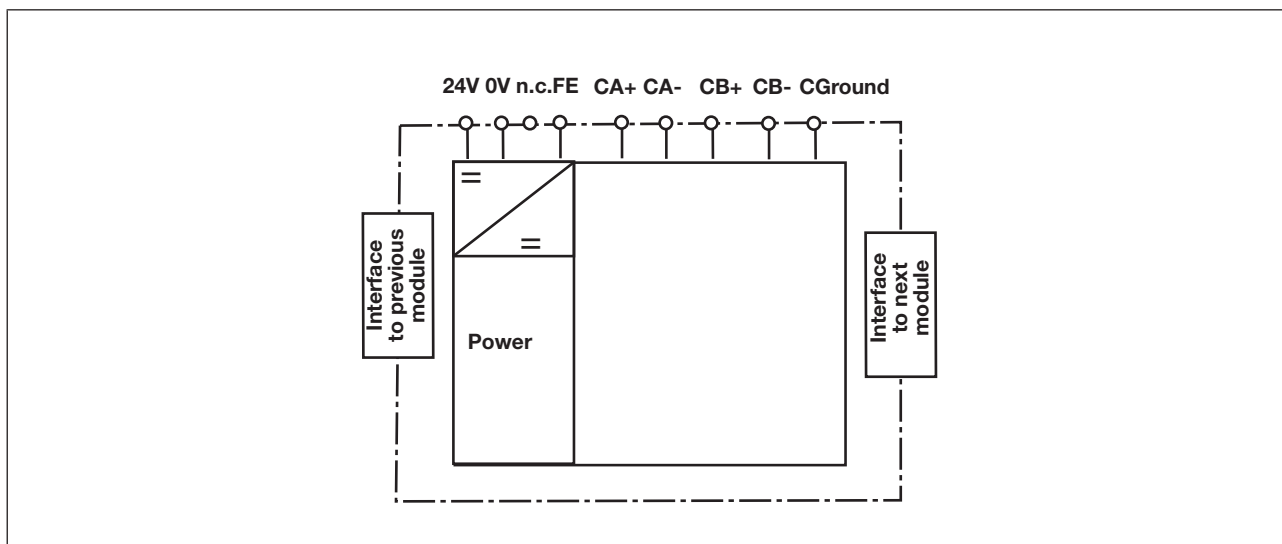

## Link modules PNOZ mml1p

### Installation

#### Dimensions

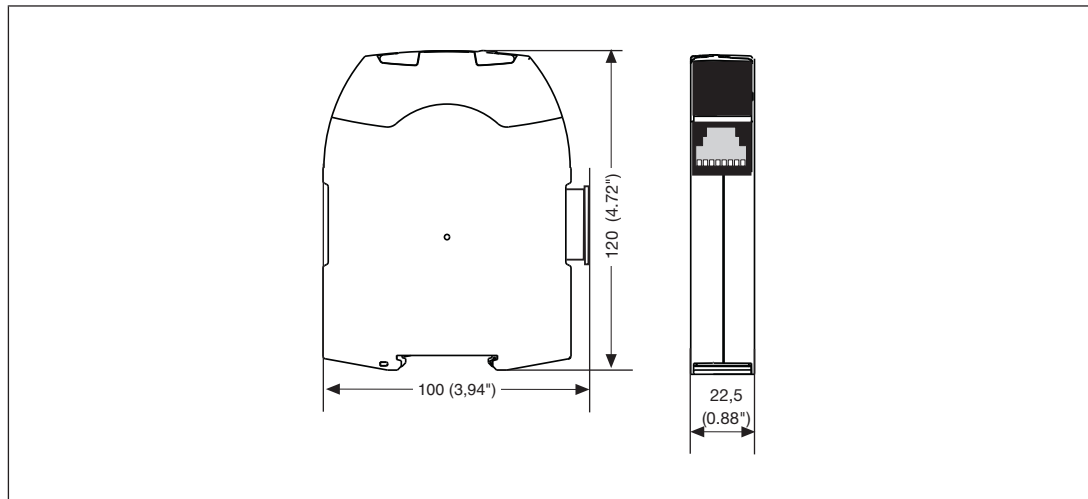

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Please note:


- ▶ Information given in the [Technical details \[573\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.
- ▶ 2 connection terminals are available for each of the supply connections 24 V and 0 V. This means that the supply voltage can be looped through several connections. The current at each terminal may not exceed 3 A.
- ▶ The max. cable length between two link modules on a connection with one link module
  - PNOZ ml1p <V2.0: 100 m
  - PNOZ ml1p from V2.0, PNOZ mml1p: 1000 m
- ▶ Connect the inputs and outputs from two link modules with 4-core shielded cable. The cables must be twisted in pairs (see “Preparing for operation”).
- ▶ Note the crossover cabling, e.g. CA+ with CB+.
- ▶ The cables must be classified into a minimum of Category 5 in accordance with ISO/IEC 11801.




## Link modules PNOZ mml1p

### Connection

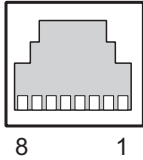RJ45 socket 8-pin	PIN	Layout
	1	CA+
	2	CA-
	3	CB+
	4	n.c.
	5	n.c.
	6	CB-
	7	n.c.
	8	n.c.
	Shield	CGround

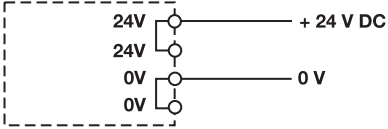
Supply voltage	AC	DC
	/	

Supply voltage

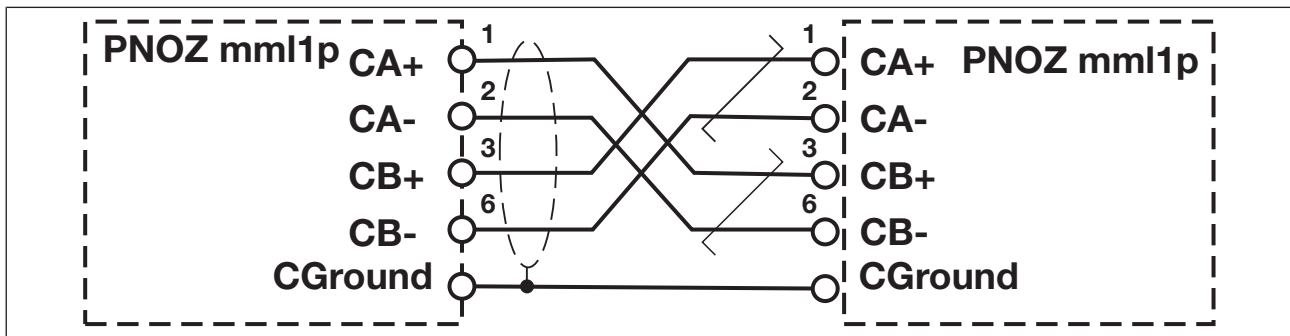

Connection of two base units PNOZmulti Mini via PNOZ mml1p

## Link modules PNOZ mml1p

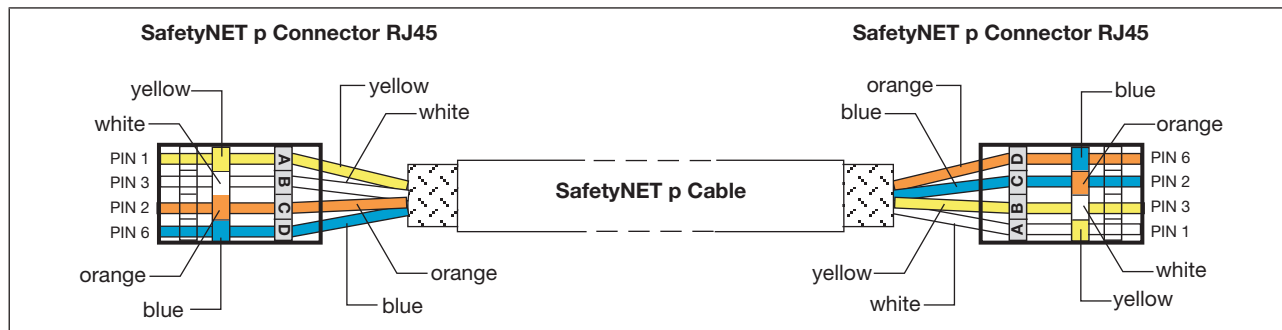

Connection cable configuration when using:  
 - 2 plug-in connectors "SafetyNET p Connector RJ45"  
 - 1 connection cable "SafetyNET p Cable"  
 (available as accessory, see order reference)

### Connection examples

#### Example: Series connection of 3 base units

Reaction time  $t_{SUM}$  between base unit Base 1 and Base 2:

Input delay  $t_{ON}$  at I4 and I6 + data transmission time  $1 * t_{BUS}$  through link module/interface + switch-off delay  $t_{COND}$  of the semiconductor output at O0

$$t_{SUM} = t_{ON} + (n * t_{BUS}) + t_{COND}$$


$$t_{SUM} = 4 \text{ ms} + (1 * 35 \text{ ms}) + 30 \text{ ms} = 69 \text{ ms}$$

Reaction time  $t_{SUM}$  between base unit Base 1 and Base 3:

Input delay  $t_{ON}$  at I4 und I6 + data transmission time  $2 * t_{BUS}$  through link modules/interfaces + switch-off delay  $t_{COND}$  of the semiconductor output at O1

$$t_{SUM} = t_{ON} + (n * t_{BUS}) + t_{COND}$$

$$t_{SUM} = 4 \text{ ms} + (2 * 35 \text{ ms}) + 30 \text{ ms} = 104 \text{ ms}$$

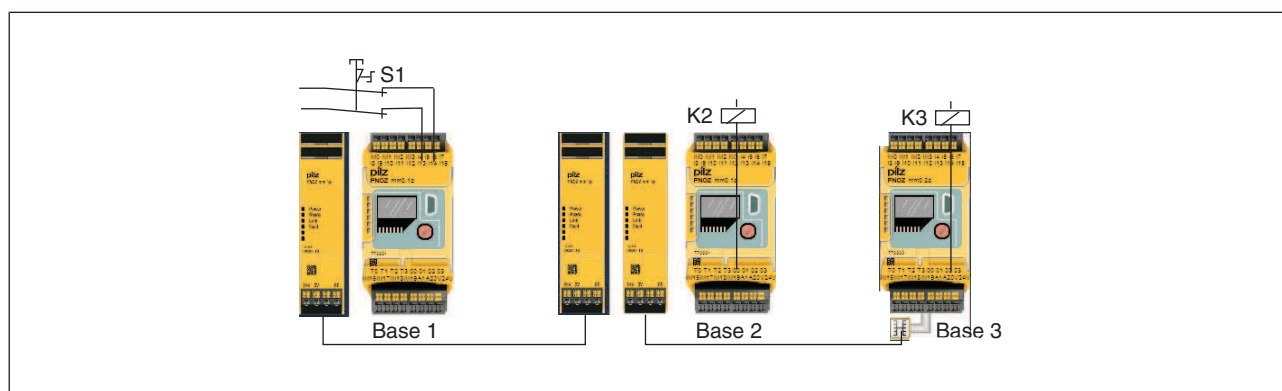

## Link modules PNOZ mml1p

### Example: Connection of 5 base units


The reaction times are calculated in the same way as application example 1. After pressing S1 on Base 1, the semiconductor outputs switch after the following reaction times  $t_{SUM}$ :

O0 on Base 2: 69 ms

O1 on Base 3: 104 ms

O0 on Base 4: 139 ms

O0 on Base 5: 104 ms

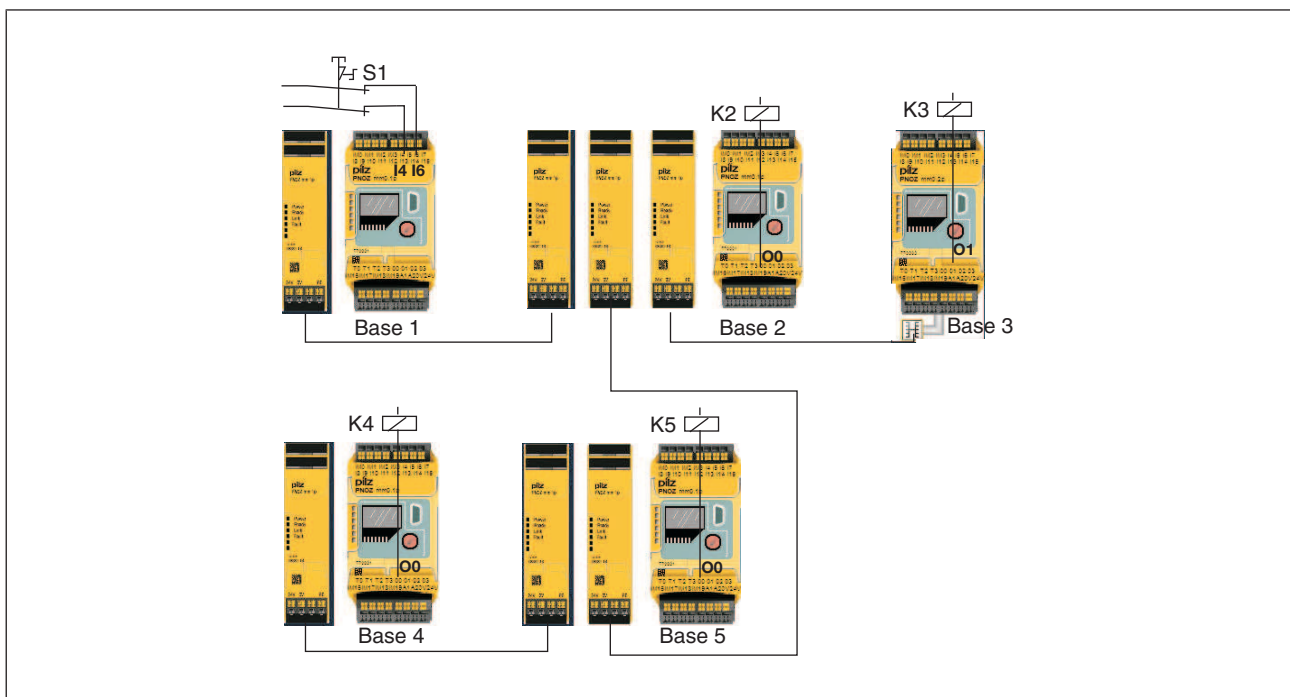

## Technical details

### General

Approvals **BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed**

### Electrical data

Supply voltage

for

Voltage

Kind

Voltage tolerance

Output of external power supply (DC)

Residual ripple DC

**Module supply**

**24,0 V**

**DC**

**-15 %/+20 %**

**5,0 W**

**5 %**

Status indicator

**LED**

### Virtual inputs

Number of virtual inputs

**32**

## Link modules PNOZ mml1p

<b>Virtual outputs</b>	
Number of virtual outputs	<b>32</b>
<b>Times</b>	
Switch-on delay	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>
Max. data transmission time	<b>35 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Rated impulse withstand voltage	<b>2,50 kV</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

## Link modules PNOZ mml1p

Mechanical data	
Max. cable length between two link modules	<b>1 km</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals	<b>0,50 Nm</b>
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	<b>0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>2</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>
Dimensions	
Height	<b>100,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>120,0 mm</b>
Weight	<b>95 g</b>

Where standards are undated, the 2011-01 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order No.
PNOZ mml1p	Expansion module	772 020

### Accessories

#### Cable

Product type	Features	Order no.
SafetyNET p Connector	RJ45 plug-in connector	380 400
SafetyNET p Cable	SafetyNET p cable, 1 - 500 m	380 000

## Link modules PNOZ mml1p

### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmc2p, mml1p 1 pc.	Spring-loaded terminals, 1 pieces	783 538
Spring terminals PNOZ mmc2p,mml1p 10 pcs	Spring-loaded terminals, 10 pieces	783 539
Screw terminals PNOZ mmc2p, mml1p 1 pc.	Screw terminals, 1 piece	793 538
Screw terminals PNOZ mmc2p,mml1p 10 pcs.	Screw terminals, 10 piece	793 539

### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

## Link modules PNOZ mml2p

---



### Overview

#### Unit features

Using the product PNOZ mml2p:


Link module to safely connect decentralised input/output modules to a configurable control system PNOZmulti Mini.

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Max. 4 PNOZ mml2p can be connected to the base unit
- ▶ Max. 4 decentralised modules can be connected to the link module PNOZ mml2p
- ▶ LEDs for
  - Operating state
  - Error
  - Connection status
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)

## Link modules PNOZ mml2p

### Front view

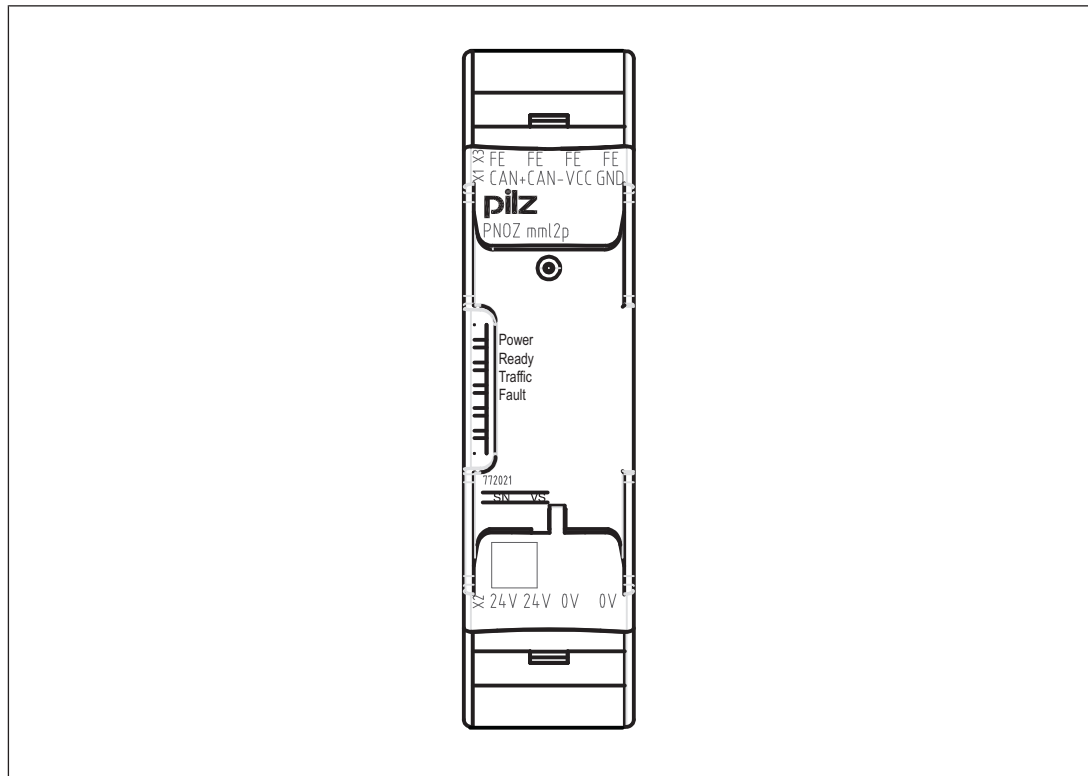

#### Key:

- ▶ 0 V, 24 V:  
Supply connections
- ▶ CAN+, CAN-, VCC, GND:  
Connection for decentralised modules
- ▶ FE:  
Functional earth

## Function description

### Operation

The link module PNOZ mml2p is used to safely transfer the input information from decentralised modules to the safety system PNOZmulti.

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.



## Link modules PNOZ mml2p

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.


### Data exchange:

- ▶ Communication with the decentralised modules is via a safe data link.
- ▶ The link module PNOZ mml2p reads the input information from the decentralised modules as part of each cycle and then forwards it to the base unit.
- ▶ At the end of a PNOZmulti cycle, the base unit sends its output data to its link module. This output data is immediately sent to the decentralised modules.

### Linking several decentralised modules:

- ▶ A maximum of 4 link modules can be connected to a base unit PNOZmulti Mini.
- ▶ A maximum of 4 decentralised modules can be connected to a link module PNOZ mml2p.
- ▶ If a decentralised module receives data intended for a different decentralised module that is connected, the data is forwarded without being processed.

### Block diagram

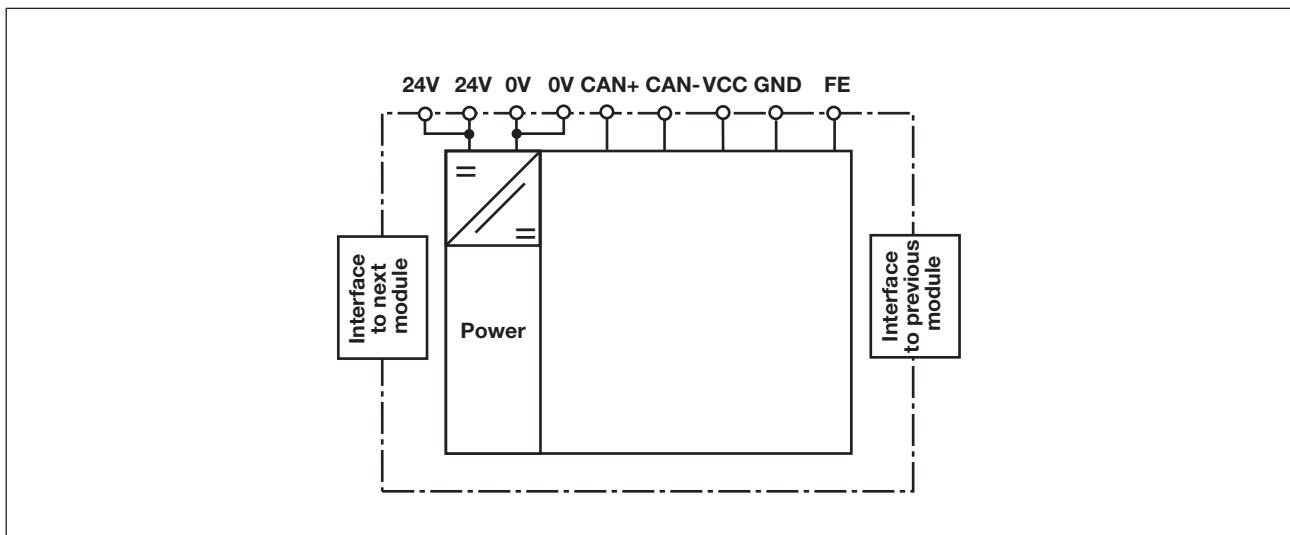


## Link modules

### PNOZ mml2p

## Installation

### Dimensions

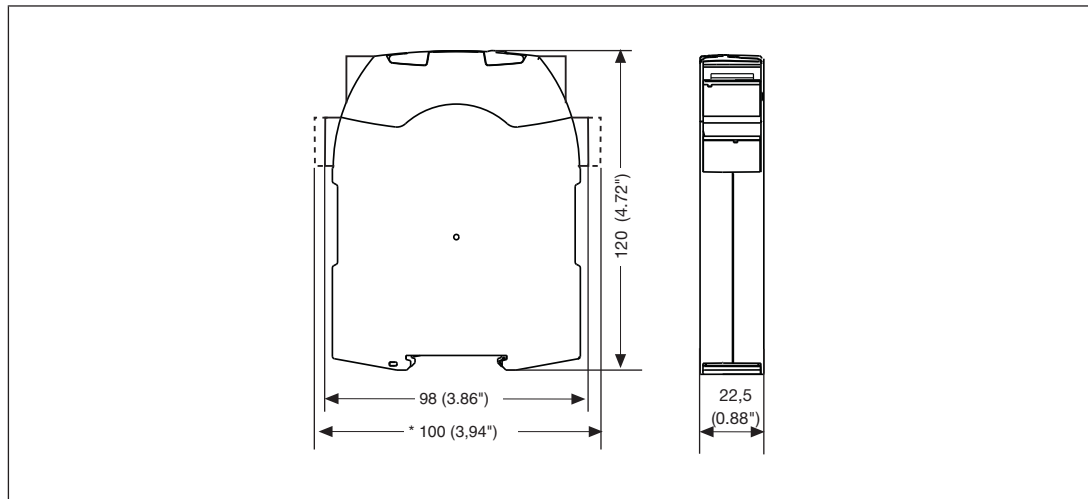

## Commissioning

### General wiring guidelines


The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:


- ▶ Information given in the [Technical details \[584\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ External measures must be used to connect the FE terminal to the function earth (e.g. mounting rail).
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.
- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Please refer to the technical details for information on the maximum cable length. Please also read the section entitled [Voltage drop \[582\]](#).
- ▶ Shielded cable must be used from a cable length of 30 m.
- ▶ Pilz pre-assembled cable can be used to connect the decentralised modules (see [Order references \[586\]](#)).
- ▶ The plug-in connection terminals are either designed as cage clamp terminals or screw terminals (see [Order references \[586\]](#)).

## Link modules PNOZ mml2p


### Insulation voltage test

The product PNOZ mml2p is connected to functional earth  via protection elements on the supply voltage. Insulation voltage tests are only possible with voltages up to ca. 42 V.


### Connection

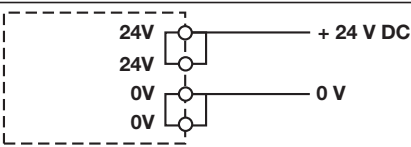Supply voltage	AC	DC
	/	

Supply voltage

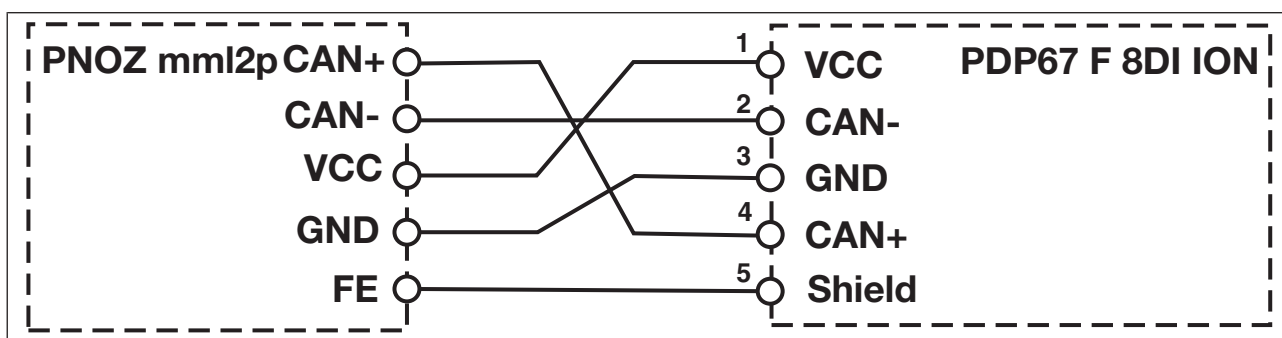

Connection to a decentralised input module PDP67

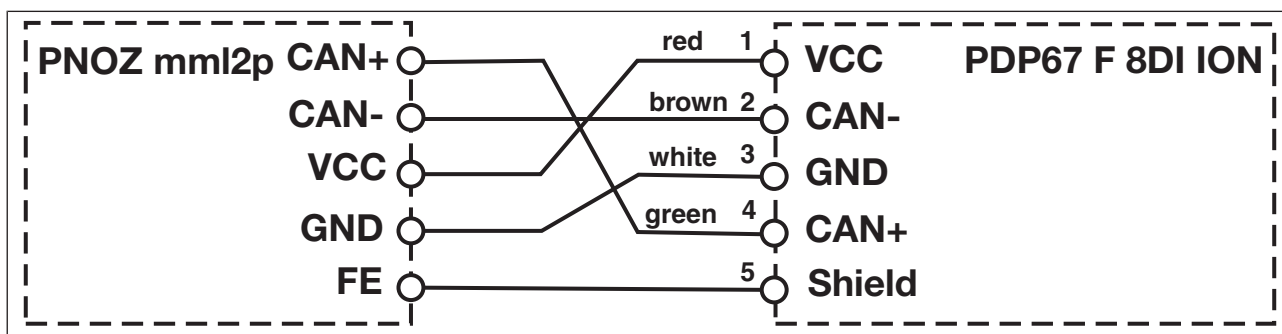


Connection when using the PSS SB BUSCABLE LC in conjunction with a Pilz self-assembly "PSS67 M12 connector" (see order reference in the Technical Catalogue)

## Link modules PNOZ mml2p

### Series connection of 4 decentralised modules

You can connect up to 4 decentralised modules in series to a PNOZmulti link module.

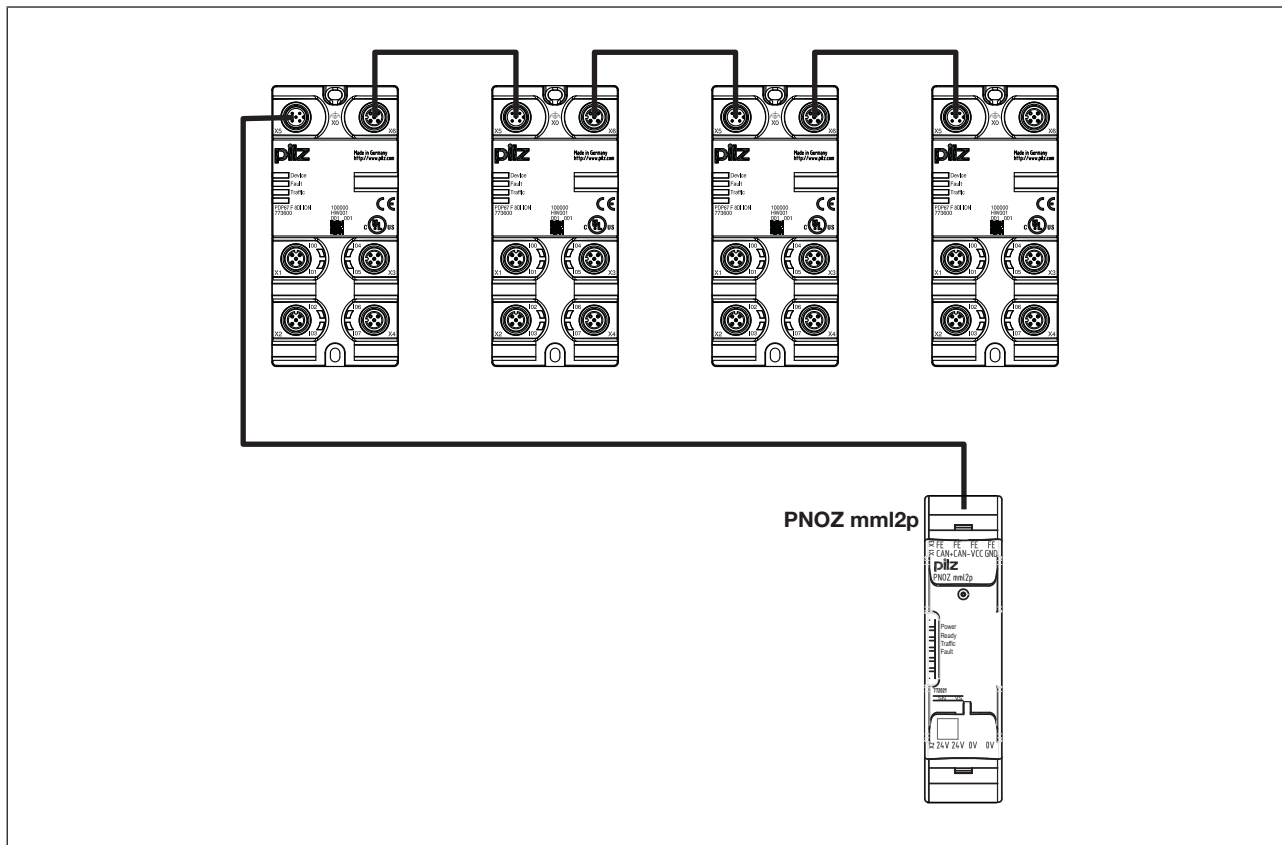

### Voltage drop

The max. cable length depends on the voltage drop in the supply voltage cables. The level of voltage drop is determined by the:

- ▶ Cable resistance on the supply voltage cables
- ▶ Operating current of the modules
- ▶ Load on the modules

To increase the max. cable length, the input voltage can be permanently increased by the voltage tolerance (see Technical Details).


## Link modules PNOZ mml2p

### Guidelines for various cable types

Cable type	Voltage drop per 10 m and per 100 mA
PSS SB BUSCABLE LC	0.1 V
Sensor cable 0.25 mm <sup>2</sup>	0.15 V
Sensor cable 0.34 mm <sup>2</sup>	0.11 V
Sensor cable 0.5 mm <sup>2</sup>	0.07 V

### Calculation example

- ▶ The PSS SB BUSCABLE LC is used in accordance with the pin assignment in section 6.2.2.  
Voltage drop per 10 m and per 100 mA: 0.1 V

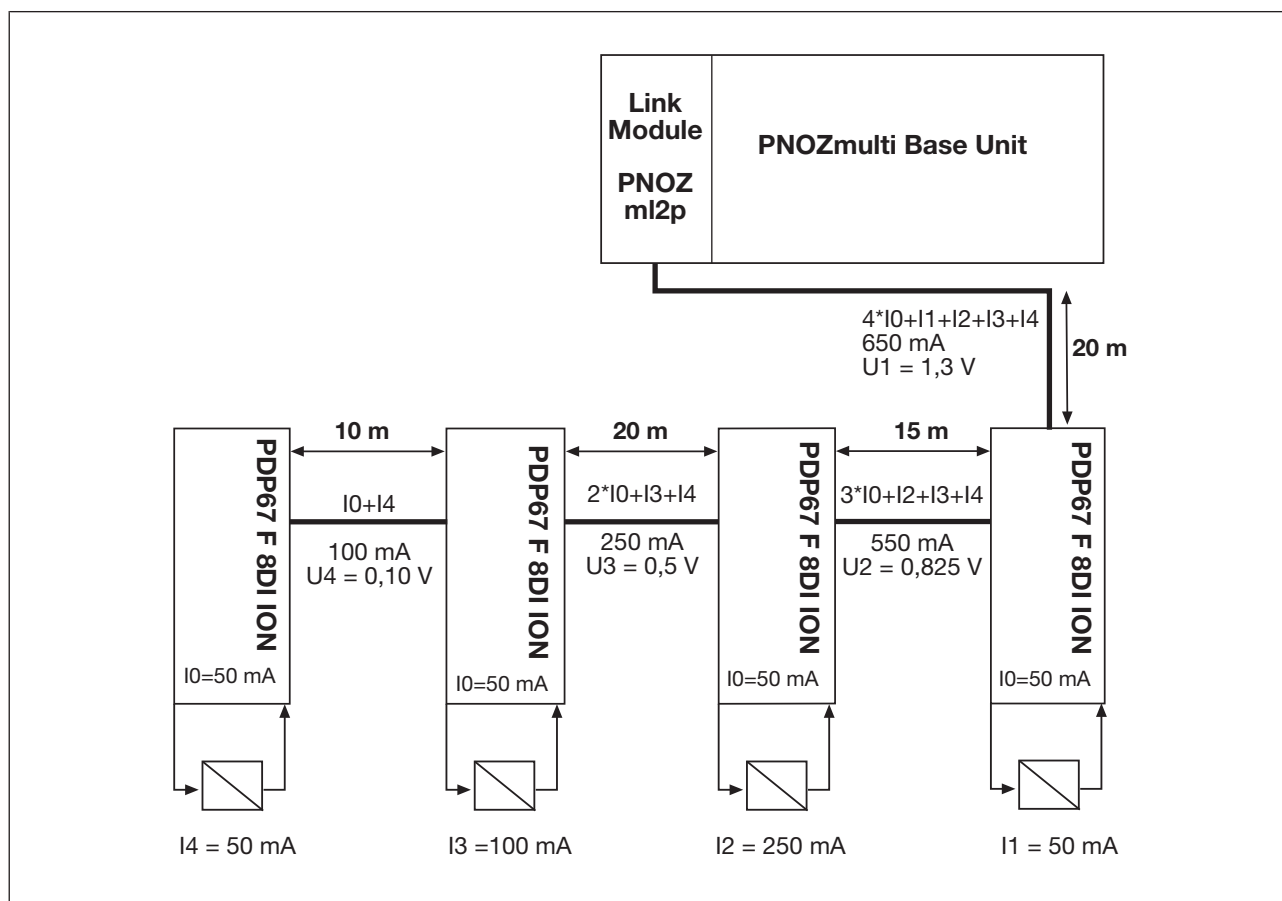

Key:

- ▶  $I_0$ : Module's consumption.
- ▶  $I_1 \dots I_5$ : Load current taken from the module

## Link modules PNOZ mml2p

- ▶ U1 ... U4: Voltage drop on the respective connection path

Total voltage drop from the link module PNOZ mml2p to the final PDP67 F 8DI ION:

$$U_{\text{total}} = U_1 + U_2 + U_3 + U_4$$

$$U_{\text{total}} = 1.3 \text{ V} + 0.825 \text{ V} + 0.5 \text{ V} + 0.10 \text{ V} = 2.725 \text{ V}$$

### Technical details

<b>General</b>	
Approvals	<b>BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed</b>
<b>Electrical data</b>	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>101,0 W</b>
Output of external power supply (DC) at no load	<b>5,0 W</b>
Residual ripple DC	<b>5 %</b>
Status indicator	<b>LED</b>
<b>Inputs</b>	
Maximum input delay	<b>15 ms</b>
<b>Semiconductor outputs</b>	
Switch-off delay	<b>35 ms</b>
<b>Test pulse outputs</b>	
Maximum output current, decentralised module supply	<b>4 A</b>
Short circuit protection of decentralised module supply	<b>yes</b>
<b>Times</b>	
Switch-on delay	<b>5,00 s</b>
Supply interruption before de-energisation	<b>20 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>

## Link modules PNOZ mml2p

<b>Environmental data</b>	
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Number of shocks	<b>3</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
In accordance with the standard	<b>EN 60068-2-27</b>
Number of shocks	<b>500</b>
Acceleration	<b>25g</b>
Duration	<b>6 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Rated impulse withstand voltage	<b>0,50 kV</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Max. cable length unshielded	<b>30 m</b>
Max. cable length shielded	<b>100 m</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>

## Link modules PNOZ mml2p

Mechanical data	
Torque setting with screw terminals	<b>0,50 Nm</b>
Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector	<b>0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>2</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>
Dimensions	
Height	<b>100,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>120,0 mm</b>
Weight	<b>98 g</b>

Where standards are undated, the 2011-01 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order No.
PNOZ mml2p	Link Module	772 021

## Accessories

### Adapter

Product type	Features	Order No.
PSEN ma adapter	Adapter for connection to safety switch PSENm <sub>ag</sub>	380 300
PSEN cs adapter	Adapter for connection to safety switch PSENc <sub>ode</sub>	380 301
PSEN sl adapter	Adapter for connection to safety switch PSENs <sub>lock</sub>	380 325

### Cable

Product type	Features	Order No.
PSS SB BUSCABLE LC	Cable, shielded, 1 - 100 m	311074
PSS67 I/O Cable	Cable, 1 - 30 m	380 320
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 3 m	380 200
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 5 m	380 201
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 10 m	380 202



## Link modules PNOZ mml2p

Product type	Features	Order No.
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 30 m	380 203
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 3m	380 204
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 5 m	380 205
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 10 m	380 206
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 30 m	380 207
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 3m	380 208
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 5 m	380 209
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 10 m	380 210
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 20 m	380 220
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 30 m	380 211
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 3m	380 212
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 5 m	380 213
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 10 m	380 214
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 30 m	380 215
PSEN op cable axial M12 5-pole 3m	Cable, straight, M12, 5-pin, open-ended socket, 3 m	630310
PSEN op cable axial M12 5-pole 5m	Cable, straight, M12, 5-pin, open-ended socket, 5 m	630311
PSEN op cable axial M12 5-pole 10m	Cable, straight, M12, 5-pin, open-ended socket, 10 m	630312
PSEN op cable axial M12 5-pole 20m	Cable, straight, M12, 5-pin, open-ended socket, 20 m	630298
PSEN op cable axial M12 5-pole 30m	Cable, straight, M12, 5-pin, open-ended socket, 30 m	630297

## Link modules PNOZ mml2p

### Connection terminals

Product type	Features	Order No.
Spring terminals PNOZ mml2p 1 pc.	Spring-loaded terminals, 1 pieces	783 540
Spring terminals PNOZ mml2p 10 pcs.	Spring-loaded terminals, 10 pieces	783 541
Screw terminals PNOZ mml2p 1 pc.	Screw terminals, 1 piece	793 540
Screw terminals PNOZ mml2p 10 pcs.	Screw terminals, 10 pieces	793 541

### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

### Connector

Product type	Features	Order No.
PSS67 M12 connector	Connector, M12, straight, 5-pin, A-coded	380 308
PSS67 M12 connector	Socket, M12, straight, 5-pin, A-coded	380 309
PSS67 M12 connector	Connector, M12, angled, 5-pin, A-coded	380 310
PSS67 M12 connector	Socket, M12, angled, 5-pin, A-coded	380 311
PSS67 M8 connector	Connector, M8, straight, 4-pin	380 316
PSS67 M8 connector	Socket, M8, straight, 4-pin	380 317
PSS67 M8 connector	Connector, M8, angled, 4-pin	380 318
PSS67 M8 connector	Socket, M8, angled, 4-pin	380 319

## Communication modules

### PNOZ mmc1p

---



## Overview

### Unit features

Using the product PNOZ mmc1p:

Communication module for connection to a base unit from the configurable control systems PNOZmultiMini.


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ 2 Ethernet interfaces
- ▶ Status indicators for supply voltage, communication and errors
- ▶ Max. 1 communication module can be connected to the left of the base unit PNOZmulti Mini

## Communication modules

### PNOZ mmc1p

#### Front view

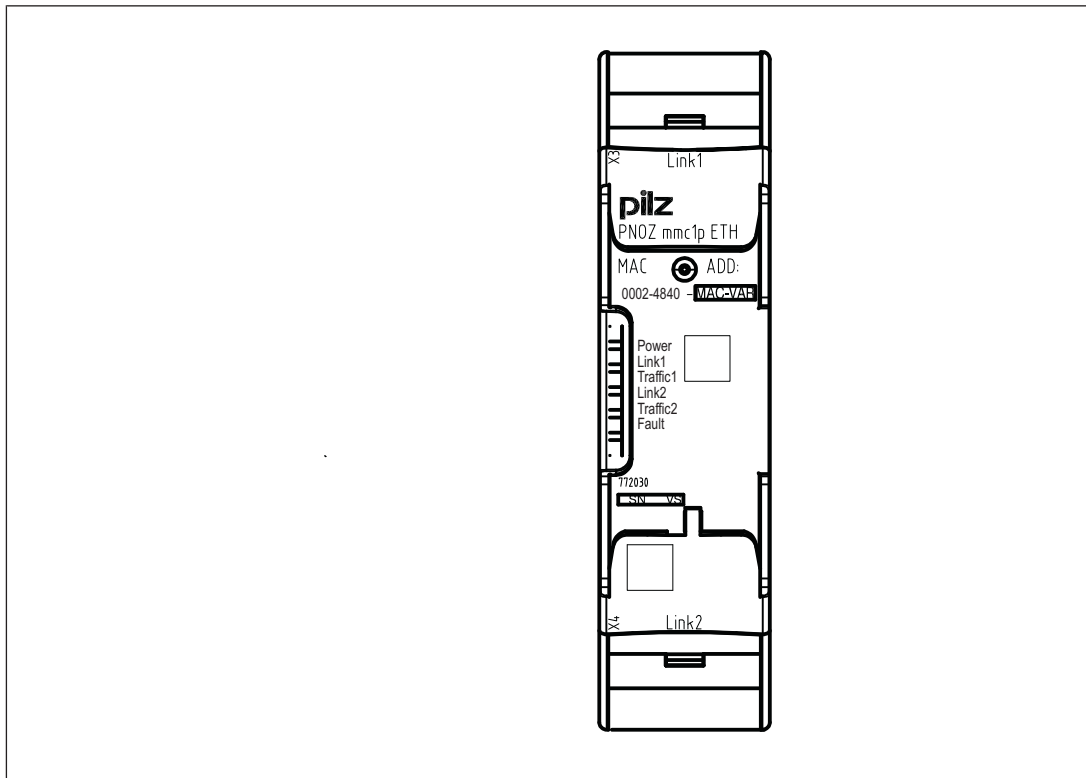

#### Legend:

- ▶ Link1, Link2:  
Ethernet interfaces
- ▶ LEDs:
  - Power
  - Link1
  - Traffic1
  - Link2
  - Traffic2
  - Fault

## Function description

### Unit properties

The product PNOZ mmc1p has two Ethernet interfaces to

- ▶ Download the project
- ▶ Read the diagnostic data

## Communication modules

### PNOZ mmc1p

- ▶ Set virtual inputs for standard functions
- ▶ Read virtual outputs for standard functions


via Ethernet (TCP/IP, Modbus/TCP).

Information on diagnostics via the Ethernet interfaces can be found in the document entitled "PNOZmulti Mini communication interfaces".

The connection to Ethernet is made via the two 8-pin RJ45 sockets.


The Ethernet interface is configured in the PNOZmulti Configurator and is described in the online help for the PNOZmulti Configurator.

### Block diagram

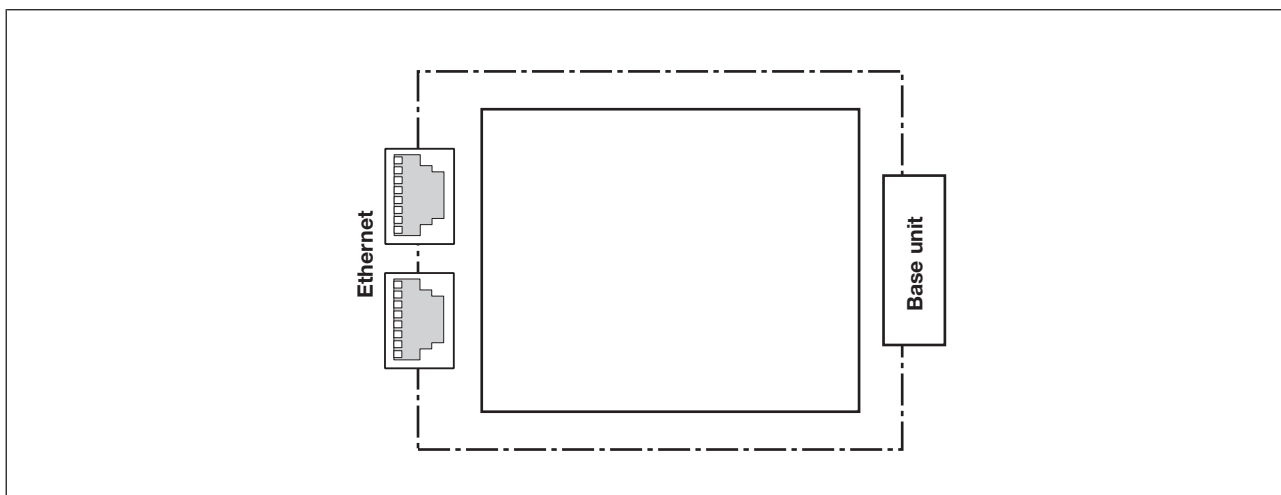

### Installation

#### Dimensions

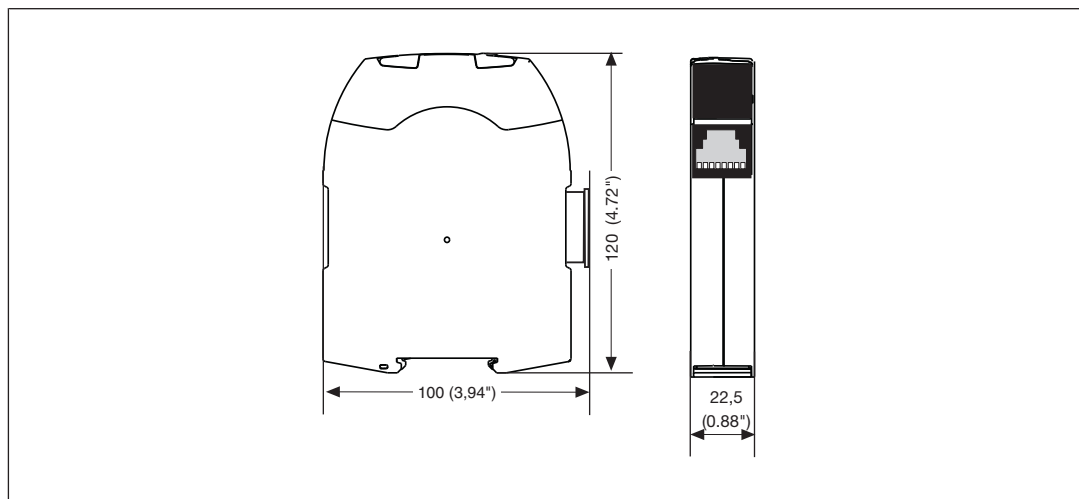

## Communication modules

### PNOZ mmc1p

---

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[595\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.

#### Preparing for operation

Detection and activation of the Ethernet interface, depending on the USB interface on the base unit:

- ▶ **USB interface on the base unit not connected**

If the USB interface on the base unit is not connected, the Ethernet interface will be detected and activated by the base unit as soon as the communication module has been connected to the base unit.

- ▶ **USB interface on the base unit connected**

If the USB interface on the base unit is already connected, the "Ethernet" interface will first need to be selected on the base unit display to enable the Ethernet interface on the base unit to be detected and activated (see operating manual for the base unit for details of the setting).

#### Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

### Ethernet interfaces

#### RJ45 interfaces ("Ethernet")

Two free switch ports are provided as Ethernet interfaces via an internal autosensing switch. The autosensing switch automatically detects whether data transfer is occurring at 10 Mbit/s or 100 Mbit/s.

The switch's automatic crossover function means there is no need to distinguish on the connection cable between patch cable (uncrossed data line connection) and crossover cable (crossover data line connection). The switch automatically creates the correct data line connection internally. Patch cable can therefore be used as the connection cable for end devices as well as cascading.

Both Ethernet interfaces use RJ45 technology.

## Communication modules


### PNOZ mmc1p

#### Requirements of the connection cable and connector


The following minimum requirements must be met:

- ▶ Ethernet standards (min. Category 5) 10BaseT or 100BaseTX
- ▶ Double-shielded twisted pair cable for industrial Ethernet use
- ▶ Shielded RJ45 connectors (industrial connectors)

#### Interface configuration

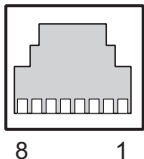RJ45 socket 8-pin	PIN	Standard	Crossover
	1	TD+ (Transmit+)	RD+ (Receive+)
	2	TD- (Transmit-)	RD- (Receive-)
	3	RD+ (Receive+)	TD+ (Transmit+)
	4	n.c.	n.c.
	5	n.c.	n.c.
	6	RD- (Receive-)	TD- (Transmit-)
	7	n.c.	n.c.
	8	n.c.	n.c.

#### RJ45 connection cable

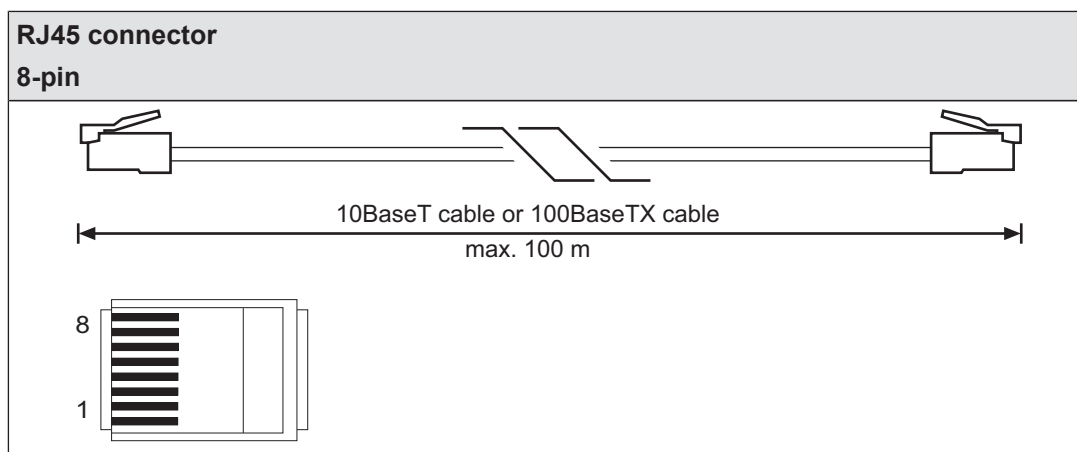

## Communication modules

### PNOZ mmc1p

#### Process data exchange

The RJ45 interfaces on the internal autosensing switch enable process data to be exchanged with other Ethernet subscribers within a network.

The product PNOZ mmc1p **ETH** can also be connected to Ethernet via a hub (hub or switch).

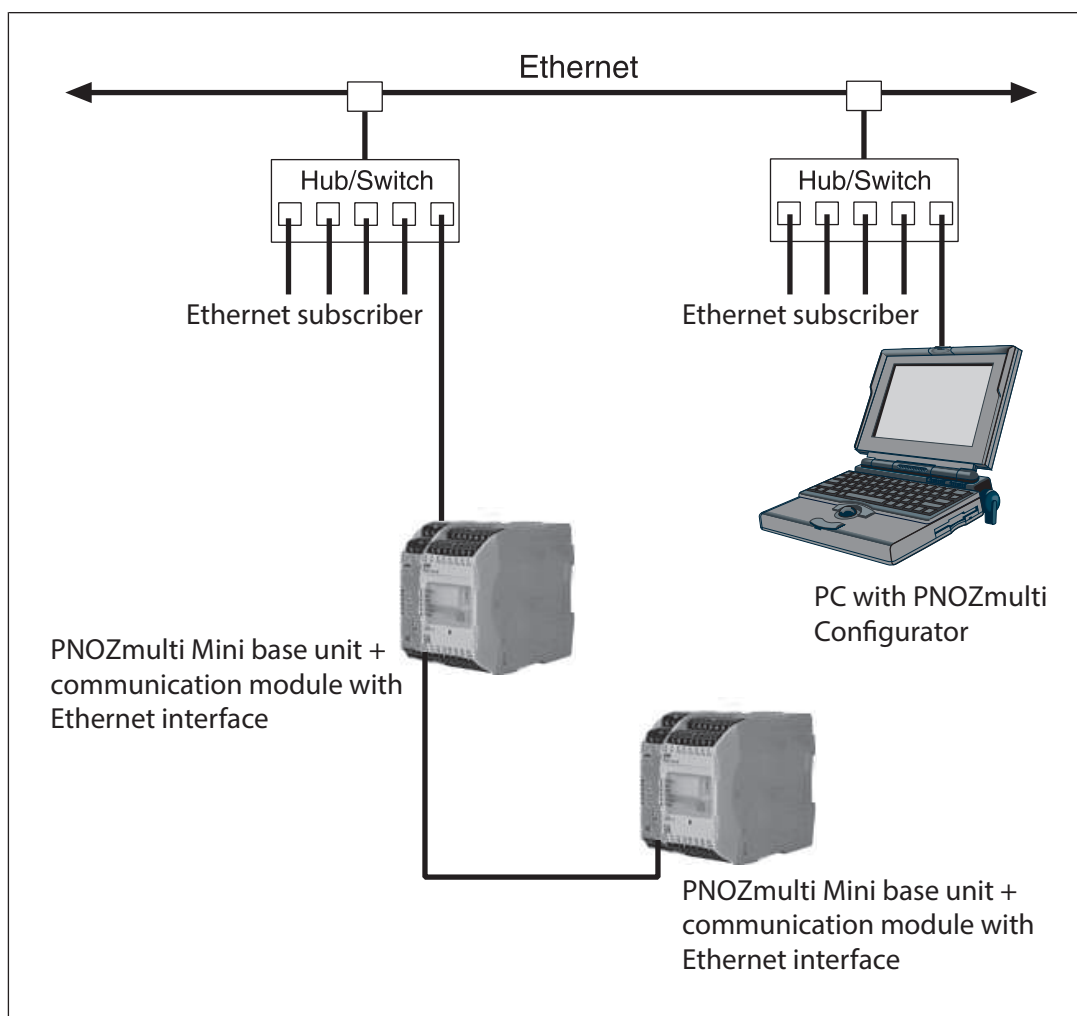


Fig.: PNOZmulti as Ethernet subscriber - possible topologies



## Communication modules PNOZ mmc1p

### Technical details

<b>General</b>	
Approvals	CCC, CE, EAC (Eurasian), KCC, cULus Listed
<b>Electrical data</b>	
Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>3,3 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>1,0 W</b>
Status indicator	<b>LED</b>
<b>Ethernet interface</b>	
Number	<b>2</b>
<b>Fieldbus interface</b>	
Fieldbus interface	<b>Modbus TCP</b>
Device type	<b>Slave</b>
Connection	<b>RJ45</b>
Galvanic isolation	<b>yes</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>

## Communication modules

### PNOZ mmc1p

#### Environmental data

Airgap creepage

Overvoltage category **II**

Pollution degree **2**

Rated insulation voltage **30 V**

Protection type

In accordance with the standard **EN 60529**

Mounting area (e.g. control cabinet) **IP54**

Housing **IP20**

Terminals **IP20**

#### Mechanical data

Mounting position **Horizontal on top hat rail**

DIN rail

Top hat rail **35 x 7,5 EN 50022**

Recess width **27 mm**

Max. cable length

Max. cable length per input **0,1 km**

Material

Bottom **PC**

Front **PC**

Top **PC**

Dimensions

Height **100,0 mm**

Width **22,5 mm**

Depth **120,0 mm**

Weight **100 g**

Where standards are undated, the 07/2010 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order No.
PNOZ mmc1p ETH	Expansion module	772 030

## Communication modules

### PNOZ mmc1p

---

#### Accessories

##### Terminator, jumper

Product type	Features	Order No.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750 010
PNOZ s connector	Jumper, 10 pieces	750 020

## Communication modules

### PNOZ mmc2p

---



### Overview

#### Unit features

Using the product PNOZ mmc2p:

Communication module for connection to a base unit from the configurable control systems PNOZmultiMini.


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ 1 serial interface RS232
- ▶ Status indicator for supply voltage
- ▶ Max. 1 communication module can be connected to the left of the base unit PNOZmulti Mini
- ▶ Plug-in connection terminals (either cage clamp terminals or screw terminals)

## Communication modules

### PNOZ mmc2p

#### Front view

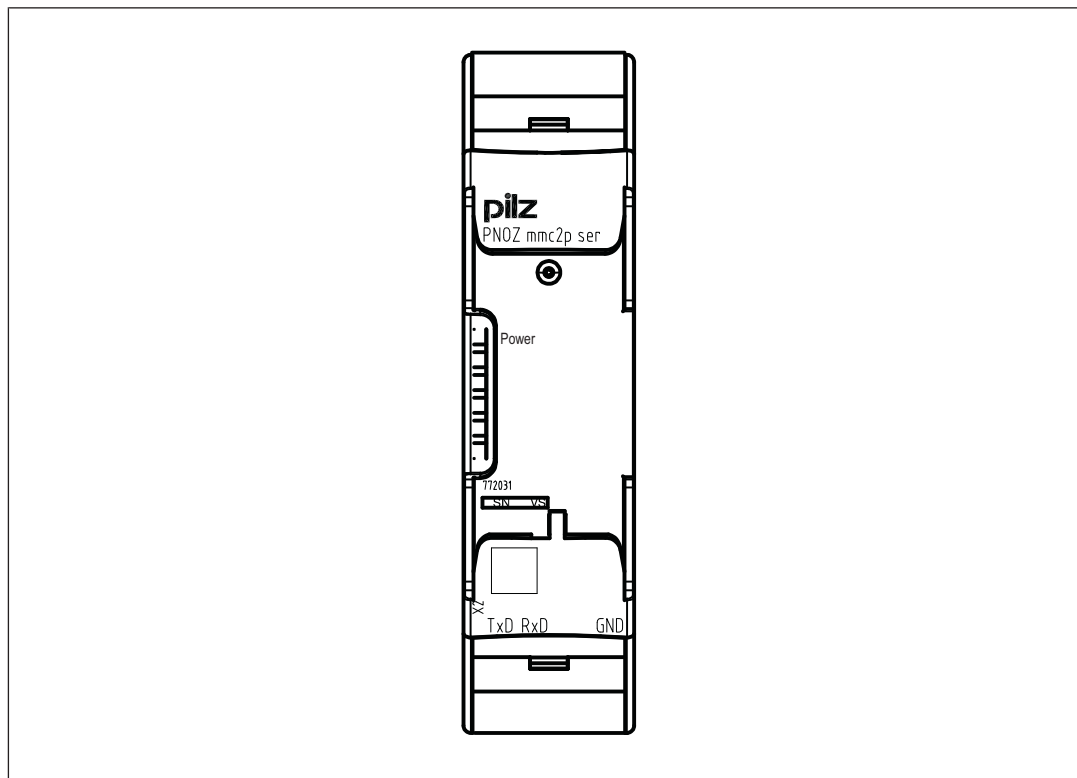

#### Legend:

- ▶ X2: Serial interface RS232
- ▶ LED:
- Power

## Function description

### Functions

The product PNOZ mmc2p has a serial interface RS232 interface to


- ▶ Download the project
- ▶ Read the diagnostic data
- ▶ Set virtual inputs for standard functions
- ▶ Read virtual outputs for standard functions.

Information on diagnostics can be found in the document "Communication Interfaces".

## Communication modules


### PNOZ mmc2p

#### Block diagram

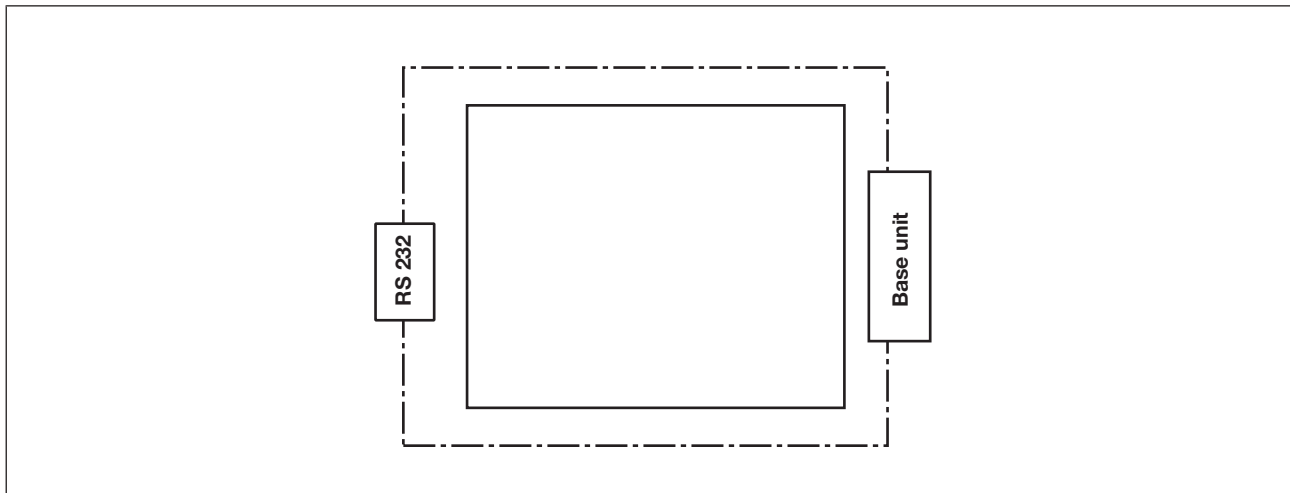

#### Installation

##### Dimensions

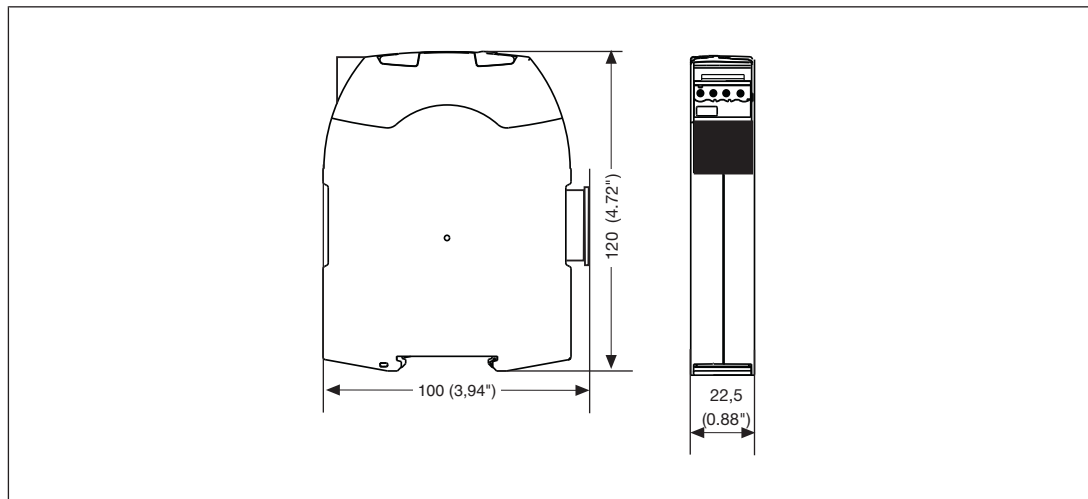

#### Commissioning

##### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Please note:

- ▶ Information given in the [Technical details \[601\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.

## Communication modules

### PNOZ mmc2p

#### Interface configuration

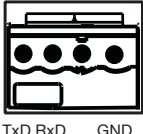Serial interface RS232	Standard
 <p>TxD RxD GND</p>	TxD (Transmit)
	RxD (Receive)
	GND (Ground)

#### Preparing for operation

The serial interface RS 232 is activated and detected depending on the USB interface on the base unit:

- ▶ **USB interface on the base unit not connected**  
In this case, the serial interface RS 232 will be detected and activated by the base unit as soon as the communication module has been connected to the base unit.
- ▶ **USB interface on the base unit connected**  
If the USB interface on the base unit is already connected, the "External" interface will first need to be selected on the base unit display to enable the serial interface RS 232 on the base unit to be detected and activated (see operating manual for the base unit for details of the setting).

#### Technical details

General	
Approvals	CCC, CE, EAC (Eurasian), KCC, cULus Listed
Electrical data	
Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>3,3 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-2 %/+2 %</b>
Power consumption	<b>30,0 mW</b>
Status indicator	<b>LED</b>
Fieldbus interface	
Galvanic isolation	<b>No</b>
Serial interface	
Number of RS232 interfaces	<b>1</b>

## Communication modules PNOZ mmc2p

<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Max. cable length	
Max. cable length per input	<b>22,0 m</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>



## Communication modules

### PNOZ mmc2p

#### Mechanical data

Conductor cross section with screw terminals

1 core flexible **0,50 - 1,50 mm<sup>2</sup>, 22 - 12 AWG**

2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors **0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG**

Torque setting with screw terminals **0,50 Nm**

Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector **0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG**

Spring-loaded terminals: Terminal points per connection

**2**

Stripping length with spring-loaded terminals **9 mm**

Dimensions

Height **100,0 mm**

Width **22,5 mm**

Depth **120,0 mm**

Weight **85 g**

Where standards are undated, the 07/2010 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order No.
PNOZ mmc2p serial	Expansion module	772 031

## Accessories

### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmc2p, mml1p 1 pc.	Spring-loaded terminals, 1 pieces	783 538
Spring terminals PNOZ mmc2p,mml1p 10 pcs	Spring-loaded terminals, 10 pieces	783 539
Screw terminals PNOZ mmc2p, mml1p 1 pc.	Screw terminals, 1 piece	793 538
Screw terminals PNOZ mmc2p,mml1p 10 pcs.	Screw terminals, 10 piece	793 539

## Communication modules

### PNOZ mmc2p

---

#### Terminator, jumper

Product type	Features	Order No.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750 010
PNOZ s connector	Jumper, 10 pieces	750 020

## Fieldbus modules PNOZ mmc3p

---



### Overview

#### Unit features

Using the product PNOZ mmc3p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti Mini


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for PROFIBUS-DP
- ▶ Station addresses from 0 ... 99, selected via rotary switch
- ▶ Status indicators for communication with PROFIBUS-DP and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus PROFIBUS-DP . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mmc3p can be connected to the base unit
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ For details of the PNOZmulti Mini base units that can be connected, please refer to the document "PNOZmulti System Expansion".


## Fieldbus modules

### PNOZ mmc3p

#### Front view

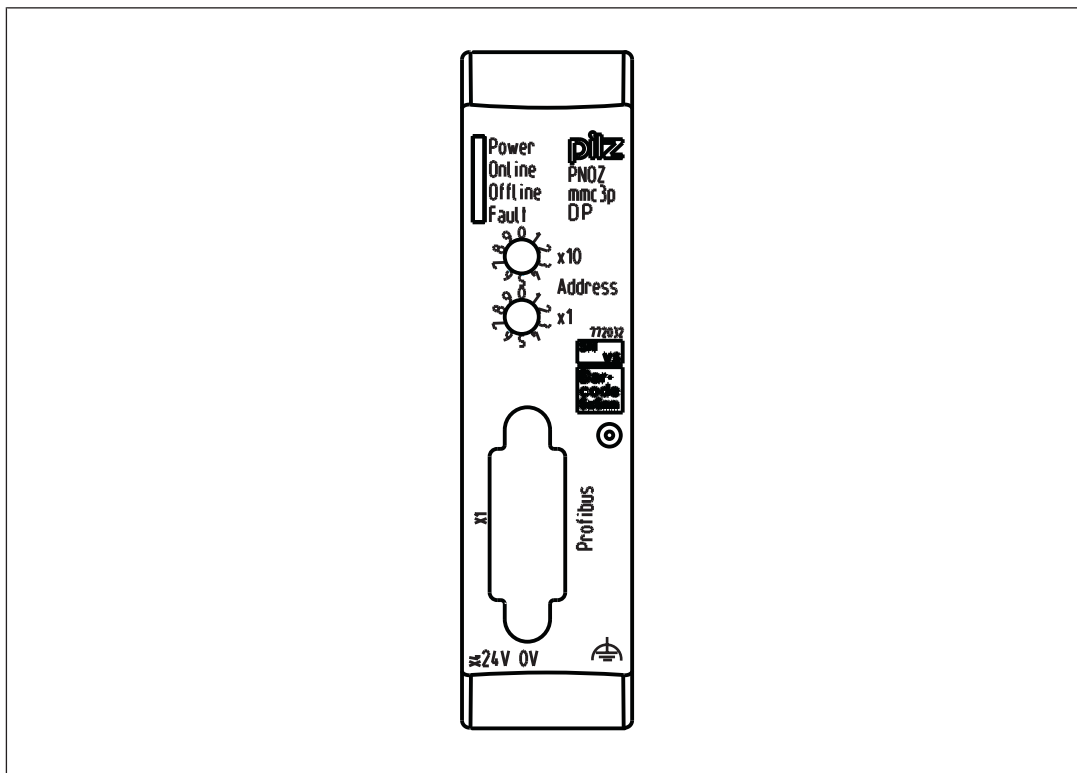

#### Legend:

- ▶ 0 V, 24 V:  
Supply connections
- ▶ X1: PROFIBUS-DP interface (female 9-pin D-Sub connector)
- ▶ : Functional earth
- ▶ LED:
  - Power
  - Online
  - Offline
  - Fault

## Function description

### Operation

The virtual inputs and outputs that are to be transferred via PROFIBUS are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mmc3p are connected via a jumper.

## Fieldbus modules

### PNOZ mmc3p

The station address is set via rotary switches. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mmc3p is configured and started automatically.

LEDs indicate the status of the expansion module on PROFIBUS.

The configuration is described in detail in the PNOZmulti Configurator's online help.

### Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".


### Assigning the inputs/outputs in the PNOZmulti Configurator to the PROFIBUS-DP inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data PROFIBUS-DP	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data PROFIBUS-DP	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


## Fieldbus modules PNOZ mmc3p

### Block diagram

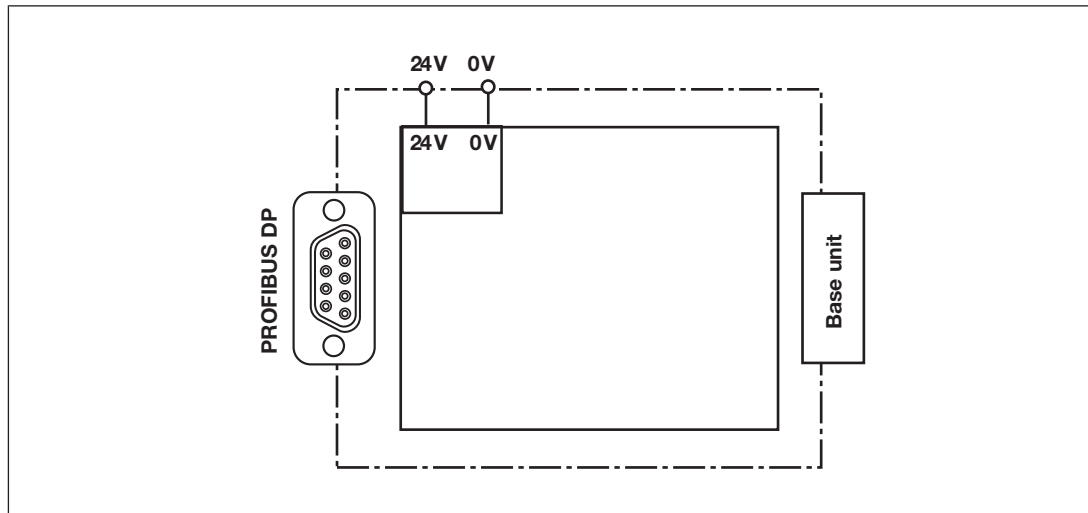

### Installation

#### Dimensions in mm

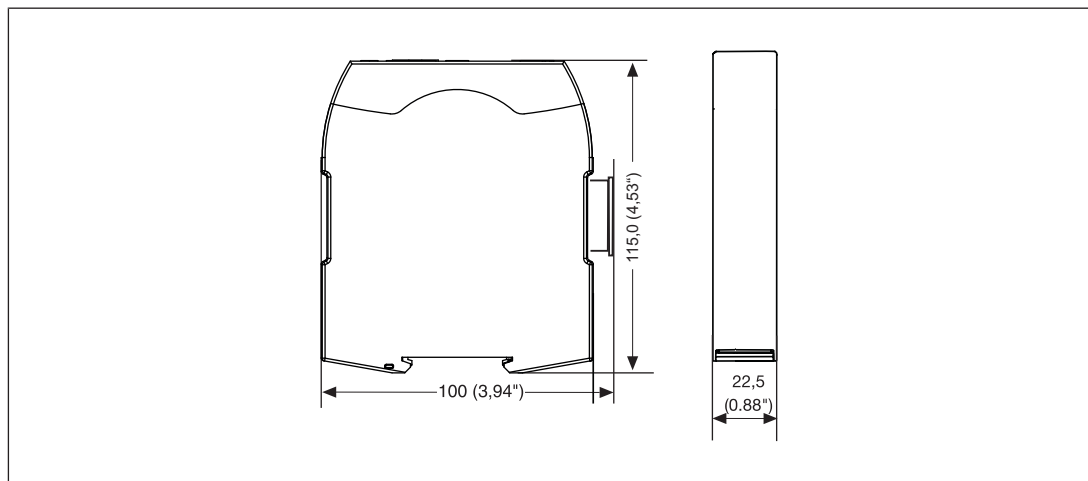

### Commissioning

#### General wiring guidelines


The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[621\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.

## Fieldbus modules

### PNOZ mmc3p

- ▶ External measures must be used to connect the  terminal to the function earth (e.g. mounting rail).
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.


### Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6A

### PROFIBUS DP interface

It is possible to define which outputs on the control system will communicate with PROFIBUS-DP. The connection to PROFIBUS-DP is made via a female 9-pin D-Sub connector in accordance with the guidelines of the PROFIBUS User Group (PNO).

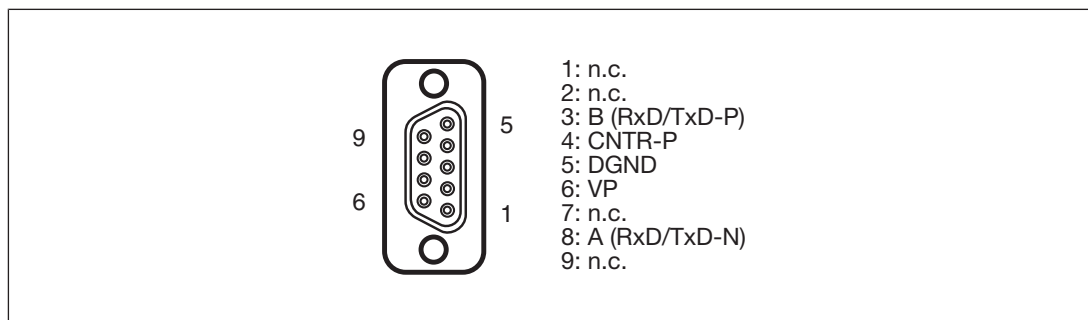

n.c. = not connected

Please note the following when connecting to PROFIBUS-DP:


- ▶ Only use metal plugs or metallised plastic plugs
- ▶ Twisted pair, screened cable must be used to connect the interfaces

## Fieldbus modules


### PNOZ mmc3p

#### Setting the station address

The station address of the expansion module PNOZ mmc3p is set between 0 ... 99 (decimal) via two rotary switches x1 and x10.

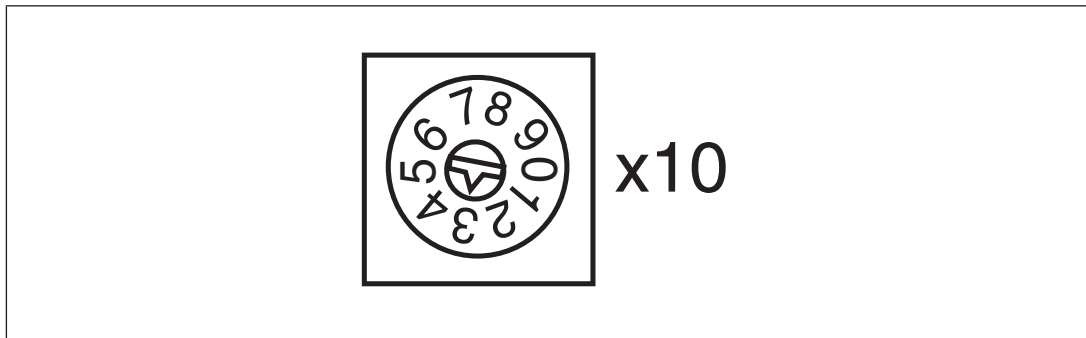

- ▶ On the upper rotary switch x10, use a small screwdriver to set the tens digit for the address ("3" in the example).

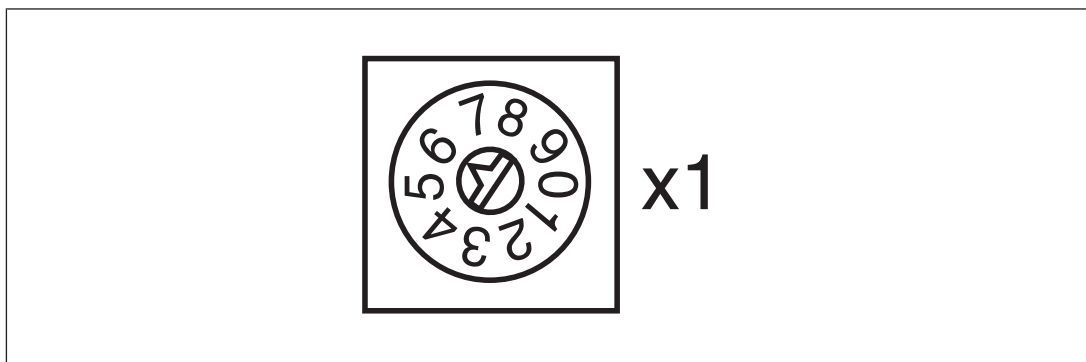

- ▶ On the lower rotary switch x1, set the ones digit for the address ("6" in the example).  
Station address 36 is set in the diagrams as an example.


#### Download modified project to the control system PNOZmulti

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.



## Fieldbus modules PNOZ mmc3p

### Connection example

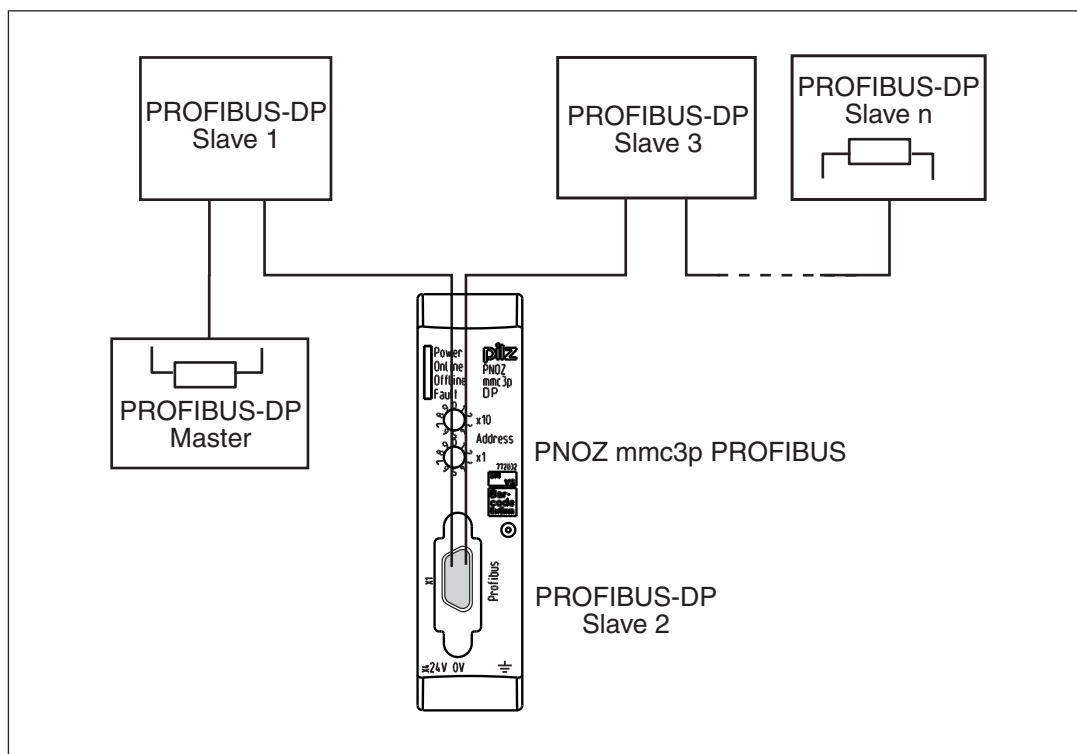

### Technical details

General	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
Electrical data	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Output of external power supply (DC)	<b>1,5 W</b>
Status indicator	<b>LED</b>
Fieldbus interface	
Fieldbus interface	<b>PROFIBUS DP</b>
Device type	<b>Slave DPV0</b>
Station address	<b>0 - 99d</b>
Transmission rate	<b>9,6 kBit/s - 12 MBit/s</b>
Connection	<b>9-pin D-Sub female connector</b>
Galvanic isolation	<b>yes</b>

## Fieldbus modules PNOZ mmc3p

<b>Times</b>	
Supply interruption before de-energisation	<b>20 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>Fieldbus and module voltage</b>
Type of potential isolation	<b>Functional insulation</b>
Rated surge voltage	<b>500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>

## Fieldbus modules PNOZ mmc3p

### Mechanical data

DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible with crimp connectors, no plastic sleeve	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals	<b>0,50 Nm</b>
Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector	
	<b>0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>2</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>
Dimensions	
Height	<b>100,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>115,0 mm</b>
Weight	<b>95 g</b>

Where standards are undated, the 2011-09 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order no.
PNOZ mmc3p	Fieldbus module, PROFIBUS-DP	772 032

## Fieldbus modules

### PNOZ mmc3p

#### Accessories

##### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793 543

##### Terminator, jumper

Product type	Features	Order No.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750 010
PNOZ s connector	Jumper, 10 pieces	750 020

## Fieldbus modules PNOZ mmc4p

---



### Overview

#### Unit features

Using the product PNOZ mmc4p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti Mini .


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for DeviceNet
- ▶ Station addresses from 0 ... 63 can be selected via DIP switches
- ▶ Status indicators for communication with DeviceNet and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus DeviceNet . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mmc4p can be connected to the base unit
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ For details of the PNOZmulti Mini base units that can be connected, please refer to the document "PNOZmulti System Expansion".


## Fieldbus modules

### PNOZ mmc4p

#### Front view

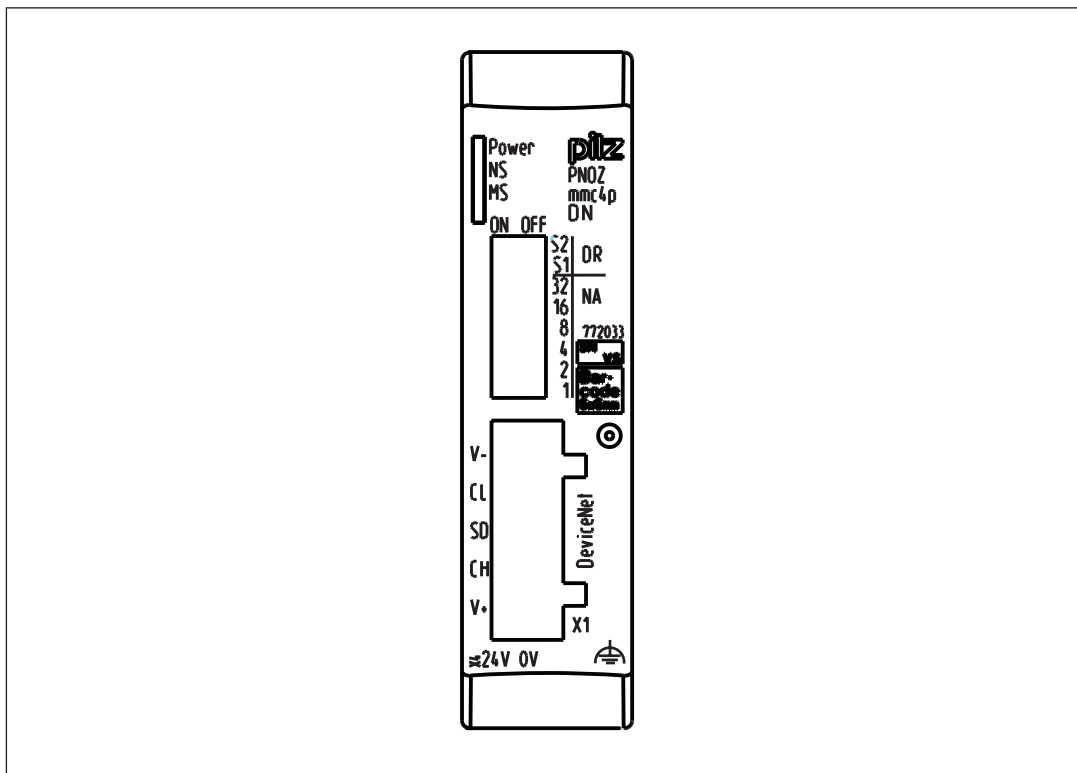

#### Legend:

- ▶ 0 V, 24 V:  
Supply connections
- ▶ X1: DeviceNet interface (5-pin screw connector)
- ▶ : Functional earth
- ▶ LED:
  - Power
  - NS
  - MS

## Function description

### Operation

The virtual inputs and outputs that are to be transferred via DeviceNet are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mmc4p are connected via a jumper.

## Fieldbus modules

### PNOZ mmc4p

The station address and the transmission rate are set using DIP switches. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mmc4p is configured and started automatically.

LEDs indicate the status of the expansion module on DeviceNet.

The configuration is described in detail in the PNOZmulti Configurator's online help.

### Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".


### Assigning the inputs/outputs in the PNOZmulti Configurator to the DeviceNet inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data DeviceNet	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data DeviceNet	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


## Fieldbus modules PNOZ mmc4p

### Block diagram

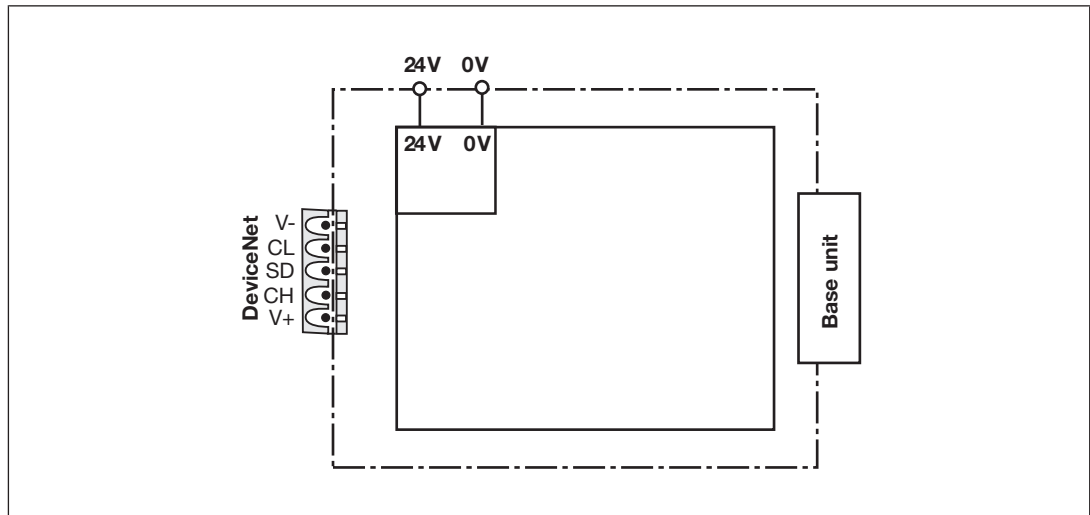

### Installation

#### Dimensions in mm

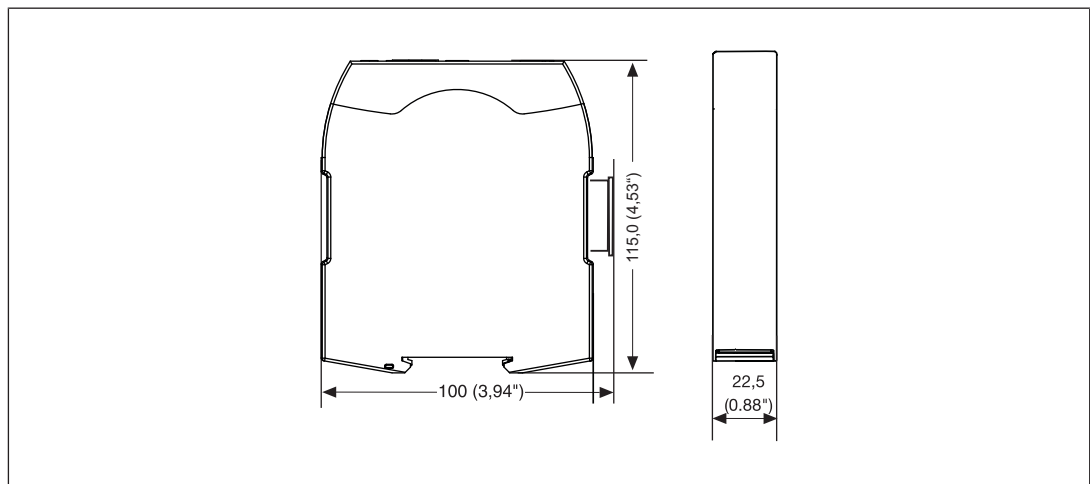



## Fieldbus modules


### PNOZ mmc4p

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[621\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ External measures must be used to connect the  terminal to the function earth (e.g. mounting rail).
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.


### Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6A

### DeviceNet interface

It is possible to define which outputs on the control system will communicate with DeviceNet. The connection to DeviceNet is made via a 5-pin screw connector.

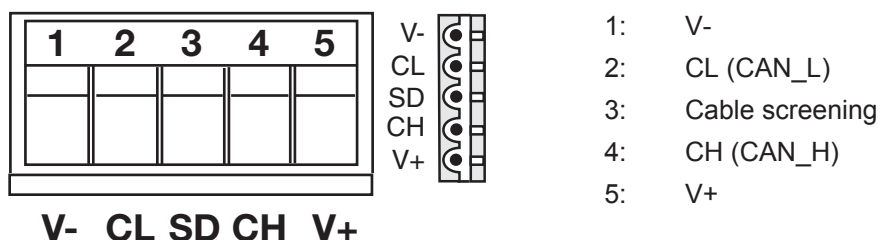

## Fieldbus modules PNOZ mmc4p

### Termination DeviceNet

To minimise cable reflection and to guarantee a defined rest signal on the transmission line, DeviceNet must be terminated at both ends.

### Setting the transmission rate

Set the transmission rate using DIP switches S1 and S2 (DR).

Transmission rate	DIP switch	
	S1	S2
125 kBit/s	Off	Off
250 kBit/s	On	Off
500 kBit/s	Off	On
---	On	On

### Setting the station address

The station address of the expansion module PNOZ mmc4p is set from 0 ... 63 (binary) using DIP switches 1 to 32.


Station address	DIP switch					
	32	16	8	4	2	1
0	Off	Off	Off	Off	Off	Off
1	Off	Off	Off	Off	Off	On
2	Off	Off	Off	Off	On	Off
3	Off	Off	Off	Off	On	On
...	...	...	...	...	...	...
62	On	On	On	On	On	Off
63	On	On	On	On	On	On

### Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

## Fieldbus modules PNOZ mmc4p

### Connection example

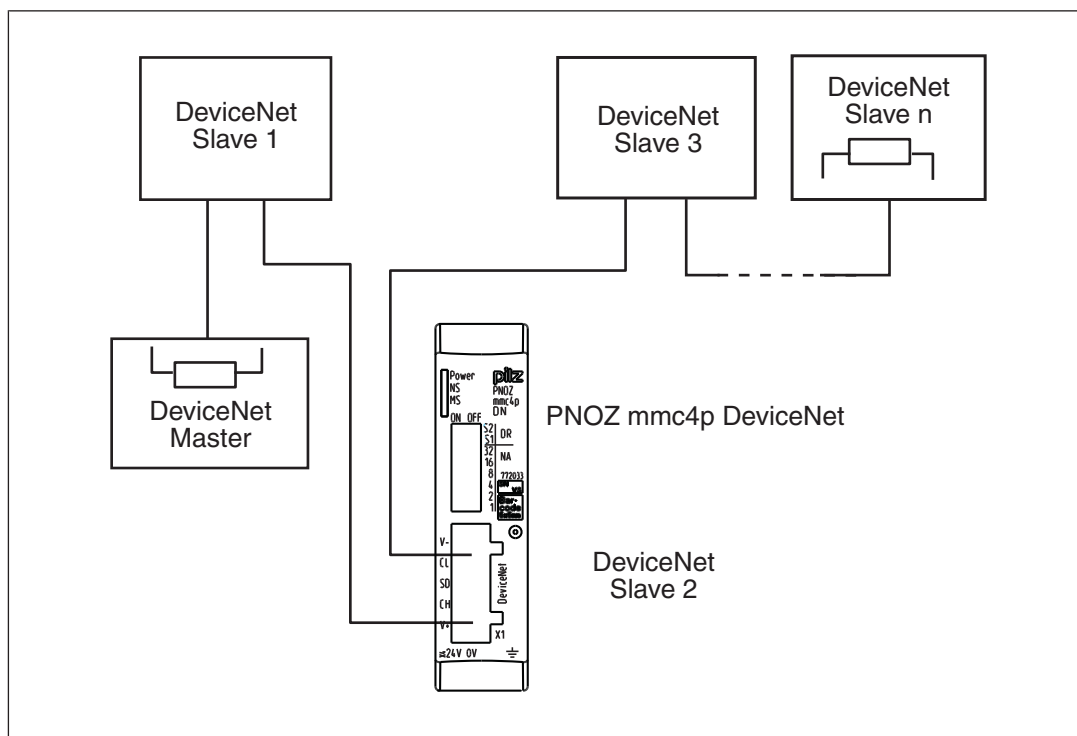

### Technical details

General	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
Electrical data	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Output of external power supply (DC)	<b>1,5 W</b>
Status indicator	<b>LED</b>
Fieldbus interface	
Fieldbus interface	<b>DeviceNet</b>
External supply (DC)	<b>24 V</b>
Power consumption	<b>0,75 W</b>
Device type	<b>Slave</b>
Station address	<b>0 ... 63d</b>
Transmission rates	<b>125 kBit/s, 250 kBit/s, 500 kBit/s</b>
Connection	<b>5-pin Combicon plug-in connector</b>

## Fieldbus modules PNOZ mmc4p

<b>Fieldbus interface</b>	
Galvanic isolation	<b>yes</b>
<b>Times</b>	
Supply interruption before de-energisation	<b>20 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>Fieldbus and module voltage</b>
Type of potential isolation	<b>Functional insulation</b>
Rated surge voltage	<b>500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>

## Fieldbus modules PNOZ mmc4p

<b>Mechanical data</b>	
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible with crimp connectors, no plastic sleeve	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals	<b>0,50 Nm</b>
Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector	
	<b>0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>2</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>
Dimensions	
Height	<b>100,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>110,0 mm</b>
Weight	<b>95 g</b>

Where standards are undated, the 2011-09 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order no.
PNOZ mmc4p	Fieldbus module, DeviceNet	772 033

## Fieldbus modules

### PNOZ mmc4p

#### Accessories

##### Connection terminals


Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793 543

##### Terminator, jumper

Product type	Features	Order No.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750 010
PNOZ s connector	Jumper, 10 pieces	750 020

## Fieldbus modules PNOZ mmc6p

---

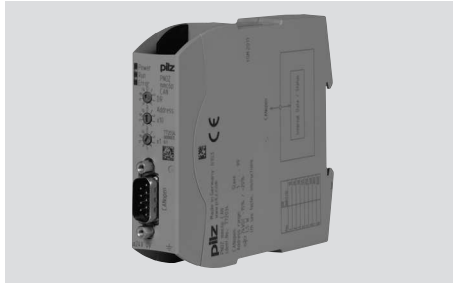

### Overview

#### Unit features

Using the product PNOZ mmc6p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti Mini


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for CANopen
- ▶ Station addresses from 0 ... 99, selected via rotary switch
- ▶ Transmission rate selected via rotary switch (1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s)
- ▶ Status indicators for communication with CANopen and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus CANopen . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mmc6p can be connected to the base unit
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ For details of the PNOZmulti Mini base units that can be connected, please refer to the document "PNOZmulti System Expansion".


## Fieldbus modules

### PNOZ mmc6p

#### Front view

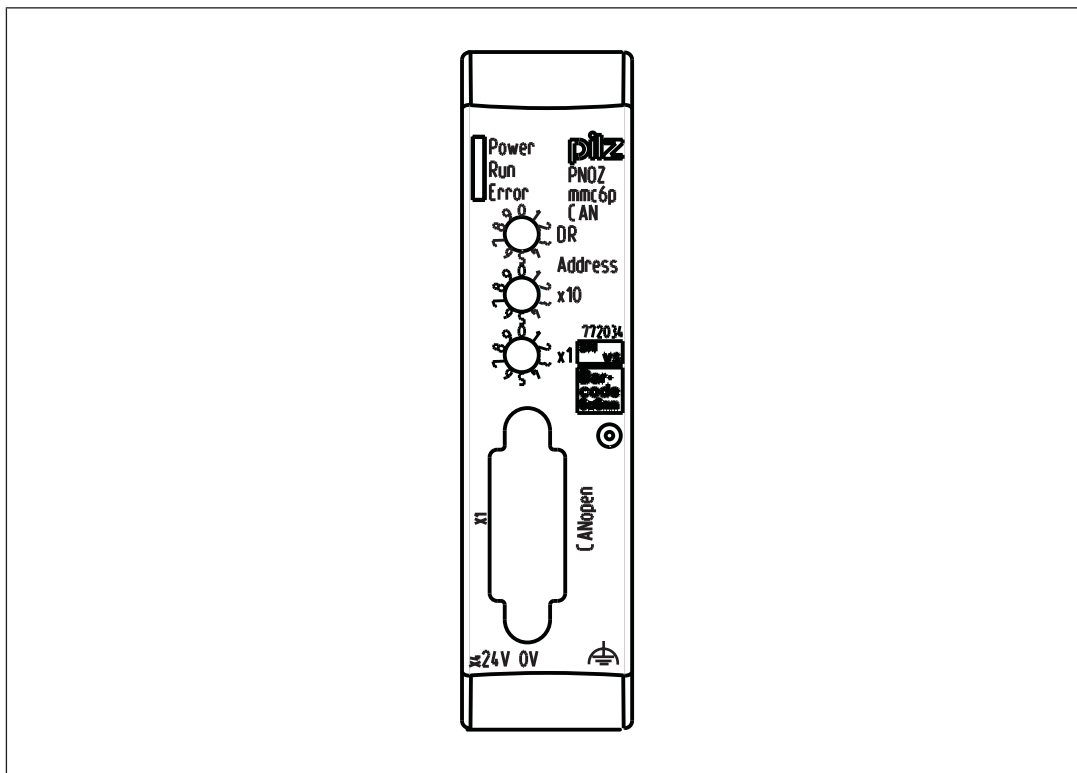

#### Legend:

- ▶ X4: 0 V, 24 V:  
Supply connections
- ▶ X1: CANopen interface (male 9-pin D-Sub connector)
- ▶ : Functional earth
- ▶ LED:
  - Power
  - Run
  - Error

## Function description

### Operation

The virtual inputs and outputs that are to be transferred via CANopen are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mmc6p are connected via a jumper. The station address and the transmission rate are set using rotary switches. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mmc6p is configured and started automatically.



## Fieldbus modules PNOZ mmc6p

LEDs indicate the status of the expansion module on CANopen.

The configuration is described in detail in the PNOZmulti Configurator's online help.

### Input and output data

The data is structured as follows:

▶ **Input area**

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ **Output range**

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ **Output range only: Byte 3**

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".


### Assigning the inputs/outputs in the PNOZmulti Configurator to the CANopen inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data CANopen	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data CANopen	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


## Fieldbus modules PNOZ mmc6p

### Block diagram

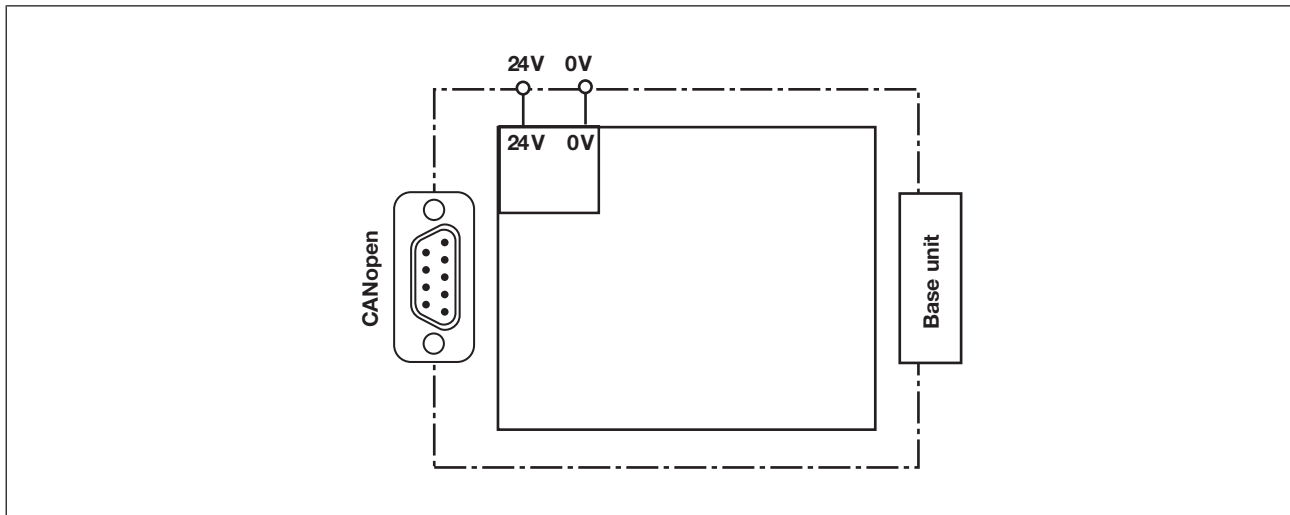

### Installation

#### Dimensions in mm

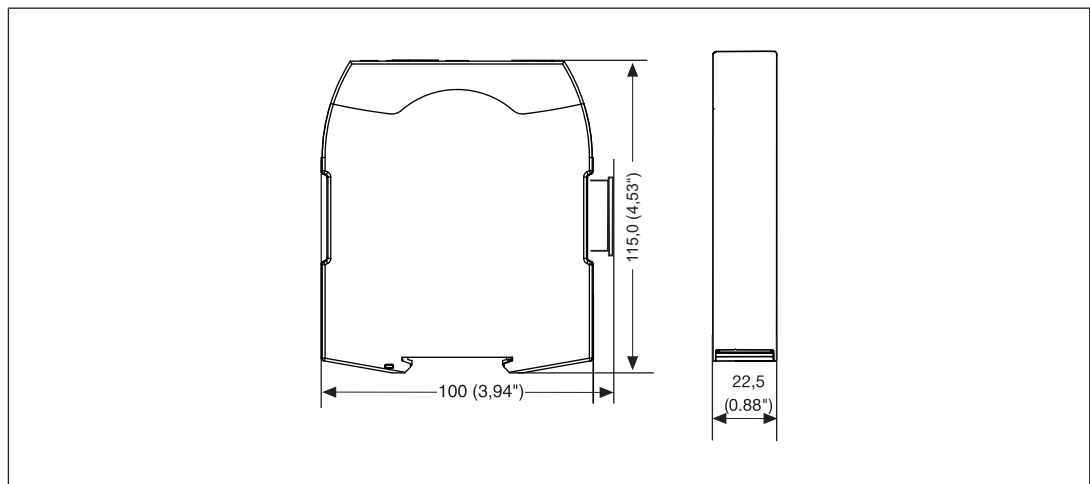

### Commissioning

#### General wiring guidelines


The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[632\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.

## Fieldbus modules

### PNOZ mmc6p

- ▶ External measures must be used to connect the  terminal to the function earth (e.g. mounting rail).
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.


### Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6A

### CANopen interface

The connection to CANopen is made via a male 9-pin D-Sub connector.

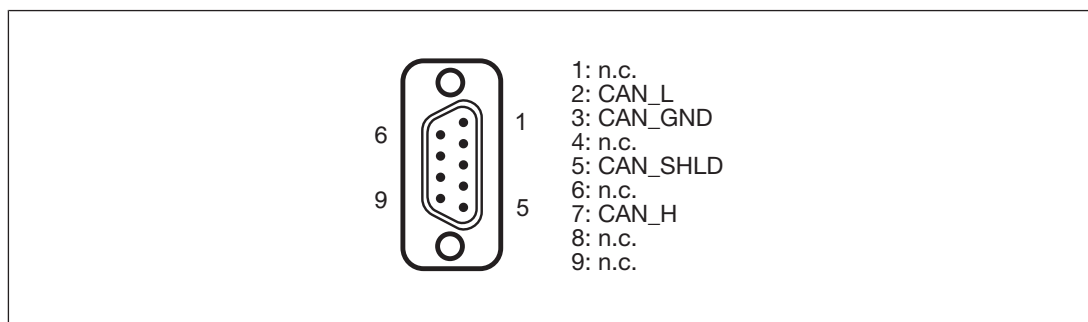

n.c. = not connected

Please note the following when connecting to CANopen:

- ▶ Only use metal plugs or metallised plastic plugs
- ▶ Twisted pair, screened cable must be used to connect the interfaces

### CANopen termination

To minimise cable reflection and to guarantee a defined rest signal on the transmission line, CANopen must be terminated at both ends.

## Fieldbus modules

### PNOZ mmc6p

#### Setting the transmission rate




- ▶ On the upper rotary switch DR, use a small screwdriver to set the transmission rate (in the example, "3" corresponds to 50 kBit/s).

Switch setting	0	1	2	3	4	5	6	7	8	9
Transmission rate	-	10 kBit/s	20 kBit/s	50 kBit/s	125 kBit/s	250 kBit/s	500 kBit/s	800 kBit/s	1 MBit/s	-

#### Setting the station address


The station address of the expansion module PNOZ mmc6p is set between 0 ... 99 (decimal) via two rotary switches x1 and x10.

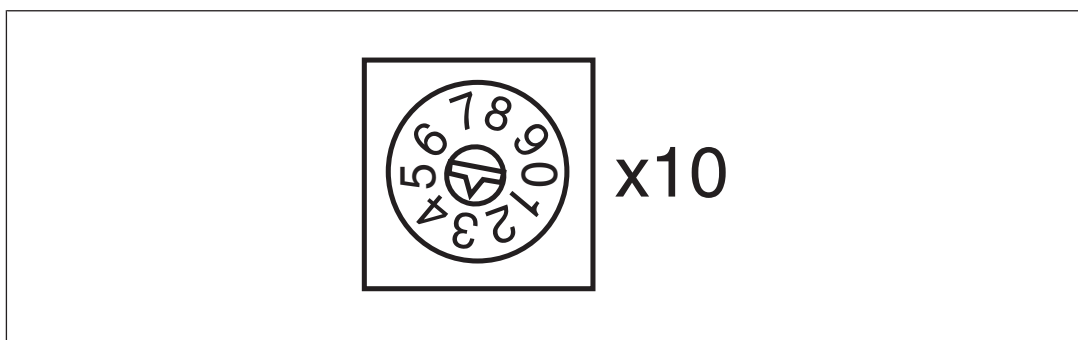

- ▶ On the middle rotary switch x10, use a small screwdriver to set the tens digit for the address ("3" in the example).

## Fieldbus modules

### PNOZ mmc6p

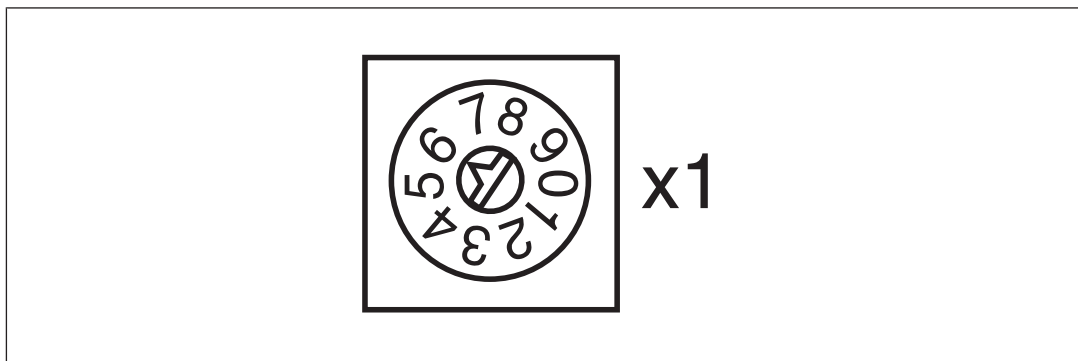


- ▶ On the lower rotary switch x1, set the ones digit for the address ("6" in the example). Station address 36 is set in the diagrams as an example.

### Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

### Connection example

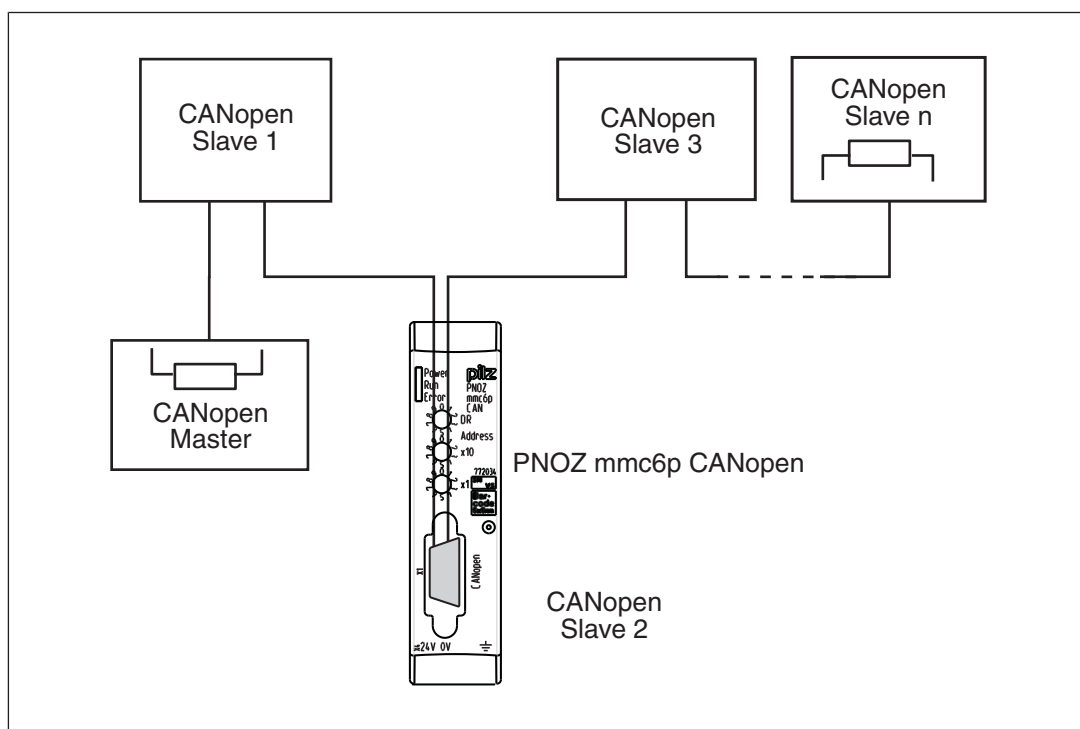

## Fieldbus modules PNOZ mmc6p

### Technical details

<b>General</b>	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
<b>Electrical data</b>	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Output of external power supply (DC)	<b>1,5 W</b>
Status indicator	<b>LED</b>
<b>Fieldbus interface</b>	
Fieldbus interface	<b>CANopen</b>
Device type	<b>Slave</b>
Log	<b>CiA 301 V4.2.0</b>
Station address	<b>0 - 99d</b>
Transmission rates	<b>1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s</b>
Connection	<b>9-pin D-Sub male connector</b>
Galvanic isolation	<b>yes</b>
<b>Times</b>	
Supply interruption before de-energisation	<b>20 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>

## Fieldbus modules PNOZ mmc6p

### Environmental data

#### Shock stress

In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>

Max. operating height above sea level	<b>2000 m</b>
---------------------------------------	---------------

#### Airgap creepage

In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>

Rated insulation voltage	<b>30 V</b>
--------------------------	-------------

#### Protection type

In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

### Potential isolation

Potential isolation between	<b>Fieldbus and module voltage</b>
-----------------------------	------------------------------------

Type of potential isolation	<b>Functional insulation</b>
-----------------------------	------------------------------

Rated surge voltage	<b>500 V</b>
---------------------	--------------

### Mechanical data

Mounting position	<b>Horizontal on top hat rail</b>
-------------------	-----------------------------------

#### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

#### Material

Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>

Connection type	<b>Spring-loaded terminal, screw terminal</b>
-----------------	---

#### Conductor cross section with screw terminals

1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible with crimp connectors, no plastic sleeve	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>

Torque setting with screw terminals	<b>0,50 Nm</b>
-------------------------------------	----------------

#### Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector	<b>0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
---------------------------------------	--

Spring-loaded terminals: Terminal points per connection	<b>2</b>
---	----------

Stripping length with spring-loaded terminals	<b>9 mm</b>
---	-------------

## Fieldbus modules

### PNOZ mmc6p

#### Mechanical data

##### Dimensions

Height	<b>100,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>115,0 mm</b>
Weight	<b>95 g</b>

Where standards are undated, the 2011-09 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order no.
PNOZ mmc6p	Fieldbus module, CANopen	772 034

## Accessories

### Connection terminals


Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793 543

### Terminator, jumper

Product type	Features	Order No.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750 010
PNOZ s connector	Jumper, 10 pieces	750 020



## Fieldbus modules PNOZ mmc7p CC

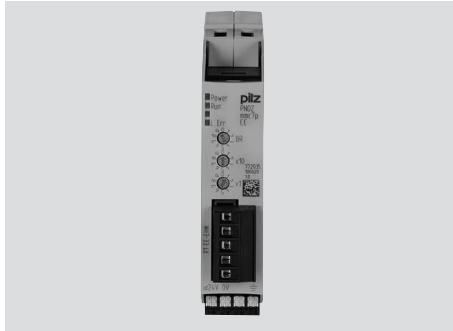

### Overview

#### Unit features

Using the product PNOZ mmc7p CC:

Expansion module for connection to a base unit from the configurable control system PNOZmulti Mini .


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for CC-Link
- ▶ Station addresses from 1 ... 63, selected via rotary switch
- ▶ Station type: Remote Device
- ▶ Occupied stations: 2
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus CC-Link . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mmc7p CC can be connected to the base unit
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Fieldbus modules

### PNOZ mmc7p CC

#### Front view

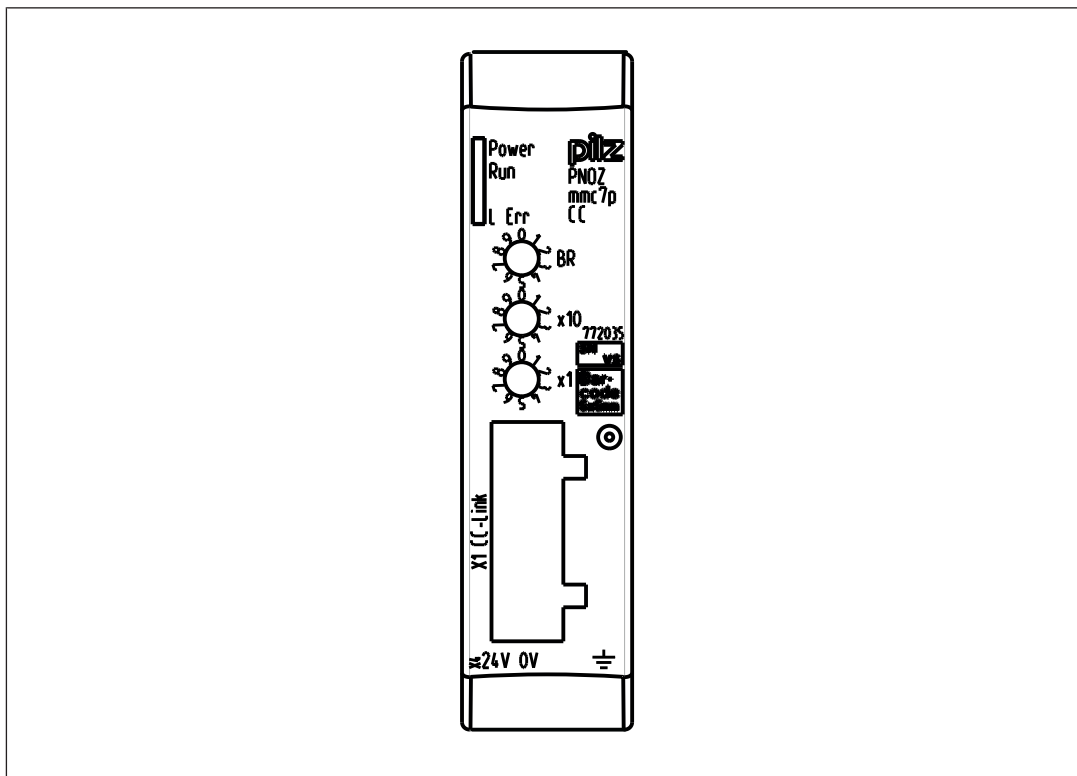

#### Legend:

- ▶ X1: CC-Link interface
- ▶ 0 V, 24 V: Supply connections
- ▶ LEDs:
  - Power
  - Run
  - L Err

## Function description

### Functions

The virtual inputs and outputs that are to be transferred via the fieldbus CC-Link are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mmc7p CC are connected via a jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the fieldbus module PNOZ mmc7p CC is configured and started automatically.

LEDs indicate the status of the fieldbus module CC-Link.

The configuration is described in detail in the PNOZmulti Configurator's online help.

## Fieldbus modules PNOZ mmc7p CC

### Input and output data

The data is structured as follows:

▶ Input area

- Inputs on PNOZmulti Configurator: i00 ... i23
- Input data CC-Link: RY0n, RY1n with n = 0 ... F

Example: i23 -> RY17

n	F	E	D	C	B	A	9	8	7	6	5	4	3	2	1	0
<b>RY0n</b>	i15	i14	i13	i12	i11	i10	i09	i08	i07	i06	i05	i04	i03	i02	i01	i00
<b>RY1n</b>	-	-	-	-	-	-	-	-	i23	i22	i21	i20	i19	i18	i17	i16

▶ Output range

- Outputs on PNOZmulti Configurator: o00 ... o23
- Output data CC-Link: RXn, RX1n with n = 0 ... F

Example: o22 -> Rx16


n	F	E	D	C	B	A	9	8	7	6	5	4	3	2	1	0
<b>RX 0n</b>	o15	o14	o13	o12	o11	o10	o09	o08	o07	o06	o05	o04	o03	o02	o01	o00
<b>RX 1n</b>	-	-	-	-	-	-	-	-	o23	o22	o21	o20	o19	o18	o17	o16

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

Detailed information on data exchange is available in the document "Communication Interfaces PNOZmulti 2" in the section entitled "Fieldbus modules".


## Fieldbus modules PNOZ mmc7p CC

### Block diagram

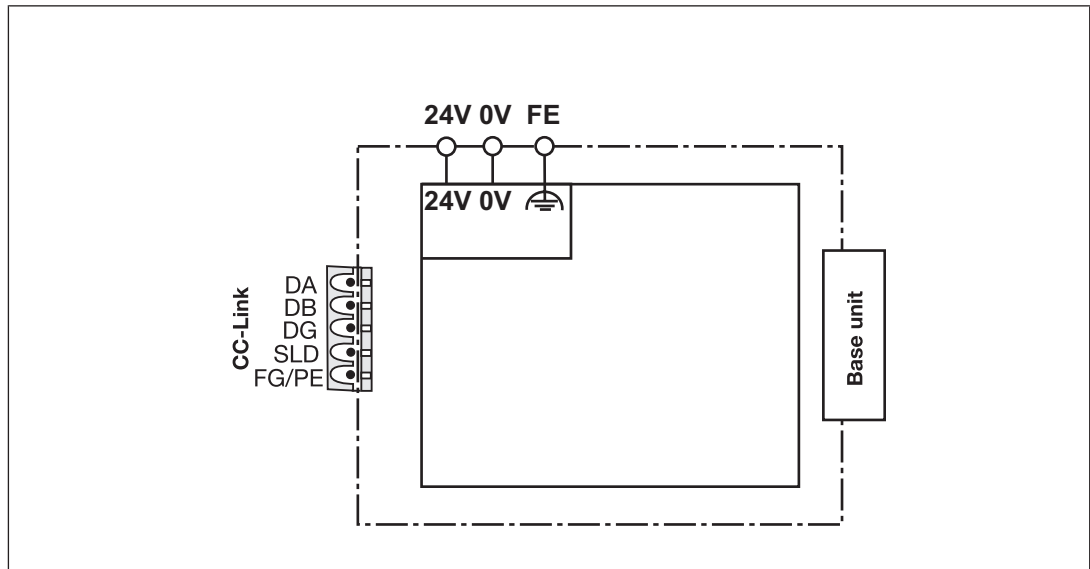

### Installation

#### Dimensions in mm

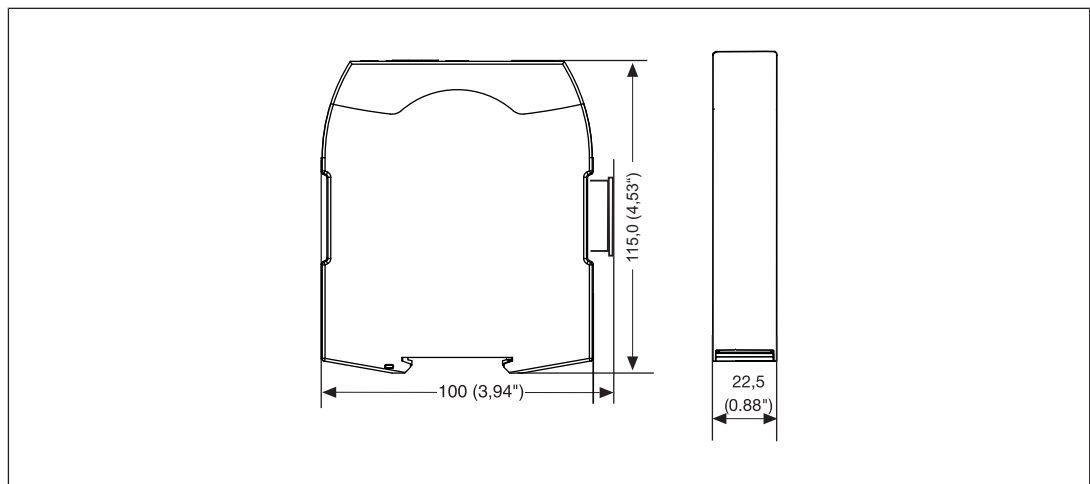

## Fieldbus modules

### PNOZ mmc7p CC

## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[640\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.


### Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6A

### Interface assignment

It is possible to define which outputs on the safety system will communicate with CC-Link. The connection to CC-Link is made via a 5-pin screw connector.

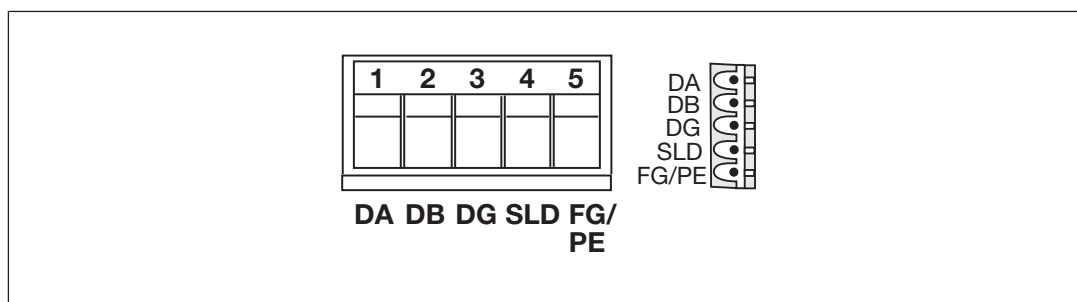


- 1: DA (Channel A)
- 2: DB (Channel B)
- 3: DG (Earth)
- 4: SLD (Cable shield)
- 5: FG/PE (Functional earth)

## Fieldbus modules PNOZ mmc7p CC

### Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

### Connection example

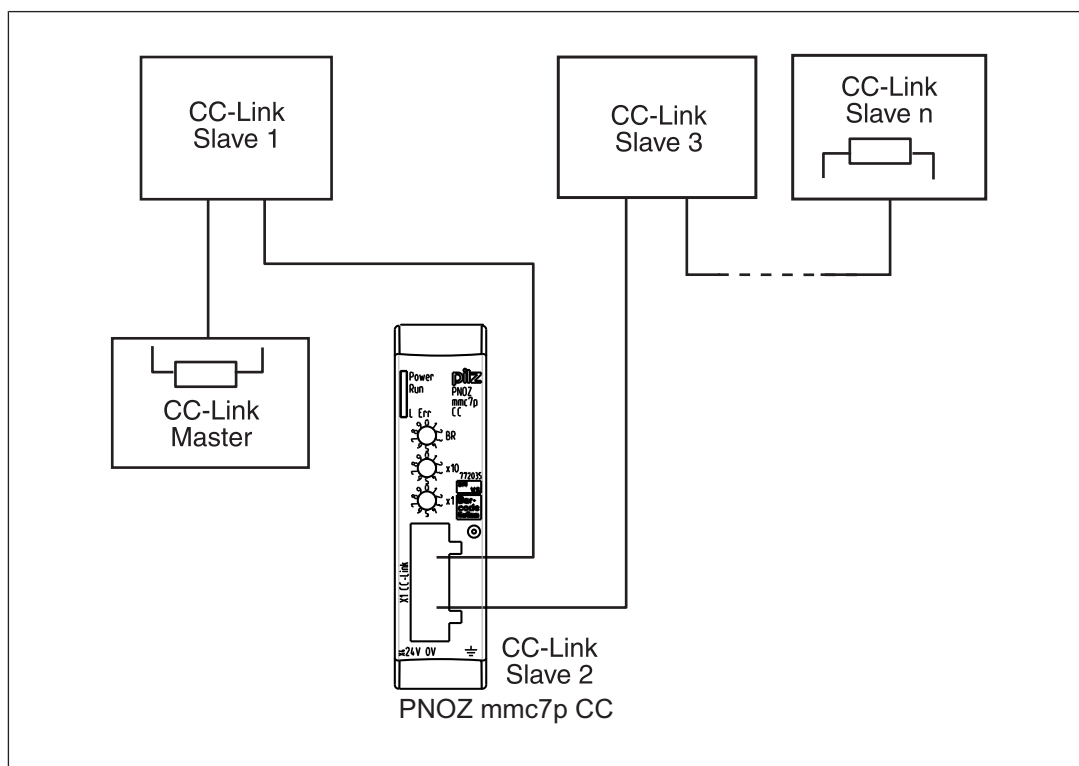

### Technical Details

General	
Approvals	CCC, CE, GOST
Electrical data	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Output of external power supply (DC)	<b>1,5 W</b>
Status indicator	<b>LED</b>

## Fieldbus modules PNOZ mmc7p CC

<b>Fieldbus interface</b>	
Fieldbus interface	<b>CC-Link V1.10</b>
Device type	<b>Slave</b>
Station address	<b>1 ... 63d</b>
Transmission rates	<b>10 MBit/s, 156 kbit/s, 2,5 MBit/s, 5 MBit/s, 625 kbit/s</b>
Connection	<b>5-pin Combicon plug-in connector</b>
Assigned stations	<b>2</b>
Galvanic isolation	<b>yes</b>
Test voltage	<b>500 V AC</b>
<b>Times</b>	
Supply interruption before de-energisation	<b>20 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>

## Fieldbus modules PNOZ mmc7p CC

<b>Environmental data</b>	
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>Fieldbus and module voltage</b>
Type of potential isolation	<b>Functional insulation</b>
Rated surge voltage	<b>500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible with crimp connectors, no plastic sleeve	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Rigid single-core, flexible multi-core or multi-core with crimp connector	<b>0,5 - 1,5 mm<sup>2</sup></b>
Torque setting with screw terminals	<b>0,50 Nm</b>
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	<b>0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>2</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>
Dimensions	
Height	<b>100,0 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>110,0 mm</b>
Weight	<b>90 g</b>

Where standards are undated, the 2011-09 latest editions shall apply.



## Fieldbus modules PNOZ mmc7p CC

### Order reference

#### Product

Product type	Features	Order no.
PNOZ mmc7p CC	Fieldbus module, CC-Link	772035

### Accessories

#### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793 543

#### Terminator, jumper

Product type	Features	Order No.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750 010
PNOZ s connector	Jumper, 10 pieces	750 020

## Fieldbus modules

### PNOZ mmc11p

---



## Overview

### Unit features

Using the product PNOZ mmc11p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti Mini .

The product has the following features:


- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Network protocols: EtherCAT
- ▶ Supports CANopen over EtherCAT (DS301 V4.02 compliant)
- ▶ Status indicators for communication with EtherCAT and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus EtherCAT . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mmc11p can be connected to the base unit
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ For details of the PNOZmulti Mini base units that can be connected, please refer to the document "PNOZmulti System Expansion".


## Fieldbus modules PNOZ mmc11p

### Front view

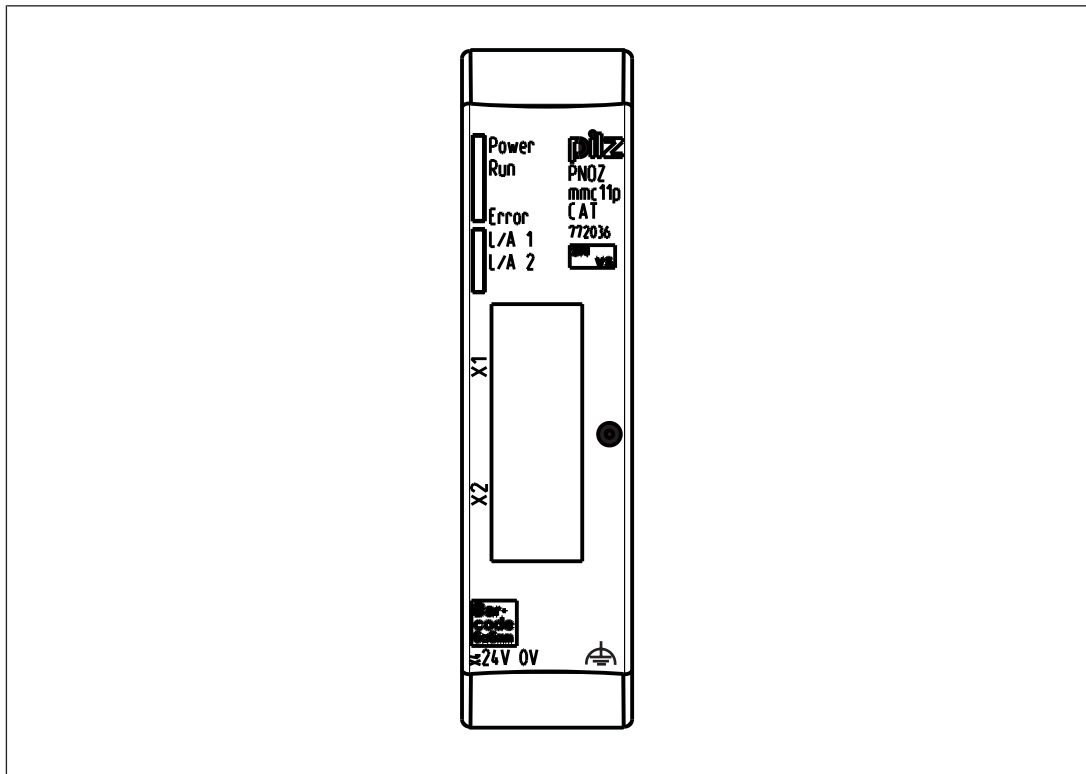

#### Legend:

- ▶ X1: EtherCAT IN
- ▶ X2: EtherCAT OUT
- ▶ X4: 0 V, 24 V:  
Supply connections
- ▶ : Functional earth
- ▶ LEDs:
  - Power
  - Run
  - Error
  - L/A 1
  - L/A 2

**EtherCAT**  is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany

## Fieldbus modules

### PNOZ mmc11p

---

### Function description

#### Operation

The virtual inputs and outputs that are to be transferred via EtherCAT are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mmc11p are connected via a jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mmc11p is configured and started automatically.

The connection to EtherCAT is made via the two RJ45 sockets.

LEDs indicate the status of the expansion module on EtherCAT.

The configuration is described in detail in the PNOZmulti Configurator's online help.

#### Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

## Fieldbus modules


### PNOZ mmc11p

#### Assigning the inputs/outputs in the PNOZmulti Configurator to the EtherCAT inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data EtherCAT	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data EtherCAT	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

#### Block diagram

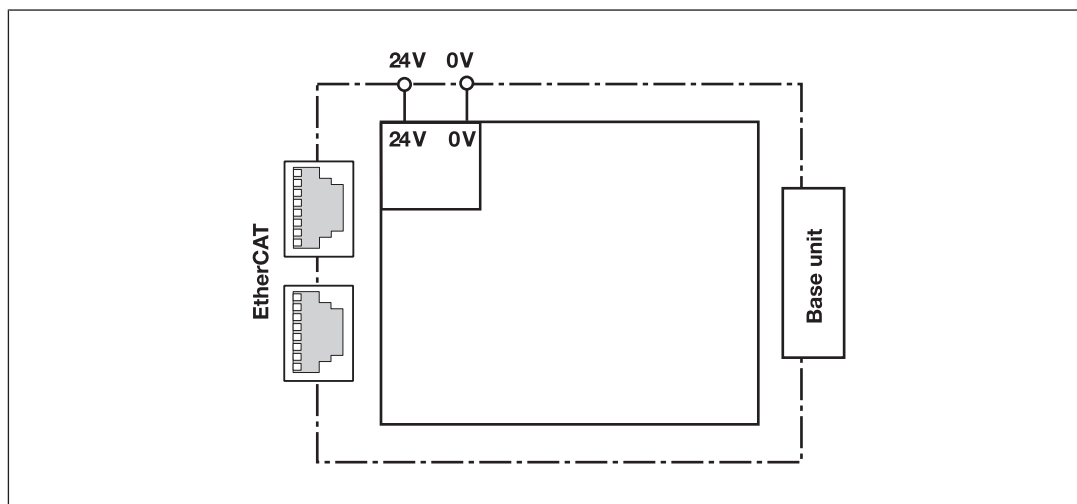


## Fieldbus modules

### PNOZ mmc11p

## Installation

### Dimensions in mm

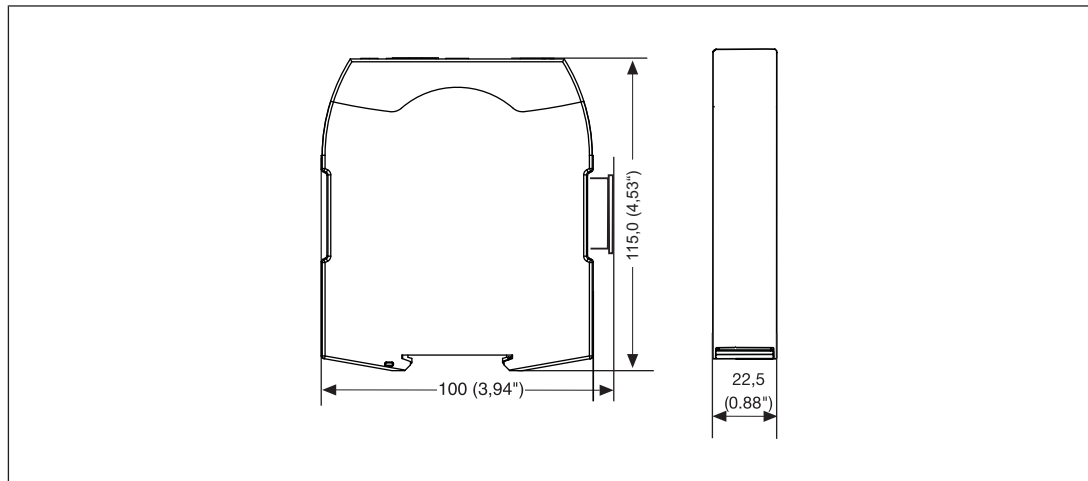


## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

It is possible to define which inputs and outputs on the safety system will communicate with EtherCAT.

Please note:

- ▶ Information given in the "Technical details" must be followed.
- ▶ Use copper wire that can withstand 75 °C.
- ▶ External measures must be used to connect the  terminal to the function earth (e.g. mounting rail).

Please note the following when connecting to EtherCAT:

- ▶ The following minimum requirements of the connection cable and connector must be met:
  - Only use standard industrial Ethernet cable and connectors.
  - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
  - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:

Ensure the requirements for the industrial use of EtherCAT are met, as stated in the Installation Manual published by the User Group.

## Fieldbus modules


### PNOZ mmc11p

#### Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6A

#### Interface assignment

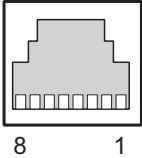RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

#### Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.


#### Preparing for operation

- ▶ Install Device Description File
  - Install the *Device Description File* in your configuration software. You can only then use the PNOZ mmc11p.
- ▶ Connect the supply voltage to the base unit:
  - Terminals **24 V** and **A1 (+)**: + 24 VDC
  - Terminals **0 V** and **A2 (-)**: 0 V

## Fieldbus modules

### PNOZ mmc11p

#### Connection example

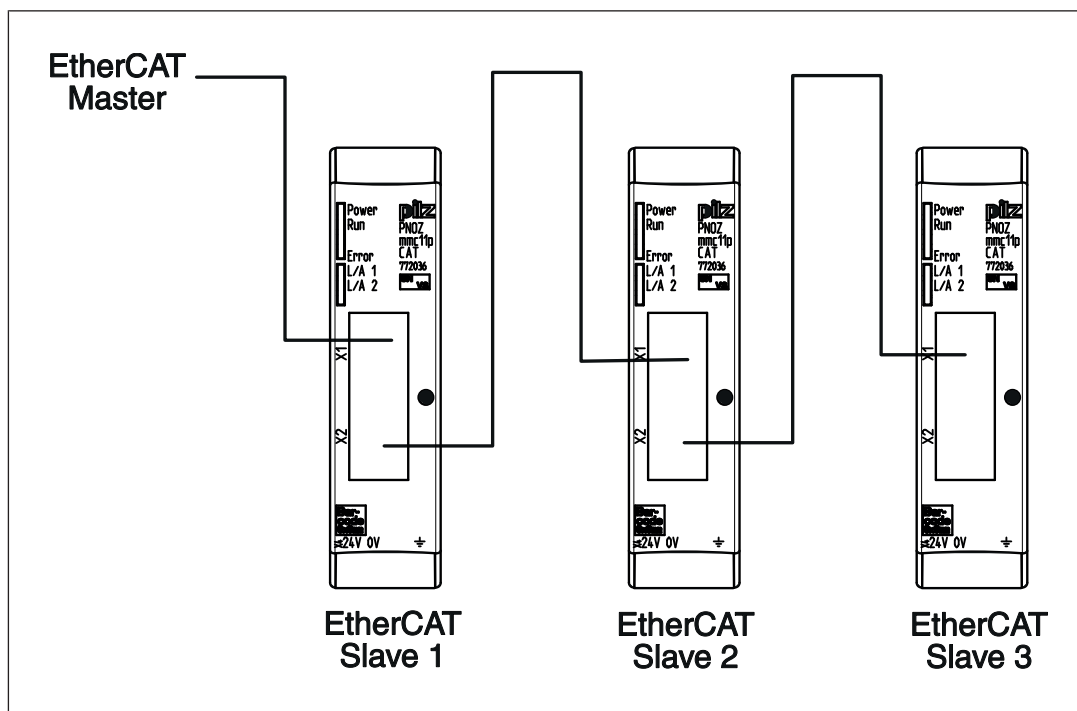

#### Technical details

General	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
Electrical data	
Supply voltage	
for	Module supply
Voltage	24 V
Kind	DC
Voltage tolerance	-20 %/+25 %
Output of external power supply (DC)	1,5 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	EtherCAT
Device type	Slave
Log	CANopen over EtherCAT
Transmission rates	100 MBit/s
Connection	RJ45
Galvanic isolation	yes
Times	
Supply interruption before de-energisation	20 ms



## Fieldbus modules PNOZ mmc11p

### Environmental data

#### Ambient temperature

In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>

#### Storage temperature

In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>

#### Climatic suitability

In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>

#### Condensation during operation

**Not permitted**

#### EMC

**EN 61131-2**

#### Vibration

In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>

#### Shock stress

In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>

#### Max. operating height above sea level

**2000 m**

#### Airgap creepage

In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>

#### Rated insulation voltage

**30 V**

#### Protection type

In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

### Potential isolation

Potential isolation between **Fieldbus and module voltage**

Type of potential isolation **Functional insulation**

Rated surge voltage **500 V**

### Mechanical data

Mounting position **Horizontal on top hat rail**

#### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

## Fieldbus modules PNOZ mmc11p

### Mechanical data

Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
2 core with the same cross section, flexible with crimp connectors, no plastic sleeve	0,20 - 2,50 mm <sup>2</sup> , 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,20 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
Torque setting with screw terminals	0,50 Nm
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	0,20 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	100,0 mm
Width	22,5 mm
Depth	115,0 mm
Weight	95 g

Where standards are undated, the 2012-10 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order no.
PNOZ mmc11p	Fieldbus module, EtherCAT	772 036

## Fieldbus modules

### PNOZ mmc11p

#### Accessories

##### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793 543

##### Terminator, jumper

Product type	Features	Order No.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750 010
PNOZ s connector	Jumper, 10 pieces	750 020

## Fieldbus modules PNOZ mmc12p

---



### Overview

#### Unit features

Using the product PNOZ mmc12p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti Mini .

The product has the following features:


- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for Ethernet POWERLINK (Ethernet POWERLINK V 2 protocol)
- ▶ Station addresses from 1 ... 239, selected via rotary switch
- ▶ The minimum cycle time for an application of 20 Byte Output and 20 Byte Input is 250µs. The minimum cycle time is 450 µs at the maximum PDO size of 254 Byte Input and 20 Byte Output (the inputs and outputs in this case are viewed from the Managing Node).
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus Ethernet POWERLINK . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mmc12p can be connected to the base unit
- ▶ For details of the PNOZmulti Mini base units that can be connected, please refer to the document "PNOZmulti System Expansion".

## Fieldbus modules PNOZ mmc12p

### Front view

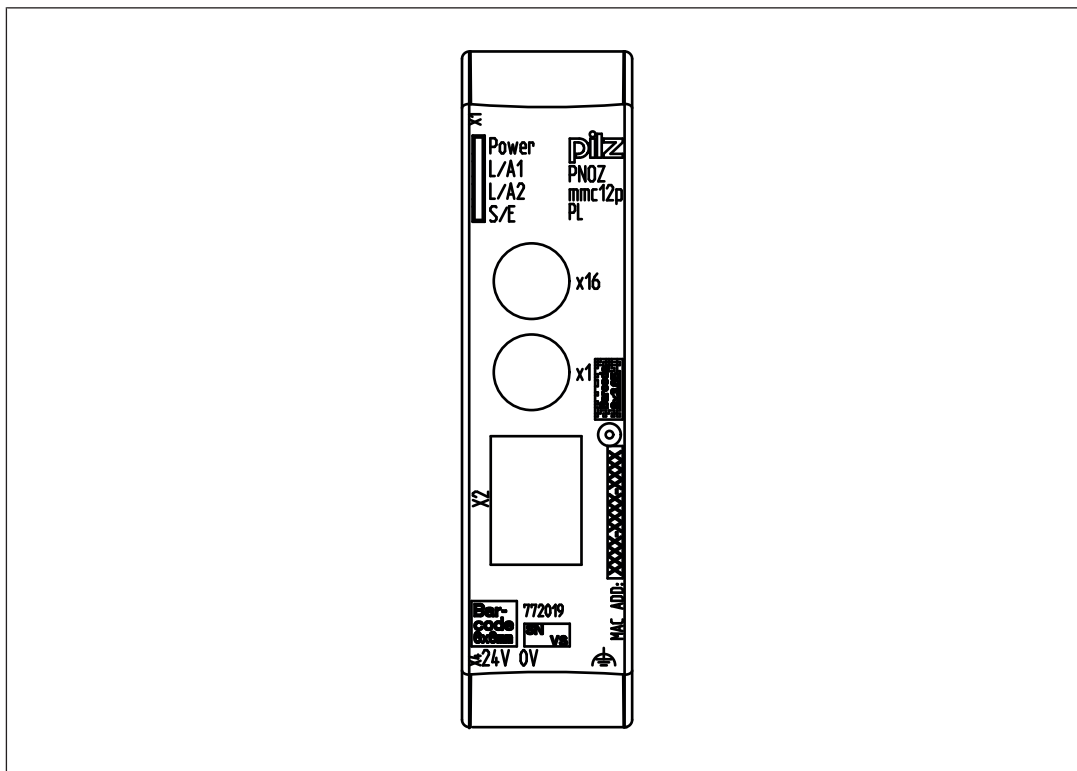

### Legend:

- ▶ X1, X2: Ethernet POWERLINK interfaces
- ▶ 0 V, 24 V: Supply connections
- ▶ : Functional earth
- ▶ LED:
  - Power
  - L/A1
  - L/A2
  - S/E (Status/Error)

## Function description

### Functions

The virtual inputs and outputs that are to be transferred via the fieldbus Ethernet POWERLINK are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mmc12p are connected via a jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the fieldbus module PNOZ mmc12p is configured and started automatically.

## Fieldbus modules

### PNOZ mmc12p

LEDs indicate the status of the fieldbus module Ethernet POWERLINK.

The configuration is described in detail in the PNOZmulti Configurator's online help.

#### Input and output data

The data is structured as follows:

▶ **Input area**

The inputs are defined in the Managing Node and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of SDO 2100:02 has the number i12.

Virtual inputs PNOZmulti Configurator	I0 ... I7	I8 ... I15	I16 ... I23
Ethernet POWER-LINK	SDO 2100:01: Bit 0 ... 7	SDO 2100:02: Bit 0 ... 7	SDO 2100:03: Bit 0 ... 7

▶ **Output range**

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The state of output o0 is stored in Bit 0 of SDO 2000:01.


Virtual outputs PNOZmulti Configurator	O0 ... O7	O8 ... O15	O16 ... O23
Ethernet POWER-LINK	SDO 2000:01: Bit 0 ... 7	SDO 2000:02: Bit 0 ... 7	SDO 2000:03: Bit 0 ... 7

Detailed information on data exchange is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


## Fieldbus modules PNOZ mmc12p

### Block diagram

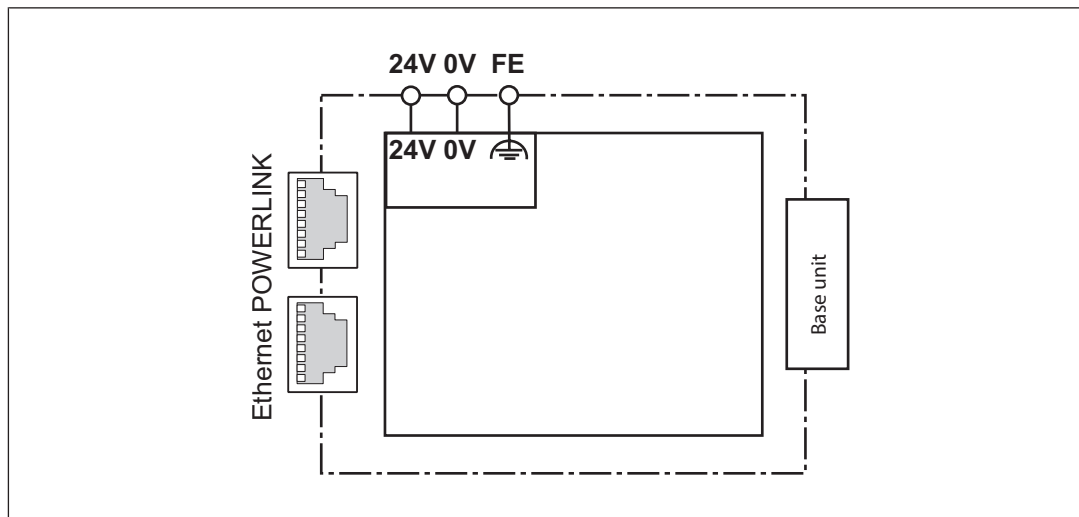

### Installation

#### Dimensions in mm

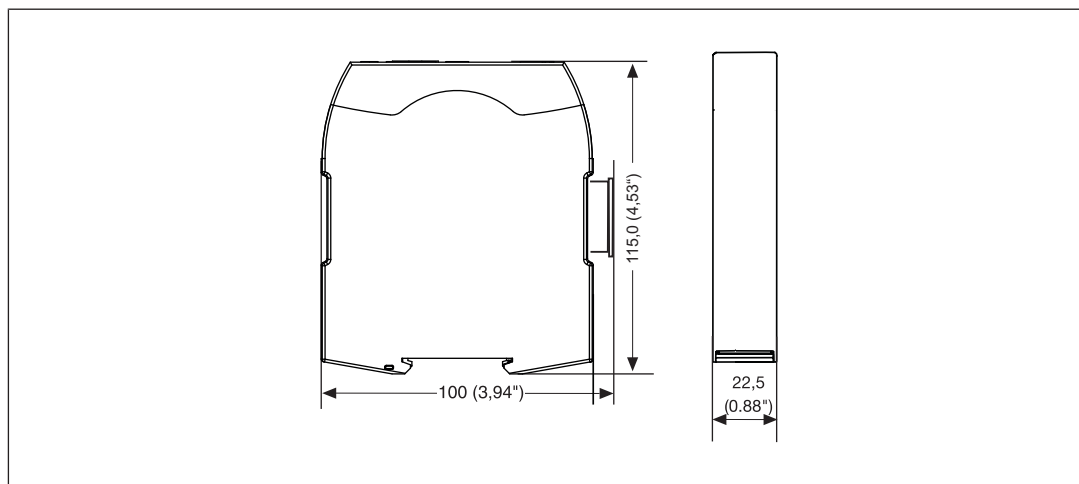

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator. It is possible to define which inputs and outputs on the safety system will communicate with Ethernet POWERLINK.

Please note:

- ▶ Information given in the "[Technical details \[660\]](#)" must be followed.


## Fieldbus modules

### PNOZ mmc12p

---

- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to Ethernet POWERLINK:

- ▶ The following minimum requirements of the connection cable and connector must be met:
  - Only use standard industrial Ethernet cable and connectors.
  - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
  - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:  
Ensure the requirements for the industrial use of Ethernet POWERLINK are met, as stated in the Installation Manual published by the User Group.
- ▶ External measures must be used to connect the  terminal to the function earth (e.g. mounting rail).
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.

### Connecting the supply voltage


Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6A




## Fieldbus modules PNOZ mmc12p

### Interface assignment

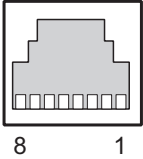RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

### Connection example

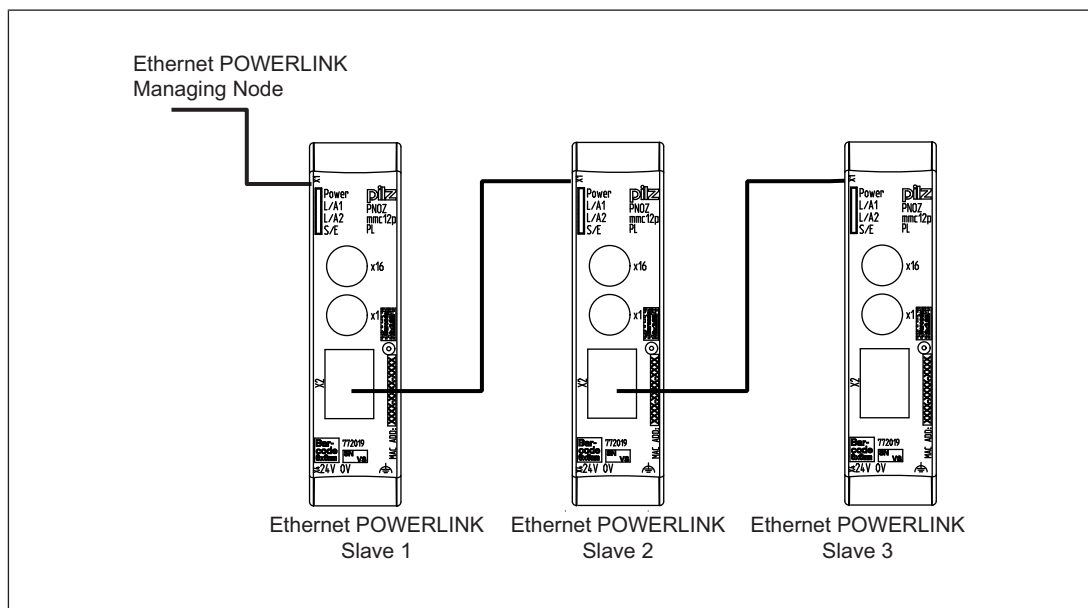

## Fieldbus modules

### PNOZ mmc12p

#### Technical Details

<b>General</b>	
Approvals	CCC, CE, EAC (Eurasian)
<b>Electrical data</b>	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Output of external power supply (DC)	<b>1,5 W</b>
Status indicator	<b>LED</b>
<b>Fieldbus interface</b>	
Fieldbus interface	<b>Ethernet POWERLINK V2</b>
Device type	<b>Controlled Node</b>
Transmission rates	<b>100 MBit/s</b>
Connection	<b>RJ45</b>
Galvanic isolation	<b>yes</b>
<b>Times</b>	
Supply interruption before de-energisation	<b>20 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10 - 150 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>

## Fieldbus modules PNOZ mmc12p

<b>Environmental data</b>	
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>Fieldbus and module voltage</b>
Type of potential isolation	<b>Functional insulation</b>
Rated surge voltage	<b>500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 2,5 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,2 - 1,5 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals	<b>0,5 Nm</b>
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	<b>0,2 - 2,5 mm<sup>2</sup>, 24 - 12 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>2</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>
Dimensions	
Height	<b>100 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>110,4 mm</b>
Weight	<b>90 g</b>

Where standards are undated, the 2015-08 latest editions shall apply.

## Fieldbus modules

### PNOZ mmc12p

#### Order reference

#### Product

Product type	Features	Order no.
PNOZ mmc12p	Fieldbus module, Ethernet POWERLINK	772 019

#### Accessories

##### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793 543

##### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260



---

<b>Contents</b>	<b>Page</b>
Base units	665
Input module	703
Input and output modules	710
Motion monitoring modules	733
Link modules	795
Communication modules	817
Fieldbus modules	830

## Base units PNOZ m B0

---



### Overview

#### Unit features

Using the product PNOZ m B0:

Base unit of the configurable control system PNOZmulti 2

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
  - 4 safety outputs
  - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ 12 inputs for connecting, for example:
  - Emergency stop pushbuttons
  - Two-hand pushbuttons
  - Safety gate limit switches
  - Reset buttons
  - Light beam devices
  - Scanners
  - Enabling switches
  - PSEN
  - Operating mode selector switches
- ▶ 8 configurable inputs/outputs
  - Can be configured as:
    - Inputs (see above for connection options)
  - or
  - Auxiliary outputs

## Base units PNOZ m B0

---

- ▶ 4 configurable outputs  
Can be configured as:
  - Auxiliary outputsor
  - Test pulse outputs
- ▶ LED for:
  - Error messages
  - Diagnostics
  - Supply voltage
  - Fault at the outputs
  - Fault at the inputs
- ▶ Backlit display for:
  - Error messages
  - State of supply voltage
  - State of inputs/outputs
  - Status information
  - Device information
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Plug-in connection terminals:  
Either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Rotary knob for menu control
- ▶ Expansion modules can be connected  
(please refer to the document "PNOZmulti System Expansion" for details of the type and number that can be connected)

### Chip card

To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).



## Base units PNOZ m B0

### Front view

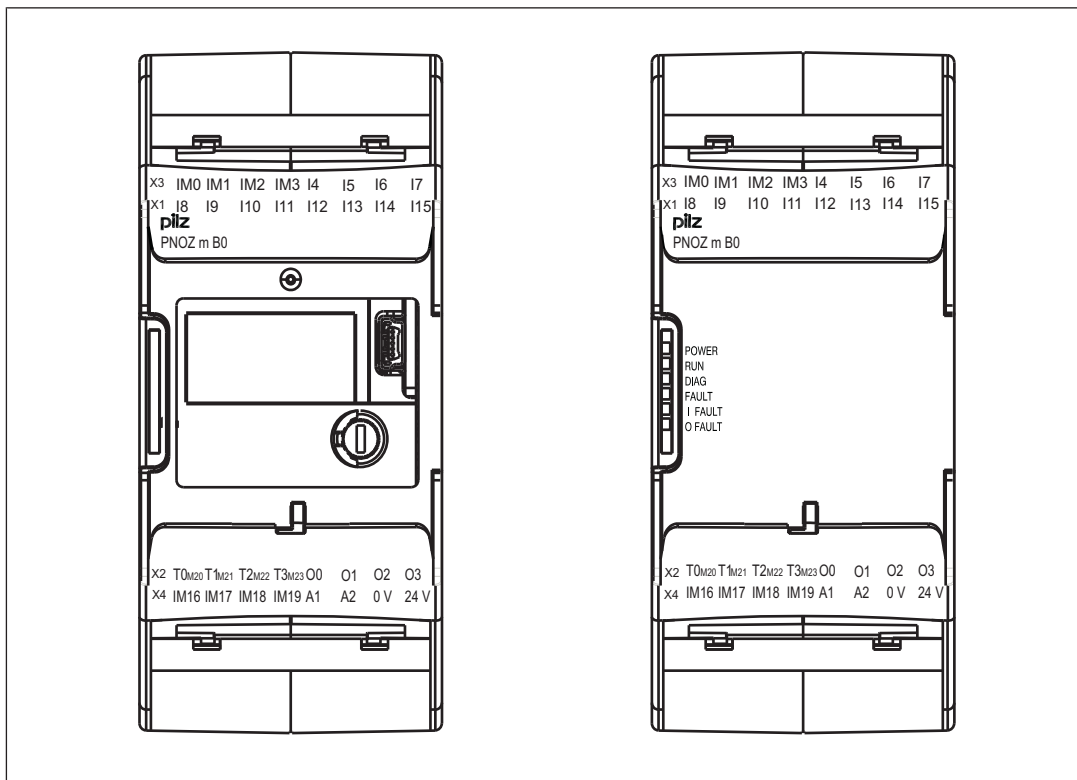


Fig.: Front view with and without cover

### Legend

- X1: Inputs I8 ... I15
- X1: Configurable test pulse/auxiliary outputs T0M20 ... T3M23
- X1: Semiconductor outputs O0 ... O3
- X3: Configurable inputs/outputs IM0 – IM3
- X3: Inputs I4 ... I7
- X4: Configurable inputs/outputs IM16 – IM19
- X4: Supply connections
- LEDs: PWR
- LEDs: RUN
- LEDs: DIAG
- LEDs: FAULT
- LEDs: I FAULT
- LEDs: O FAULT

## Base units PNOZ m B0

### Function description

#### Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.


The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

#### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion \[📖 29\]](#)".

#### Block diagram

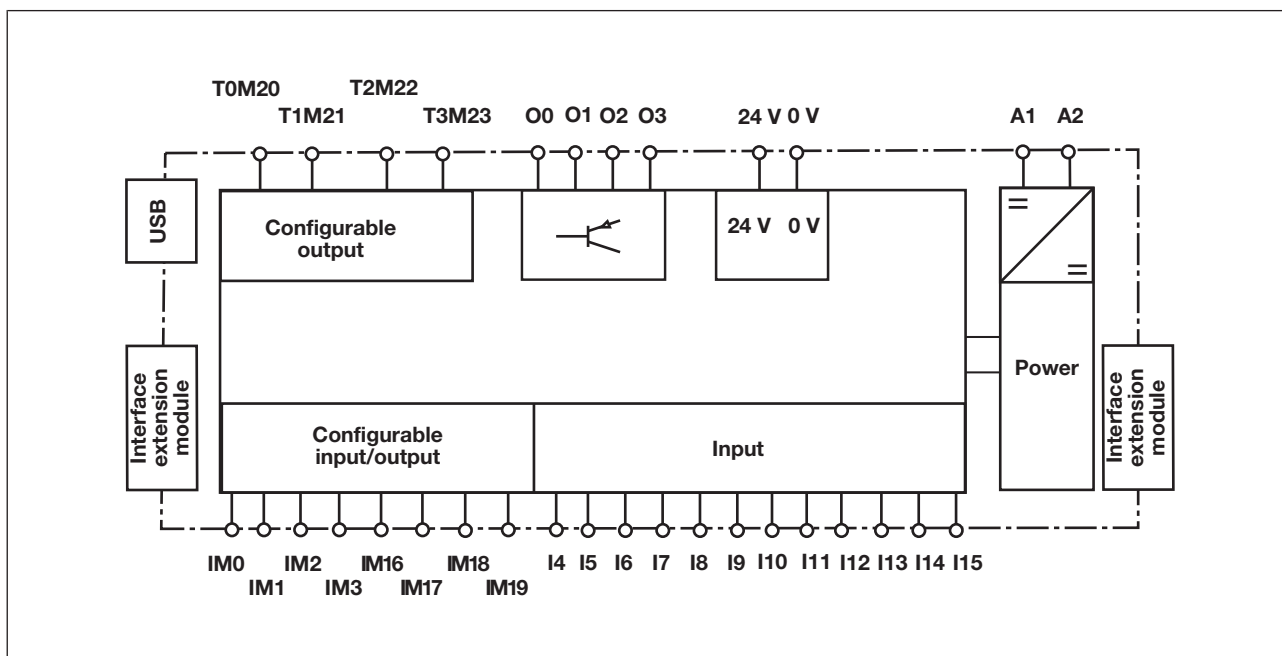


## Base units PNOZ m B0

### Installation

#### Dimensions in mm

\*with spring-loaded terminals

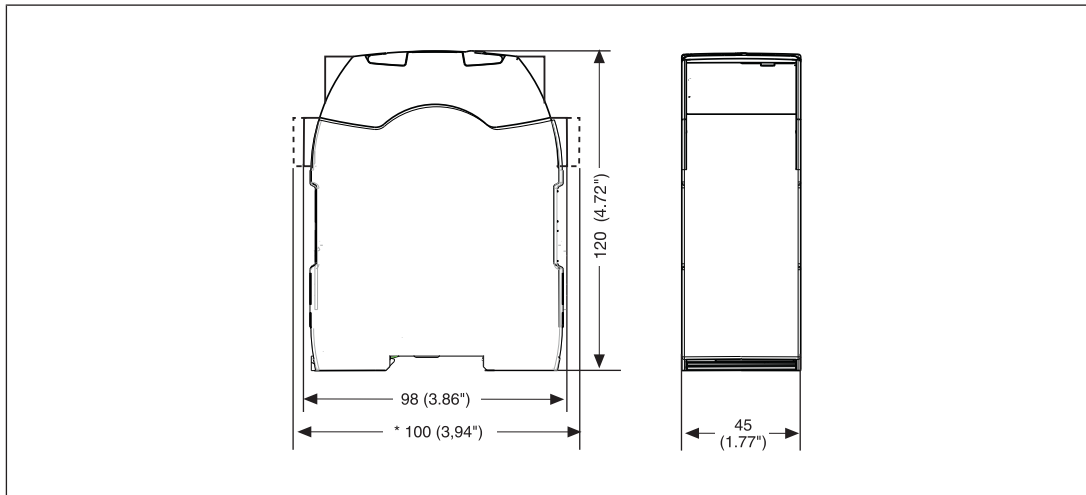

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[675\]](#) must be followed.
- ▶ Outputs O0 to O3 are semiconductor outputs
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Sufficient fuse protection must be provided on all output contacts with inductive loads.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.  
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.

## Base units PNOZ m B0

### Commissioning the control system


Procedure:

- ▶ Wire the inputs and outputs on the base unit in accordance with the circuit diagram.
- ▶ Connect the supply voltage:
  - Supply voltage for the control system:
    - Terminal A1: + 24 VDC
    - Terminal A2: 0 V
  - Supply voltage for the semiconductor outputs:
    - 24 V terminal: + 24 VDC
    - 0V terminal: 0 V


Please note: The supply voltage for the semiconductor outputs must always be present, even if you are not using the semiconductor outputs.

When the voltages are fed separately using two power supplies, the supply voltage for the control system and the supply voltage for the semiconductor outputs are galvanically isolated.

### Connection

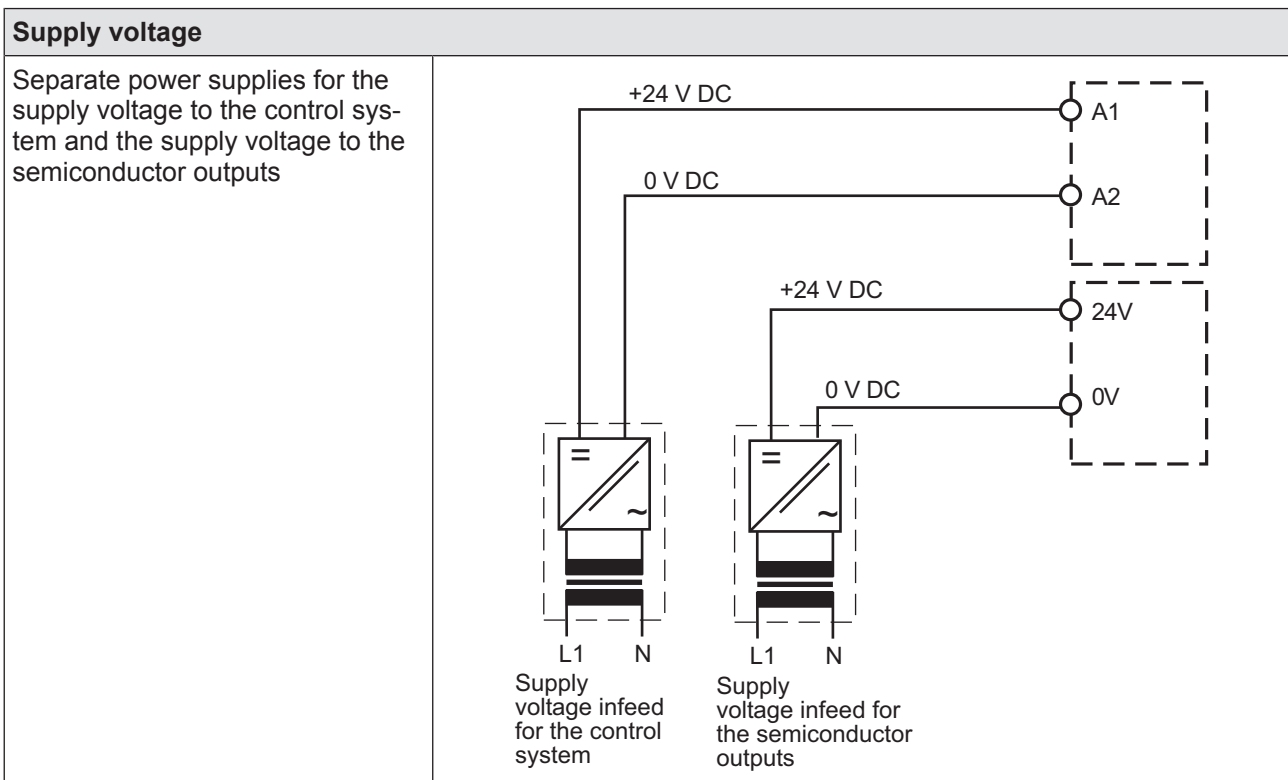

## Base units PNOZ m B0

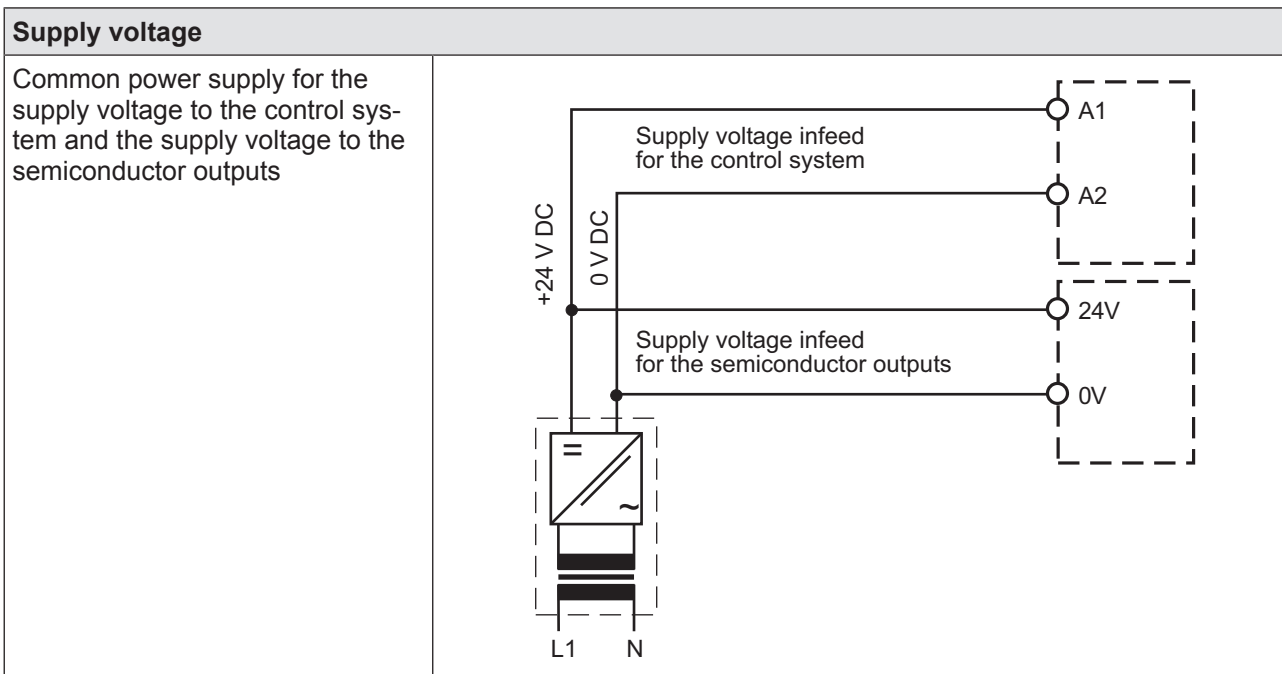

Input circuit	Single-channel	Dual-channel
E-STOP <b>without</b> detection of shorts across contacts		
E-STOP <b>with</b> detection of shorts across contacts		

Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts

## Base units PNOZ m B0

Semiconductor outputs		
Redundant output		
Single output		
Single output with advanced fault detection*		

\*Two loads may be connected to each safety output with advanced fault detection, even on applications in accordance with EN IEC 62061, SIL CL 3. Prerequisite: Feedback loop is connected, shorts across contacts and external power sources are excluded (e.g. through separate multicore cables). Please note that, in the event of an error in the feedback loop, the safety system switches to a safe condition and shuts down **all** the outputs.

Feedback loop	Redundant output	
Contacts from external contactors		

## Base units PNOZ m B0

---

### Load project from chip card

Procedure:

- ▶ Insert the chip card containing the current project into the card slot on the base unit.
- ▶ Switch on the supply voltage. The LC display shows the project name, CRC sum and the date the project was created. Please check this information.
- ▶ Load the project by pressing the rotary knob. For the project to be downloaded, the rotary knob must be held down for between 3 and 8 seconds. Once the project has been successfully downloaded, the status of the inputs and outputs will be shown on the display.

### Load project via USB port


Procedure:

- ▶ Insert a chip card into the card slot on the base unit.
- ▶ Connect the computer containing the PNOZmulti Configurator to the base unit via the USB port.
- ▶ Switch on the supply voltage.
- ▶ Download the project (see PNOZmulti Configurator's online help).
- ▶ Once the project has been successfully downloaded, the status of the inputs and outputs and the supply voltage will be shown on the display. The "RUN" LED will be lit.

## Base units PNOZ m B0

### Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (IM18), feedback loop (IM16)

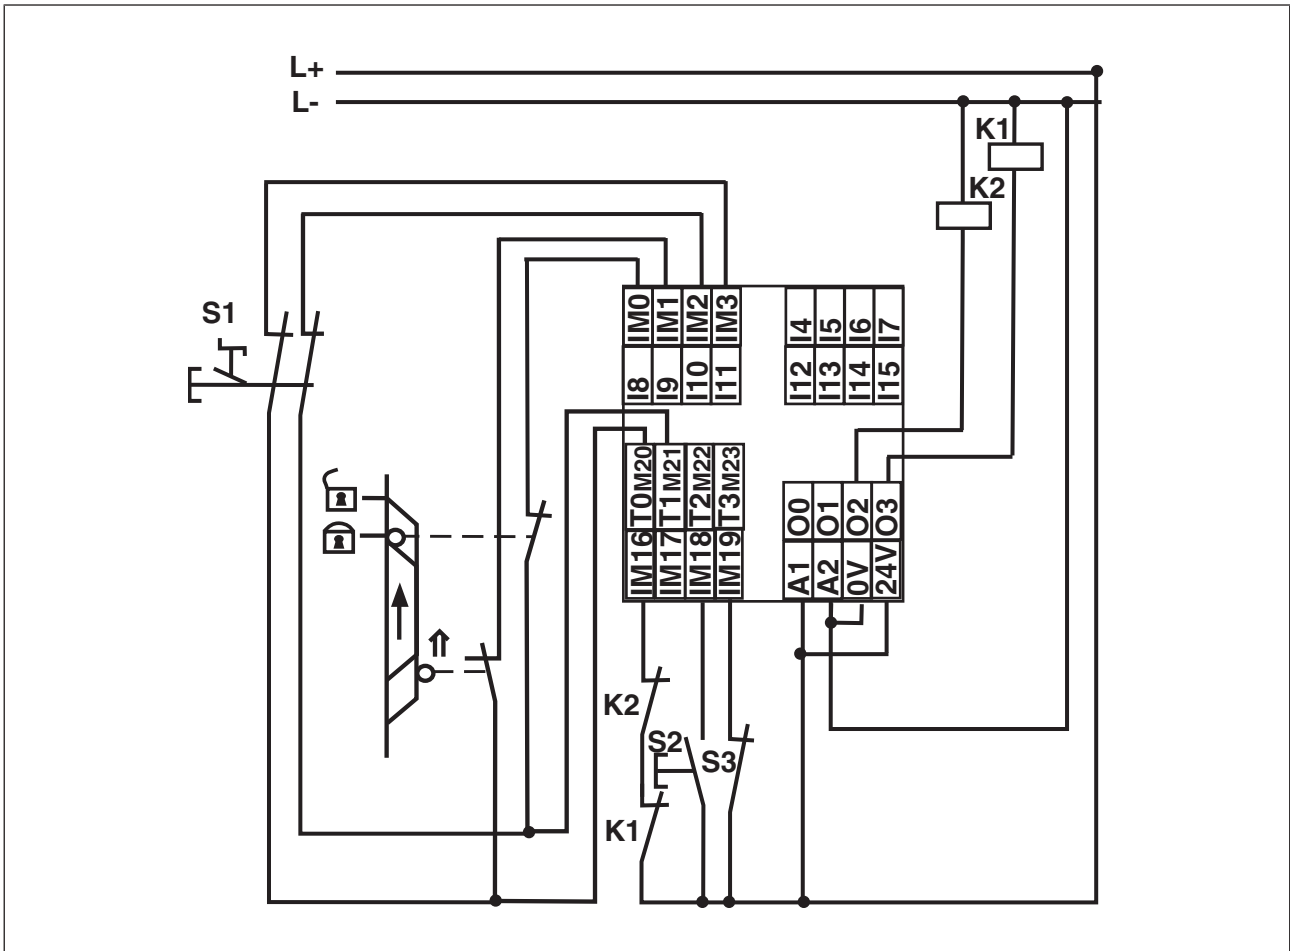



## Base units PNOZ m B0

### Technical details

<b>General</b>	
Approvals	<b>BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed</b>
Application range	<b>Failsafe</b>
Module's device code	<b>0060h</b>
<b>Electrical data</b>	
Supply voltage	
for	<b>Supply to the system</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Max. continuous current that the external power supply must provide	<b>1,6 A</b>
Inrush current that the external power supply must provide	<b>3 A</b>
Supply voltage	
for	<b>Supply to the SC outputs</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Max. continuous current that the external power supply must provide	<b>8 A</b>
Potential isolation	<b>yes</b>
Supply voltage	
Current consumption	<b>32 mA</b>
Power consumption	<b>0,8 W</b>
Max. power dissipation of module	<b>7,4 W</b>
Status indicator	<b>Display, LED</b>
Permitted loads	<b>inductive, capacitive, resistive</b>
<b>Configurable inputs/outputs (inputs or auxiliary outputs)</b>	
Number	<b>8</b>
Potential isolation	<b>No</b>
Configurable inputs	
Input voltage in accordance with EN 61131-2 Type 1	<b>24 V</b>
Input current at rated voltage	<b>5 mA</b>
Input current range	<b>2,5 - 5,3 mA</b>
Pulse suppression	<b>0,5 ms</b>
Maximum input delay	<b>2 ms</b>

## Base units PNOZ m B0

### Configurable inputs/outputs (inputs or auxiliary outputs)

#### Configurable auxiliary outputs

Voltage	24 V
Output current	75 mA
Output current range	0 - 100 mA
Max. transient pulsed current	500 mA
Short circuit-proof	yes
Residual current at "0"	0,5 mA
Voltage at "1"	UB - 2 V at 0.1 A

### Inputs

Number	12
Input voltage in accordance with EN 61131-2 Type 1	24 V DC
Input current at rated voltage	5 mA
Input current range	2,5 - 5,3 mA
Pulse suppression	0,5 ms
Maximum input delay	2 ms
Potential isolation	No

### Semiconductor outputs

Number of positive-switching single-pole semiconductor outputs	4
Switching capability	
Voltage	24 V
Current	2 A
Permitted current range	0,000 - 2,500 A
Residual current at "0" signal	0,05 mA
Max. transient pulsed current	12 A
Max. capacitive load	1 µF
Max. internal voltage drop	500 mV
Max. duration of off time during self test	330 µs
Switch-off delay	1 ms
Potential isolation	yes
Short circuit-proof	yes

### Test pulse outputs

Number of test pulse outputs	4
Voltage	24 V
Current	0,1 A
Max. duration of off time during self test	5 ms
Short circuit-proof	yes
Potential isolation	No

### Times

Simultaneity in the two-hand circuit	0,5 s
--------------------------------------	-------

## Base units PNOZ m B0

<b>Times</b>	
Processing time	<b>30 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>5 - 150 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>SC output and system voltage</b>
Type of potential isolation	<b>Basic insulation</b>
Rated surge voltage	<b>2500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

## Base units PNOZ m B0

Mechanical data	
Max. cable length	
Max. cable length per input	1 km
Sum of individual cable lengths at the test pulse output	2 km
Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Spring-loaded terminal, screw terminal
Mounting type	plug-in
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,5 mm <sup>2</sup> , 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,2 - 1,5 mm <sup>2</sup> , 24 - 16 AWG
Torque setting with screw terminals	0,5 Nm
Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector	
	0,2 - 2,5 mm <sup>2</sup> , 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	101,4 mm
Width	45 mm
Depth	120 mm
Weight	235 g

Where standards are undated, the 2012-04 latest editions shall apply.

### Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
------	----------------	-------------------------	-------------------------------	-----------------	---------------------------------	--

Logic						
CPU	2-channel	PL e	Cat. 4	SIL CL 3	4,74E-10	20
Expansion left	–	PL e	Cat. 4	SIL CL 3	3,30E-11	20
Expansion right	–	PL e	Cat. 4	SIL CL 3	2,79E-11	20
Input						
SC inputs	1-channel	PL d	Cat. 2	SIL CL 2	3,85E-09	20


## Base units PNOZ m B0

Input						
SC inputs	2-channel	PL e	Cat. 4	SIL CL 3	7,95E-11	20
SC inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	3,85E-10	20
Output						
SC outputs	1-channel with advanced fault detection	PL e	Cat. 4	SIL CL 3	1,66E-11	20
SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	1,57E-10	20
SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	1,29E-10	20

All the units used within a safety function must be considered when calculating the safety characteristic data.


### Supplementary data

#### Maximum capacitive load C (μF) with load current I (A) at the semiconductor outputs

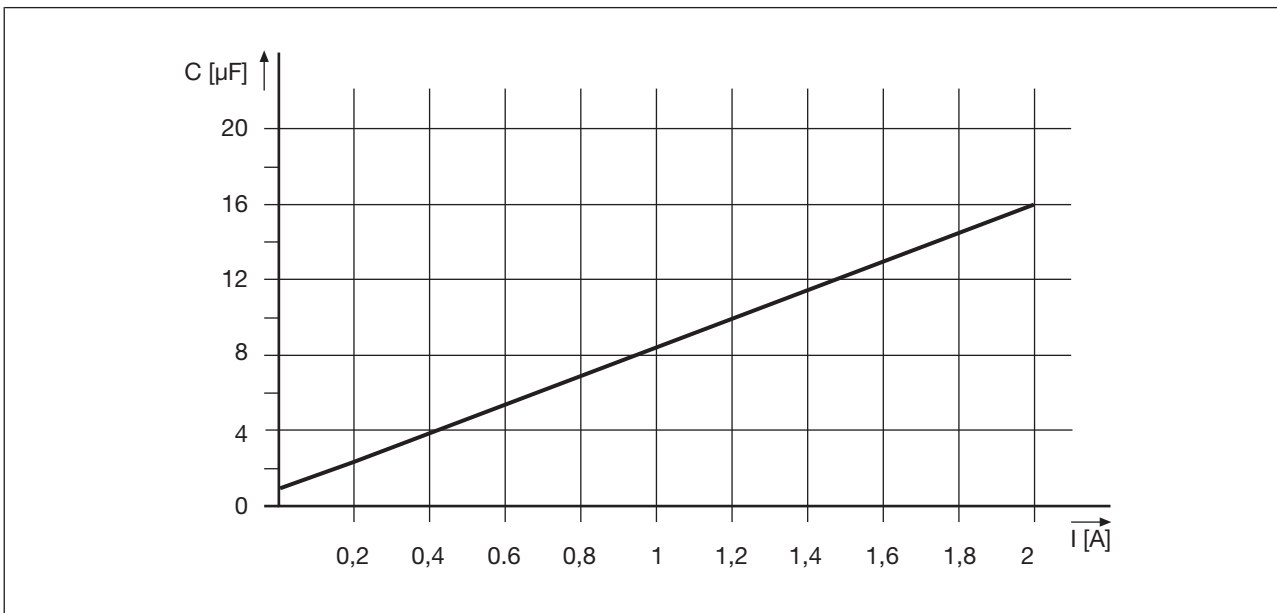

## Base units PNOZ m B0

### Maximum permitted total current of the semiconductor outputs

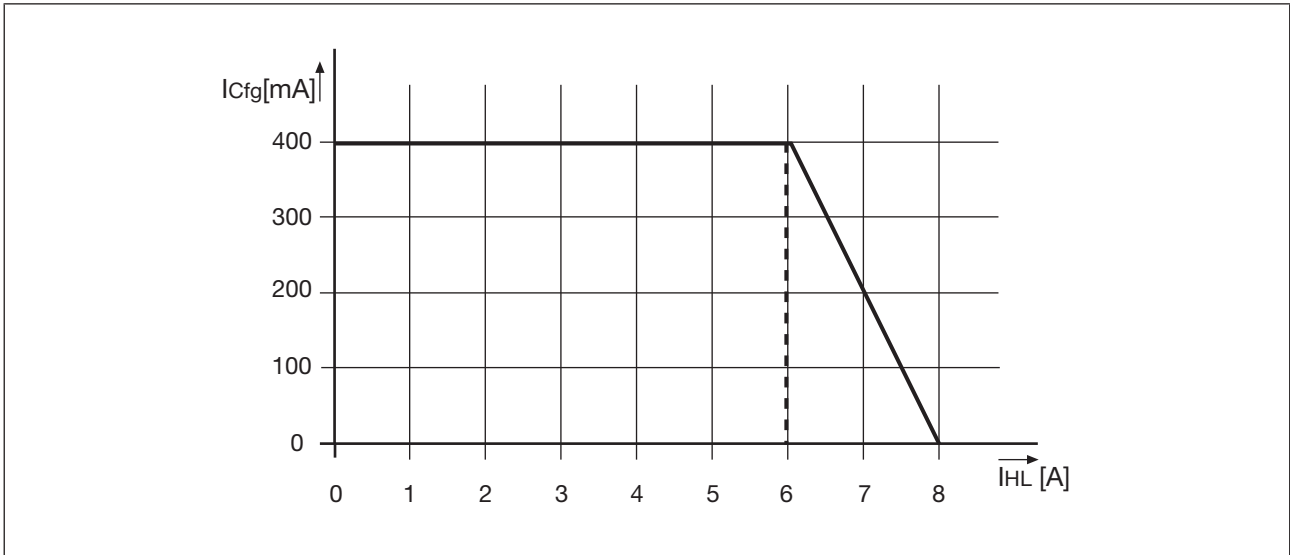


$I_{Cfg}$ : Total current of the configurable semiconductor outputs (auxiliary outputs)

$I_{HL}$ : Total current: Semiconductor outputs (safety outputs)


### Maximum permitted humidity

#### Max. relative humidity, operation

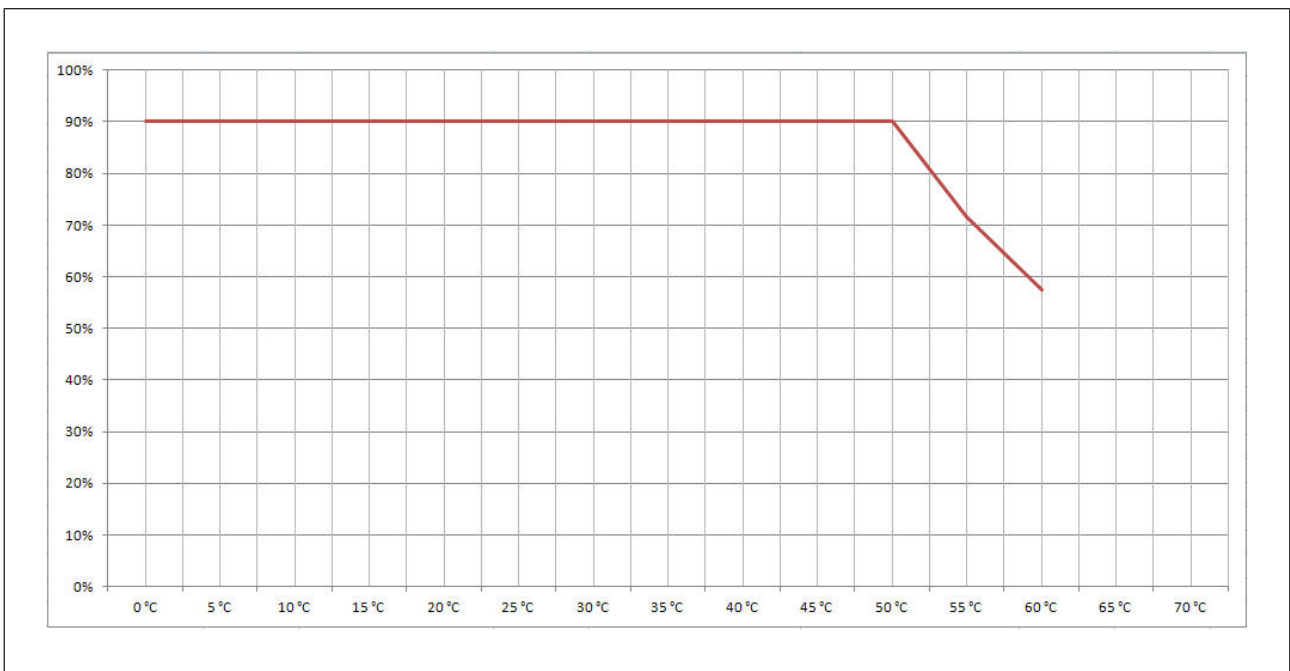

## Base units PNOZ m B0

Max. relative humidity, storage

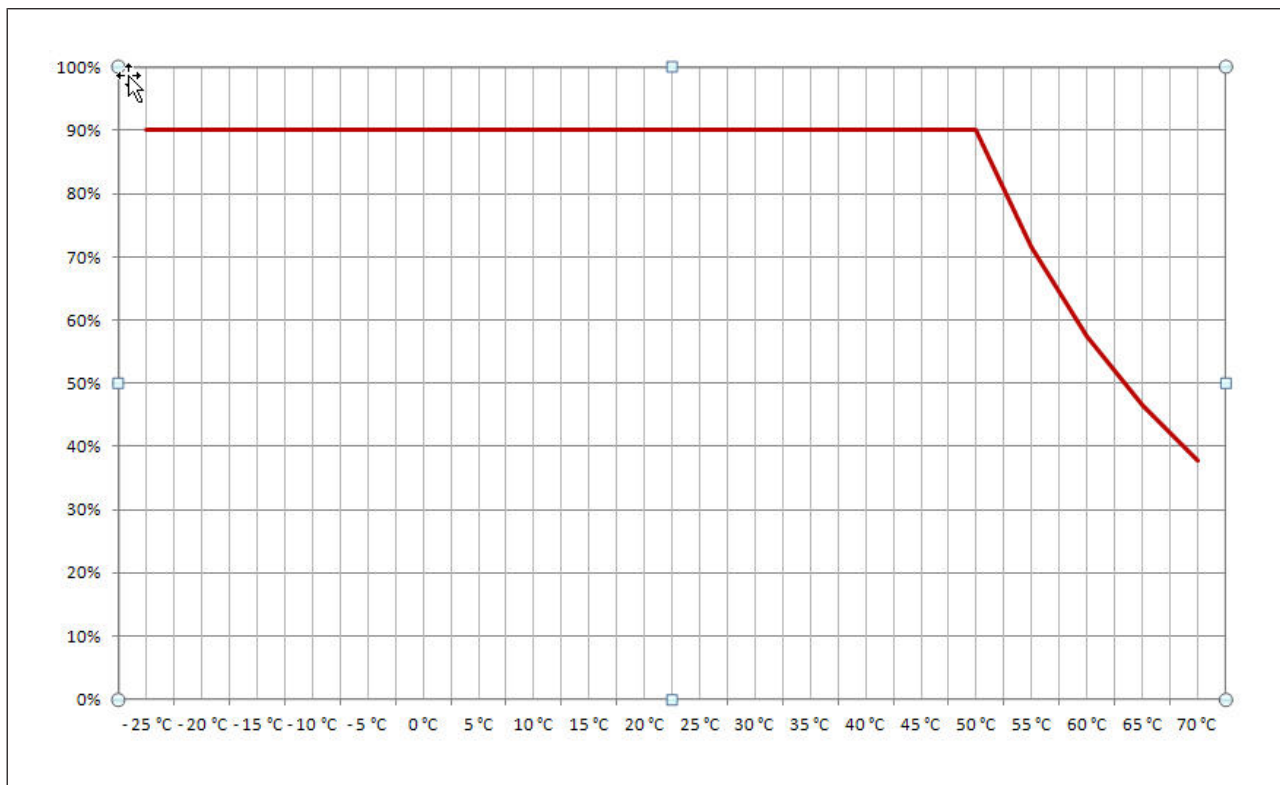

## Order reference

### Product

Product type	Features	Order no.
PNOZ m B0	Base unit	772 100

### Accessories

#### Terminator

Product type	Features	Order no.
PNOZ mm0.xp terminator left	Terminator, black/yellow, x1	779 261

#### Cable

Product type	Features	Order no.
PSSu A USB-CAB03	Mini USB cable, 3 m	312 992
PSSu A USB-CAB05	Mini USB cable, 5 m	312 993

## Base units PNOZ m B0


---

### Terminals

Product type	Features	Order no.
PNOZ s Set1 spring loaded terminals	1 set of spring-loaded terminals	751 008
PNOZ s Set1 screw terminals	1 set of screw terminals	750 008



## Base units PNOZ m B1

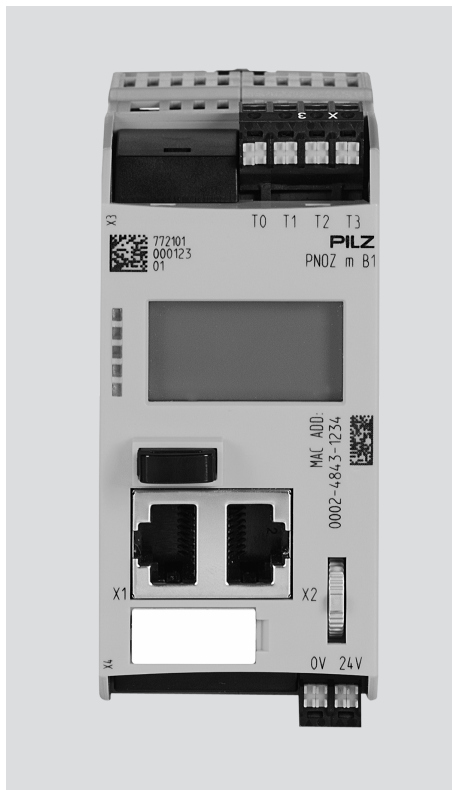

## Overview

### Unit features

Using the product PNOZ m B1:

Base unit of the configurable control system PNOZmulti 2

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Support for module programs
- ▶ 4 test pulse outputs to detect shorts between the inputs
- ▶ Backlit display for:
  - Status information
  - Device information
  - Diagnostics
  - Activate project
  - Ethernet settings
  - System's date and time
  - Stop and start device


## Base units PNOZ m B1

- ▶ Multifunction switch for menu control
- ▶ Ethernet interface with switch
- ▶ LED indicator for:
  - Operating status
  - Error messages
  - Diagnostics
  - Supply voltage
- ▶ Plug-in connection terminals:
  - either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Expansion modules can be connected
  - (please refer to the document "PNOZmulti System Expansion" for details of the type and number that can be connected)

### USB memory

To save and transfer projects you need the Pilz USB memory that is supplied with the device (plugged into the device).

### Front view

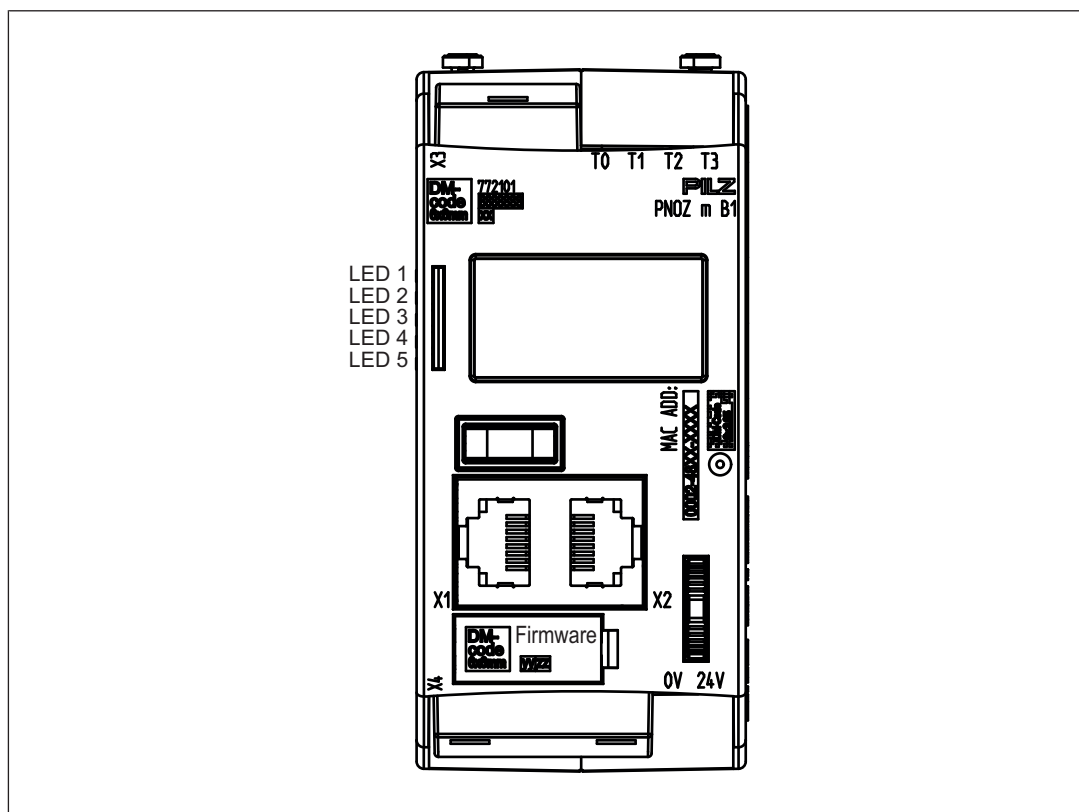

## Base units PNOZ m B1

---

### Legend

X1/X2:	Ethernet interface
X3:	Test pulse outputs T0 - T3
X4:	Labelling clip for firmware version
LED 1:	Supply voltage
LED 2	FS (Initialise/Run/Stop)
LED 3	ST (Initialise/Run/Stop)
LED 4	Diag (Project reset/Identify project)
LED 5	FAULT (IFault/OFault)

### To determine the version of the device, please note:

The firmware version number is on the labelling clip. This is also the version number that must be selected in the PNOZmulti Configurator under **Version** during the hardware configuration.

## Function description

### Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A USB memory stick is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion \[📖 29\]](#)".


## Base units PNOZ m B1

### Detection of shorts across contacts

4 test pulse outputs that use different test pulses (test pulse 0 (T0) ... test pulse 3 (T3)) are available for detecting shorts between the inputs.


Shorts between inputs are detected if the inputs are connected to different test pulses (test pulse 0 ... test pulse 3).

### Pulsing of test pulse outputs T0 ... T3 (typical times):

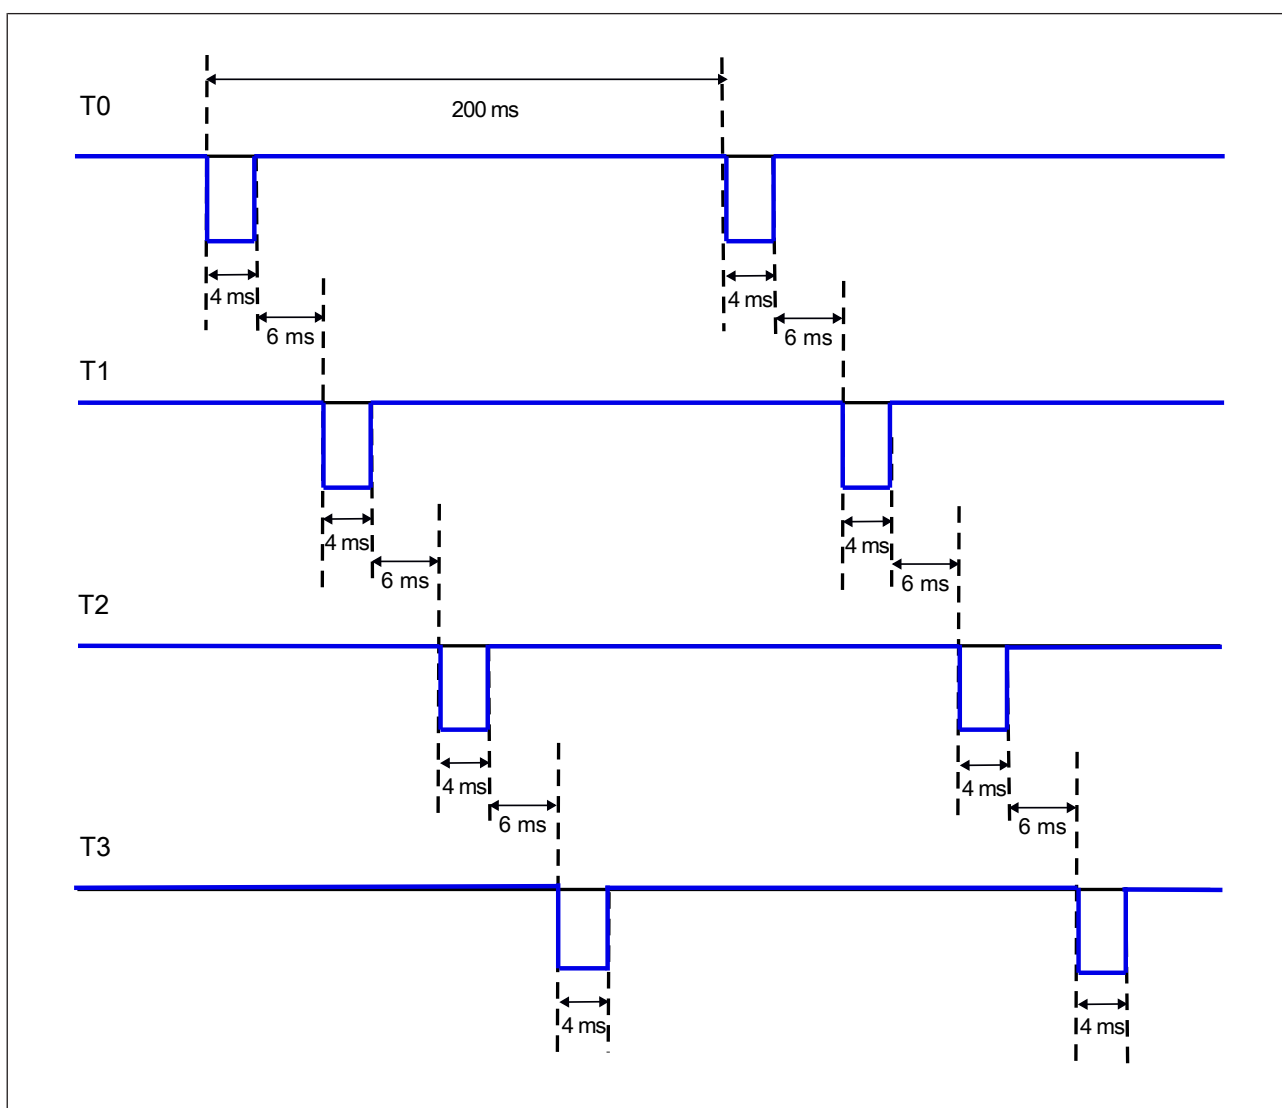


## Base units PNOZ m B1

### Block diagram

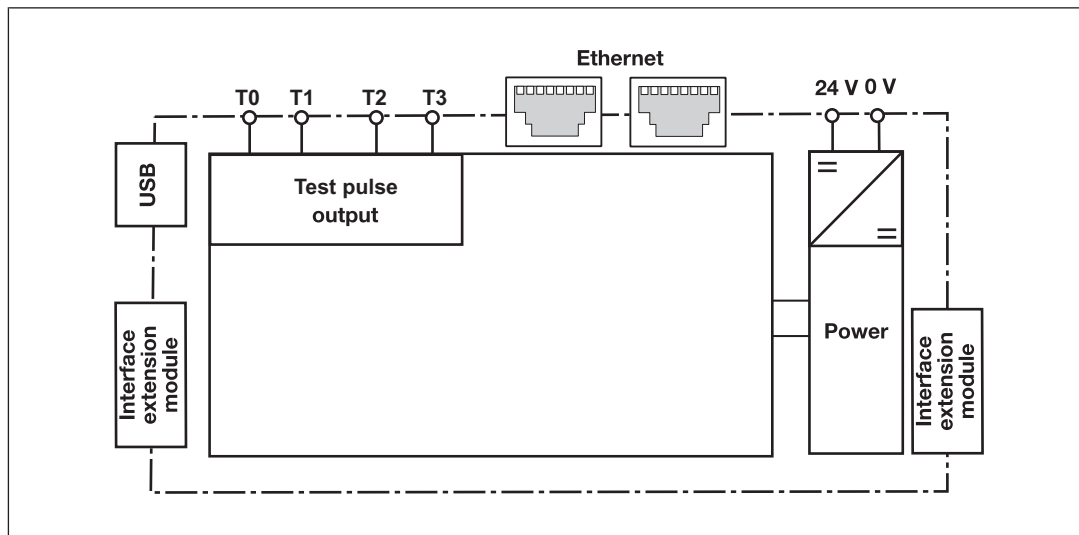

### Installation

#### Dimensions in mm

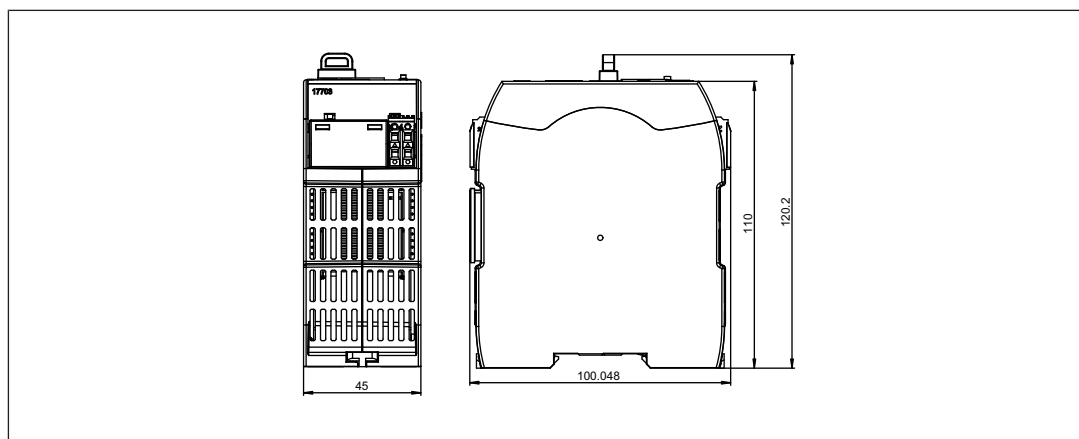

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[700\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

## Base units PNOZ m B1

---

- ▶ Sufficient fuse protection must be provided on all output contacts with inductive loads.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation (SELV, PELV).
- ▶ Test pulse outputs are used to detect shorts between the inputs. Shorts between inputs are detected if the inputs are connected to different test pulses (test pulse 0 ... test pulse 3). Shorts between inputs of the same module with the same test pulses will not be detected.
- ▶ Test pulse outputs must exclusively be used to activate the inputs. They must not be used to drive loads.  
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ The maximum permitted total current of the test pulse outputs is 640 mA.

### Connection

Procedure:

- ▶ Connect the supply voltage for the control system:
  - Terminal 24 V: + 24 VDC
  - Terminal 0 V: 0 V,
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6A


## Base units PNOZ m B1

### Use USB memory

Multiple projects can be stored on the USB memory that is plugged into the device. One of these can be activated and executed on the base unit.

Please note the following when using the USB memory:

- ▶ The USB memory must always be plugged in during operation.
- ▶ In order to copy projects, for example, the USB memory can be removed and plugged into the PC or into another base unit PNOZ m B1.
- ▶ Only Pilz USB memories may be used!
- ▶ Due to mechanical requirements, the USB memory is plugged firmly into the device and so may be difficult to remove.  
If this is the case, use an appropriate tool, such as a screwdriver, to carefully extract the USB memory (see illustration).
- ▶ To use the USB memory, insert the USB memory into the slot, applying light pressure. Make sure that the USB memory is inserted right up to the plastic handle (see illustration).

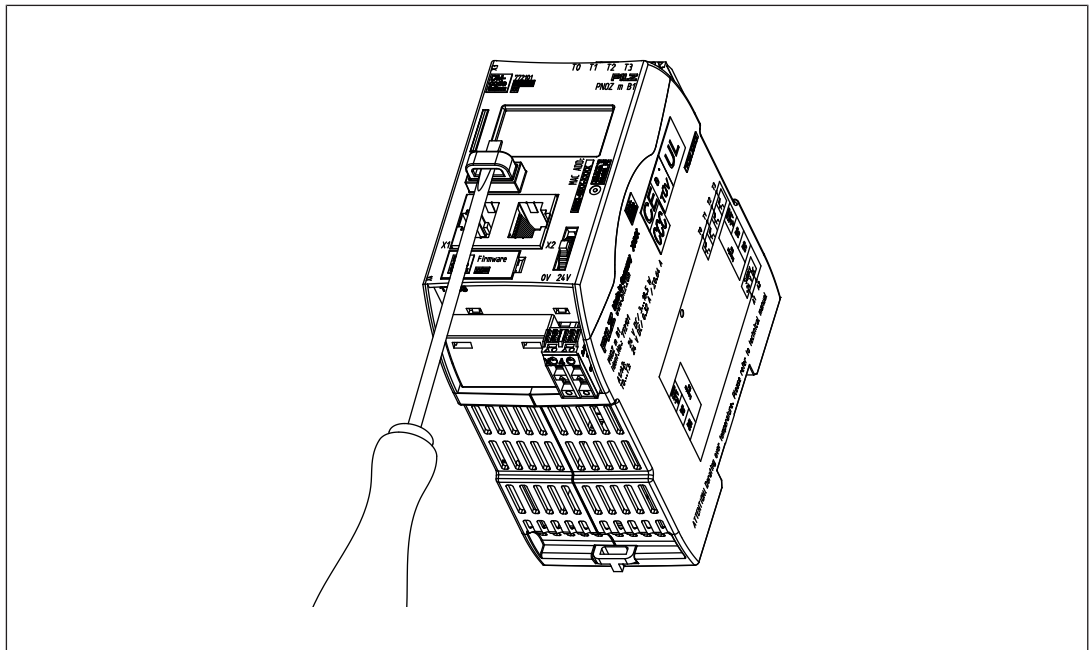

### Load project from PNOZmulti Configurator

Projects can be transferred from the PNOZmulti Configurator to the USB memory. Several projects may be stored on the USB memory, A project can be activated directly. This can be performed in the Project Manager of the PNOZmulti Configurator (see online help for the PNOZmulti Configurator).

Procedure:

- ▶ Connect the computer containing the PNOZmulti Configurator to the base unit PNOZ m B1 via the Ethernet interface.

## Base units PNOZ m B1

- ▶ Make sure that the USB memory is plugged into the base unit PNOZ m B1.
- ▶ Switch on the supply voltage.
- ▶ Transfer the required project to the USB memory and activate it on the base unit via the Project Manager on the PNOZmulti Configurator, as described in the online help for the PNOZmulti Configurator.
- ▶ As the project is loaded, the base unit must be stopped and then restarted.
- ▶ Once the project has been loaded successfully and the device has been restarted, the status of the supply voltage is shown on the display. The "RUN" LED is lit.

### Activate project via the display on the base unit

A project that is stored on the USB memory can be activated in the base unit via settings on the display.

Procedure:

- ▶ Make sure that the USB memory containing the current project is plugged into the base unit PNOZ m B1.
- ▶ Switch on the supply voltage.
- ▶ Stop the device via the multifunction switch on the display via the menu setting **System mode** -> **Stop system** (for details of how to navigate the display see the section entitled [Display settings \[📖 690\]](#))
- ▶ In the **Project** menu, navigate to the folder containing the required project and select the project file with the extension **.mpnoz2**.
- ▶ Load the project by pressing the multifunction switch and restart via the menu setting **System mode** -> **Restart system**.

### Display settings

Various settings can be made and information displayed via the menu on the device's display.

#### Operate menu

The menu settings are made on the device's display via a multifunction switch. You can switch between the menu levels by pressing or turning the multifunction switch.

#### Press multifunction switch



- ▶ Confirm selection/setting
- ▶ Switch to sub-menu
- ▶ Exit menu: \.



## Base units

### PNOZ m B1

---

#### Move multifunction switch up or down




- ▶ Select menu


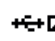
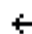
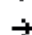
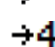
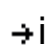


#### Displays and settings

The LC display has five lines. Information is shown on the display and settings can be made.

The field at the top right of the display shows information about the connection and instructions for the menu settings:



#### Legend:

-  Network connection/traffic
-  USB memory inserted
- 12:00** System time
-  Press the multifunction switch to go back to the higher level menu
-  Press the multifunction switch to access the sub-menu
-  Hold the multifunction switch down for 4 s to confirm the selection or perform the action
-  Press the multifunction switch to obtain information
-  Press the multifunction switch to call up the system message
-  Press the multifunction switch to call up the user message

## Base units PNOZ m B1

### Status indicators

Display	Display on device	Description
Permanent display		LED display ▶ A warning symbol shows that a message is present, which can be called up
System / User... System or display messages		⚠ System message is present or ⚠ User message is present (user-specific messages that are created in the PNOZmulti Configurator)

## Base units PNOZ m B1

### Project menu

In the **Project** menu you can display information about the project that is activated on the device. You can also activate a different project from the USB memory on the device. See also [Activate project via the display on the base unit \[📖 690\]](#) and reset the project on the device.

Display	Display on device	Description
<b>Info:</b>		Information is displayed about the project activated on the device
<b>Name</b> Project name		Name of project
<b>Date / Time</b> Creation data and time		Date and time that the project was created
<b>Check sums FS</b> Overall check sum and check sums of main program		Display of check sums: <ul style="list-style-type: none"> <li>▶ Overall project check sum</li> <li>▶ Check sum safe of main program</li> <li>▶ Check sum safe of main program without level 3</li> </ul>
<b>Check sums DP pos x</b> Check sums of module program		Display of check sums of module program <ul style="list-style-type: none"> <li>▶ Check sum safe</li> <li>▶ Check sum safe without level 3</li> </ul>

## Base units PNOZ m B1

Display	Display on device	Description
<b>History:</b> Project history		Project information is displayed for one of the last 16 projects activated
<b>Name</b> <b>Date / Time</b> <b>Check sum FS</b> <b>Check sum DP pos x</b> ...		Display of project information for a selected project
<b>Select:</b> Activate project		Select project contained in the USB memory and activate it on the base unit <ul style="list-style-type: none"> <li>▶ Prerequisite: Device must be stopped</li> <li>▶ Hold down multifunction switch for 4 s in order to activate the project</li> </ul>
<b>Reset:</b> Reset or update project.		After a reset, the active project is reloaded from the USB memory <ul style="list-style-type: none"> <li>▶ Prerequisite: Device must be stopped</li> <li>▶ Hold down multifunction switch for 4 s in order to reset</li> </ul>


## Base units PNOZ m B1

### Device Info menu

Display	Example	Description
Device Info		<p>Information on the base unit and expansion modules. Overview:</p> <ul style="list-style-type: none"> <li>▶ Position/slot</li> <li>▶ Device type</li> <li>▶ Firmware version</li> </ul>
Device information for module		<p>Show device information for a selected module:</p> <ul style="list-style-type: none"> <li>▶ Order number</li> <li>▶ Serial number</li> <li>▶ Software versions</li> <li>▶ Hardware version</li> <li>▶ Operating hours</li> </ul>

## Base units PNOZ m B1

### Error Stack menu

Display	Example	Description
Error stack	<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: right;">x/256 ←↕</p> <p>Date 2014-01-31 Time 23:59:59 Chn AB ST EC EN 01 AB</p> </div> <div style="text-align: center;">  </div> <div style="border: 1px solid black; padding: 5px;"> <p style="text-align: right;">x/256 ←↕</p> <p>EC EN 01 AB EP 00 01 02 03 04 05 06 07</p> </div>	<p>Display of entries in the error stack (see also section entitled Show error stack on the display)</p> <p>To read the error stack entries please refer to the document <b><i>PNOZmulti Error Messages</i></b></p>

### Operating Info menu

Display	Example	Description
Operating Info	<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: right;">Pos Baseunit ←↕</p> <p>FS cycl 10000us FS cpu 80%</p> </div>	<p>Display of specific operating parameters for the base unit and expansion modules.</p> <p>e.g.: cycle time, operating temperature, frequencies</p>

## Base units PNOZ m B1

### Ethernet menu

The Ethernet configuration can be displayed and changed in the **Ethernet** menu.

Display	Example	Description
<b>About PNOZmulti Configurator</b>	<p>The screenshot shows three stacked Ethernet configuration screens. The top screen displays 'IP address: DHCP' with '169.254.60.1' and 'Subnet mask: 255.255.0.0'. The middle screen displays 'Gateway: 0.0.0.0' and 'PG port: 9000'. The bottom screen displays 'Scan port: 10000'. Double-headed arrows indicate navigation between screens.</p>	Display of the current Ethernet configuration
<b>Change</b>	<p>The screenshot shows the Ethernet menu with options: 'Info', 'Change' (highlighted with a black bar), and '\..'</p>	Change Ethernet configuration...
<b>Edit IP</b> Change IP address	<p>The screenshot shows the 'Edit address' screen with three input fields: 'IP address: 169.254.60.001', 'Subnet mask: 255.255.255.000', and 'Gateway: 000.000.000.000'. Arrows indicate the flow between fields.</p>	<b>Adjust</b> <ul style="list-style-type: none"> <li>▶ IP address</li> <li>▶ Subnet mask</li> <li>▶ Gateway</li> </ul> -> Hold down multifunction switch for 2 s in order to access change mode
<b>Edit ports</b> Change IP address	<p>The screenshot shows the 'Edit ports' screen with 'PG port: 9100' and 'Scan port: 10000'. The '9' in PG port is highlighted with a black bar.</p>	Adjust PG port and scan port -> Hold down multifunction switch for 2 s in order to access change mode

## Base units PNOZ m B1

Display	Example	Description
<b>Use DHCP</b> Change IP address	<pre> Ethernet Edit ports Use DHCP Use program                     </pre>	Obtain IP address automatically from the network (prerequisite: network has a DHCP Server Utility) -> Hold down multifunction switch for 2 s in order to perform the action
<b>Use program</b> Change IP address	<pre> Ethernet Use DHCP Use program Use default                     </pre>	Load Ethernet settings from the active PNOZmulti project -> Hold down multifunction switch for 2 s in order to perform the action
<b>Use default</b> Change IP address	<pre> Ethernet Use program Use default \..                     </pre>	Load default settings IP address: 169.254.60.1 Subnet mask: 255.255.0.0 Gateway: 0.0.0.0 -> Hold down multifunction switch for 2 s in order to perform the action


### Time menu

Display	Example	Description
<b>Time</b> Show date and time	<pre> Time Date 2014-01-31 Time 23:59:00                     </pre>	Show system's date and time
<b>Set time</b> Set date and time	<pre> Time Date 2014-01-31 Time 23:59:00                     </pre> <p style="text-align: center;">↑ ↓</p> <pre> Time \.. Set time                     </pre> <p style="text-align: right;">→</p> <pre> Time set Date 2014-01-31 Time 23:59:00                     </pre>	Change date and time -> Hold down multifunction switch for 2 s in order to access change mode



## Base units PNOZ m B1

### System mode menu

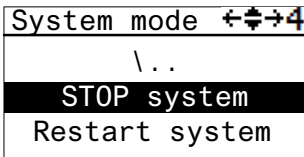Display	Example	Description
<p>Stop system</p> <p>Restart system</p>		<p>Stop system</p> <p>Restart system</p> <p>-&gt; Hold down multifunction switch for 4 s in order to perform the actions</p>

## Base units PNOZ m B1

### Technical details

<b>General</b>	
Approvals	<b>CE</b>
Application range	<b>Failsafe</b>
<b>Electrical data</b>	
Supply voltage	
for	<b>Supply to the system</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Output of external power supply (DC)	<b>18,5 W</b>
Output of external power supply (DC) at no load	<b>3 W</b>
Max. power dissipation of module	<b>4,5 W</b>
Status indicator	<b>Display, LED</b>
<b>Test pulse outputs</b>	
Number of test pulse outputs	<b>4</b>
Voltage	<b>24 V</b>
Current	<b>0,32 A</b>
Max. duration of off time during self test	<b>4 ms</b>
Short circuit-proof	<b>yes</b>
Potential isolation	<b>No</b>
<b>Ethernet interface</b>	
Number	<b>2</b>
Transmission rate	<b>10 MBit/s, 100 MBit/s</b>
<b>Times</b>	
Simultaneity in the two-hand circuit	<b>0,5 s</b>
Processing time	<b>30 ms</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Humidity	<b>93 % r. h. at 40 °C</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>

## Base units PNOZ m B1

### Environmental data

#### Vibration

In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>5 - 150 Hz</b>
Acceleration	<b>1g</b>

#### Shock stress

In accordance with the standard	<b>EN 60068-2-27</b>
Duration	<b>11 ms</b>

Max. operating height above sea level **2000 m**

#### Airgap creepage

In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>

#### Protection type

In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

### Mechanical data

Mounting position **Horizontal on top hat rail**

#### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

#### Material

Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>

Connection type **Cage clamp terminal, screw terminal**

Mounting type **plug-in**

#### Conductor cross section with screw terminals

1 core flexible	<b>0,25 - 2,5 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,2 - 1,5 mm<sup>2</sup>, 24 - 16 AWG</b>

Torque setting with screw terminals **0,5 Nm**

#### Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector **0,2 - 2,5 mm<sup>2</sup>, 24 - 12 AWG**

Spring-loaded terminals: Terminal points per connection **2**

Stripping length with spring-loaded terminals **9 mm**

#### Dimensions

Height	<b>120,2 mm</b>
Width	<b>45 mm</b>
Depth	<b>98 mm</b>

## Base units PNOZ m B1

### Mechanical data

Weight **209 g**

Where standards are undated, the 2013-05 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008	EN ISO 13849-1: 2008	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008
	PL	Category					T <sub>M</sub> [year]
2-channel	PL e	Cat. 4	SIL CL 3	4,19E-10	SIL 3	3,65E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

### Order reference

#### Product

Product type	Features	Order No.
PNOZ m B1	Base unit	772 101

### Accessories

#### Terminator

Product type	Features	Order no.
PNOZ mm0.xp terminator left	Terminator, black/yellow, x1	779 261

#### Connection terminals


Product type	Features	Order No.
Set4 Spring Terminals	1 set of spring-loaded terminals	751 016
Set4 Screw Terminals	1 set of screw terminals	750 016

#### Jumper

Product type	Features	Order No.
USB Memory 512MB	Pilz USB memory, 512 MB	779 213

## Input module

### PNOZ m EF 16DI

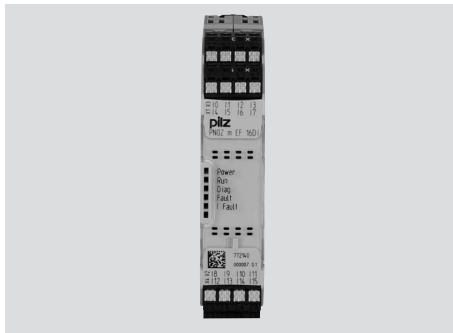

## Overview

### Unit features

Using the product PNOZ m EF 16DI:


Expansion module for connection to a base unit from the configurable control system .

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ 16 inputs for connecting, for example:
  - E-STOP pushbutton
  - Two-hand button
  - Safety gate limit switch
  - Start button
  - Light beam devices
  - Scanner
  - Enabling switch
  - PSEN
  - Operating mode selector switch
- ▶ LED for:
  - Error messages
  - Diagnostics
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Plug-in connection terminals:  
Either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Input module PNOZ m EF 16DI

### Front view

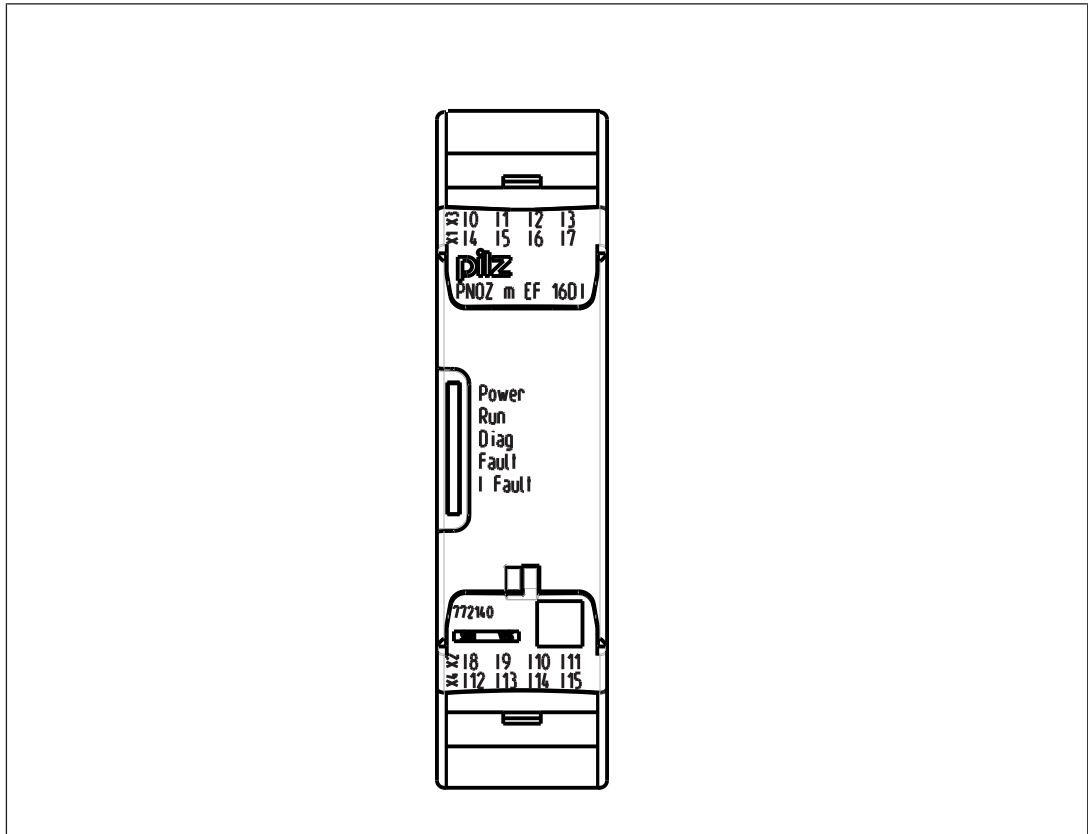

#### Legend:

- ▶ Inputs I0 – I15
- ▶ LEDs:
  - POWER
  - Run
  - Diag
  - Fault
  - I Fault

## Input module PNOZ m EF 16DI

### Function description

#### Functions

The expansion module provides additional inputs.


The function of the inputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

#### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion \[📖 29\]](#)".


#### Block diagram

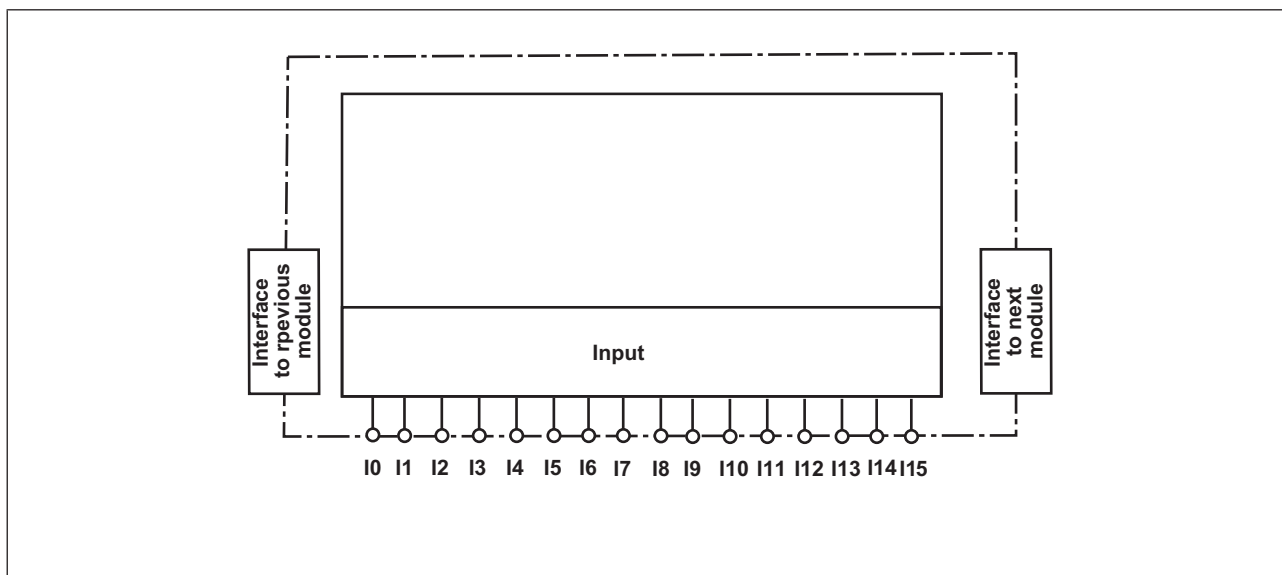

## Input module PNOZ m EF 16DI

### Installation

#### Dimensions in mm

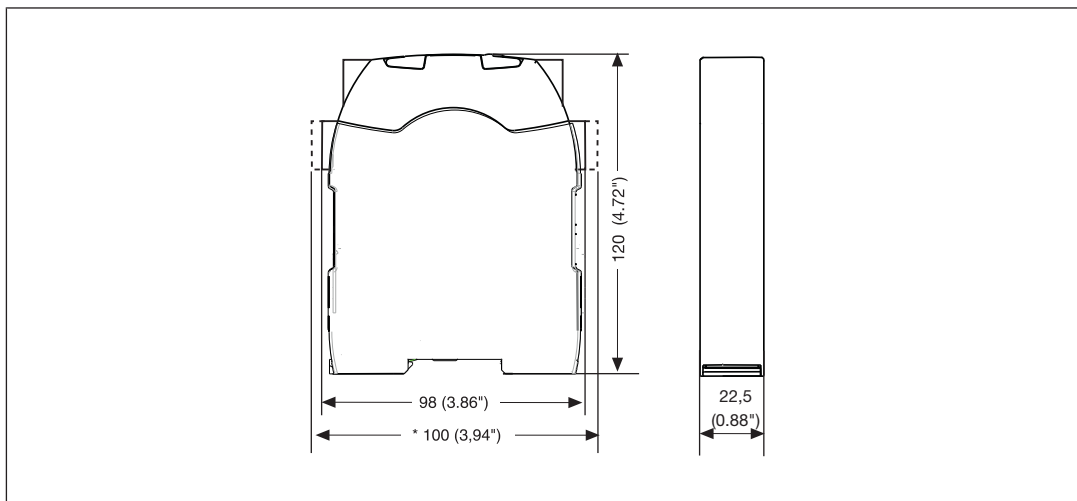

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[707\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.

#### Connection

Input circuit	Single-channel	Dual-channel
Example: E-Stop without detection of shorts across contacts		
Example: E-Stop with detection of shorts across contacts		



## Input module PNOZ m EF 16DI

### Technical details

<b>General</b>	
Approvals	<b>BG, CCC, CE, GOST, TÜV, cULus Listed</b>
Application range	<b>Failsafe</b>
Module's device code	<b>00E2h</b>
<b>Electrical data</b>	
Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>24,0 V</b>
Kind	<b>DC</b>
Current consumption	<b>46 mA</b>
Power consumption	<b>1,1 W</b>
Max. power dissipation of module	<b>3,00 W</b>
Status indicator	<b>LED</b>
<b>Inputs</b>	
Number	<b>16</b>
Input voltage in accordance with EN 61131-2 Type 1	<b>24 V DC</b>
Input current at rated voltage	<b>5 mA</b>
Input current range	<b>2,5 - 5,3 mA</b>
Pulse suppression	<b>0,5 ms</b>
Maximum input delay	<b>8 ms</b>
Potential isolation	<b>No</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>5,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>

## Input module PNOZ m EF 16DI

<b>Environmental data</b>	
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Max. cable length	
Max. cable length per input	<b>1,0 km</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Mounting type	<b>plug-in</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals	<b>0,50 Nm</b>
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	<b>0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>2</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>
Dimensions	
Height	<b>101,4 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>120,0 mm</b>

## Input module PNOZ m EF 16DI

### Mechanical data

Weight	95 g
--------	------

Where standards are undated, the 2012-08 latest editions shall apply.

### Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
------	----------------	-------------------------	-------------------------------	-----------------	---------------------------------	--

### Logic

CPU	–	PL e	Cat. 4	SIL CL 3	2,84E-10	20
-----	---	------	--------	----------	----------	----

### Input

SC inputs	1-channel	PL d	Cat. 2	SIL CL 2	2,10E-09	20
SC inputs	2-channel	PL e	Cat. 4	SIL CL 3	4,27E-11	20
SC inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	2,10E-10	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

### Order reference

#### Product

Product type	Features	Order No.
PNOZ m EF 16DI	Expansion module	772 140

### Accessories

#### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	751 004
Set screw terminals	1 set of screw terminals	750 004

#### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

## Input and output modules PNOZ m EF 4DI4DOR



### Overview

#### Unit features

Using the product PNOZ m EF 4DI4DOR:

Expansion module for connection to a base unit from the configurable control system PNOZmulti 2 .

The product has the following features:


- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Positive-guided relay outputs:
  - 4 safety outputs
  - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ 4 inputs for connecting, for example:
  - E-STOP pushbutton
  - Two-hand button
  - Safety gate limit switch
  - Start button
  - Light beam devices
  - Scanner
  - Enabling switch
  - PSEN
  - Operating mode selector switch
- ▶ LED for:
  - Error messages
  - Diagnostics
  - Supply voltage
  - Output circuits

## Input and output modules

### PNOZ m EF 4DI4DOR

- Input circuits
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Plug-in connection terminals:  
Either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

#### Front view

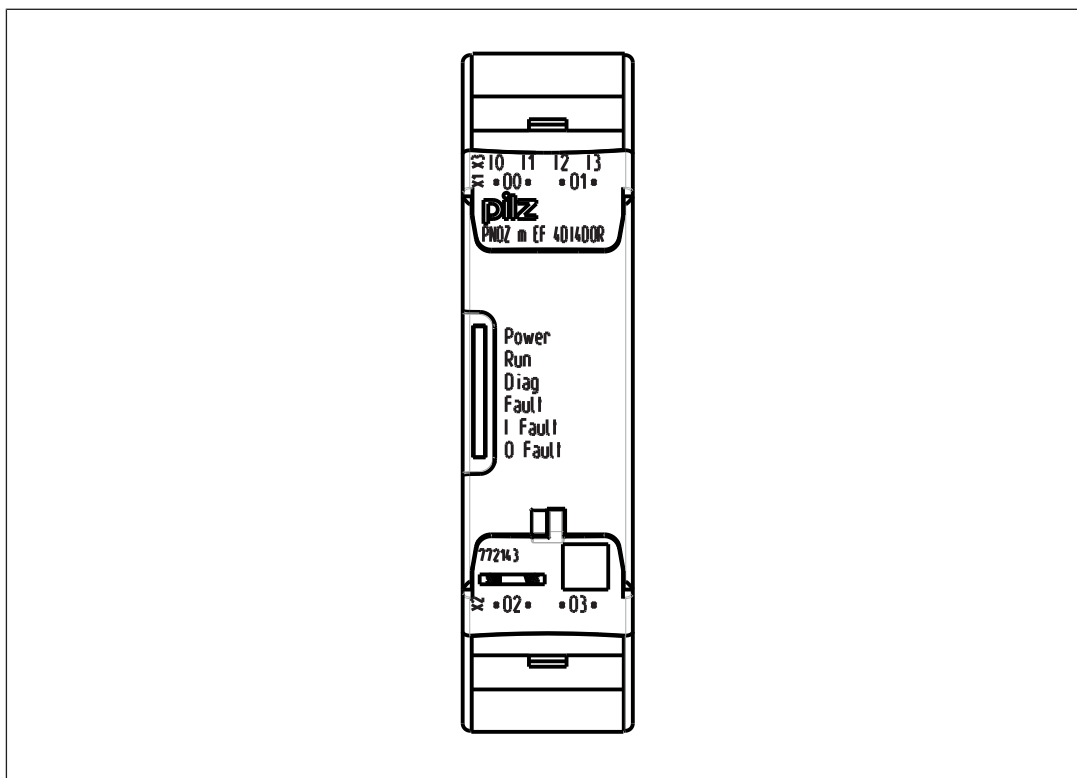

#### Legend:

- ▶ Inputs I0 – I3
- ▶ Outputs O0 – O3
- ▶ LEDs:
  - POWER
  - Run
  - Diag
  - Fault
  - I Fault

## Input and output modules PNOZ m EF 4DI4DOR

- O Fault

### Function description


#### Functions

The expansion module provides additional inputs and additional relay outputs.


The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti control system, plus connection examples.

#### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion](#) [ 29]".


#### Block diagram

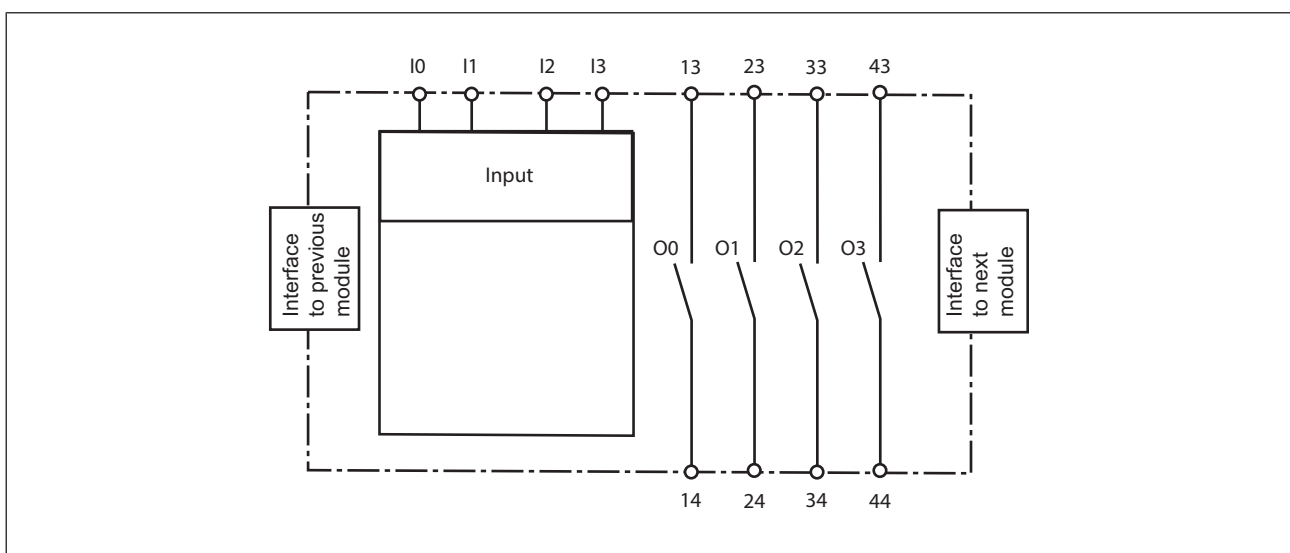

## Input and output modules PNOZ m EF 4DI4DOR

### Installation

#### Dimensions in mm

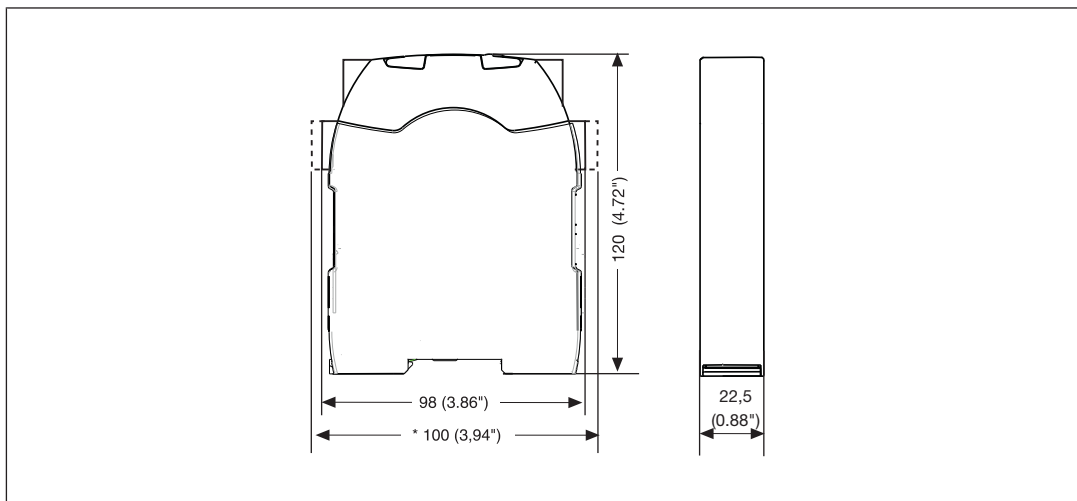

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[715\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.

#### Connection

Input circuit	Single-channel	Dual-channel
Example: E-Stop without detection of shorts across contacts		
Example: E-Stop with detection of shorts across contacts		

## Input and output modules PNOZ m EF 4DI4DOR

Relay outputs		
Dual output		
Single output		
Feedback loop		
Contacts from external contactors		



## Input and output modules PNOZ m EF 4DI4DOR

### Technical details

<b>General</b>	
Approvals	<b>BG, CCC, CE, GOST, TÜV, cULus Listed</b>
Application range	<b>Failsafe</b>
Module's device code	<b>00E1h</b>
<b>Electrical data</b>	
Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>24,0 V</b>
Kind	<b>DC</b>
Current consumption	<b>122 mA</b>
Power consumption	<b>3,0 W</b>
Max. power dissipation of module	<b>6,50 W</b>
Status indicator	<b>LED</b>
Permitted loads	<b>inductive, resistive</b>
<b>Inputs</b>	
Number	<b>4</b>
Input voltage in accordance with EN 61131-2 Type 1	<b>24 V DC</b>
Input current at rated voltage	<b>5 mA</b>
Input current range	<b>2,5 - 5,3 mA</b>
Pulse suppression	<b>0,5 ms</b>
Maximum input delay	<b>8 ms</b>
Potential isolation	<b>No</b>
<b>Relay outputs</b>	
Utilisation category	
In accordance with the standard	<b>EN 60947-4-1</b>
Utilisation category of safety contacts	
AC1 at	<b>250 V</b>
Min. current	<b>10,00 mA</b>
Max. current	<b>6,0 A</b>
Max. power	<b>1500 VA</b>
DC1 at	<b>24 V</b>
Min. current	<b>10,00 mA</b>
Max. current	<b>6,0 A</b>
Max. power	<b>144 W</b>
Utilisation category	
In accordance with the standard	<b>EN 60947-5-1</b>

## Input and output modules PNOZ m EF 4DI4DOR

### Relay outputs

#### Utilisation category of safety contacts

AC15 at	<b>230 V</b>
Max. current	<b>3,0 A</b>
Max. power	<b>690 W</b>
DC13 (6 cycles/min) at	<b>24 V</b>
Max. current	<b>3,0 A</b>
Max. power	<b>72 W</b>

#### Utilisation category in accordance with UL

Voltage	<b>240 V AC G.U. Resistive</b>
With current	<b>6,0 A</b>
Voltage	<b>24 V DC G. U. Resistive</b>
With current	<b>6,0 A</b>
Pilot Duty; R300	<b>24 V DC</b>
With current	<b>3,0 A</b>
Pilot Duty; B300	<b>230 V AC</b>
With current	<b>3,0 A</b>

#### Airgap creepage between

Relay contacts	<b>3 mm</b>
Relay contacts and other circuits	<b>5,5 mm</b>

#### External contact fuse protection, safety contacts

In accordance with the standard	<b>VDE 0660</b>
Blow-out fuse, quick	<b>10 A</b>
Blow-out fuse, slow	<b>6 A</b>

Switch-off delay **22 ms**

Contact material **AgCuNi + 0,2 µm Au**

Potential isolation **yes**

### Environmental data

#### Ambient temperature

In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>

#### Storage temperature

In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>

#### Climatic suitability

In accordance with the standard **EN 60068-2-30, EN 60068-2-78**

Condensation during operation **Not permitted**

EMC **EN 61131-2**

## Input and output modules PNOZ m EF 4DI4DOR

### Environmental data

#### Vibration

In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>5,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>

#### Shock stress

In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>

Max. operating height above sea level	<b>2000 m</b>
---------------------------------------	---------------

#### Airgap creepage

In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>

Rated insulation voltage	<b>30 V</b>
--------------------------	-------------

#### Protection type

In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

### Mechanical data

Mounting position	<b>Horizontal on top hat rail</b>
-------------------	-----------------------------------

Mechanical life	<b>10,000,000 cycles</b>
-----------------	--------------------------

#### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

#### Max. cable length

Max. cable length per input	<b>1,0 km</b>
-----------------------------	---------------

#### Material

Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>

Connection type	<b>Spring-loaded terminal, screw terminal</b>
-----------------	---

Mounting type	<b>plug-in</b>
---------------	----------------

#### Conductor cross section with screw terminals

1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>

Torque setting with screw terminals	<b>0,50 Nm</b>
-------------------------------------	----------------

#### Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector	<b>0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
---------------------------------------	--

Spring-loaded terminals: Terminal points per connection	<b>2</b>
---	----------

Stripping length with spring-loaded terminals	<b>9 mm</b>
---	-------------

## Input and output modules PNOZ m EF 4DI4DOR

### Mechanical data

#### Dimensions

Height	101,4 mm
Width	22,5 mm
Depth	120,0 mm
Weight	190 g

Where standards are undated, the 2012-04 latest editions shall apply.

### Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
------	----------------	-------------------------	-------------------------------	-----------------	---------------------------------	--

#### Logic

CPU	–	PL e	Cat. 4	SIL CL 3	2,84E-10	20
-----	---	------	--------	----------	----------	----

#### Input

SC inputs	1-channel	PL d	Cat. 2	SIL CL 2	2,10E-09	20
SC inputs	2-channel	PL e	Cat. 4	SIL CL 3	4,27E-11	20
SC inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	2,10E-10	20

#### Output

Relay outputs	1-channel	PL c	Cat. 1	-	3,75E-08	20
Relay outputs	2-channel	PL e	Cat. 4	SIL CL 3	7,52E-12	20

Requirement on 1-channel relay outputs for Category 1 in accordance with EN 13849-1: An additional output switches to a safe condition in the event of an error or, if that is impossible, signals a hazardous condition.

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switching frequency and the load on the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

## Input and output modules PNOZ m EF 4DI4DOR

### Supplementary data

#### Service life graph for the relay contacts

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

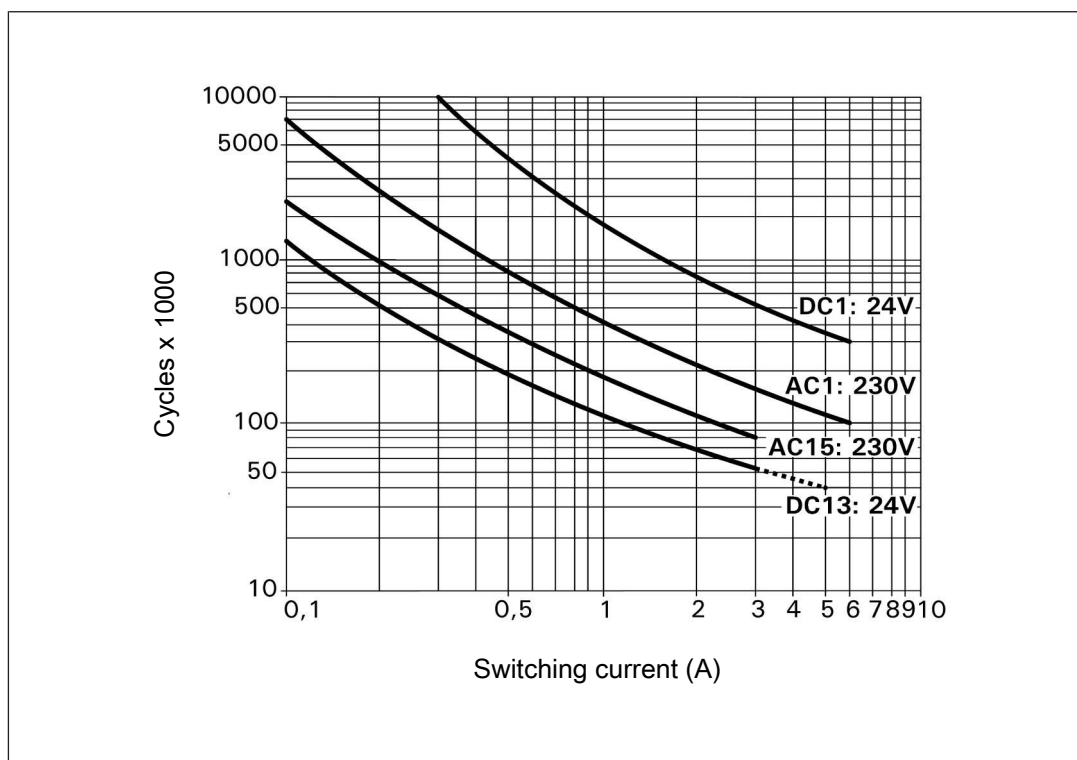


Fig.: Service life graphs at 24 VDC and 230 VAC

## Input and output modules PNOZ m EF 4DI4DOR

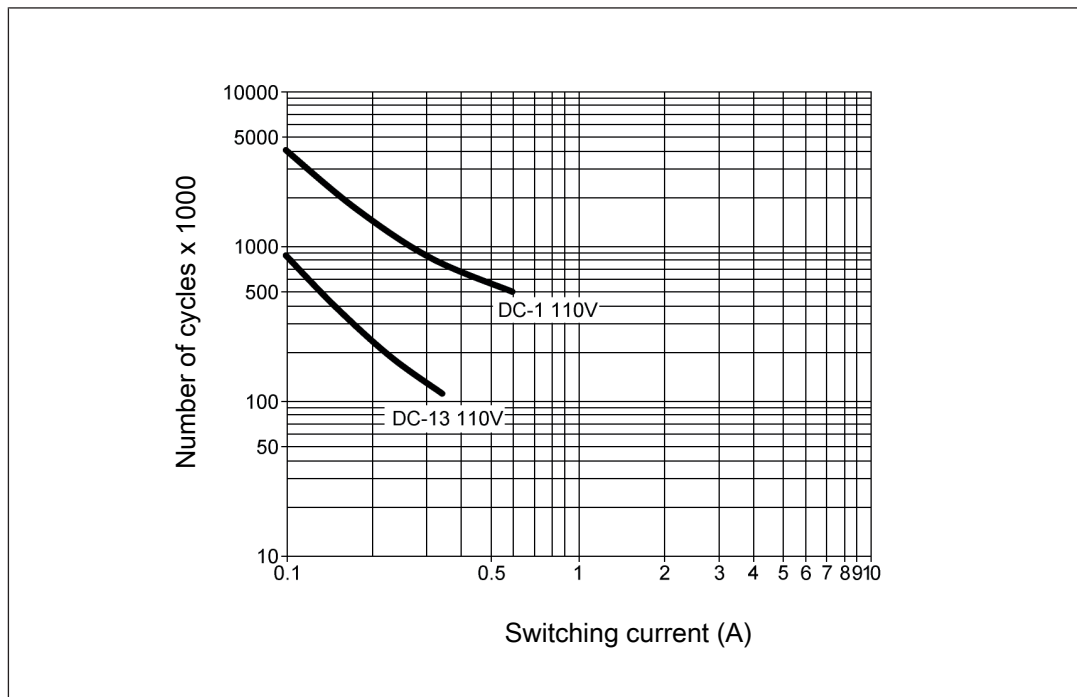


Fig.: Service life graphs at 110 VDC

### Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles


Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[715\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

## Input and output modules PNOZ m EF 4DI4DOR

### Permitted ambient temperature $T_{amb}$ dependent on the total current $I_{sum}$

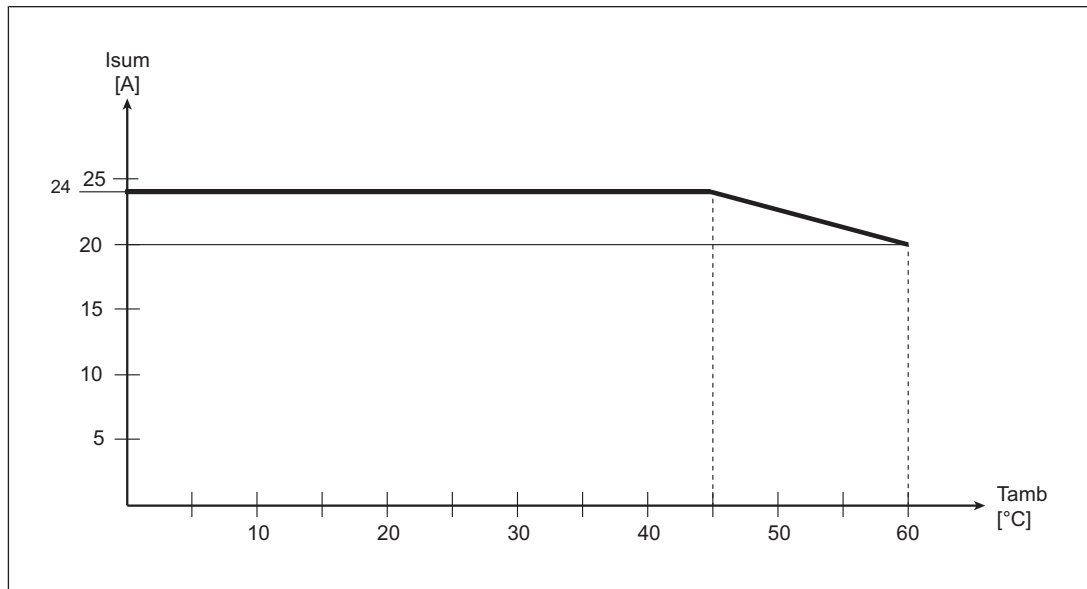

Max. permitted total current of relay outputs at an ambient temperature of  $< 45\text{ °C}$ : 24 A

Max. permitted total current of relay outputs at an ambient temperature of  $= 60\text{ °C}$ : 20 A

### Order reference

#### Product

Product type	Features	Order No.
PNOZ m EF 4DI4DOR	Expansion module	772 143

### Accessories


#### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	751 004
Set screw terminals	1 set of screw terminals	750 004

#### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

## Input and output modules PNOZ m EF 8DI4DO

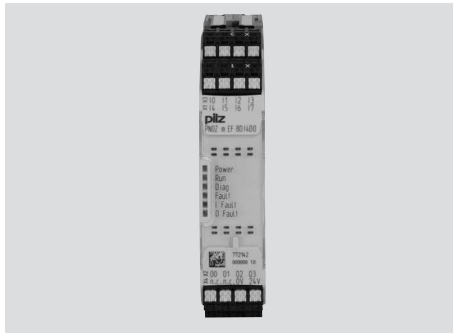

### Overview

#### Unit features

Using the product PNOZ m EF 8DI4DO:

Expansion module for connection to a base unit from the configurable control system PNOZmulti 2 .

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
  - 4 safety outputs
  - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ 8 inputs for connecting, for example:
  - E-STOP pushbutton
  - Two-hand button
  - Safety gate limit switch
  - Start button
  - Light beam devices
  - Scanner
  - Enabling switch
  - PSEN
  - Operating mode selector switch
- ▶ LED for:
  - Error messages
  - Diagnostics
  - Supply voltage
  - Output circuits




## Input and output modules

### PNOZ m EF 8DI4DO

- Input circuits
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Plug-in connection terminals:  
Either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

#### Front view

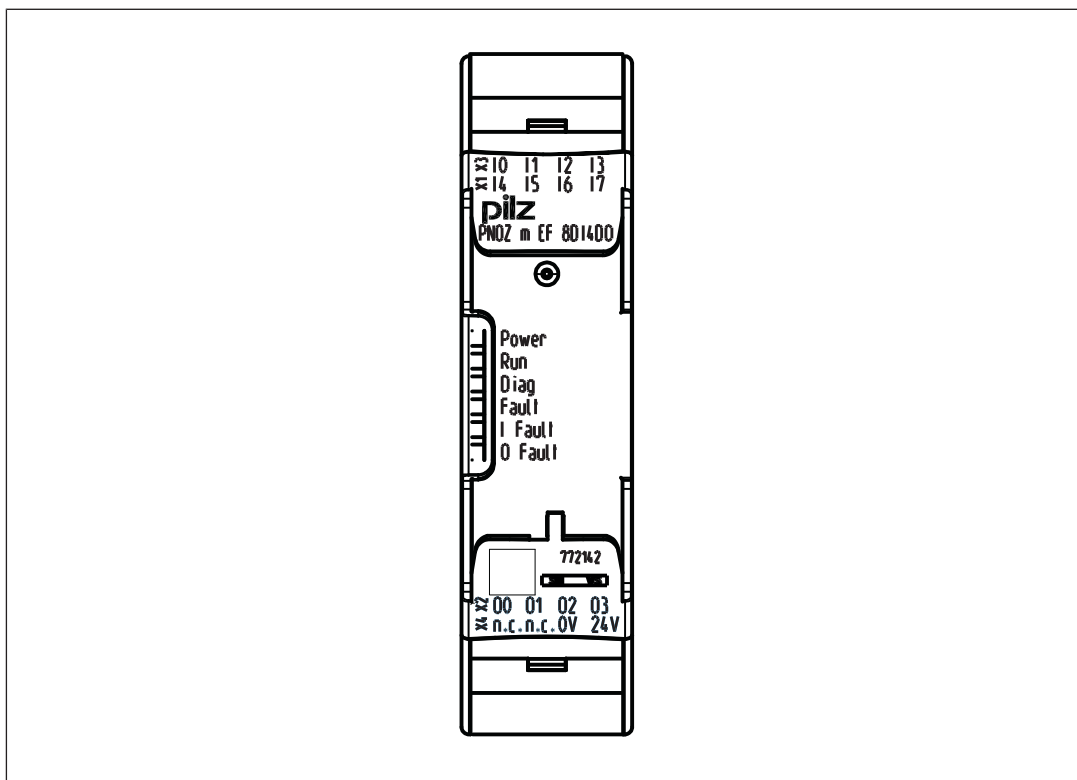

#### Key:

- ▶ 0 V, 24 V: Supply connections
- ▶ Inputs I0 – I7
- ▶ Outputs O0 – O3
- ▶ LEDs:
  - POWER
  - Run
  - Diag
  - Fault

## Input and output modules PNOZ m EF 8DI4DO

- I Fault
- O Fault

### Function description

#### Functions

The expansion module provides additional inputs and additional semiconductor outputs.


The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti control system, plus connection examples.

#### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion \[📖 29\]](#)".


#### Block diagram

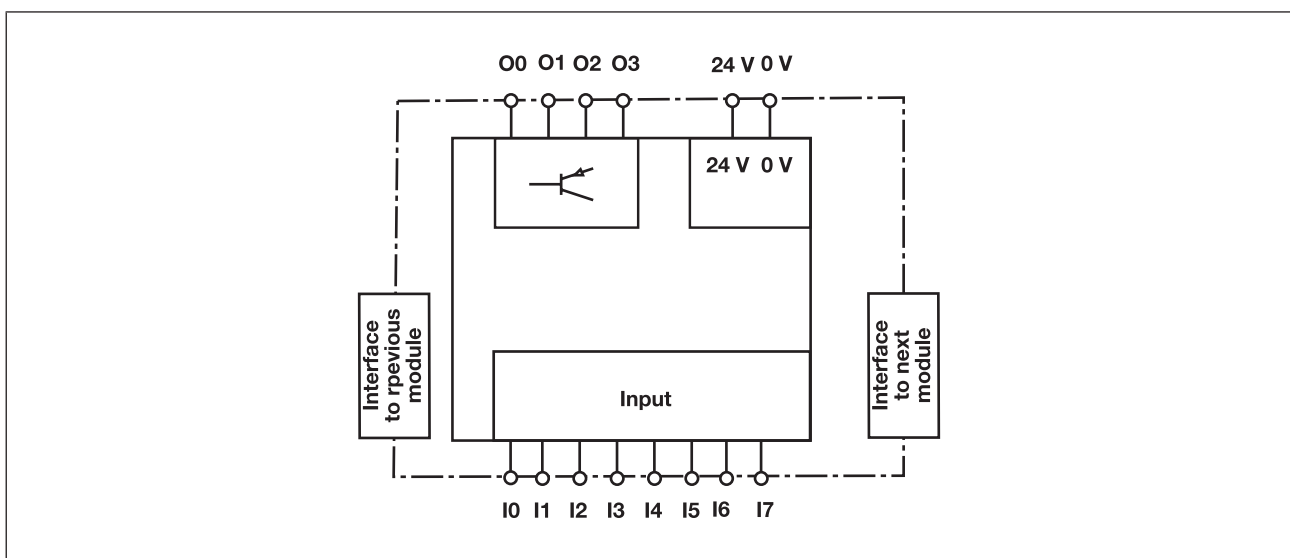

## Input and output modules PNOZ m EF 8DI4DO

### Installation

#### Dimensions in mm

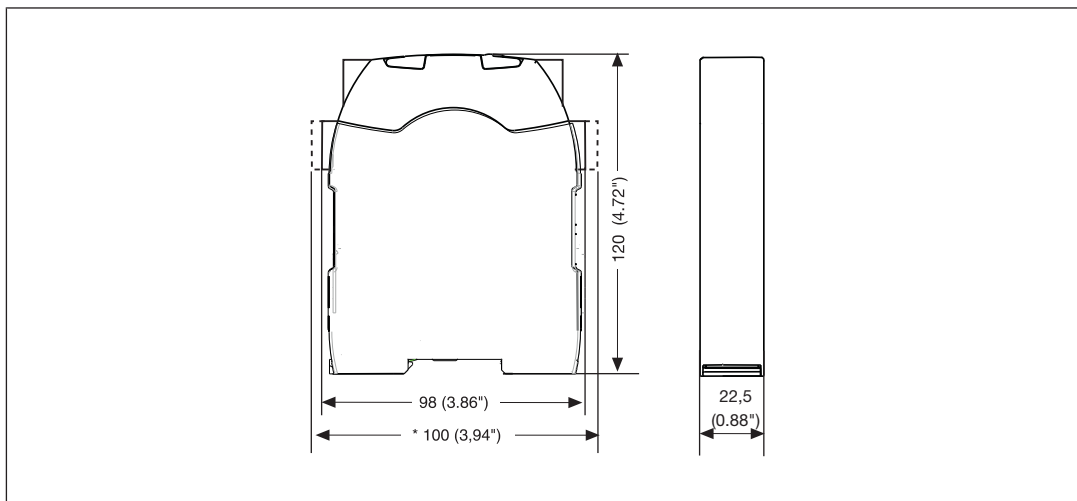

### Commissioning


#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[727\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.

#### Connection

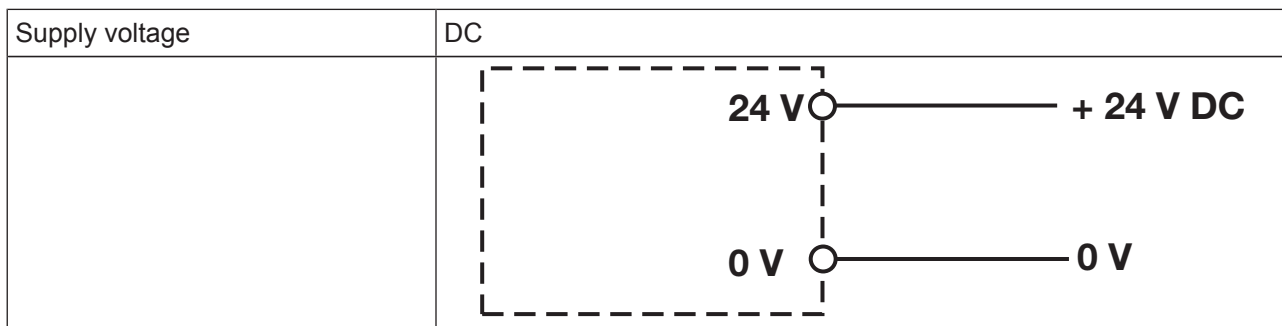

Supply voltage

## Input and output modules PNOZ m EF 8DI4DO

Input circuit	Single-channel	Dual-channel
Example: E-Stop without detection of shorts across contacts		
Example: E-Stop with detection of shorts across contacts		


Connection examples for the input circuit

Redundant output		
Single output		
Single output with advanced fault detection*		

Connection examples for semiconductor outputs

## Input and output modules PNOZ m EF 8DI4DO

\*Two loads may be connected to each safety output with advanced fault detection, even on applications in accordance with EN IEC 62061, SIL CL 3. Prerequisite: Feedback loop is connected, shorts across contacts and external power sources are excluded (e.g. through separate multicore cables). Please note that, in the event of an error in the feedback loop, the safety system switches to a safe condition and shuts down **all** the outputs.

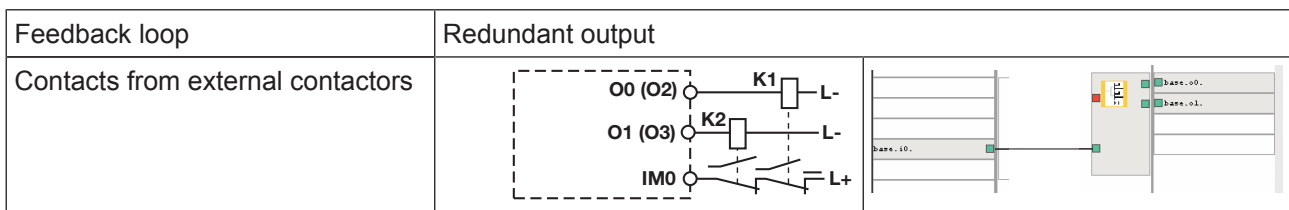

Connection examples for feedback loop

### Technical details

General	
Approvals	<b>BG, CCC, CE, GOST, TÜV, cULus Listed</b>
Application range	<b>Failsafe</b>
Module's device code	<b>00E0h</b>
Electrical data	
Supply voltage	
for	<b>Supply to the SC outputs</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Current load capacity at UB	<b>8,0 A</b>
Potential isolation	<b>yes</b>
Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>24,0 V</b>
Kind	<b>DC</b>
Current consumption	<b>39 mA</b>
Power consumption	<b>1,0 W</b>
Max. power dissipation of module	<b>4,50 W</b>
Status indicator	<b>LED</b>
Permitted loads	<b>inductive, capacitive, resistive</b>
Inputs	
Number	<b>8</b>
Input voltage in accordance with EN 61131-2 Type 1	<b>24 V DC</b>
Input current at rated voltage	<b>5 mA</b>
Input current range	<b>2,5 - 5,3 mA</b>

## Input and output modules PNOZ m EF 8DI4DO

<b>Inputs</b>	
Pulse suppression	<b>0,5 ms</b>
Maximum input delay	<b>8 ms</b>
Potential isolation	<b>No</b>
<b>Semiconductor outputs</b>	
Number of positive-switching single-pole semiconductor outputs	<b>4</b>
Switching capability	
Voltage	<b>24 V</b>
Typ. output current at "1" signal and rated voltage of semiconductor output	<b>2,00 A</b>
Permitted current range	<b>0,00 - 2,50 A</b>
Residual current at "0" signal	<b>0,05 mA</b>
Max. transient pulsed current	<b>12 A</b>
Max. capacitive load	<b>1 µF</b>
Max. internal voltage drop	<b>500 mV</b>
Max. duration of off time during self test	<b>330 µs</b>
Switch-off delay	<b>3 ms</b>
Potential isolation	<b>yes</b>
Short circuit-proof	<b>yes</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>5,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>

## Input and output modules

### PNOZ m EF 8DI4DO

<b>Environmental data</b>	
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	
	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>SC output and system voltage</b>
Type of potential isolation	<b>Basic insulation</b>
Rated surge voltage	
	<b>2500 V</b>
<b>Mechanical data</b>	
Mounting position	
	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Max. cable length	
Max. cable length per input	<b>1,0 km</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	
	<b>Spring-loaded terminal, screw terminal</b>
Mounting type	
	<b>plug-in</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals	
	<b>0,50 Nm</b>
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	<b>0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
Spring-loaded terminals: Terminal points per connection	
	<b>2</b>
Stripping length with spring-loaded terminals	
	<b>9 mm</b>
Dimensions	
Height	<b>101,4 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>120,0 mm</b>
Weight	
	<b>105 g</b>

## Input and output modules PNOZ m EF 8DI4DO

Where standards are undated, the 2012-04 latest editions shall apply.

### Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
<b>Logic</b>						
CPU	–	PL e	Cat. 4	SIL CL 3	2,84E-10	20
<b>Input</b>						
SC inputs	1-channel	PL d	Cat. 2	SIL CL 2	2,10E-09	20
SC inputs	2-channel	PL e	Cat. 4	SIL CL 3	4,27E-11	20
SC inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	2,10E-10	20
<b>Output</b>						
SC outputs	1-channel with advanced fault detection	PL e	Cat. 4	SIL CL 3	2,12E-11	20
SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	2,29E-10	20
SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	1,64E-10	20


All the units used within a safety function must be considered when calculating the safety characteristic data.



## Input and output modules PNOZ m EF 8DI4DO

### Supplementary data

Permitted ambient temperature  $T_{amb}$  dependent on the total current  $I_{sum}$

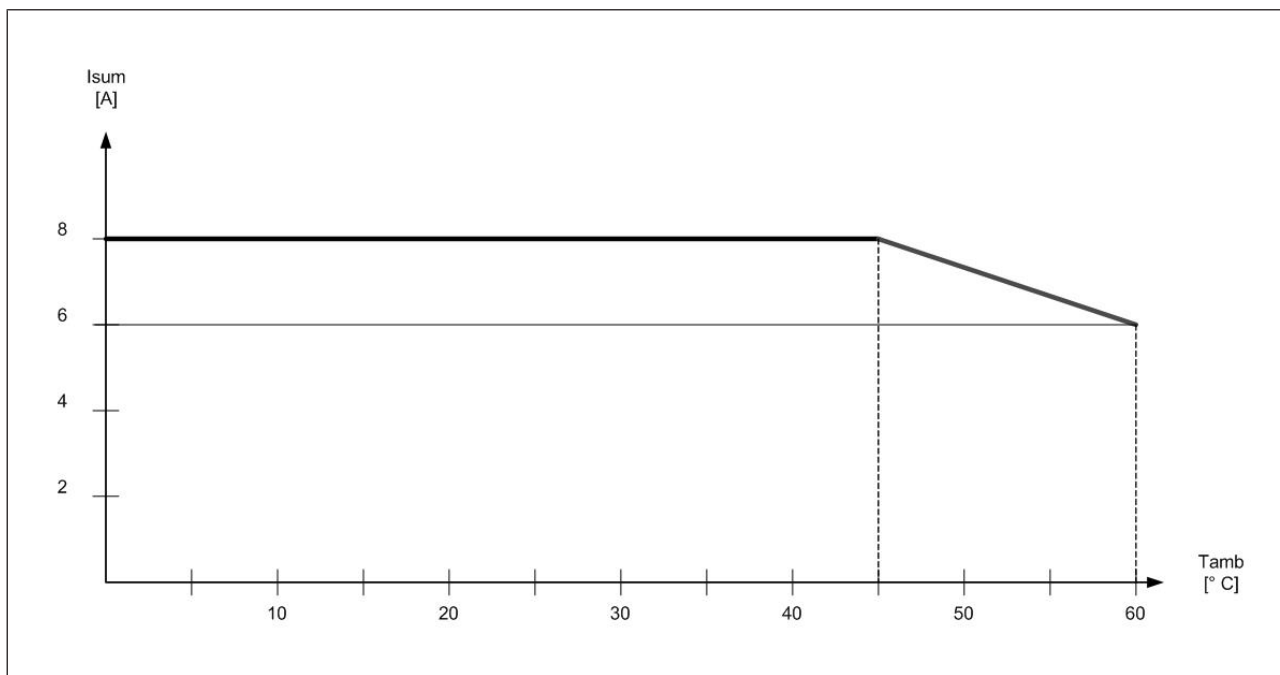

### Order reference

#### Product

Product type	Features	Order No.
PNOZ m EF 8DI4DO	Expansion module	772 142

#### Accessories

##### Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	751 004
Set screw terminals	1 set of screw terminals	750 004

## Input and output modules PNOZ m EF 8DI4DO

---

### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

## Motion monitoring modules PNOZ m EF 1MM



### Overview

#### Unit features

Using the product PNOZ m EF 1MM:

Expansion module for connection to a base unit from the configurable control system PNOZmulti 2 .


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Monitoring of 1 axis
- ▶ Measured value recorded by proximity switch and encoder
- ▶ Monitoring functions
  - Safe speed monitoring (SSM)
  - Safe speed range monitoring (SSR-M)
  - Safe direction of movement monitoring (SDI-M)
  - Safe operating stop monitoring (SOS-M)
  - Safe stop 1 monitoring (SS1-M)
  - Safe stop 2 monitoring (SS2-M)
  - Analogue voltage (track S)
- ▶ LED indicator for:
  - Supply voltage
  - Diagnostics
  - Axis status
  - Error
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Motion monitoring modules

### PNOZ m EF 1MM

#### Front view

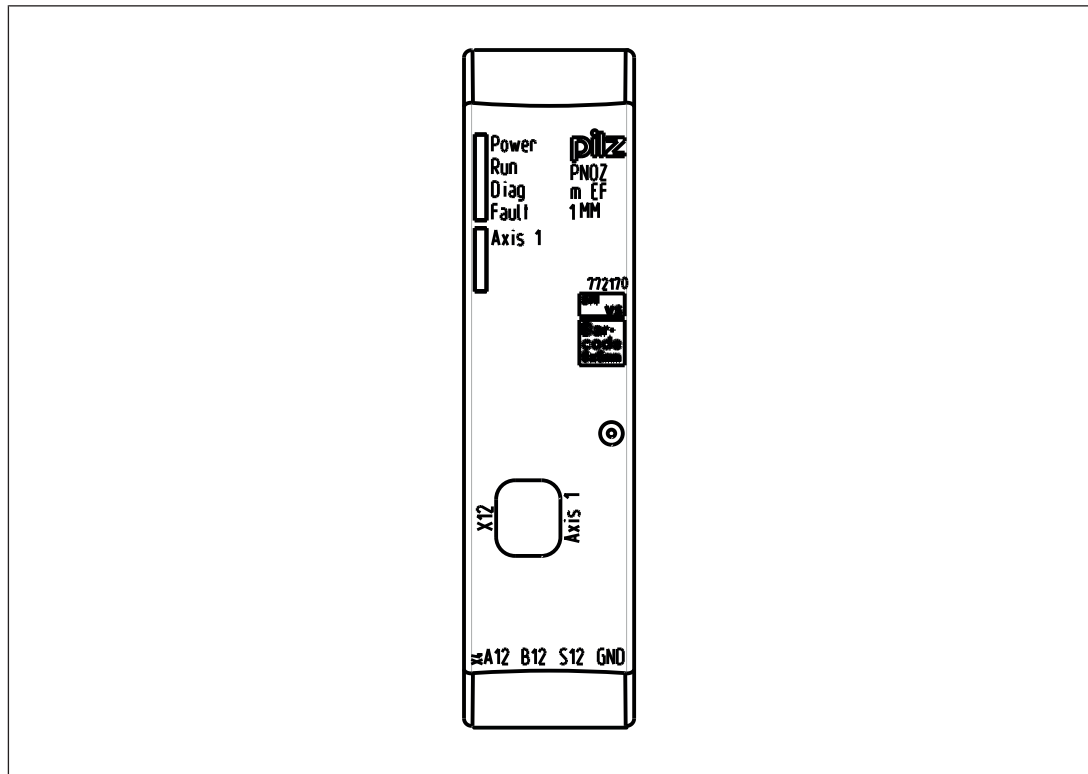

#### Legend:

- ▶ X4: Connection for proximity switch at axis 1
- ▶ X12: Mini IO socket for connecting encoder or proximity switch at axis 1.
- ▶ LEDs:
  - Power
  - Run
  - Diag
  - Fault
  - Axis 1

## Motion monitoring modules PNOZ m EF 1MM

### Function description

#### Operation


The motion monitoring module PNOZ m EF 1MM can monitor one axis. The motion monitoring module signals the status of the monitored values to the base unit. Depending on the implemented safety circuit, the values may be transferred from the base unit to an output on the control system. Proximity switches or encoders are used to record the values.

The configuration of the motion monitoring module is described in detail in the PNOZmulti Configurator's online help.

The relay conforms to the following safety criteria:

- ▶ The circuit is redundant with built-in self-monitoring.
- ▶ The safety function remains effective in the case of a component failure.

#### Block diagram

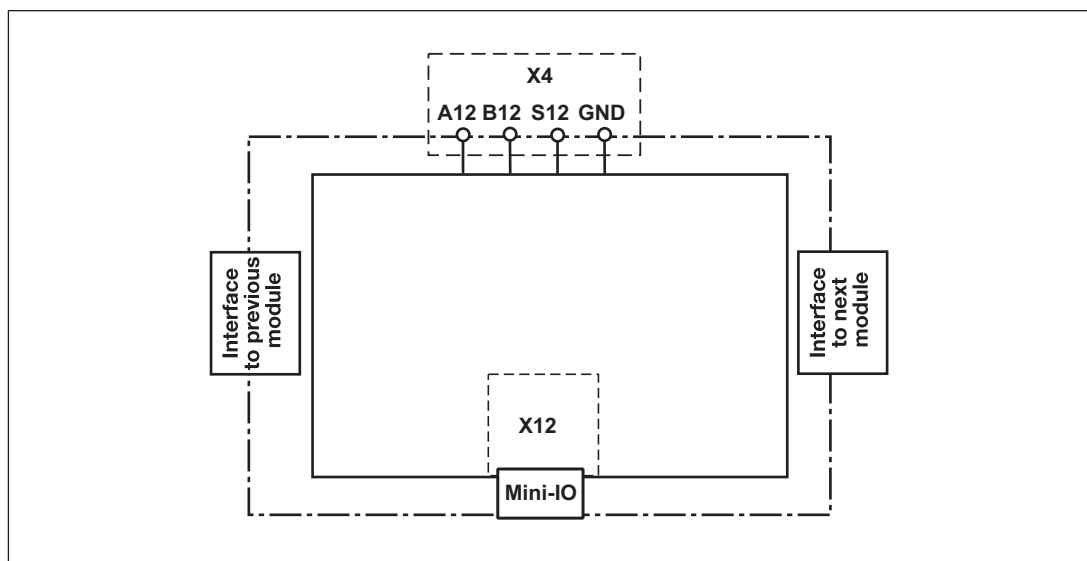

#### Monitoring functions

The motion monitoring module PNOZ m EF 1MM supports the following monitoring functions.

Please note that the position monitoring functions SOS-M, SDI-M and SS2-M cannot be used in conjunction with 2 proximity switches, as no position can be detected.

## Motion monitoring modules PNOZ m EF 1MM

### Safe speed monitoring

The **Safe speed monitoring** function (SSM) monitors the current speed to see if a limit value is exceeded.

If the configured limit value is exceeded, the output switches off. As soon as the value falls below the limit value (plus hysteresis), the output switches off again.


If a manual reset is configured, the output will not switch back on until the value is inside the limit value (plus hysteresis) and the reset input is activated.

12 limit values can be configured per axis in the PNOZmulti Configurator.

A tolerance range may also be set for the limit values used to monitor the speed. This tolerance range modifies the set limit values. As a result, one-off or periodic overshoots that exceed the limit values can be tolerated.

The following values can be configured for the tolerance range:

- ▶ Tolerance time ( $t_1$ ), which takes into account the length of the overshoots (maximum time for which the limit value may be exceeded). It must not be possible that the sum of all the overshoots exceeds the tolerance time ( $t_1$ ) within a tolerance period ( $t_2$ ).
- ▶ Tolerance period ( $t_2$ ), which takes into account the oscillation period (minimum time that must elapse between one limit value overshoot and the next)
- ▶ Tolerance amount (%), which takes into account the amplitude of the overshoots (maximum permitted percentage by which the configured limit values may be exceeded)

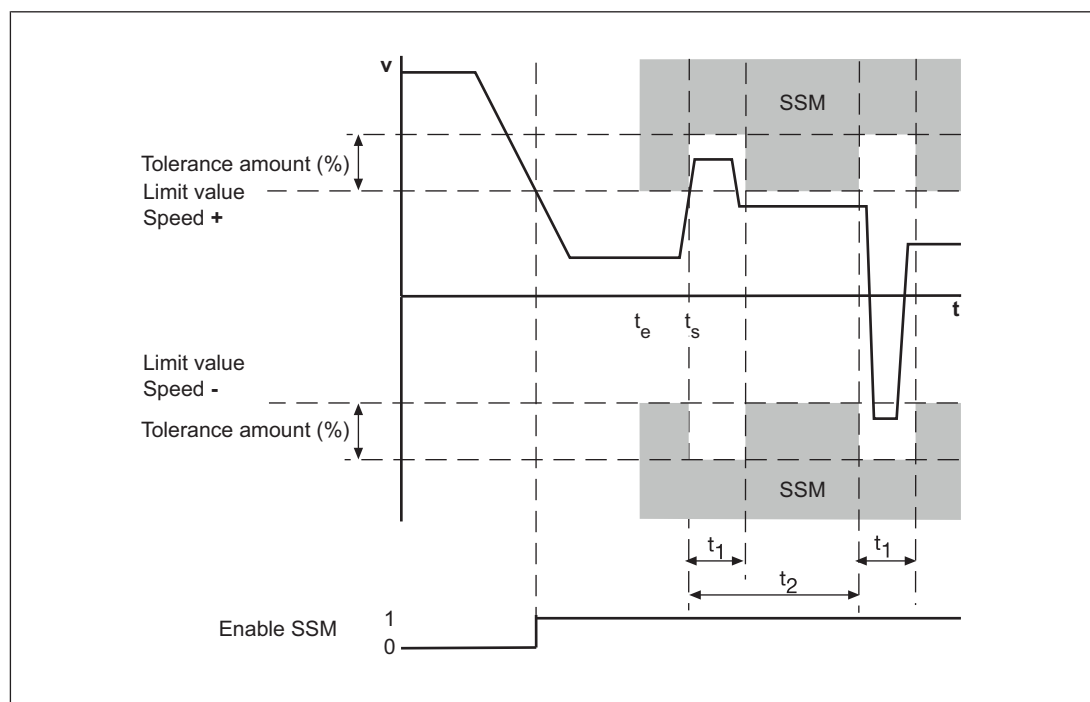

### Legend:

- ▶ Enable SSM:
  - "1": Monitored limit value not exceeded

## Motion monitoring modules PNOZ m EF 1MM

- "0": Monitored limit value exceeded
- ▶  $t_s$ : Speed  $v$  exceeds the limit value and activates the tolerance range (tolerance time, tolerance period, tolerance amount)
- ▶  $t_1$ : Tolerance time
- ▶  $t_2$ : Tolerance period
- ▶ Tolerance amount (%): Tolerance amount of limit value in both directions

### Safe speed range monitoring

The **Safe speed range monitoring** function (SSR-M) monitors the current speed to ensure it stays within a maximum and minimum permitted limit value.

If the speed is outside the configured range, the output switches off. As soon as the speed returns within the configured range (plus hysteresis), the output switches back on.

If manual reset is configured, the output will not switch back on until the value is below the limit value (plus hysteresis) and the reset input is activated.


2 ranges can be configured per axis in the PNOZmulti Configurator.

A tolerance range may also be set for the limit values used to monitor the speed range. This tolerance range modifies the set limit values. As a result, one-off or periodic overshoots that exceed the range limits can be tolerated.

The following values can be configured for the tolerance range:

- ▶ Tolerance time ( $t_1$ ), which takes into account the length of the overshoots (maximum time for which the limit value may be exceeded). It must not be possible that the sum of all the overshoots exceeds the tolerance time ( $t_1$ ) within a tolerance period ( $t_2$ ).
- ▶ Tolerance period ( $t_2$ ), which takes into account the oscillation period (minimum time that must elapse between one limit value overshoot and the next)
- ▶ Tolerance amount as a %, which takes into account the amplitude of the overshoots (maximum permitted percentage by which the limit value may be exceeded)

## Motion monitoring modules PNOZ m EF 1MM

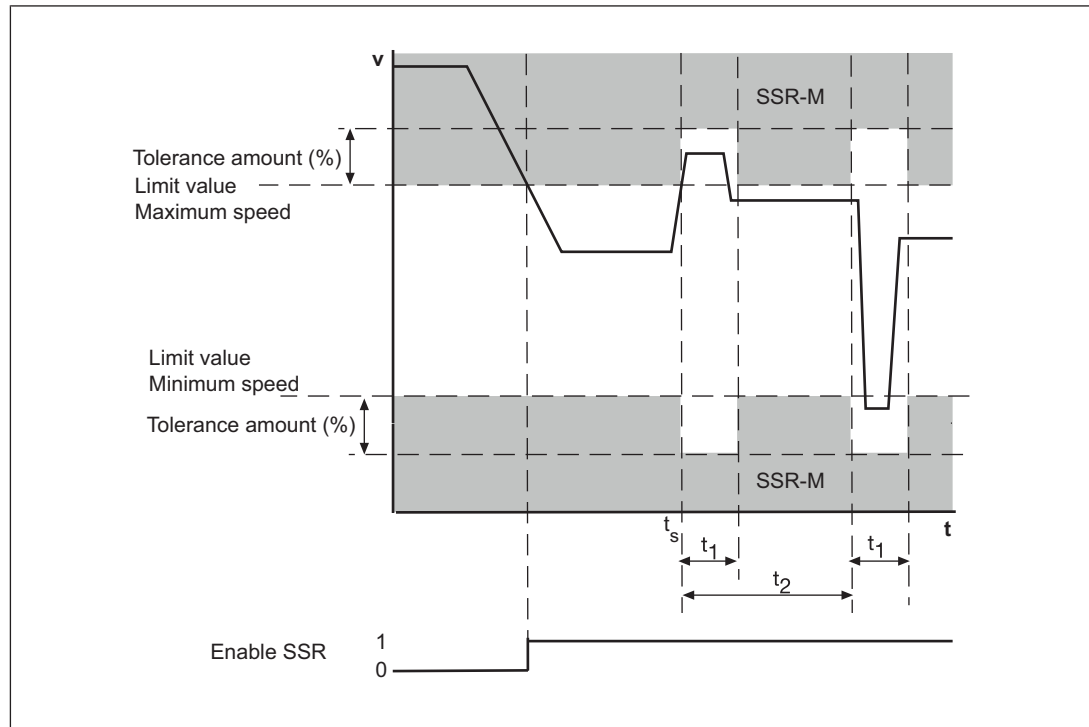

### Legend:

- ▶ Enable SSR:
  - "1": Speed is within the configured range
  - "0": Speed is outside the configured range
- ▶  $t_s$ : Speed  $v$  exceeds the limit value and activates the tolerance range (tolerance time, tolerance period, tolerance amount)
- ▶  $t_1$ : Tolerance time
- ▶  $t_2$ : Tolerance period
- ▶ Tolerance amount (%): Tolerance amount of the two limit values, maximum and minimum speed

### Safe direction monitoring

The **Safe direction monitoring** function (SDI-M) monitors the direction of movement defined for the drive axis (positive or negative). Safe direction of movement monitoring is activated via the start input. It remains active until the configured tolerance is exceeded in the opposite direction. The function can be retriggered at any time by a rising edge at the start input. As a result, the current position can be used at any time as the start point for the monitoring function.

One SDI-M element can be configured per axis for each direction in the PNOZmulti Configurator.




## Motion monitoring modules

### PNOZ m EF 1MM

Please note:

This monitoring function cannot be used in conjunction with 2 proximity switches because position detection is not possible.

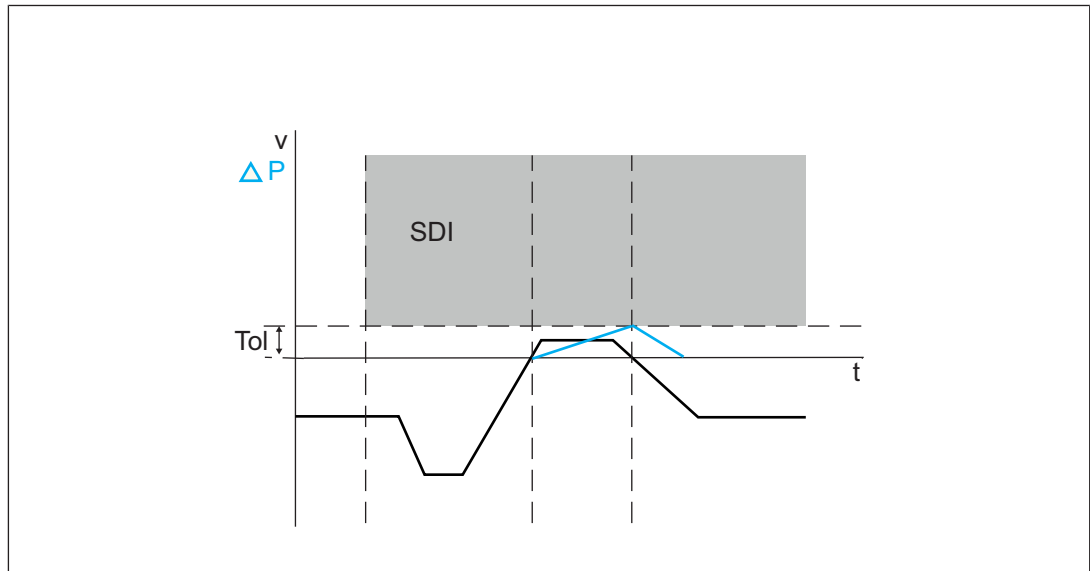

#### Safe operating stop monitoring


The **Safe operating stop monitoring** function (SOS-M) monitors whether the standstill position remains within a configured tolerance window. Safe operating stop monitoring is activated within a rising edge at the start input. It remains active until the value is outside the tolerance band. The function can be retriggered at any time by a rising edge at the start input. As a result, the current position can be used at any time as the start point for the monitoring function.

3 SOS-M elements can be configured per axis in the PNOZmulti Configurator.

Please note:

This monitoring function cannot be used in conjunction with 2 proximity switches because position detection is not possible.

## Motion monitoring modules PNOZ m EF 1MM

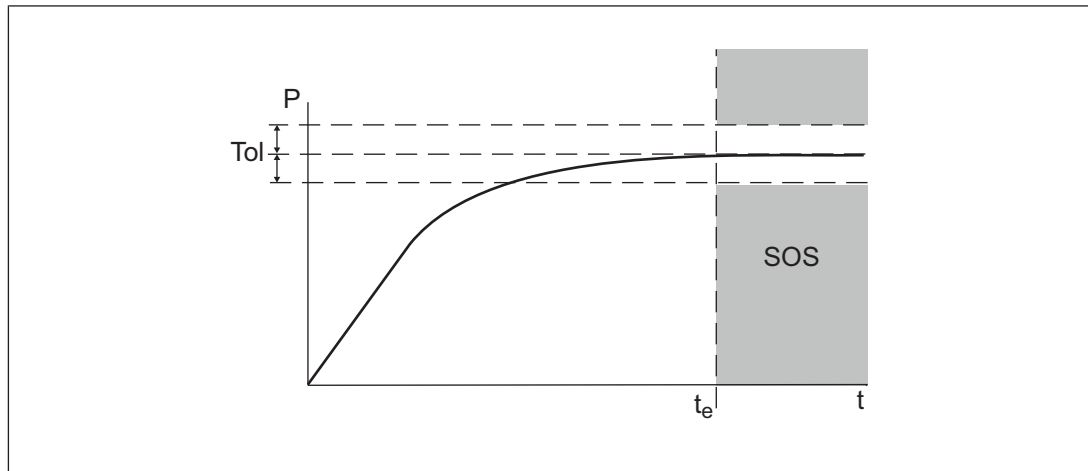

### Legend:

- ▶  $t_e$ : Activation of the monitoring function SOS


### Safe stop 1 monitoring

The **Safe stop 1 monitoring** function (SS1-M) monitors whether the set delay time has elapsed (until controlled braking of the motor) or the value for standstill detection for automatic STO is below the limit value.

- ▶ If the monitoring function SS1-M is triggered, the **Braking ramp** output is switched off. The drive controller's braking ramp is activated.
- ▶ After the set delay time has elapsed or the value for the automatic STO is below the limit value, the output **ST** switches off. The safety function **Safe torque off** (STO) is activated.

A maximum of 1 SS1-M element can be configured per axis in the PNOZmulti Configurator.

Sequence without standstill detection limit value for automatic STO:

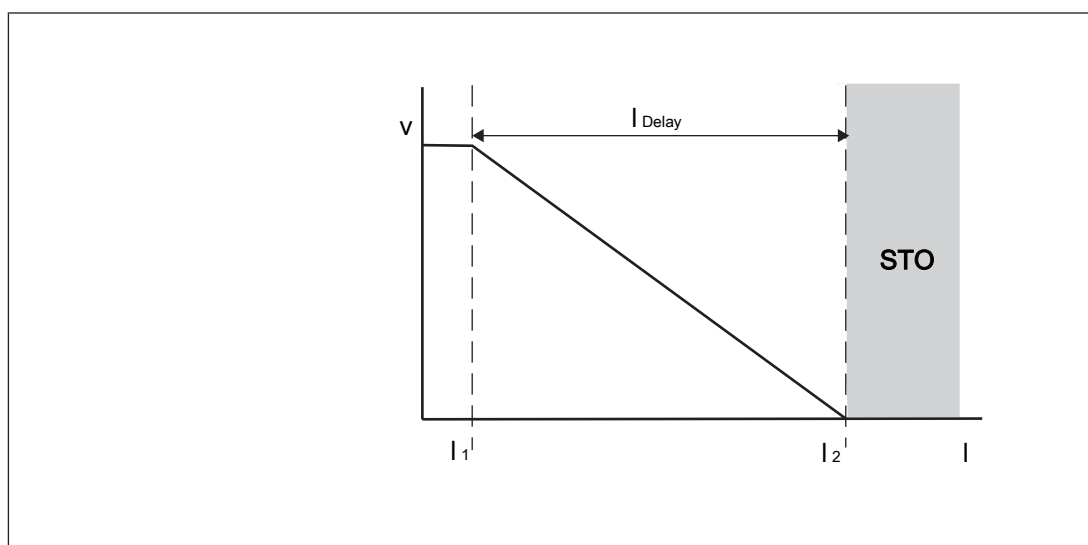


## Motion monitoring modules PNOZ m EF 1MM

### Legend

- $t_1$ : Monitoring function SS1-M is activated
- $t_2$ : Delay time elapses, safety function "Safe torque off" (STO) is activated
- $t_{\text{Delay}}$ : Set delay time for controlled braking of motor

Sequence with standstill detection limit value for automatic STO:

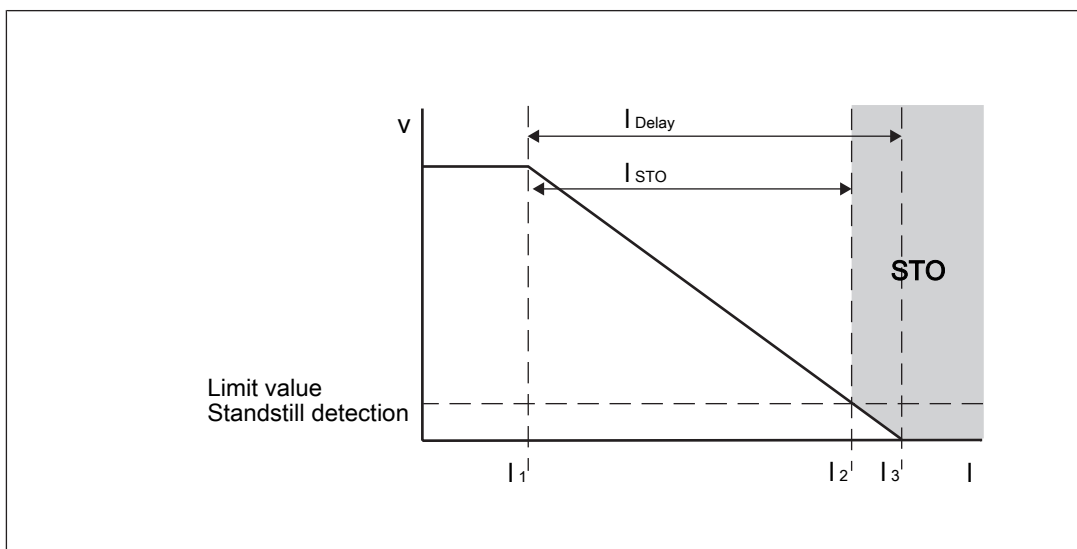

### Legend

- $t_1$ : Monitoring function SS1-M is activated
- $t_2$ : Standstill detection limit value for automatic STO reached, safety function "Safe torque off" (STO) is activated
- $t_3$ : Delay time elapses
- $t_{\text{Delay}}$ : Set delay time for controlled braking of motor
- $t_{\text{STO}}$ : Actual time from activation of monitoring function until STO is activated

## Motion monitoring modules PNOZ m EF 1MM

---

### Safe stop 2 monitoring

The **Safe stop 2 monitoring** function (SS2-M) monitors

- ▶ Whether the set delay time has expired (to controlled braking of the motor) or the value for standstill detection for automatic SOS is below the limit value  
and
- ▶ Whether the standstill position ultimately remains within a configured tolerance window.

### Reaction:

- ▶ If the monitoring function SS2-M is triggered, the "Braking ramp" output switches off. The drive controller's braking ramp is activated.
- ▶ If the set delay time has elapsed or the value for the automatic SOS is below the limit value, the standstill position is monitored, the **Position monitoring** output switches on. If the standstill position is outside the tolerance window, the **Position monitoring** and **STO** outputs switch off, the safety function **Safe torque off** (STO) is activated.


A maximum of 1 SS2-M element can be configured per axis in the PNOZmulti Configurator.

Please note:

This monitoring function cannot be used in conjunction with 2 proximity switches because position detection is not possible.

## Motion monitoring modules PNOZ m EF 1MM


Sequence without standstill detection limit value for automatic SOS:

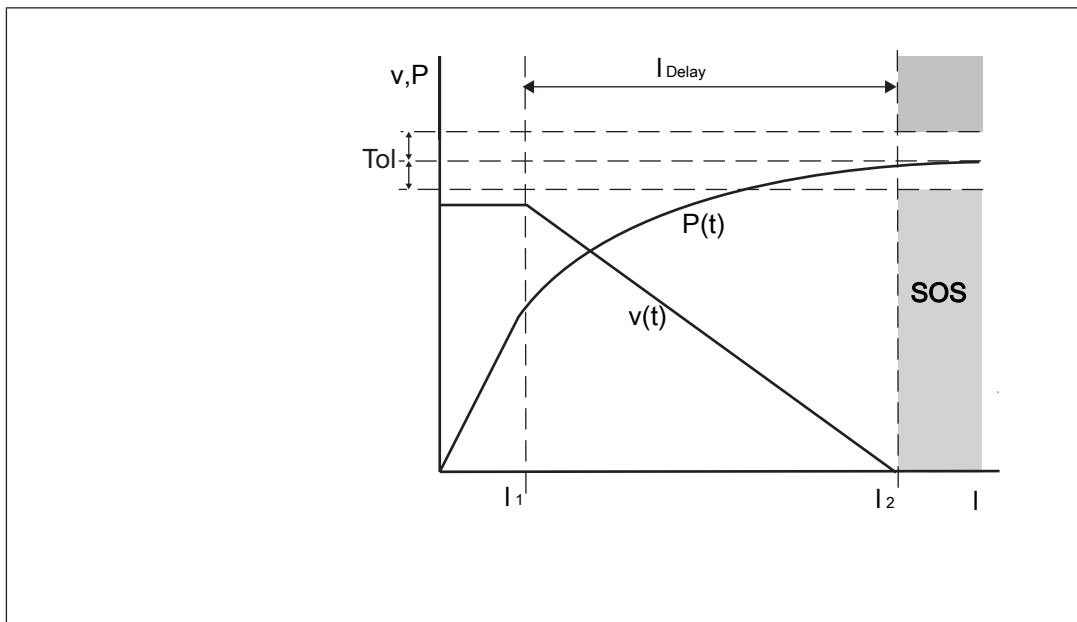

### Legend

- $t_1$ :                    Activation of the monitoring function SS2-M
- $t_2$ :                    Delay time elapses, monitoring of standstill position (SOS) is activated
- $t_{Delay}$ :                Set delay time for controlled braking of motor

Sequence with standstill detection limit value for automatic SOS:

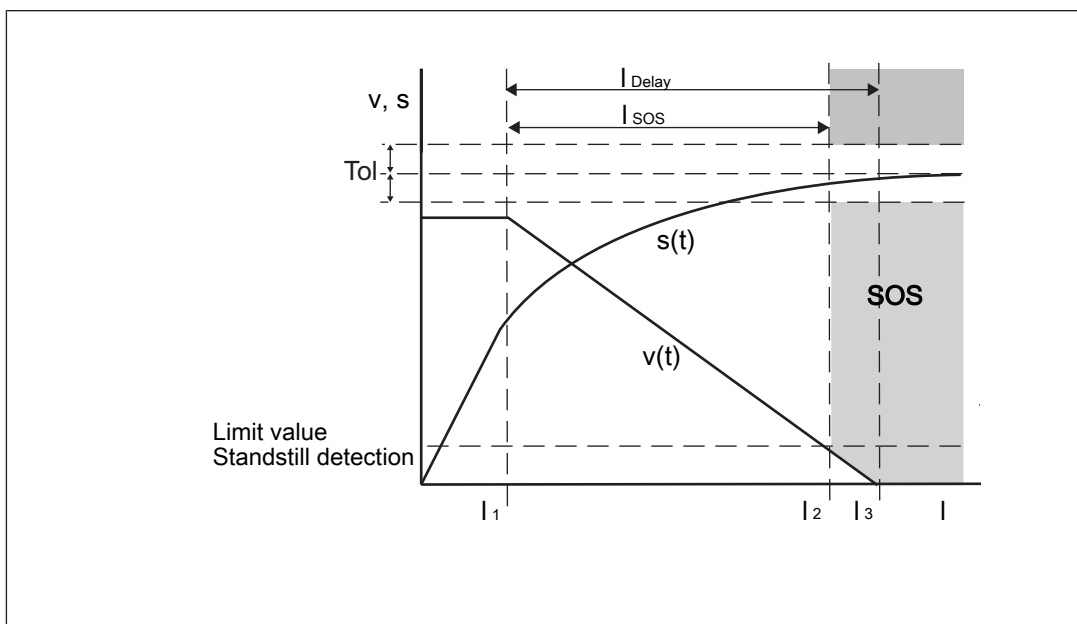


### Legend

- $t_1$ :                    Activation of the monitoring function SS2-M

## Motion monitoring modules PNOZ m EF 1MM

- $t_2$ : Standstill detection limit value for automatic SOS reached, monitoring of standstill position (SOS) is activated
- $t_3$ : Delay time elapses
- $t_{\text{Delay}}$ : Set delay time for controlled braking of motor
- $t_{\text{STO}}$ : Actual time from activation of monitoring function until STO is activated

Sequence when standstill position is violated:

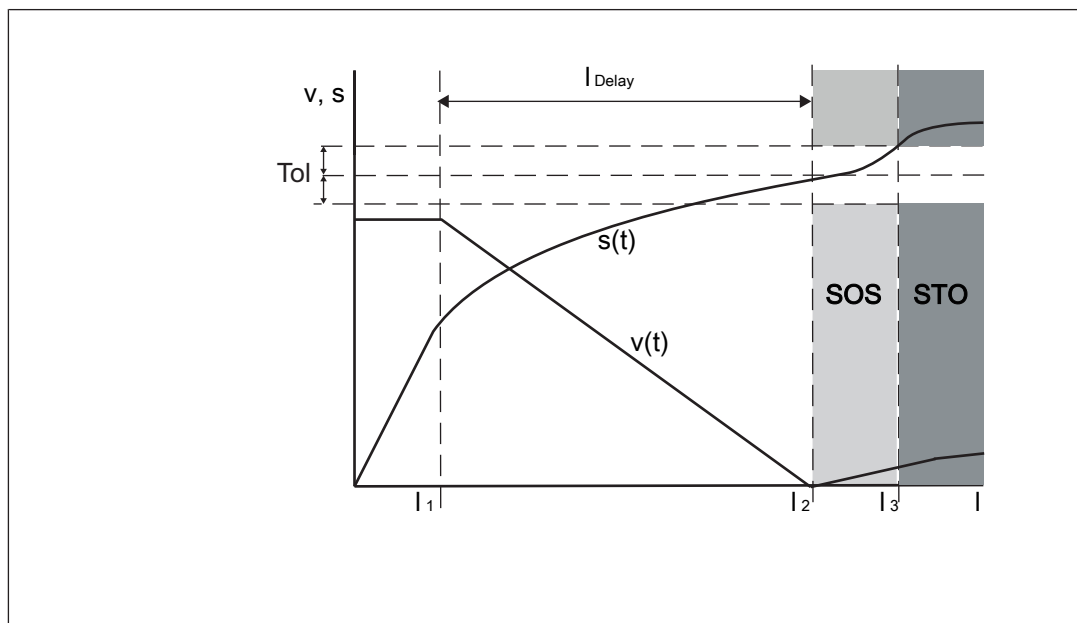

### Legend

- $t_1$ : Activation of the monitoring function SS2-M
- $t_2$ : Standstill detection limit value for automatic SOS reached, monitoring of standstill position (SOS) is activated
- $t_3$ : Standstill position outside of tolerance window, safety function "Safe torque off" (STO) is activated
- $t_{\text{Delay}}$ : Set delay time for controlled braking of motor

### Hysteresis

A hysteresis can be configured for the monitoring functions. This prevents the outputs from bouncing if there are fluctuations around the response value. The hysteresis takes effect when the output is switched on.

## Motion monitoring modules


### PNOZ m EF 1MM

#### Validation cut-off frequency

As implausible signals may arise due to edge jitter on the sensors around the standstill position, a validation cut-off frequency must be configured for sensor types with proximity switches in the PNOZmulti Configurator (edge jitter is caused by the position control of the drive frequency converter or by external interference signals).

If the value of the validation cut-off frequency falls below the configured value, the feasibility check of the sensors will no longer be run.


#### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion](#) [ 29]".

#### Proximity switches

- ▶ The following proximity switches can be used with a pnp or npn output:
  - Inductive
  - Capacitive
- ▶ The proximity switches must be fitted so that at least one is always activated. In other words, the proximity switches must be fitted so that the recorded signals always overlap.
- ▶ The cable used to connect the proximity switches must be shielded (see connection diagrams in the chapter entitled "EMC-compliant wiring").
- ▶ A DC voltage in the range of 0 - 30 V can be monitored via track S. It should be used to monitor the supply voltage of the proximity switches.

#### Proximity switch assembly:

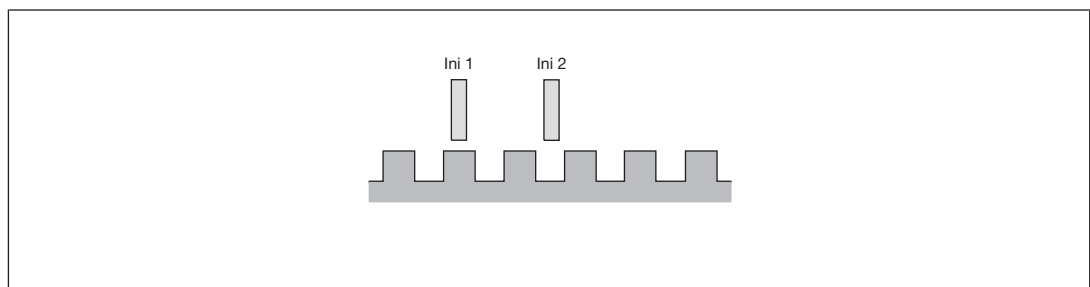

## Motion monitoring modules PNOZ m EF 1MM

### Signal characteristics:

Proximity switch combinations	Signal image in an energised state
PNP / PNP	<p>Ini 1: Energised (high), De-energised (low)</p> <p>Ini 2: Energised (high), De-energised (low)</p> <p>&gt; 1% of period length</p>
NPN / NPN	<p>Ini 1: De-energised (low), Energised (high)</p> <p>Ini 2: De-energised (low), Energised (high)</p> <p>&gt; 1% of period length</p>
NPN / PNP	<p>Ini 1: De-energised (low), Energised (high)</p> <p>Ini 2: Energised (high), De-energised (low)</p> <p>&gt; 1% of period length</p>
PNP / NPN	<p>Ini 1: Energised (high), De-energised (low)</p> <p>Ini 2: De-energised (low), Energised (high)</p> <p>&gt; 1% of period length</p>

- ▶ For a full configuration, the maximum frequency of the sensors you are using must be entered in the PNOZmulti Configurator (see sensor's data sheet).

### Encoder

- ▶ The following encoders can be used:
  - TTL, HTL (single-ended or differential signals)
  - Sin/Cos 1 Vss
  - Hiperface®
- ▶ The encoders can be connected with or without Z index (0 index).
- ▶ The cables used to connect the encoders must be shielded (see connection diagrams in the chapter entitled "EMC-compliant wiring").



## Motion monitoring modules

### PNOZ m EF 1MM

- ▶ A proximity switch can also be connected to track Z to monitor for broken shearpins.
 

**Please note:**  
Broken shearpin monitoring only becomes active when


  - The minimum speed is exceeded
  - and
  - The tolerance for detecting feasibility errors has elapsed.

The minimum speed and tolerance depend on the ratio of the frequency on tracks AB " $f_{AB}$ " to the frequency on track Z " $f_Z$ " in your configuration (see PNOZmulti Configurator ***Motion Monitor Element, Calculated Ratio AB/Z***).

Minimum speed:

  - Calculated ratio  $AB/Z \geq 1.0$   
 $f_Z = 10 \text{ mHz}$  or  $f_{AB} = (f_{AB}/f_Z) \times 10 \text{ mHz}$
  - at  $f_{AB}/f_Z$  **Ratio**  $< 1.0$   
 $f_{AB} = 10 \text{ mHz}$  or  $f_Z = 10 \text{ mHz}/(f_{AB}/f_Z)$

Tolerance for detecting feasibility errors:


  - at  $f_{AB}/f_Z$  **Ratio**  $\geq 1.0$   
7.5 Z pulses or  $7.5 \times (f_{AB}/f_Z)$  AB pulses
  - at  $f_{AB}/f_Z$  **Ratio**  $< 1.0$   
4.5 AB pulses or  $4.5 \times (f_{AB}/f_Z)$  Z pulses
- ▶ With Hiperface encoders, the Sin- Cos track is recorded and monitored via an adapter (see [Adapters for encoders](#)  749).
- ▶ Track S can be used:
  - To connect an encoder's error output.
  - To monitor voltages between 0 V and 30 V for a permitted upper and lower limit. For example, the encoder's supply voltage can be monitored.
- ▶ The maximum frequency of the used encoders must be entered for a complete configuration.
- ▶ Pay attention to the values in the technical details.

## Motion monitoring modules PNOZ m EF 1MM


### Output signals

#### Output signals TTL, HTL

Single ended

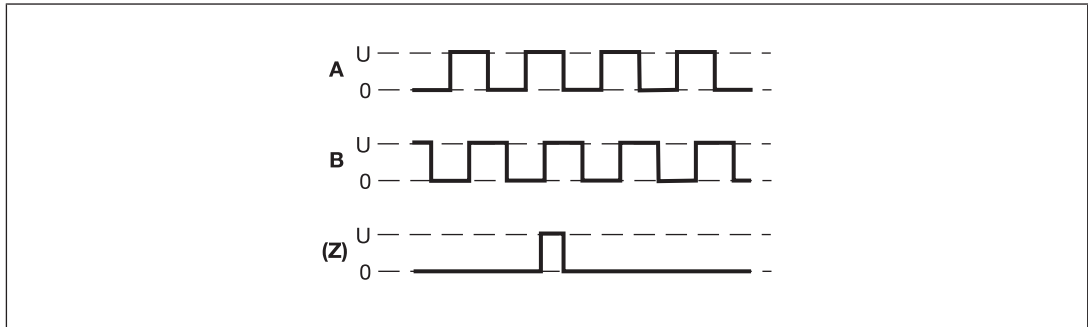


Differential

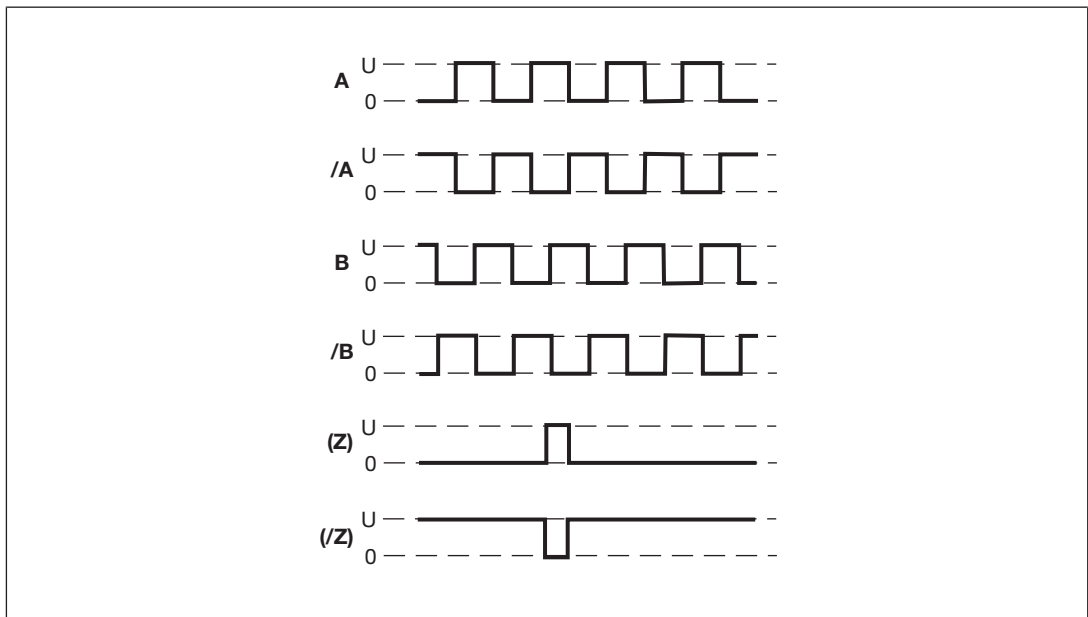


## Motion monitoring modules PNOZ m EF 1MM

### Output signals Sin/Cos (1 Vss)

Single ended with reference track (e.g. Hiperface ®)

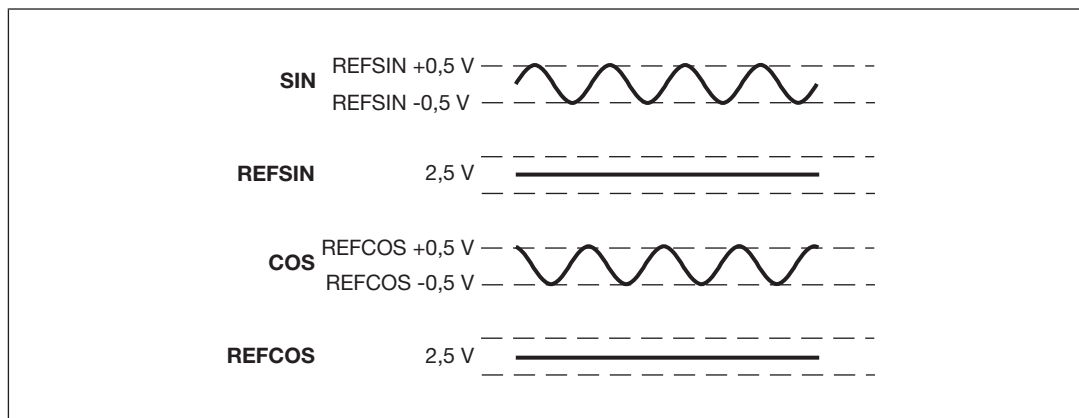

Differential with/without Z index (e.g. Heidenhain 1 Vss)

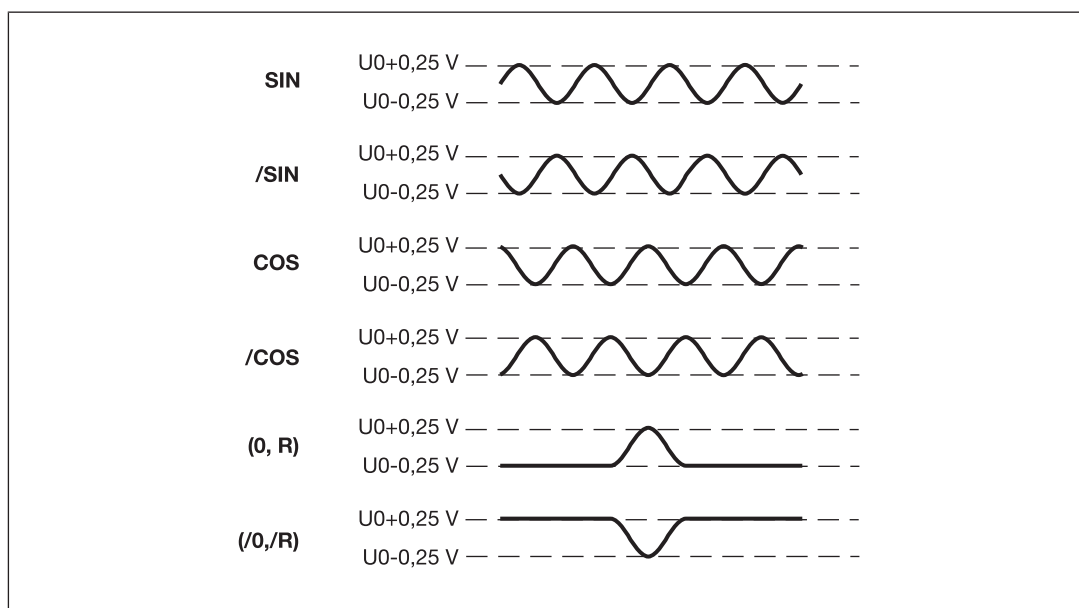

### Adapters for encoders

The adapter records the data between the encoder and the drive and makes it available to the PNOZ m EF 1MM via the socket.


Pilz supplies complete adapters as well as ready-made cable with connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

## Motion monitoring modules

### PNOZ m EF 1MM

## Installation

### Dimensions in mm

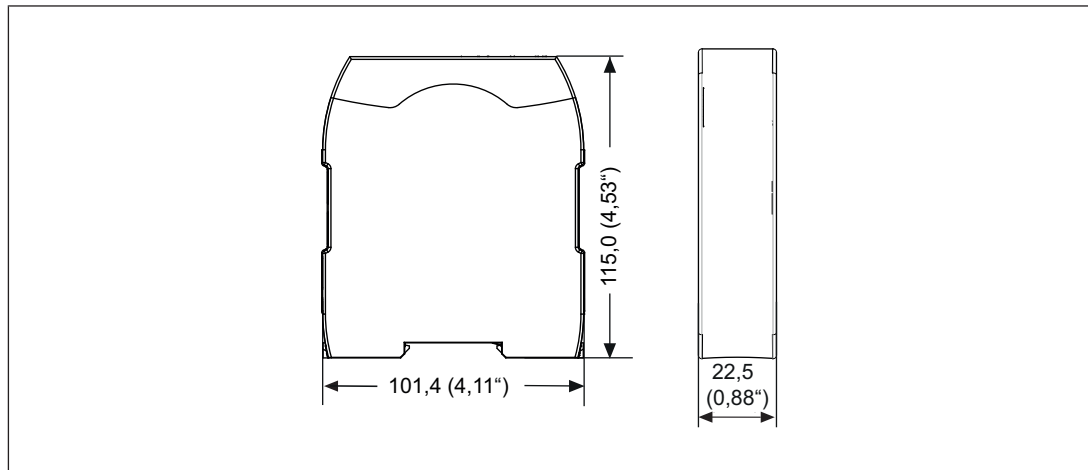

## Commissioning

### Wiring


The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[760\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ The cable used to connect the encoders and proximity switches must be shielded (see connection diagrams in the chapter entitled "EMC-compliant wiring").
- ▶ The shield may only be connected to earth at a single point.
- ▶ Earth loops should be avoided.
- ▶ If possible, the connections for the various earth potentials ( ) should not be connected on the PNOZ m EF 1MM but should be connected directly to the GNDs on the connected units, otherwise noise susceptibility may be increased significantly (conductor loops are not permitted).

## Motion monitoring modules PNOZ m EF 1MM

### Pin assignment of Mini-IO socket

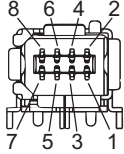Mini-IO socket 8-pin	PIN	Track
	1	S
	2	GND
	3	Z
	4	A
	5	/A
	6	/Z
	7	B
	8	/B

## Motion monitoring modules

### PNOZ m EF 1MM


#### Connection of proximity switches

The following proximity switch combinations can be connected:

- ▶ A: pnp, B: pnp
- ▶ A: npn, B: npn
- ▶ A: pnp, B: npn
- ▶ A: npn, B: pnp


When connecting proximity switches please note:

- ▶ Proximity switches are connected to terminals A12, B12, GND or tracks A, B and GND of the Mini-IO socket.
- ▶ Track S (S12) should be used to monitor the supply voltage (see drawing). A permitted voltage range can be entered in the menu.
- ▶ Connect the proximity switch to 24 VDC of the power supply.
- ▶ When connecting the proximity switches, please refer to the chapter entitled "EMC-compliant wiring".
- ▶ Invalid signals may occur with cable lengths >50 m. In this case we recommend that you connect a resistor between the signal lines, as shown in the diagrams.
- ▶ Connection of the proximity switches may only be performed in three-wire technology and not in two-wire technology.

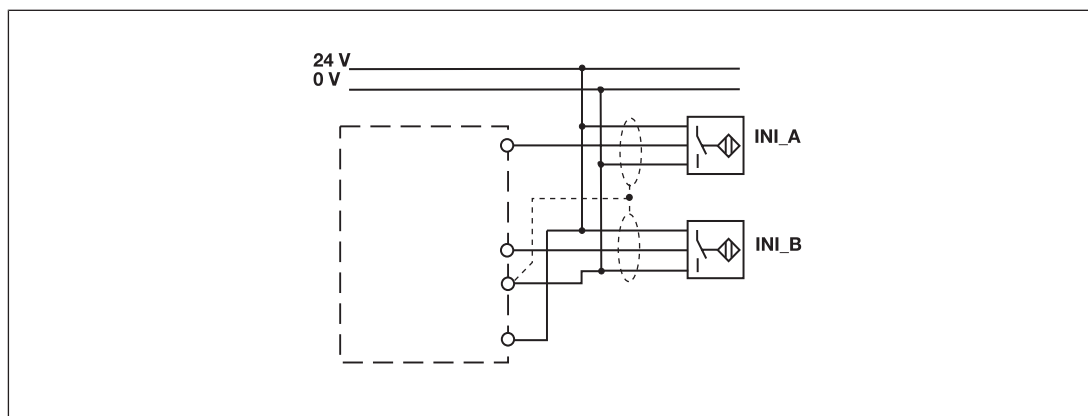


## Motion monitoring modules PNOZ m EF 1MM

pnp proximity switch with resistor  $R = 10\text{ k}\Omega$

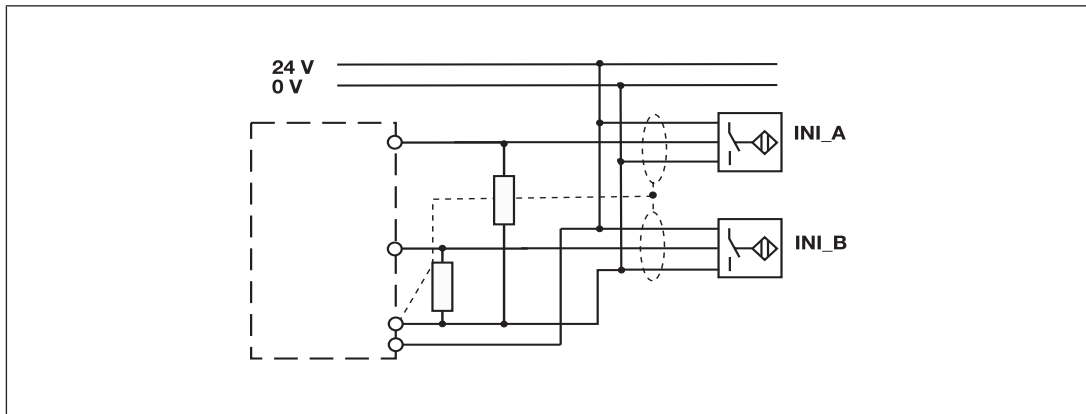

npn proximity switch with resistor  $R = 47\text{ k}\Omega$

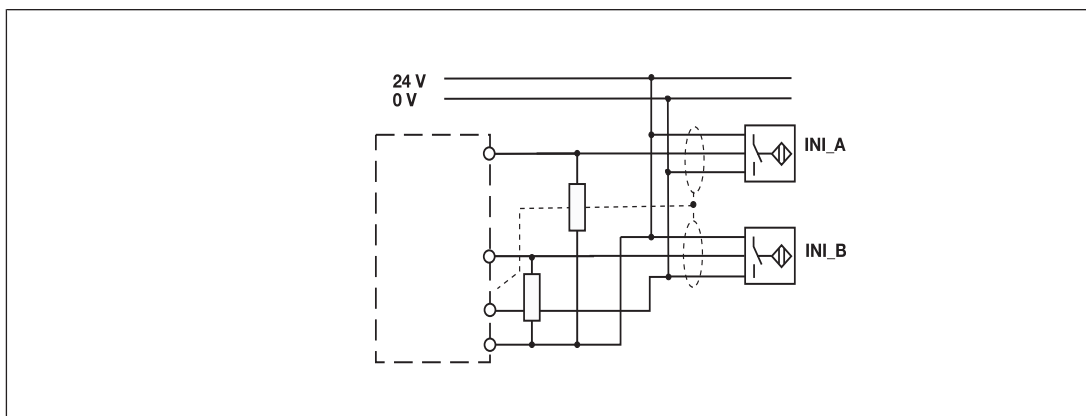

### Connection of an encoder

Proceed as follows when connecting the encoder:

- ▶ The encoder can be connected via an adapter (e.g. ) or directly to the PNOZ m EF 1MM.
- ▶ Use only shielded cables for all connections. Please refer to the chapter entitled "EMC-compliant wiring".
- ▶ Always connect GND on the encoder to GND on the connector.
- ▶ If the encoder signals are not terminated with  $120\text{ }\Omega$  in the frequency converter or adapter cable longer than 5 metres is used, the encoder signals must be terminated with  $Z_0 = 120\text{ }\Omega$  between A and /A, B and /B, Z and /Z.

## Motion monitoring modules PNOZ m EF 1MM


### Connect encoder

Encoder types:

- ▶ TTL single ended
- ▶ HTL single ended

Please note:

- ▶ Tracks/A, /B, Z, and /Z must remain free

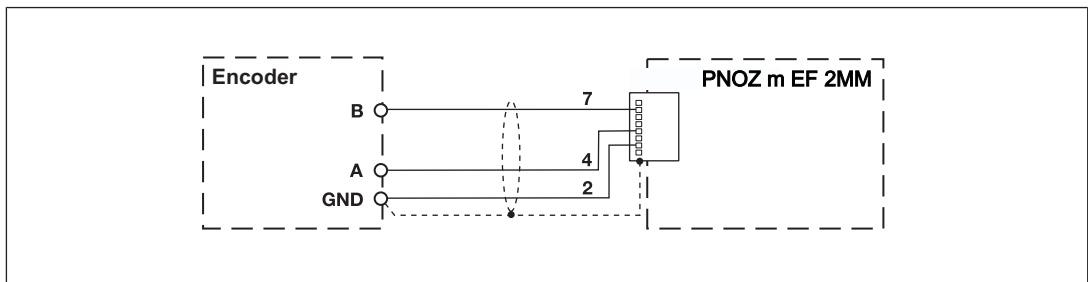


Encoder types:

- ▶ TTL differential
- ▶ HTL differential
- ▶ sin/cos 1 Vss
- ▶ Hiperface

Please note:

- ▶ Tracks/A, /B, Z, and /Z must remain free

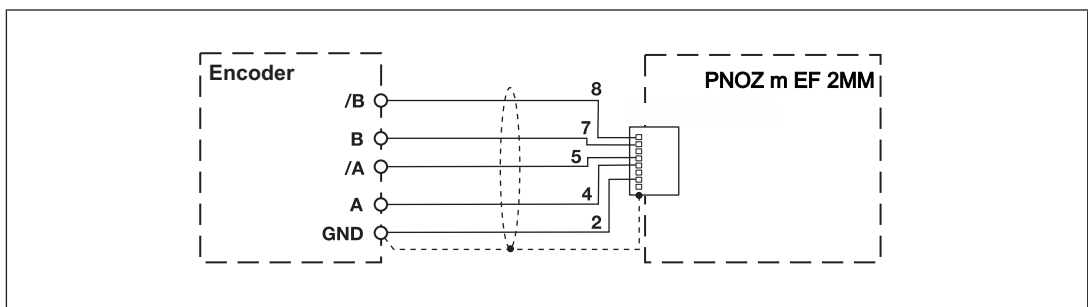



## Motion monitoring modules PNOZ m EF 1MM


### Connect encoder with Z index

Encoder types:

- ▶ TTL single Z Index
- ▶ HTL single Z Index


Please note:

- ▶ Tracks /A, /B and /Z must remain free

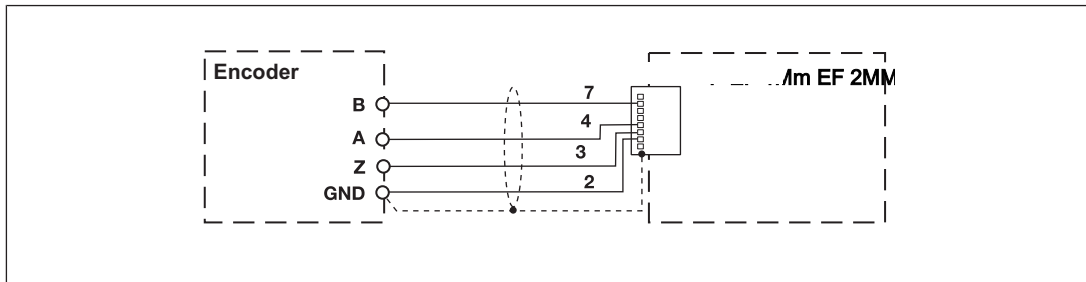

Encoder types:

- ▶ TTL diff. Z Index
- ▶ HTL diff. Z Index
- ▶ sin/cos 1 Vss Z Index

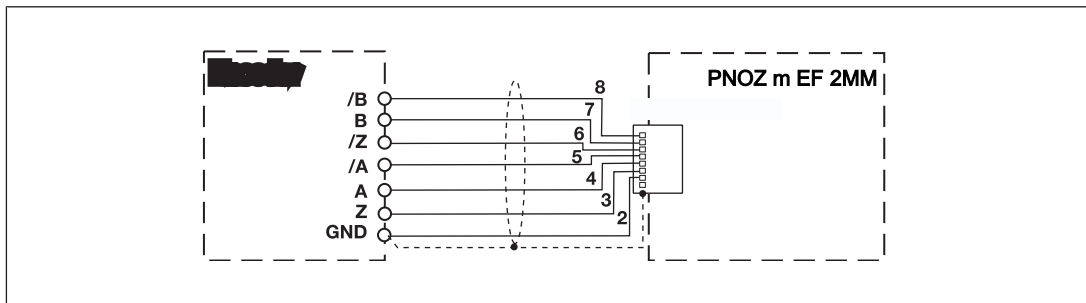


## Motion monitoring modules

### PNOZ m EF 1MM

#### Connect encoder via an adapter

The adapter (see [Accessories \[764\]](#)) is connected between the encoder and the drive. The output on the adapter is connected to the socket on the PNOZ m EF 1MM.

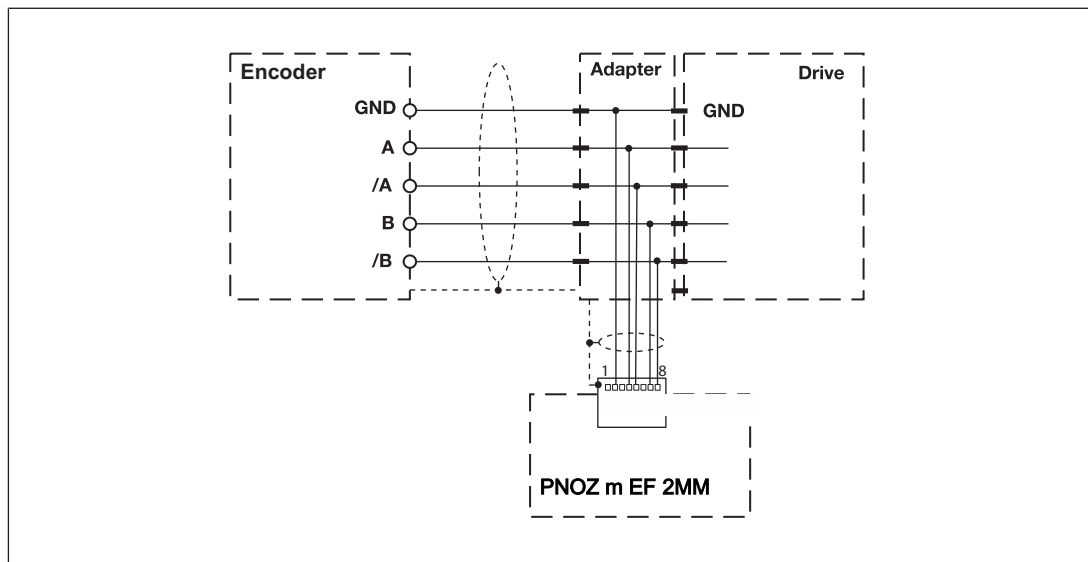

#### Connection of proximity switch and encoder

When connecting the encoders and proximity switches, please refer to the chapter entitled "EMC-compliant wiring".


Sensor types:

- ▶ Configuration: HTL single Z Freq. Ini pnp
  - HTL single ended (A,B) + Ini pnp (Z)
  - HTL single ended (A,B) + HTL differential (A as Z)
  - HTL single ended (A,B) + HTL single ended (A as Z)
- ▶ Configuration: TTL single Z Freq. Ini pnp
  - TTL single ended (A,B) + Ini pnp (Z)
  - TTL single ended (A,B) + HTL differential (A as Z)
  - TTL single ended (A,B) + HTL single ended (A as Z)

Please note:

Tracks /A, /B and /Z must remain free.

## Motion monitoring modules PNOZ m EF 1MM

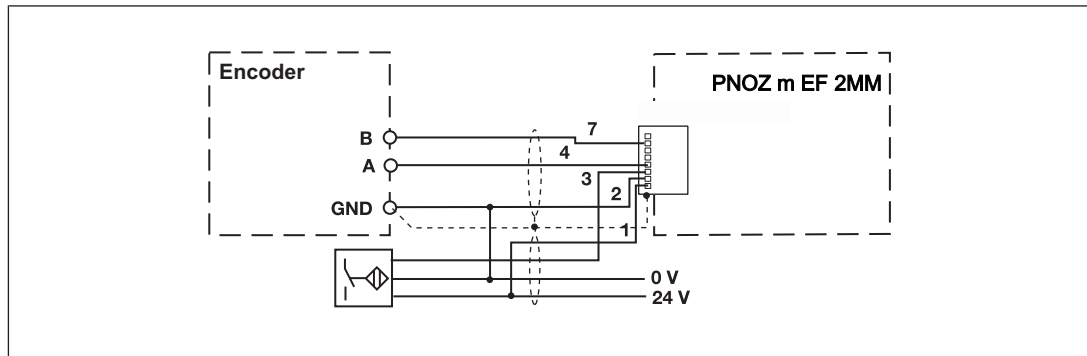


Sensor types:

- ▶ Configuration: TTL differential Z Freq. Ini pnp
  - TTL differential (A,/A,B,/B) + Ini pnp (Z)
  - TTL differential (A,/A,B,/B) + HTL differential (A as Z)
  - TTL differential (A,/A,B,/B) + HTL single ended (A as Z)
- ▶ Configuration: HTL differential Z Freq. Ini pnp
  - HTL differential (A,/A,B,/B) + Ini pnp (Z)
  - HTL differential (A,/A,B,/B) + HTL differential (A as Z)
  - HTL differential (A,/A,B,/B) + HTL single ended (A as Z)
- ▶ Configuration: sin/cos 1 Vss Z Freq. Ini pnp
  - sin/cos 1 Vss (A,/A,B,/B) + Ini pnp (Z)
  - sin/cos 1 Vss (A,/A,B,/B) + HTL differential (A as Z)
  - sin/cos 1 Vss (A,/A,B,/B) + HTL single ended (A as Z)
- ▶ Configuration: Hiperface Z Freq. Ini pnp
  - Hiperface (A,/A,B,/B) + Ini pnp (Z)
  - Hiperface (A,/A,B,/B) + HTL differential (A as Z)
  - Hiperface (A,/A,B,/B) + HTL single ended (A as Z)

Please note:


Track /Z must remain free!!

## Motion monitoring modules PNOZ m EF 1MM

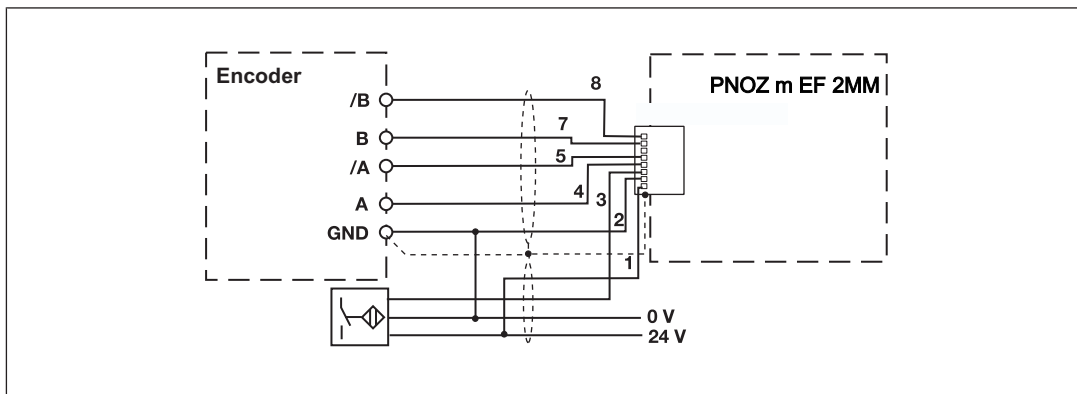

### EMC-compliant wiring

#### EMC-compliant wiring for connecting an encoder

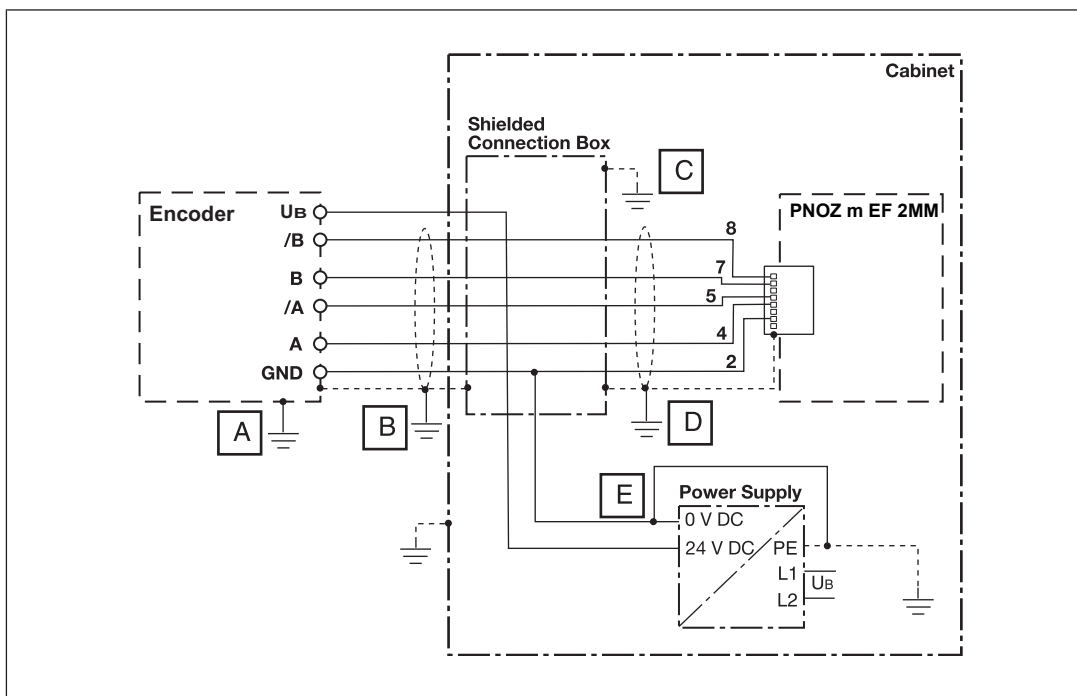

To avoid EMC interference we recommend that the shield on the sensor cables or the housing of the shielded junction box is only connected to earth at a single point:


**A or B or C or D or E**

Conductor loops outside the shield must be avoided.

If a shielded junction box is not used, the shield must run continuously from the sensor to the evaluation device.

## Motion monitoring modules PNOZ m EF 1MM

### EMC-compliant wiring for connecting an encoder with drive

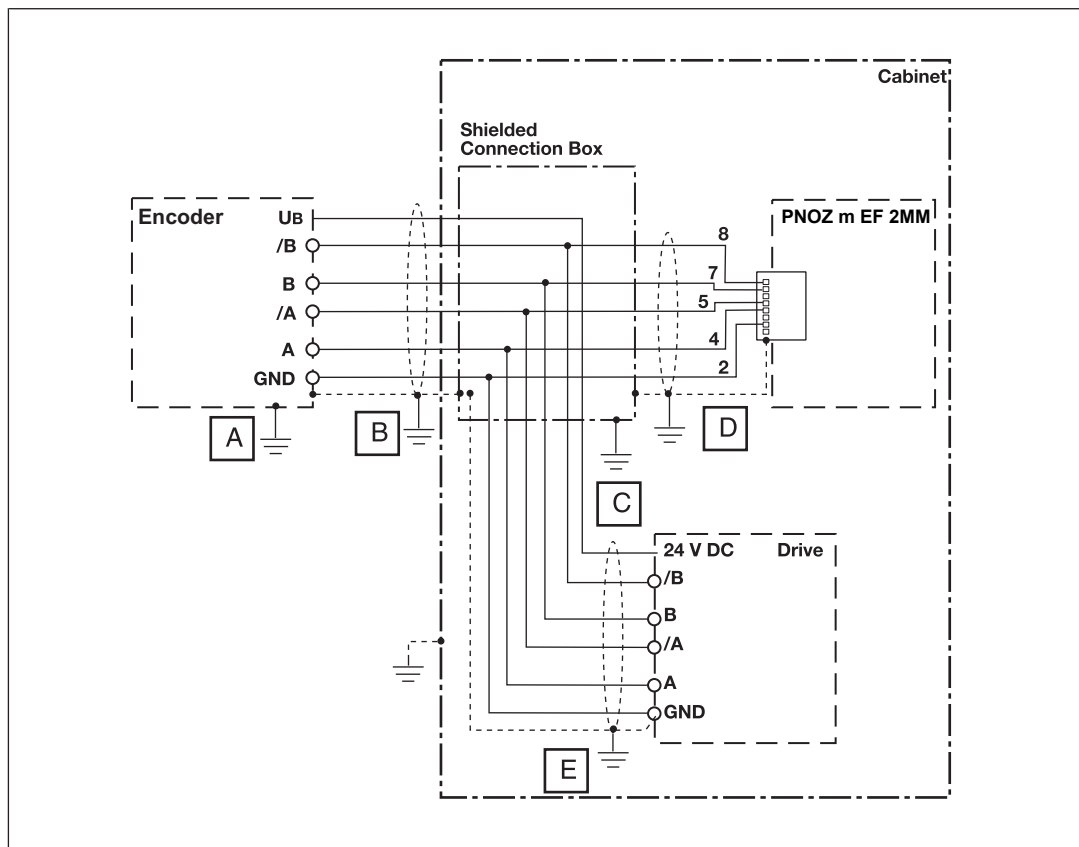

To avoid EMC interference we recommend that the shield on the sensor cables or the housing of the shielded junction box is only connected to earth at a single point:


**A or B or C or D or E**

Conductor loops outside the shield must be avoided.

If a shielded junction box is not used, the shield must run continuously from the sensor to the evaluation device.

## Motion monitoring modules PNOZ m EF 1MM

### EMC-compliant wiring for connecting 2 proximity switches

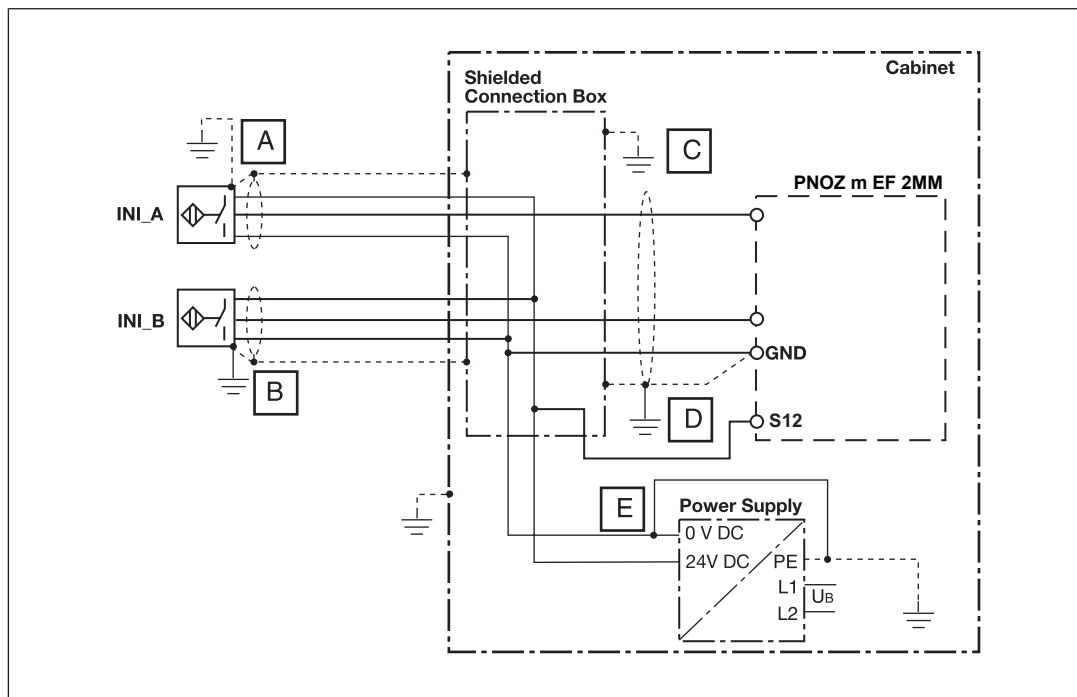

To avoid EMC interference we recommend that the shield on the sensor cables or the housing of the shielded junction box is only connected to earth at a single point:

**A or B or C or D or E**

Conductor loops outside the shield must be avoided.

If a shielded junction box is not used, the shield must run continuously from the sensor to the evaluation device.

## Technical details

General	
Approvals	<b>BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed</b>
Application range	<b>Failsafe</b>
Module's device code	<b>00E3h</b>
Electrical data	
Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Current consumption	<b>90 mA</b>
Power consumption	<b>2 W</b>
Max. power dissipation of module	<b>2,2 W</b>
Status indicator	<b>LED</b>

## Motion monitoring modules PNOZ m EF 1MM

<b>Proximity switch input</b>	
Number of inputs	2
Input signal level	
Signal level at "1"	11 - 30 V
Signal level at "0"	0 - 3 V
Input resistance	22 kOhm
Input's frequency range	0 - 5 kHz
Configurable monitoring frequency	
Without hysteresis	0.1 Hz - 5 kHz
<b>Incremental encoder input</b>	
Number of inputs	1
Connection type	Mini-IO female connector, 8-pin
Input signal level	0,5 - 30 V <sub>ss</sub>
Phase position for the differential signals A, /A and B, /B	90° ±30°
Overload protection	-50 - 65 V
Input resistance	20 kOhm
Input's frequency range	0 - 500 kHz
Configurable monitoring frequency	
Without hysteresis	0.1 Hz - 500 kHz
<b>Inputs</b>	
Potential isolation	yes
<b>Times</b>	
Reaction time after limit value is exceeded	1/f_ist + 16 ms
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
In accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
In accordance with the standard	EN 60068-2-30, EN 60068-2-78
Condensation during operation	Not permitted
EMC	EN 61131-2
Vibration	
In accordance with the standard	EN 60068-2-6
Frequency	5 - 150 Hz
Acceleration	1g

## Motion monitoring modules PNOZ m EF 1MM

### Environmental data

#### Shock stress

In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>

Max. operating height above sea level	<b>2000 m</b>
---------------------------------------	---------------

#### Airgap creepage

In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>

Rated insulation voltage	<b>30 V</b>
--------------------------	-------------

#### Protection type

In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

### Potential isolation

Potential isolation between	<b>Sensor and system voltage</b>
-----------------------------	----------------------------------

Type of potential isolation	<b>Functional insulation</b>
-----------------------------	------------------------------

Rated surge voltage	<b>2500 V</b>
---------------------	---------------

### Mechanical data

Mounting position	<b>Horizontal on top hat rail</b>
-------------------	-----------------------------------

#### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

#### Material

Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>

Connection type	<b>Spring-loaded terminal, screw terminal</b>
-----------------	---

Mounting type	<b>plug-in</b>
---------------	----------------

#### Conductor cross section with screw terminals

1 core flexible	<b>0,25 - 2,5 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,2 - 1,5 mm<sup>2</sup>, 24 - 16 AWG</b>

Torque setting with screw terminals	<b>0,5 Nm</b>
-------------------------------------	---------------

#### Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector	<b>0,2 - 2,5 mm<sup>2</sup>, 24 - 12 AWG</b>
---------------------------------------	--

Spring-loaded terminals: Terminal points per connection	<b>2</b>
---	----------

Stripping length with spring-loaded terminals	<b>9 mm</b>
---	-------------



## Motion monitoring modules PNOZ m EF 1MM

### Mechanical data

#### Dimensions

Height	101,4 mm
Width	22,5 mm
Depth	111 mm

Weight	90 g
--------	------

Where standards are undated, the 2013-01 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN IEC 62061 SIL CL	EN IEC 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
Monitoring 1 encoder	PL d	Cat. 2	SIL CL 2	1,80E-08	SIL 2	1,58E-03	20
Monitoring 2 encoder	PL e	Cat. 3	SIL CL 3	1,01E-09	SIL 3	8,41E-05	20
Monitoring safe encoder	PL e	Cat. 4	SIL CL 3	2,35E-09	SIL 3	2,04E-04	20
Logic	PL e	Cat. 4	SIL CL 3	3,37E-10	SIL 3	2,88E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

### Order reference

#### Product

Product type	Features	Order no.
PNOZ m EF 1MM	Expansion module	772 170

## Motion monitoring modules PNOZ m EF 1MM

### Accessories

#### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542

#### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260


#### Adapter cable

Product type	Features	Order No.
MM A MINI-IO CAB99	1.50 m	772 200
MM A MINI-IO CAB99	2.50 m	772 201
MM A MINI-IO CAB99	5.0 m	772 202

Product type	Features	Order No.
PNOZ msi b4 Box	Connection box	773 845

## Motion monitoring modules PNOZ m EF 2MM

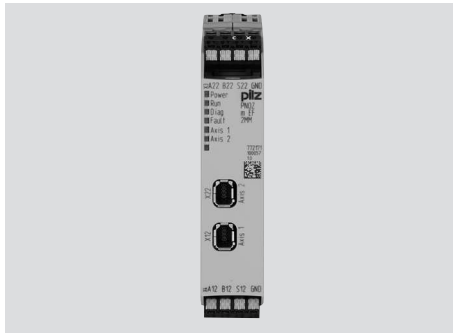

### Overview

#### Unit features

Using the product PNOZ m EF 2MM:


Expansion module for connection to a base unit from the configurable control system PNOZmulti 2 .

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Monitoring of 2 independent axes
- ▶ Measured value recorded by proximity switch and encoder
- ▶ Monitoring functions
  - Safe speed monitoring (SSM)
  - Safe speed range monitoring (SSR-M)
  - Safe direction of movement monitoring (SDI-M)
  - Safe operating stop monitoring (SOS-M)
  - Safe stop 1 monitoring (SS1-M)
  - Safe stop 2 monitoring (SS2-M)
  - Analogue voltage (track S)
- ▶ LED indicator for:
  - Supply voltage
  - Diagnostics
  - Axis status
  - Error
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Motion monitoring modules PNOZ m EF 2MM

### Front view

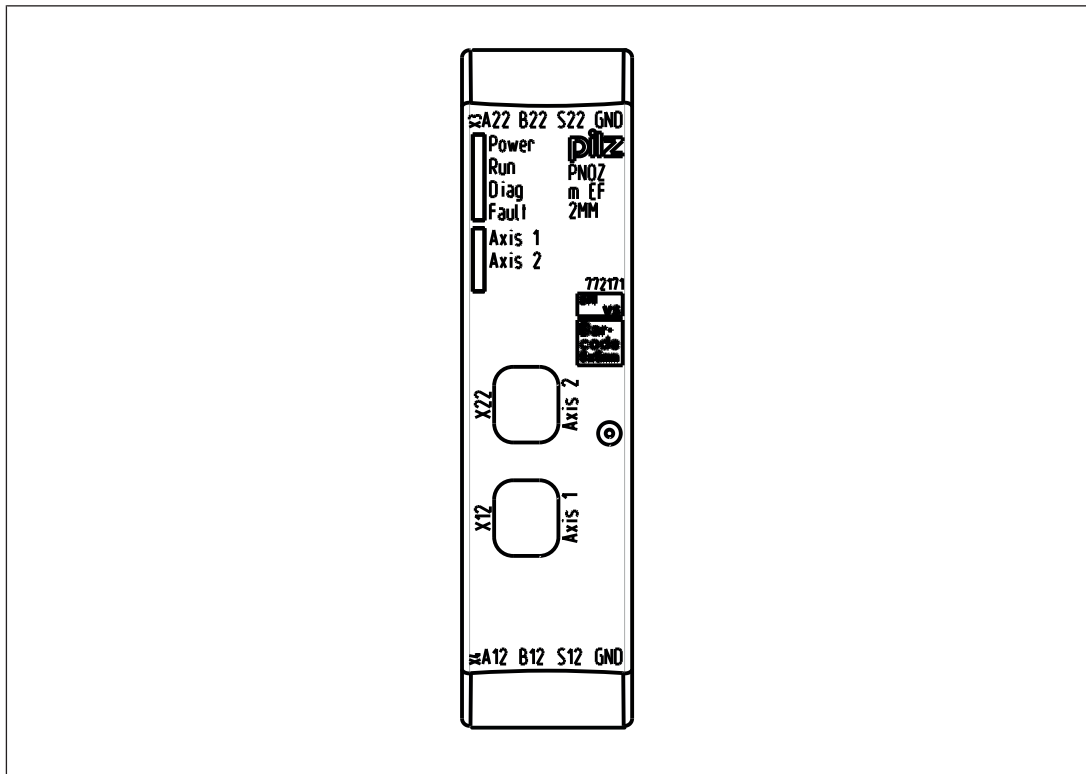

### Legend:

- ▶ X4: Connection for proximity switch at axis 1
- ▶ X3: Connection for proximity switch at axis 2
- ▶ X12: Mini IO socket for connecting encoder or proximity switch at axis 1
- ▶ X22: Mini IO socket for connecting encoder or proximity switch at axis 2
- ▶ LEDs:
  - Power
  - Run
  - Diag
  - Fault
  - Axis 1
  - Axis 2

## Motion monitoring modules PNOZ m EF 2MM

### Function description

#### Operation


The motion monitoring module PNOZ m EF 2MM can monitor two axes independently. The motion monitoring module signals the status of the monitored values to the base unit. Depending on the implemented safety circuit, the values may be transferred from the base unit to an output on the control system. Proximity switches or encoders are used to record the values.

The configuration of the motion monitoring module is described in detail in the PNOZmulti Configurator's online help.

The relay conforms to the following safety criteria:

- ▶ The circuit is redundant with built-in self-monitoring.
- ▶ The safety function remains effective in the case of a component failure.

#### Block diagram

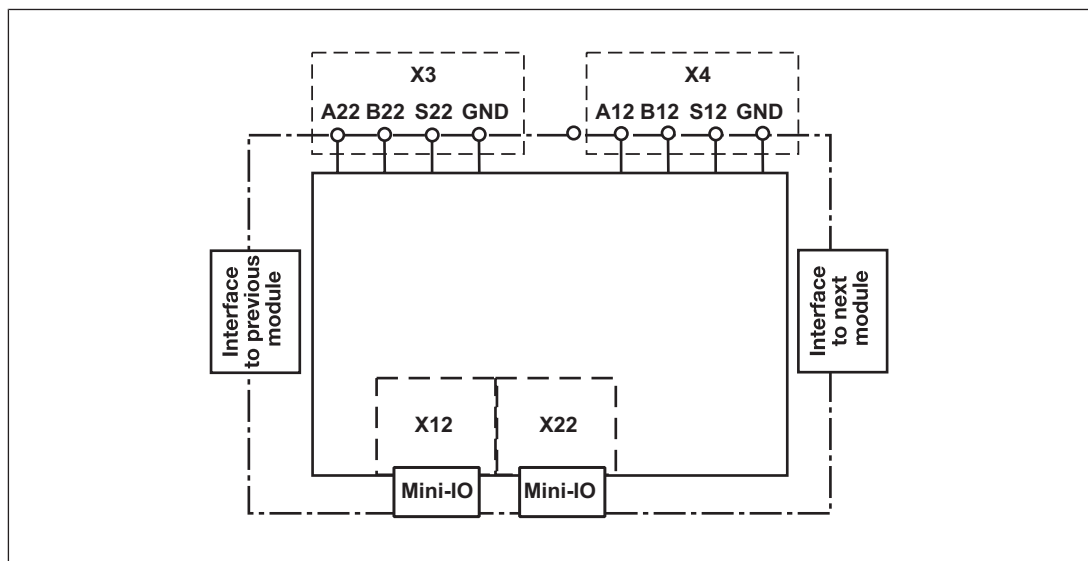

#### Monitoring functions

The motion monitoring module PNOZ m EF 2MM supports the following monitoring functions.

Please note that the position monitoring functions SOS-M, SDI-M and SS2-M cannot be used in conjunction with 2 proximity switches, as no position can be detected.

## Motion monitoring modules PNOZ m EF 2MM

### Safe speed monitoring

The **Safe speed monitoring** function (SSM) monitors the current speed to see if a limit value is exceeded.

If the configured limit value is exceeded, the output switches off. As soon as the value falls below the limit value (plus hysteresis), the output switches off again.


If a manual reset is configured, the output will not switch back on until the value is inside the limit value (plus hysteresis) and the reset input is activated.

12 limit values can be configured per axis in the PNOZmulti Configurator.

A tolerance range may also be set for the limit values used to monitor the speed. This tolerance range modifies the set limit values. As a result, one-off or periodic overshoots that exceed the limit values can be tolerated.

The following values can be configured for the tolerance range:

- ▶ Tolerance time ( $t_1$ ), which takes into account the length of the overshoots (maximum time for which the limit value may be exceeded). It must not be possible that the sum of all the overshoots exceeds the tolerance time ( $t_1$ ) within a tolerance period ( $t_2$ ).
- ▶ Tolerance period ( $t_2$ ), which takes into account the oscillation period (minimum time that must elapse between one limit value overshoot and the next)
- ▶ Tolerance amount (%), which takes into account the amplitude of the overshoots (maximum permitted percentage by which the configured limit values may be exceeded)

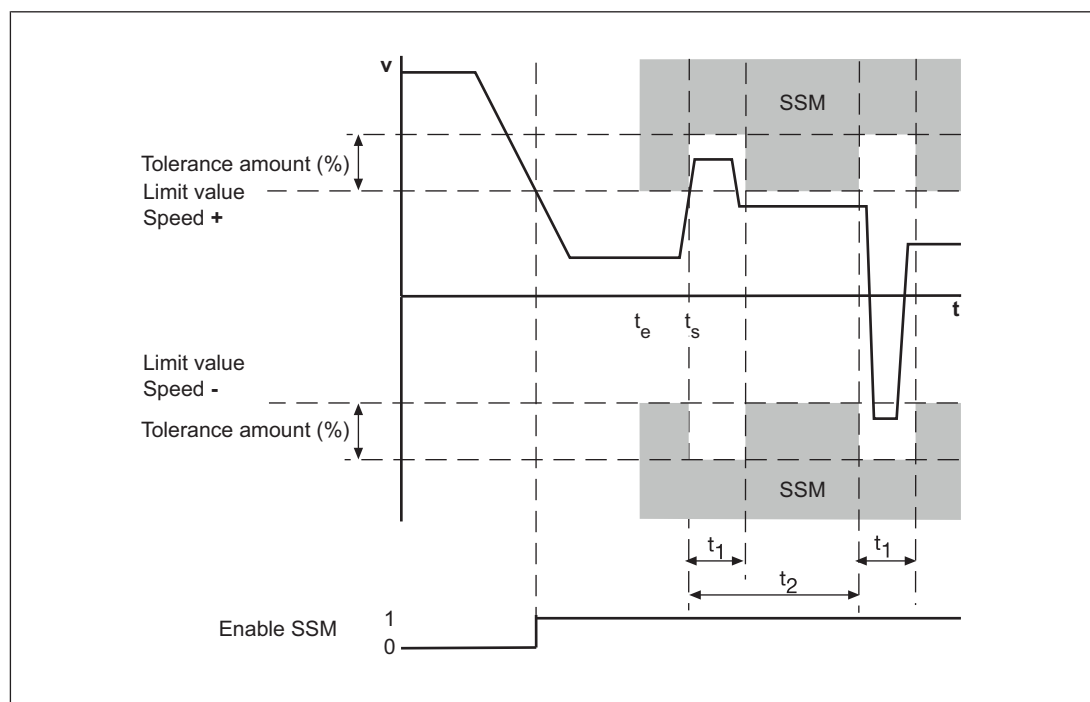

### Legend:

- ▶ Enable SSM:
  - "1": Monitored limit value not exceeded

## Motion monitoring modules PNOZ m EF 2MM

- "0": Monitored limit value exceeded
- ▶  $t_s$ : Speed  $v$  exceeds the limit value and activates the tolerance range (tolerance time, tolerance period, tolerance amount)
- ▶  $t_1$ : Tolerance time
- ▶  $t_2$ : Tolerance period
- ▶ Tolerance amount (%): Tolerance amount of limit value in both directions

### Safe speed range monitoring

The **Safe speed range monitoring** function (SSR-M) monitors the current speed to ensure it stays within a maximum and minimum permitted limit value.

If the speed is outside the configured range, the output switches off. As soon as the speed returns within the configured range (plus hysteresis), the output switches back on.

If manual reset is configured, the output will not switch back on until the value is below the limit value (plus hysteresis) and the reset input is activated.


2 ranges can be configured per axis in the PNOZmulti Configurator.

A tolerance range may also be set for the limit values used to monitor the speed range. This tolerance range modifies the set limit values. As a result, one-off or periodic overshoots that exceed the range limits can be tolerated.

The following values can be configured for the tolerance range:

- ▶ Tolerance time ( $t_1$ ), which takes into account the length of the overshoots (maximum time for which the limit value may be exceeded). It must not be possible that the sum of all the overshoots exceeds the tolerance time ( $t_1$ ) within a tolerance period ( $t_2$ ).
- ▶ Tolerance period ( $t_2$ ), which takes into account the oscillation period (minimum time that must elapse between one limit value overshoot and the next)
- ▶ Tolerance amount as a %, which takes into account the amplitude of the overshoots (maximum permitted percentage by which the limit value may be exceeded)

## Motion monitoring modules PNOZ m EF 2MM

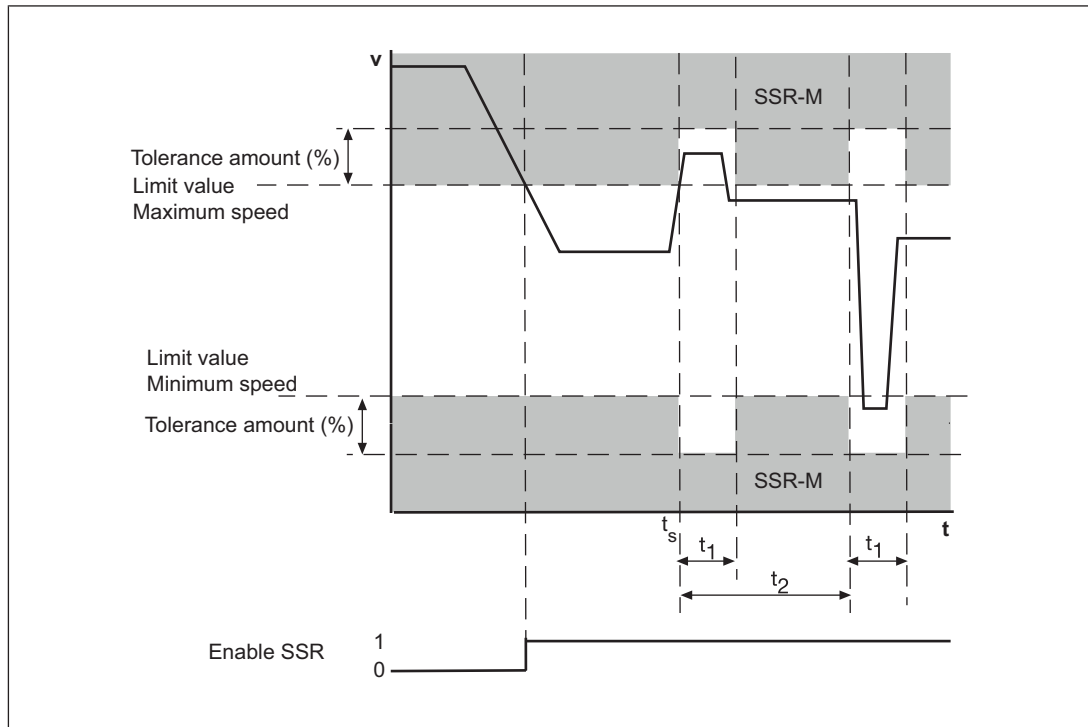

### Legend:

- ▶ Enable SSR:
  - "1": Speed is within the configured range
  - "0": Speed is outside the configured range
- ▶  $t_s$ : Speed  $v$  exceeds the limit value and activates the tolerance range (tolerance time, tolerance period, tolerance amount)
- ▶  $t_1$ : Tolerance time
- ▶  $t_2$ : Tolerance period
- ▶ Tolerance amount (%): Tolerance amount of the two limit values, maximum and minimum speed

### Safe direction monitoring

The **Safe direction monitoring** function (SDI-M) monitors the direction of movement defined for the drive axis (positive or negative). Safe direction of movement monitoring is activated via the start input. It remains active until the configured tolerance is exceeded in the opposite direction. The function can be retriggered at any time by a rising edge at the start input. As a result, the current position can be used at any time as the start point for the monitoring function.


One SDI-M element can be configured per axis for each direction in the PNOZmulti Configurator.



## Motion monitoring modules PNOZ m EF 2MM

Please note:

This monitoring function cannot be used in conjunction with 2 proximity switches because position detection is not possible.

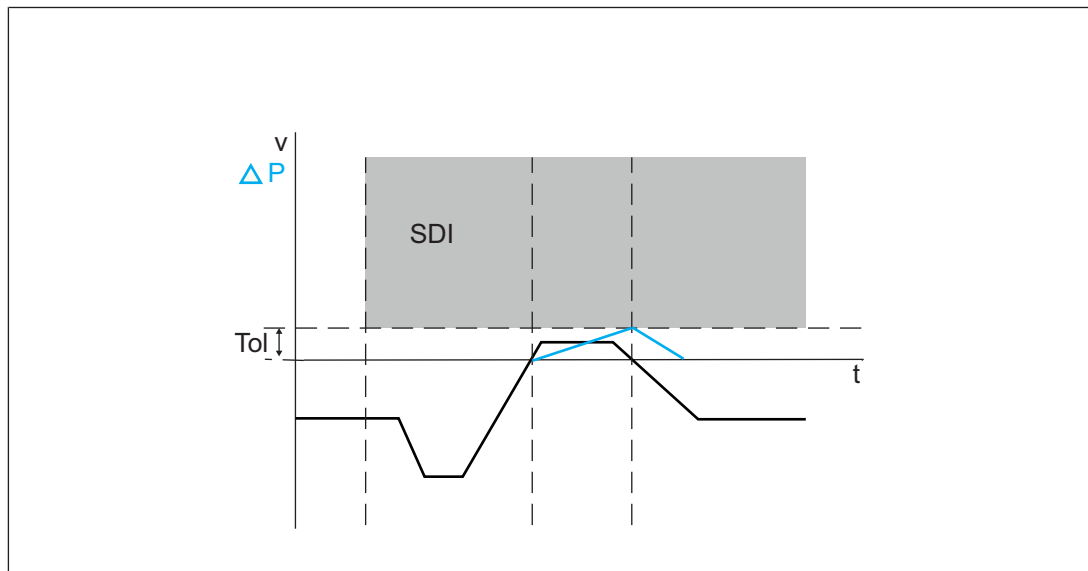

### Safe operating stop monitoring


The **Safe operating stop monitoring** function (SOS-M) monitors whether the standstill position remains within a configured tolerance window. Safe operating stop monitoring is activated within a rising edge at the start input. It remains active until the value is outside the tolerance band. The function can be retriggered at any time by a rising edge at the start input. As a result, the current position can be used at any time as the start point for the monitoring function.

3 SOS-M elements can be configured per axis in the PNOZmulti Configurator.

Please note:

This monitoring function cannot be used in conjunction with 2 proximity switches because position detection is not possible.

## Motion monitoring modules PNOZ m EF 2MM

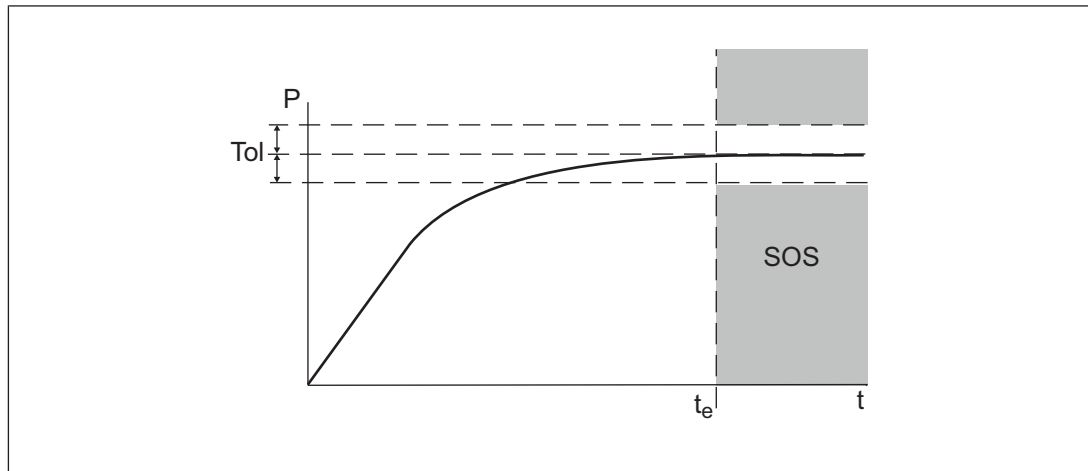

### Legend:

- ▶  $t_e$ : Activation of the monitoring function SOS


### Safe stop 1 monitoring

The **Safe stop 1 monitoring** function (SS1-M) monitors whether the set delay time has elapsed (until controlled braking of the motor) or the value for standstill detection for automatic STO is below the limit value.

- ▶ If the monitoring function SS1-M is triggered, the **Braking ramp** output is switched off. The drive controller's braking ramp is activated.
- ▶ After the set delay time has elapsed or the value for the automatic STO is below the limit value, the output **ST** switches off. The safety function **Safe torque off** (STO) is activated.

A maximum of 1 SS1-M element can be configured per axis in the PNOZmulti Configurator.

Sequence without standstill detection limit value for automatic STO:

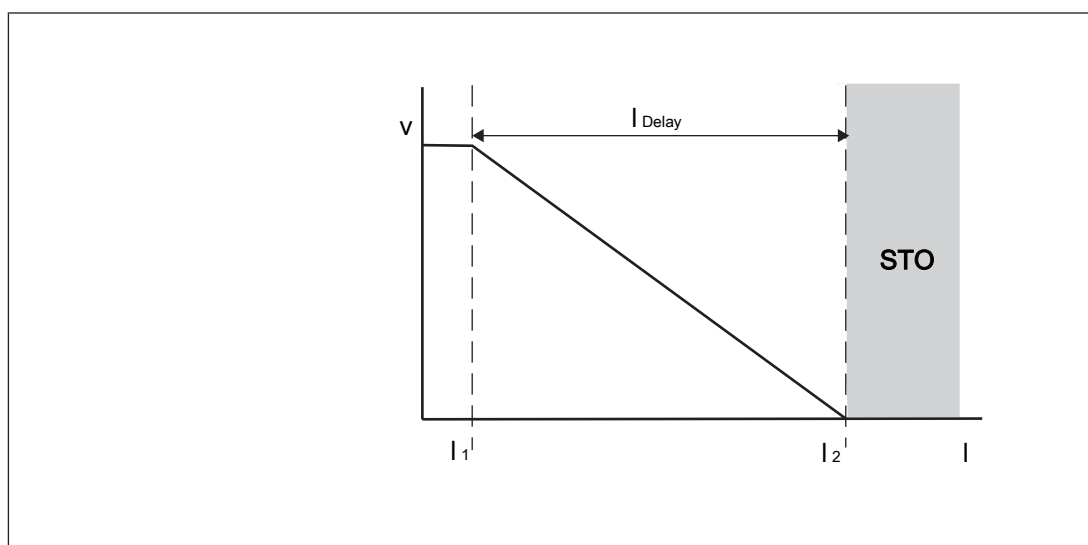


## Motion monitoring modules PNOZ m EF 2MM

### Legend

- $t_1$ : Monitoring function SS1-M is activated
- $t_2$ : Delay time elapses, safety function "Safe torque off" (STO) is activated
- $t_{\text{Delay}}$ : Set delay time for controlled braking of motor

Sequence with standstill detection limit value for automatic STO:

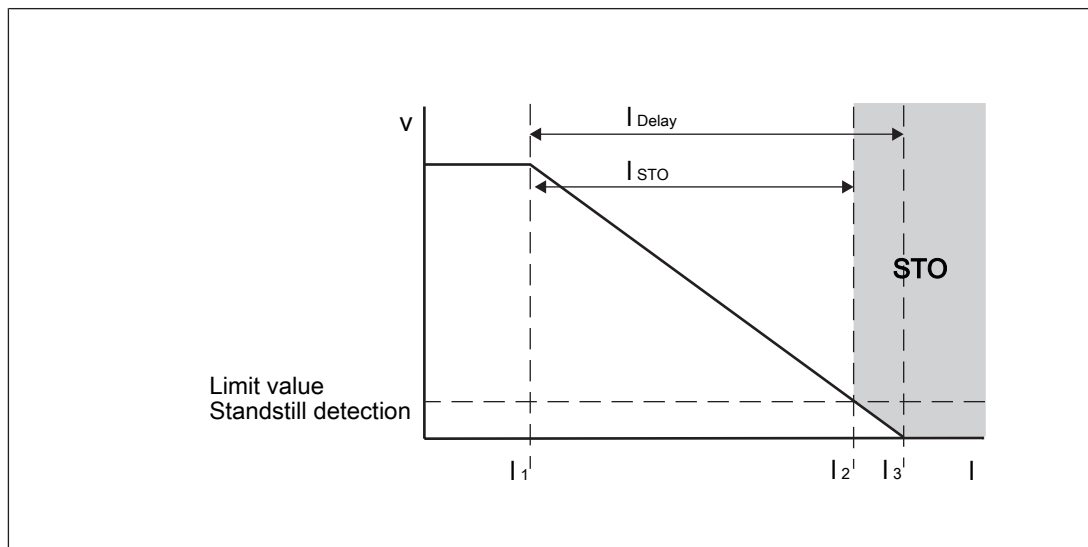

### Legend

- $t_1$ : Monitoring function SS1-M is activated
- $t_2$ : Standstill detection limit value for automatic STO reached, safety function "Safe torque off" (STO) is activated
- $t_3$ : Delay time elapses
- $t_{\text{Delay}}$ : Set delay time for controlled braking of motor
- $t_{\text{STO}}$ : Actual time from activation of monitoring function until STO is activated

### Safe stop 2 monitoring

The **Safe stop 2 monitoring** function (SS2-M) monitors

- ▶ Whether the set delay time has expired (to controlled braking of the motor) or the value for standstill detection for automatic SOS is below the limit value and
- ▶ Whether the standstill position ultimately remains within a configured tolerance window.

#### Reaction:

- ▶ If the monitoring function SS2-M is triggered, the "Braking ramp" output switches off. The drive controller's braking ramp is activated.

## Motion monitoring modules PNOZ m EF 2MM


- ▶ If the set delay time has elapsed or the value for the automatic SOS is below the limit value, the standstill position is monitored, the **Position monitoring** output switches on. If the standstill position is outside the tolerance window, the **Position monitoring** and **STO** outputs switch off, the safety function **Safe torque off (STO)** is activated.

A maximum of 1 SS2-M element can be configured per axis in the PNOZmulti Configurator.

Please note:

This monitoring function cannot be used in conjunction with 2 proximity switches because position detection is not possible.

Sequence without standstill detection limit value for automatic SOS:

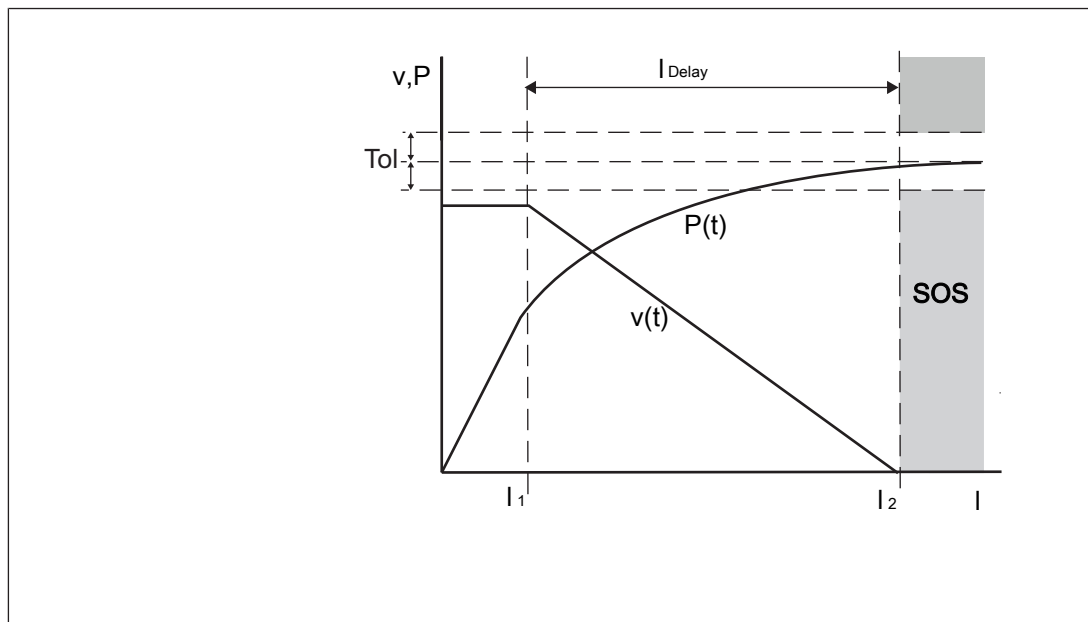


### Legend

- $t_1$ : Activation of the monitoring function SS2-M
- $t_2$ : Delay time elapses, monitoring of standstill position (SOS) is activated
- $t_{Delay}$ : Set delay time for controlled braking of motor

Sequence with standstill detection limit value for automatic SOS:


## Motion monitoring modules PNOZ m EF 2MM

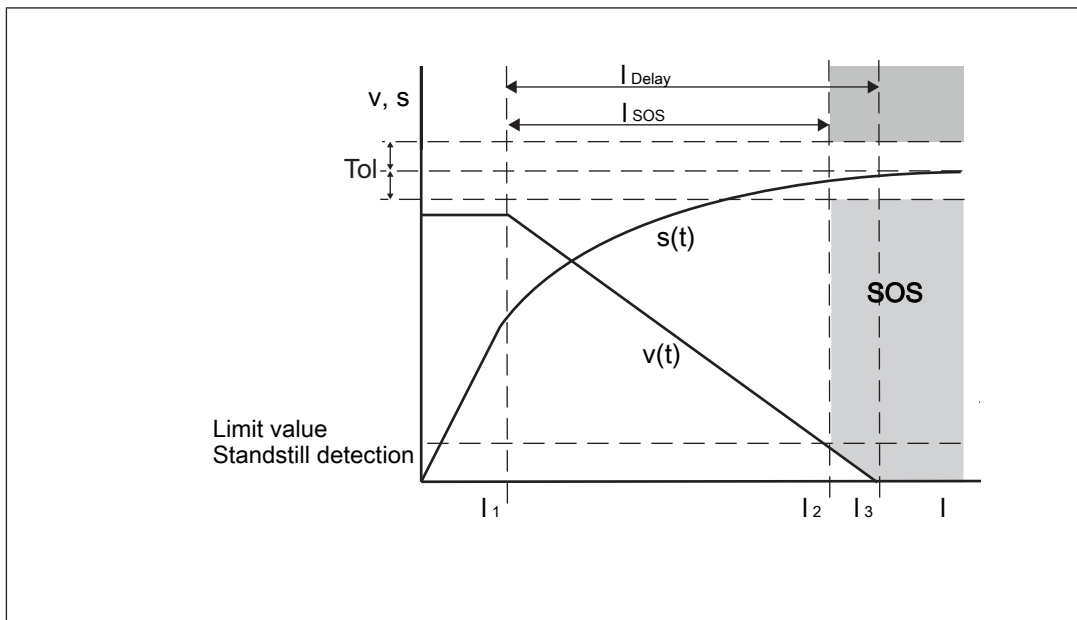

### Legend

- $t_1$ : Activation of the monitoring function SS2-M
- $t_2$ : Standstill detection limit value for automatic SOS reached, monitoring of standstill position (SOS) is activated
- $t_3$ : Delay time elapses
- $t_{Delay}$ : Set delay time for controlled braking of motor
- $t_{STO}$ : Actual time from activation of monitoring function until STO is activated

Sequence when standstill position is violated:

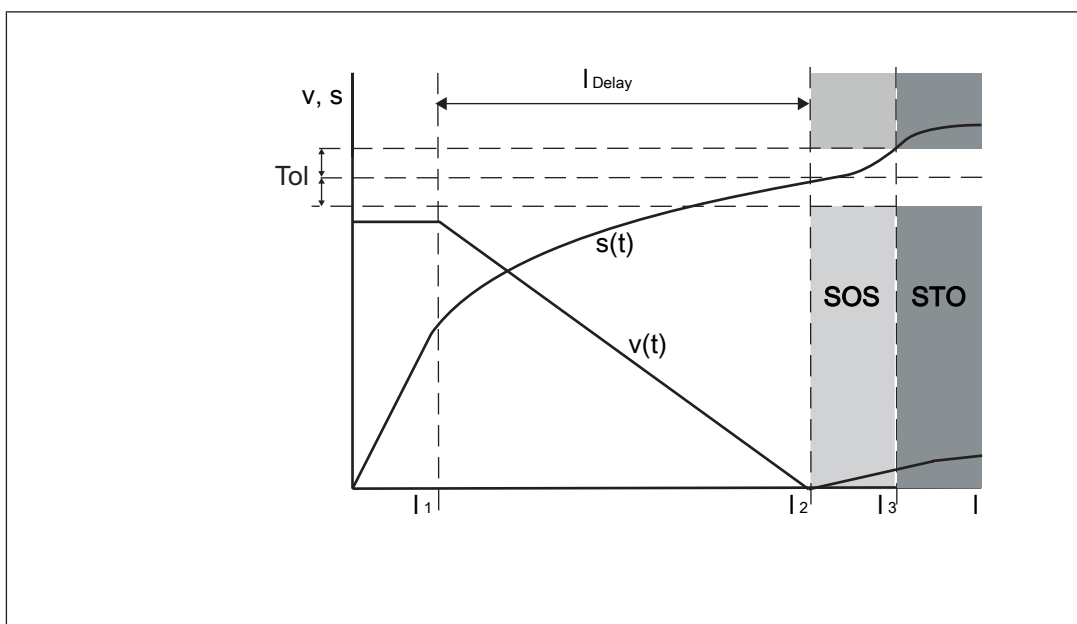

## Motion monitoring modules

### PNOZ m EF 2MM

#### Legend

$t_1$ :	Activation of the monitoring function SS2-M
$t_2$ :	Standstill detection limit value for automatic SOS reached, monitoring of standstill position (SOS) is activated
$t_3$ :	Standstill position outside of tolerance window, safety function "Safe torque off" (STO) is activated
$t_{\text{Delay}}$ :	Set delay time for controlled braking of motor

#### Hysteresis


A hysteresis can be configured for the monitoring functions. This prevents the outputs from bouncing if there are fluctuations around the response value. The hysteresis takes effect when the output is switched on.

#### Validation cut-off frequency

As implausible signals may arise due to edge jitter on the sensors around the standstill position, a validation cut-off frequency must be configured for sensor types with proximity switches in the PNOZmulti Configurator (edge jitter is caused by the position control of the drive frequency converter or by external interference signals).

If the value of the validation cut-off frequency falls below the configured value, the feasibility check of the sensors will no longer be run.

#### System reaction time


Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion](#) [ 29]".

#### Proximity switches

- ▶ The following proximity switches can be used with a pnp or npn output:
  - Inductive
  - Capacitive
- ▶ The proximity switches must be fitted so that at least one is always activated. In other words, the proximity switches must be fitted so that the recorded signals always overlap.
- ▶ The cable used to connect the proximity switches must be shielded (see connection diagrams in the chapter entitled "EMC-compliant wiring").
- ▶ A DC voltage in the range of 0 - 30 V can be monitored via track S. It should be used to monitor the supply voltage of the proximity switches.

## Motion monitoring modules PNOZ m EF 2MM

### Proximity switch assembly:

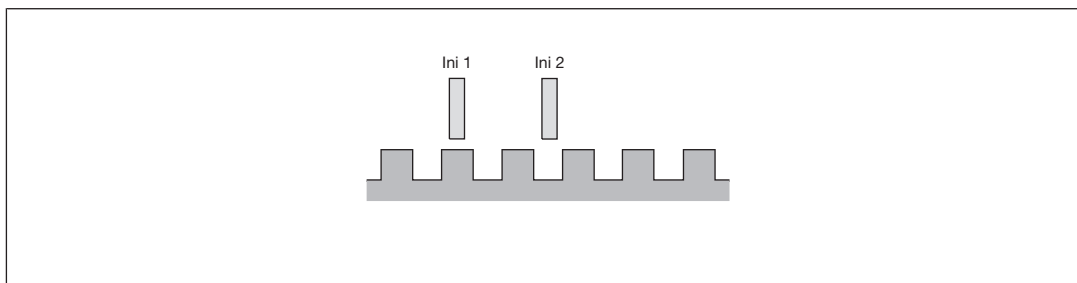

### Signal characteristics:

Proximity switch combinations	Signal image in an energised state
PNP / PNP	
NPN / NPN	
NPN / PNP	
PNP / NPN	

- ▶ For a full configuration, the maximum frequency of the sensors you are using must be entered in the PNOZmulti Configurator (see sensor's data sheet).

## Motion monitoring modules

### PNOZ m EF 2MM

#### Encoder

- ▶ The following encoders can be used:
  - TTL, HTL (single-ended or differential signals)
  - Sin/Cos 1 Vss
  - Hiperface®
- ▶ The encoders can be connected with or without Z index (0 index).
- ▶ The cables used to connect the encoders must be shielded (see connection diagrams in the chapter entitled "EMC-compliant wiring").
- ▶ A proximity switch can also be connected to track Z to monitor for broken shearpins.

**Please note:**

Broken shearpin monitoring only becomes active when

- The minimum speed is exceeded  
and
- The tolerance for detecting feasibility errors has elapsed.

The minimum speed and tolerance depend on the ratio of the frequency on tracks AB " $f_{AB}$ " to the frequency on track Z " $f_Z$ " in your configuration (see PNOZmulti Configurator **Motion Monitor Element, Calculated Ratio AB/Z**).

Minimum speed:

- Calculated ratio  $AB/Z \geq 1.0$   
 $f_Z = 10 \text{ mHz}$  or  $f_{AB} = (f_{AB}/f_Z) \times 10 \text{ mHz}$
- at  $f_{AB}/f_Z$  **Ratio**  $< 1.0$   
 $f_{AB} = 10 \text{ mHz}$  or  $f_Z = 10 \text{ mHz}/(f_{AB}/f_Z)$

Tolerance for detecting feasibility errors:

- at  $f_{AB}/f_Z$  **Ratio**  $\geq 1.0$   
7.5 Z pulses or  $7.5 \times (f_{AB}/f_Z)$  AB pulses
- at  $f_{AB}/f_Z$  **Ratio**  $< 1.0$   
4.5 AB pulses or  $4.5 \times (f_{AB}/f_Z)$  Z pulses
- ▶ With Hiperface encoders, the Sin- Cos track is recorded and monitored via an adapter (see [Adapters for encoders](#) [780]).
- ▶ Track S can be used:
  - To connect an encoder's error output.
  - To monitor voltages between 0 V and 30 V for a permitted upper and lower limit. For example, the encoder's supply voltage can be monitored.
- ▶ The maximum frequency of the used encoders must be entered for a complete configuration.
- ▶ Pay attention to the values in the technical details.




## Motion monitoring modules PNOZ m EF 2MM


### Output signals

#### Output signals TTL, HTL

Single ended

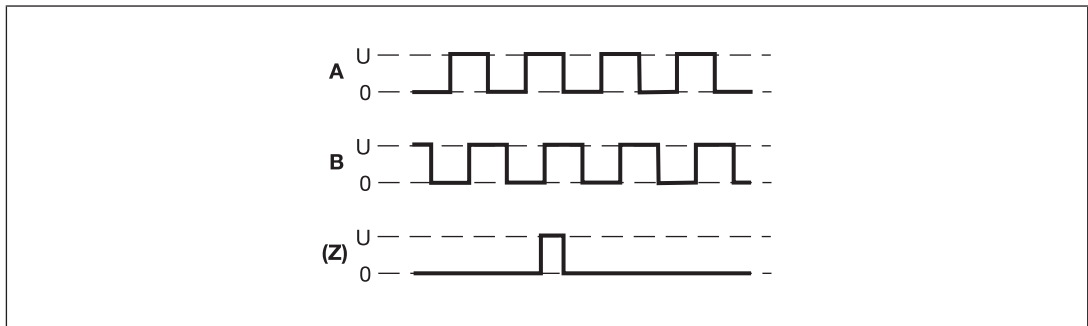


Differential

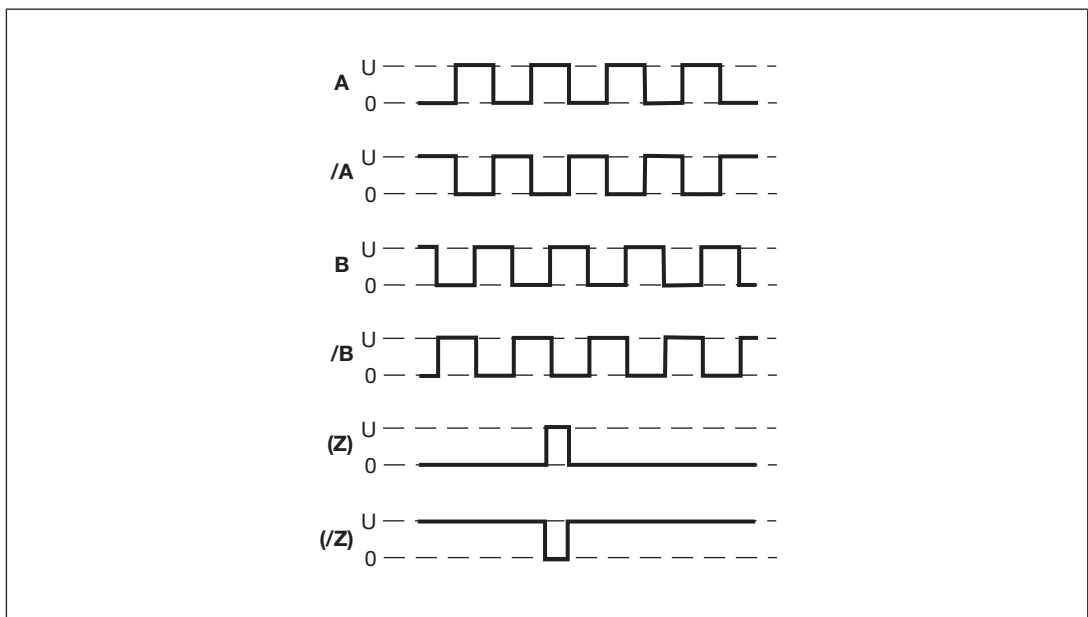


## Motion monitoring modules PNOZ m EF 2MM

### Output signals Sin/Cos (1 Vss)

Single ended with reference track (e.g. Hiperface ®)

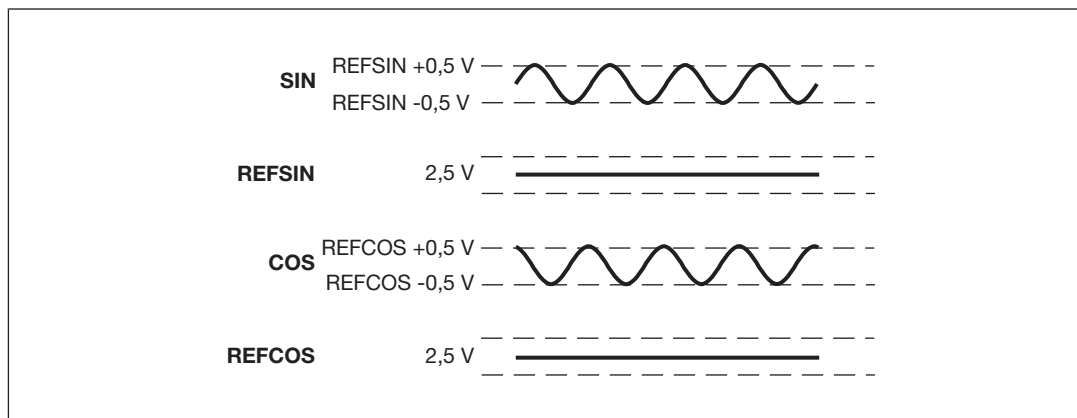

Differential with/without Z index (e.g. Heidenhain 1 Vss)

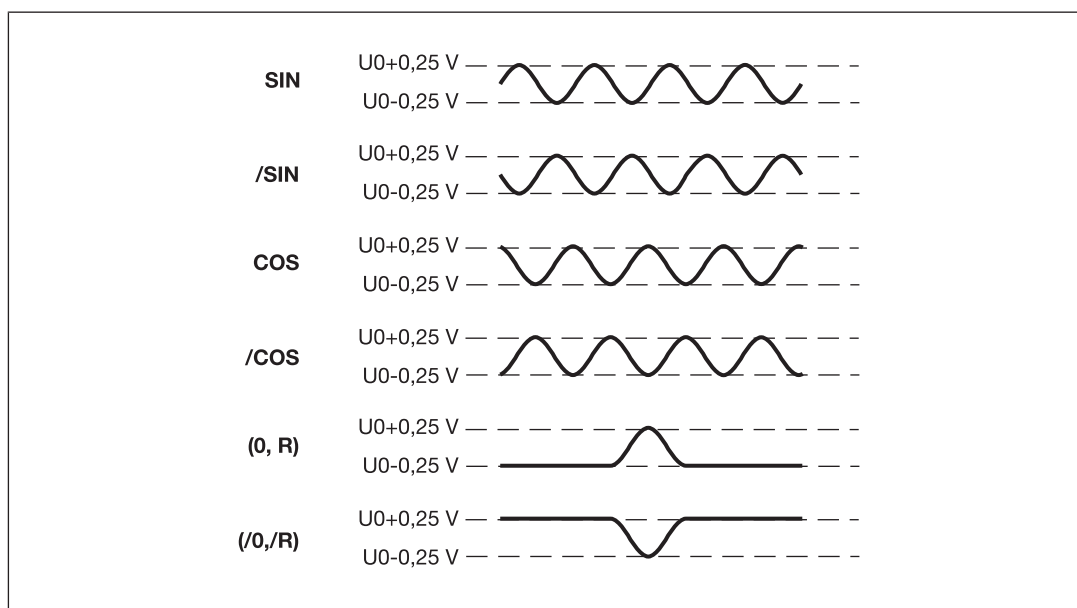

### Adapters for encoders

The adapter records the data between the encoder and the drive and makes it available to the PNOZ m EF 2MM via the socket.


Pilz supplies complete adapters as well as ready-made cable with connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

## Motion monitoring modules

### PNOZ m EF 2MM

## Installation

### Dimensions in mm

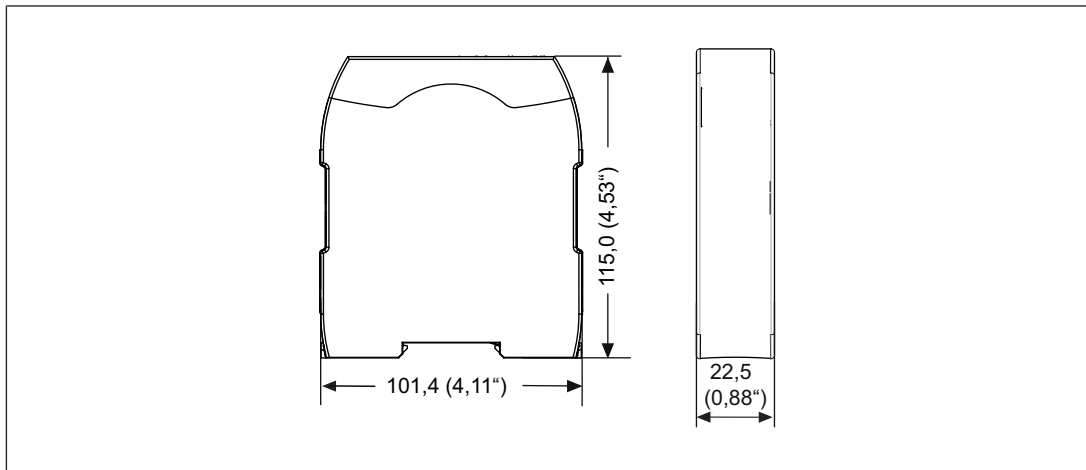

## Commissioning

### Wiring


The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[790\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ The cable used to connect the encoders and proximity switches must be shielded (see connection diagrams in the chapter entitled "EMC-compliant wiring").
- ▶ The shield may only be connected to earth at a single point.
- ▶ Earth loops should be avoided.
- ▶ If possible, the connections for the various earth potentials ( ) should not be connected on the PNOZ m EF 2MM but should be connected directly to the GNDs on the connected units, otherwise noise susceptibility may be increased significantly (conductor loops are not permitted).

## Motion monitoring modules PNOZ m EF 2MM

### Pin assignment of Mini-IO socket

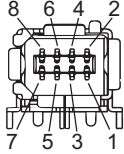Mini-IO socket 8-pin	PIN	Track
	1	S
	2	GND
	3	Z
	4	A
	5	/A
	6	/Z
	7	B
	8	/B

## Motion monitoring modules

### PNOZ m EF 2MM


#### Connection of proximity switches

The following proximity switch combinations can be connected:

- ▶ A: pnp, B: pnp
- ▶ A: npn, B: npn
- ▶ A: pnp, B: npn
- ▶ A: npn, B: pnp


When connecting proximity switches please note:

- ▶ Proximity switches can be connected to
  - terminals A12, B12, GND for axis 1 and A22, B22, GND for axis 2
  - or
  - tracks A, B and GND of the Mini-IO socket (X12 for axis 1, X22 for axis 2).
- ▶ Track S (S12, S22) should be used to monitor the supply voltage (see drawing). A permitted voltage range can be entered in the menu.
- ▶ Connect the proximity switch to 24 VDC of the power supply.
- ▶ When connecting the proximity switches, please refer to the chapter entitled "EMC-compliant wiring".
- ▶ Invalid signals may occur with cable lengths >50 m. In this case we recommend that you connect a resistor between the signal lines, as shown in the diagrams.
- ▶ Connection of the proximity switches may only be performed in three-wire technology and not in two-wire technology.

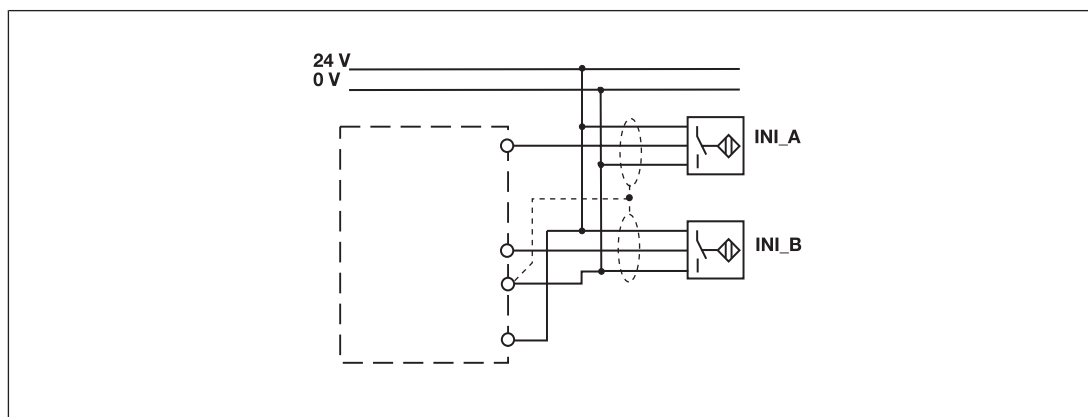


## Motion monitoring modules PNOZ m EF 2MM

pnp proximity switch with resistor R = 10 kOhm

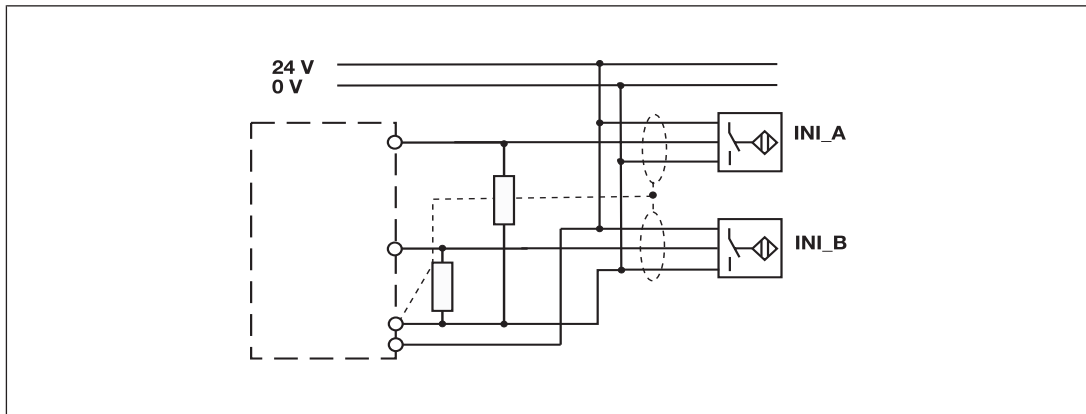

npn proximity switch with resistor R = 47 kOhm

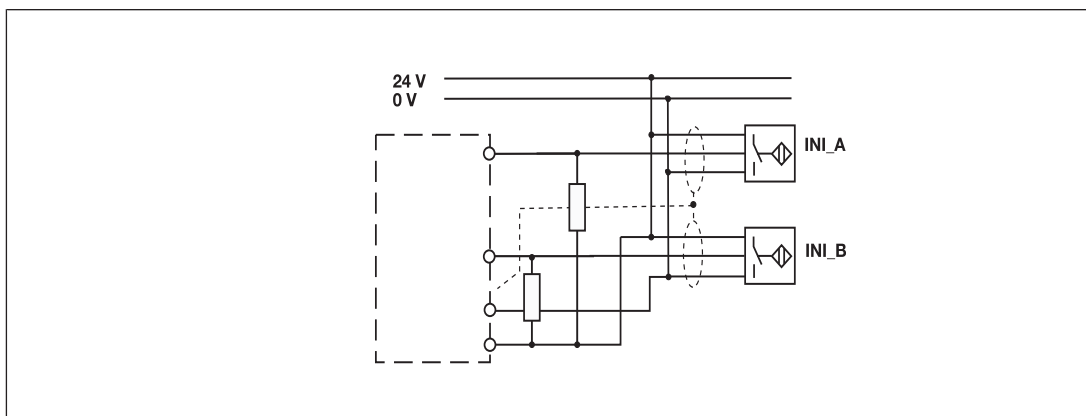

### Connection of an encoder

Proceed as follows when connecting the encoder:

- ▶ The encoder can be connected via an adapter (e.g. ) or directly to the PNOZ m EF 2MM.
- ▶ Use only shielded cables for all connections. Please refer to the chapter entitled "EMC-compliant wiring".
- ▶ Always connect GND on the encoder to GND on the connector.
- ▶ If the encoder signals are not terminated with 120 Ohm in the frequency converter or adapter cable longer than 5 metres is used, the encoder signals must be terminated with  $Z_0 = 120 \text{ Ohm}$  between A and /A, B and /B, Z and /Z.

## Motion monitoring modules PNOZ m EF 2MM


### Connect encoder

Encoder types:

- ▶ TTL single ended
- ▶ HTL single ended

Please note:

- ▶ Tracks/A, /B, Z, and /Z must remain free

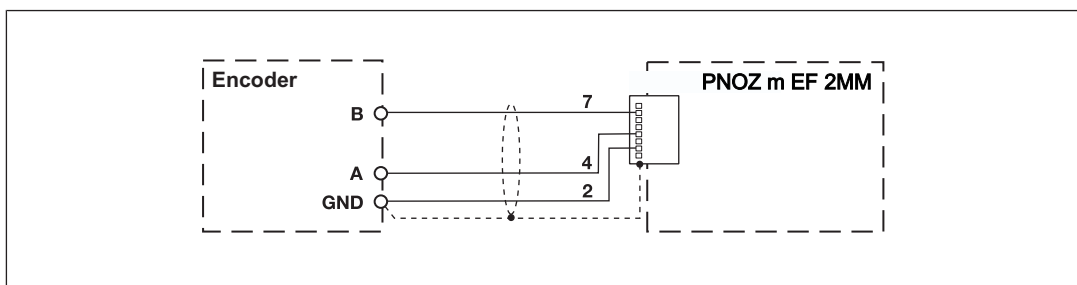


Encoder types:

- ▶ TTL differential
- ▶ HTL differential
- ▶ sin/cos 1 Vss
- ▶ Hiperface

Please note:

- ▶ Tracks/A, /B, Z, and /Z must remain free

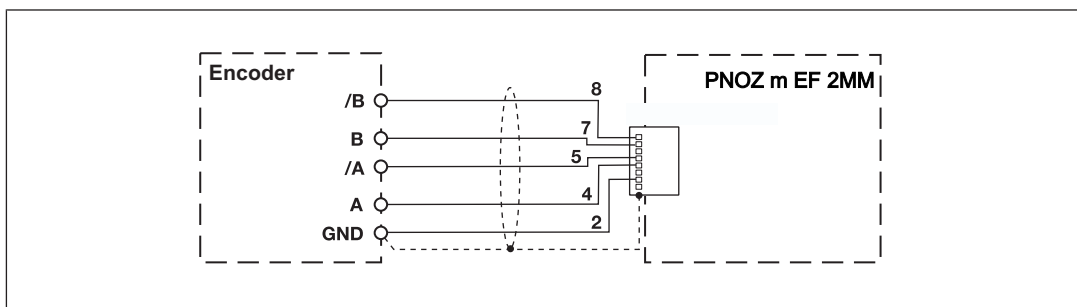

### Connect encoder with Z index


Encoder types:

- ▶ TTL single Z Index
- ▶ HTL single Z Index

Please note:


- ▶ Tracks /A, /B and /Z must remain free

## Motion monitoring modules PNOZ m EF 2MM

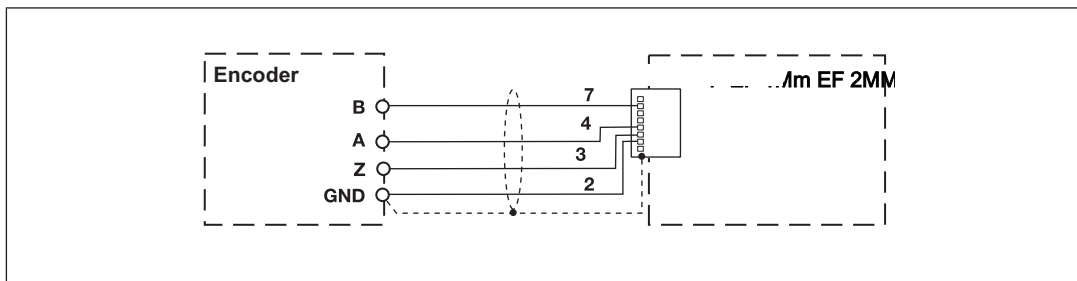


Encoder types:

- ▶ TTL diff. Z Index
- ▶ HTL diff. Z Index
- ▶ sin/cos 1 Vss Z Index

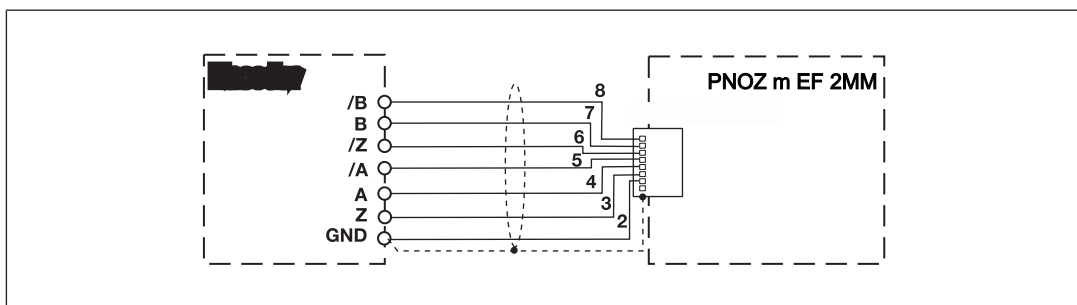

### Connect encoder via an adapter

The adapter (see [Accessories \[794\]](#)) is connected between the encoder and the drive. The output on the adapter is connected to the socket on the PNOZ m EF 2MM.

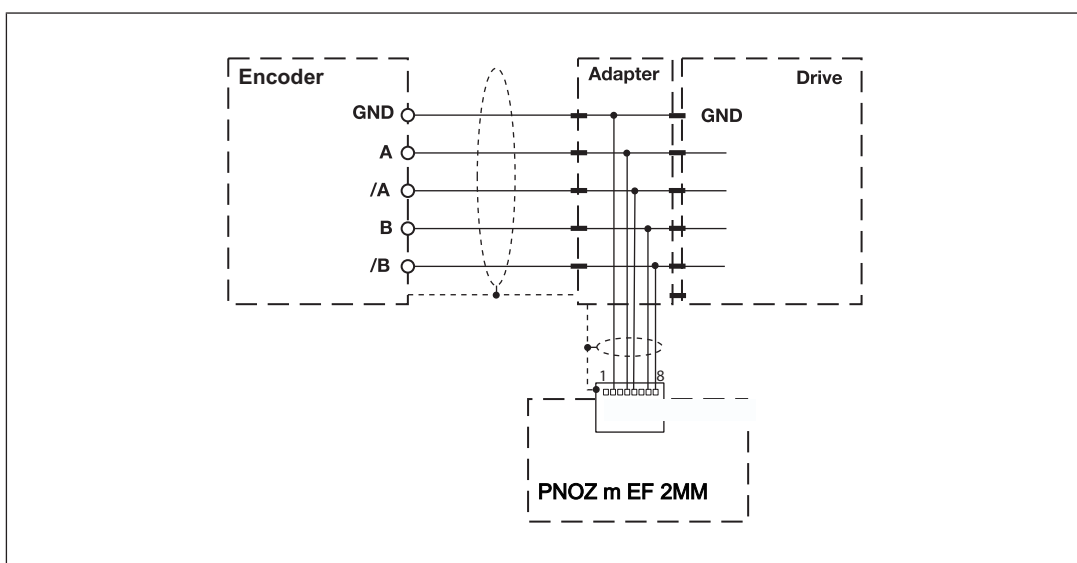



## Motion monitoring modules PNOZ m EF 2MM

### Connection of proximity switch and encoder


When connecting the encoders and proximity switches, please refer to the chapter entitled "EMC-compliant wiring".

Sensor types:

- ▶ Configuration: HTL single Z Freq. Ini pnp
  - HTL single ended (A,B) + Ini pnp (Z)
  - HTL single ended (A,B) + HTL differential (A as Z)
  - HTL single ended (A,B) + HTL single ended (A as Z)
- ▶ Configuration: TTL single Z Freq. Ini pnp
  - TTL single ended (A,B) + Ini pnp (Z)
  - TTL single ended (A,B) + HTL differential (A as Z)
  - TTL single ended (A,B) + HTL single ended (A as Z)

Please note:

Tracks /A, /B and /Z must remain free.

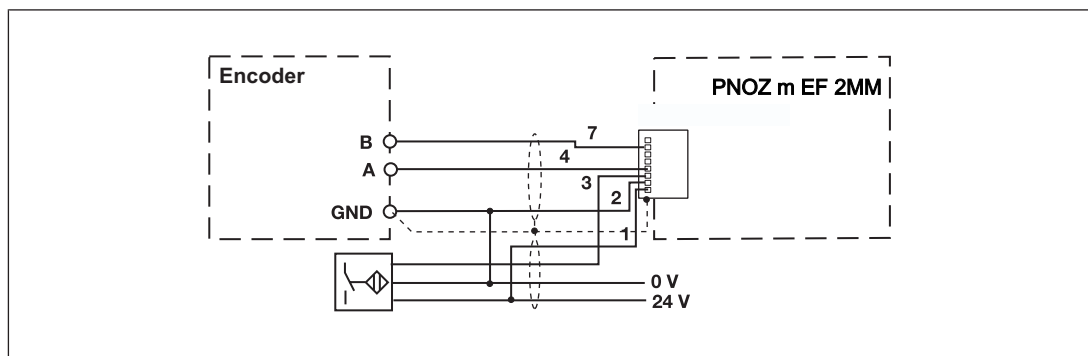

Sensor types:


- ▶ Configuration: TTL differential Z Freq. Ini pnp
  - TTL differential (A,/A,B,/B) + Ini pnp (Z)
  - TTL differential (A,/A,B,/B) + HTL differential (A as Z)
  - TTL differential (A,/A,B,/B) + HTL single ended (A as Z)
- ▶ Configuration: HTL differential Z Freq. Ini pnp
  - HTL differential (A,/A,B,/B) + Ini pnp (Z)
  - HTL differential (A,/A,B,/B) + HTL differential (A as Z)
  - HTL differential (A,/A,B,/B) + HTL single ended (A as Z)
- ▶ Configuration: sin/cos 1 Vss Z Freq. Ini pnp
  - sin/cos 1 Vss (A,/A,B,/B) + Ini pnp (Z)
  - sin/cos 1 Vss (A,/A,B,/B) + HTL differential (A as Z)

## Motion monitoring modules PNOZ m EF 2MM

- sin/cos 1 Vss (A,/A,B,/B) + HTL single ended (A as Z)
- ▶ Configuration: Hiperface Z Freq. Ini pnp
- Hiperface (A,/A,B,/B) + Ini pnp (Z)
- Hiperface (A,/A,B,/B) + HTL differential (A as Z)
- Hiperface (A,/A,B,/B) + HTL single ended (A as Z)


Please note:

Track /Z must remain free!!

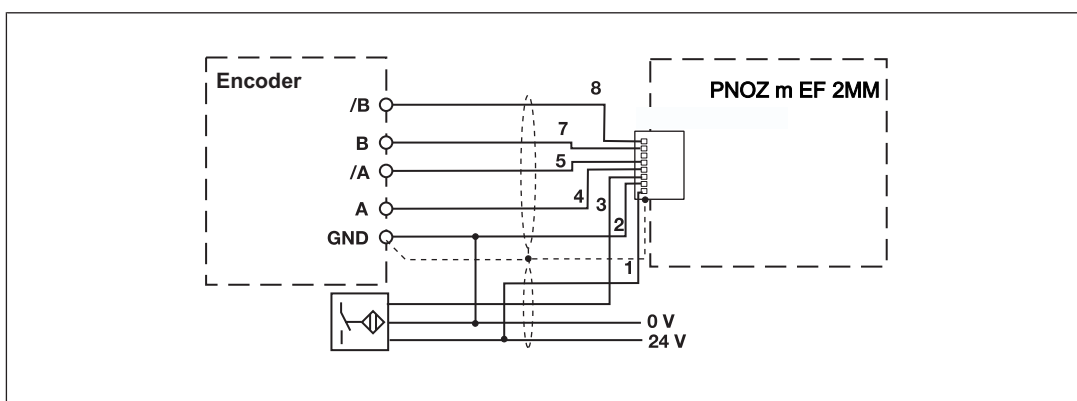

### EMC-compliant wiring

#### EMC-compliant wiring for connecting an encoder

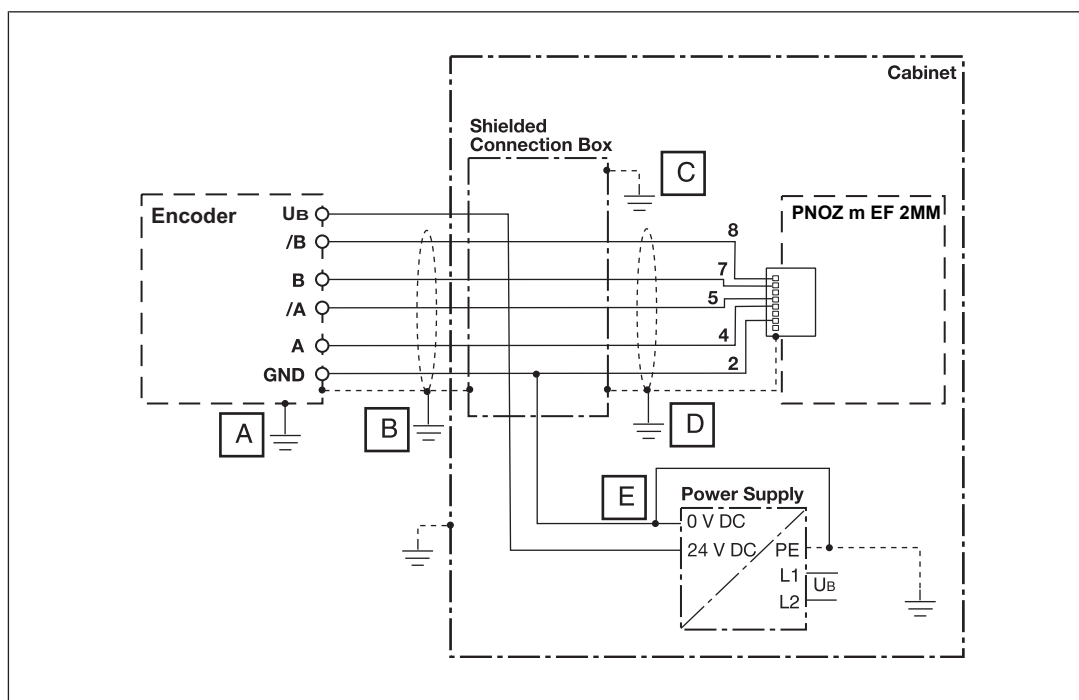

## Motion monitoring modules PNOZ m EF 2MM


To avoid EMC interference we recommend that the shield on the sensor cables or the housing of the shielded junction box is only connected to earth at a single point:

**A or B or C or D or E**

Conductor loops outside the shield must be avoided.

If a shielded junction box is not used, the shield must run continuously from the sensor to the evaluation device.

### EMC-compliant wiring for connecting an encoder with drive

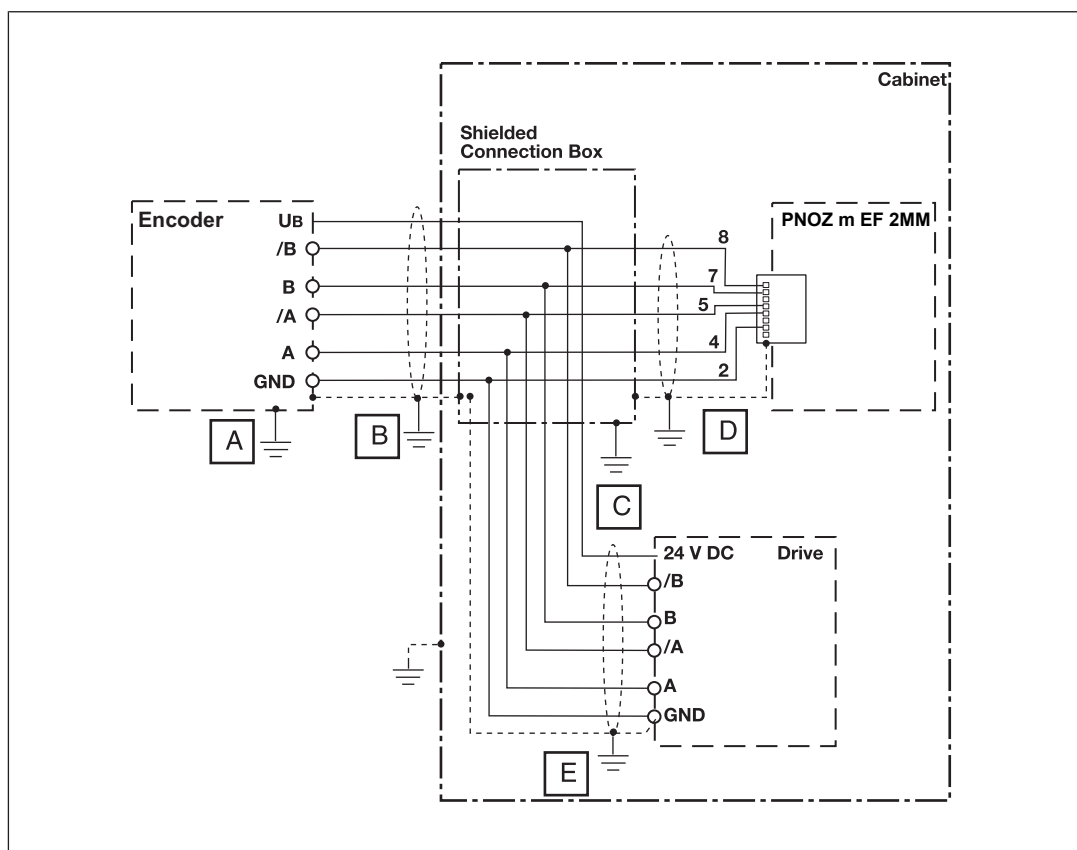

To avoid EMC interference we recommend that the shield on the sensor cables or the housing of the shielded junction box is only connected to earth at a single point:


**A or B or C or D or E**

Conductor loops outside the shield must be avoided.

If a shielded junction box is not used, the shield must run continuously from the sensor to the evaluation device.

## Motion monitoring modules PNOZ m EF 2MM

### EMC-compliant wiring for connecting 2 proximity switches

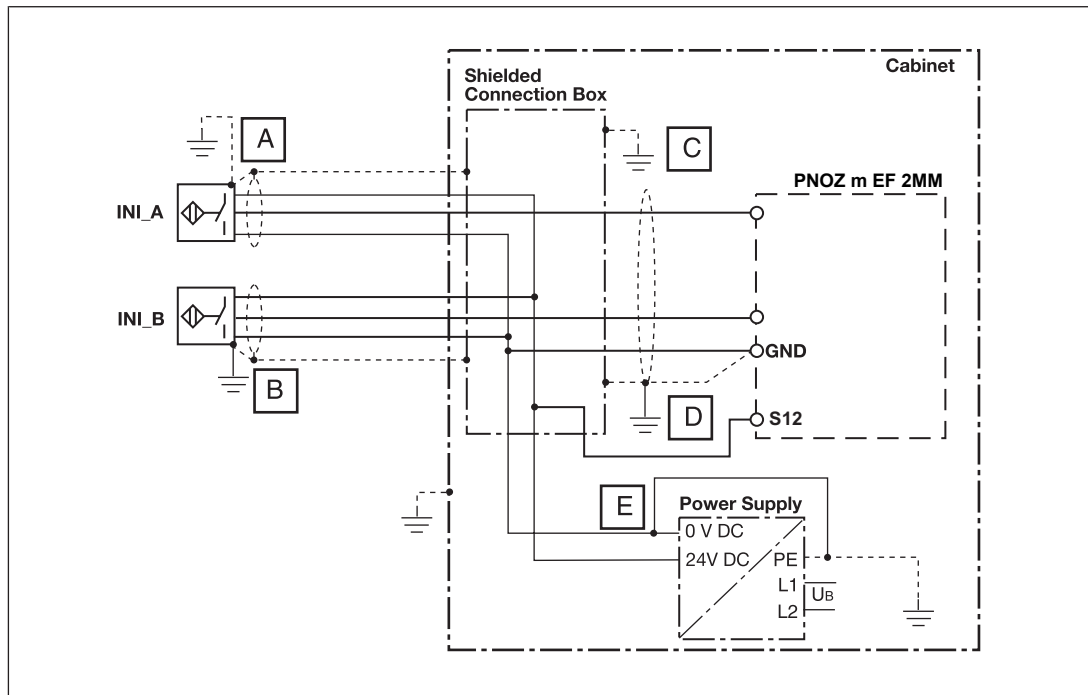

To avoid EMC interference we recommend that the shield on the sensor cables or the housing of the shielded junction box is only connected to earth at a single point:

**A or B or C or D or E**

Conductor loops outside the shield must be avoided.

If a shielded junction box is not used, the shield must run continuously from the sensor to the evaluation device.

### Technical details

General	
Approvals	<b>BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed</b>
Application range	<b>Failsafe</b>
Module's device code	<b>00E4h</b>
Electrical data	
Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Current consumption	<b>150 mA</b>
Power consumption	<b>3,5 W</b>
Max. power dissipation of module	<b>3,9 W</b>
Status indicator	<b>LED</b>

## Motion monitoring modules PNOZ m EF 2MM

<b>Proximity switch input</b>	
Number of inputs	4
Input signal level	
Signal level at "1"	11 - 30 V
Signal level at "0"	0 - 3 V
Input resistance	22 kOhm
Input's frequency range	0 - 5 kHz
Configurable monitoring frequency	
Without hysteresis	0.1 Hz - 5 kHz
<b>Incremental encoder input</b>	
Number of inputs	2
Connection type	Mini-IO female connector, 8-pin
Input signal level	0,5 - 30 V <sub>ss</sub>
Phase position for the differential signals A, /A and B, /B	90° ±30°
Overload protection	-50 - 65 V
Input resistance	20 kOhm
Input's frequency range	0 - 500 kHz
Configurable monitoring frequency	
Without hysteresis	0.1 Hz - 500 kHz
<b>Inputs</b>	
Potential isolation	yes
<b>Times</b>	
Reaction time after limit value is exceeded	1/f_ist + 16 ms
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
In accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
In accordance with the standard	EN 60068-2-30, EN 60068-2-78
Condensation during operation	Not permitted
EMC	EN 61131-2
Vibration	
In accordance with the standard	EN 60068-2-6
Frequency	5 - 150 Hz
Acceleration	1g

## Motion monitoring modules PNOZ m EF 2MM

### Environmental data

#### Shock stress

In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>

Max. operating height above sea level	<b>2000 m</b>
---------------------------------------	---------------

#### Airgap creepage

In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>

Rated insulation voltage	<b>30 V</b>
--------------------------	-------------

#### Protection type

In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

### Potential isolation

Potential isolation between	<b>Sensor and system voltage</b>
-----------------------------	----------------------------------

Type of potential isolation	<b>Functional insulation</b>
-----------------------------	------------------------------

Rated surge voltage	<b>2500 V</b>
---------------------	---------------

Potential isolation between	<b>Sensor 1 and sensor 2</b>
-----------------------------	------------------------------

Type of potential isolation	<b>Functional insulation</b>
-----------------------------	------------------------------

Rated surge voltage	<b>2500 V</b>
---------------------	---------------

### Mechanical data

Mounting position	<b>Horizontal on top hat rail</b>
-------------------	-----------------------------------

#### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

#### Material

Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>

Connection type	<b>Spring-loaded terminal, screw terminal</b>
-----------------	---

Mounting type	<b>plug-in</b>
---------------	----------------

#### Conductor cross section with screw terminals

1 core flexible	<b>0,25 - 2,5 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,2 - 1,5 mm<sup>2</sup>, 24 - 16 AWG</b>

Torque setting with screw terminals	<b>0,5 Nm</b>
-------------------------------------	---------------

#### Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector	<b>0,2 - 2,5 mm<sup>2</sup>, 24 - 12 AWG</b>
---------------------------------------	--

Spring-loaded terminals: Terminal points per connection	<b>2</b>
---	----------

## Motion monitoring modules PNOZ m EF 2MM

Mechanical data	
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	101,4 mm
Width	22,5 mm
Depth	111 mm
Weight	120 g

Where standards are undated, the 2013-01 latest editions shall apply.

### Safety characteristic data

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN IEC 62061 SIL CL	EN IEC 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
Monitoring 1 encoder	PL d	Cat. 2	SIL CL 2	1,80E-08	SIL 2	1,58E-03	20
Monitoring 2 encoder	PL e	Cat. 3	SIL CL 3	1,01E-09	SIL 3	8,41E-05	20
Monitoring safe encoder	PL e	Cat. 4	SIL CL 3	2,35E-09	SIL 3	2,04E-04	20
Logic	PL e	Cat. 4	SIL CL 3	3,37E-10	SIL 3	2,88E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

### Order reference

#### Product

Product type	Features	Order no.
PNOZ m EF 2MM	Expansion module	772 171

## Motion monitoring modules PNOZ m EF 2MM

### Accessories

#### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ 2MM 1 set	Spring-loaded terminals, 1 pieces	783 544
Screw terminals PNOZ 2MM 1 set	Screw terminals, 1 piece	793 544

#### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

#### Adapter cable

Product type	Features	Order No.
MM A MINI-IO CAB99	1.50 m	772 200
MM A MINI-IO CAB99	2.50 m	772 201
MM A MINI-IO CAB99	5.0 m	772 202

Product type	Features	Order No.
PNOZ msi b4 Box	Connection box	773 845



## Link modules

### PNOZ m EF Multi Link

---



## Overview

### Unit features

Using the product PNOZ m EF Multi Link:

Link module to safely connect two configurable control systems PNOZmulti 2.


The product has the following features:

- ▶ Connection options:
  - Two base units PNOZmulti 2
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Point-to-point connection via 4-core shielded and twisted-pair cable
- ▶ 32 virtual inputs and 32 virtual outputs
- ▶ Status indicators
- ▶ Max. 4 PNOZ m EF Multi Link can be connected to the base unit
- ▶ LEDs for
  - Operating state
  - Error
  - Connection status
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)

## Link modules

### PNOZ m EF Multi Link

#### Front view

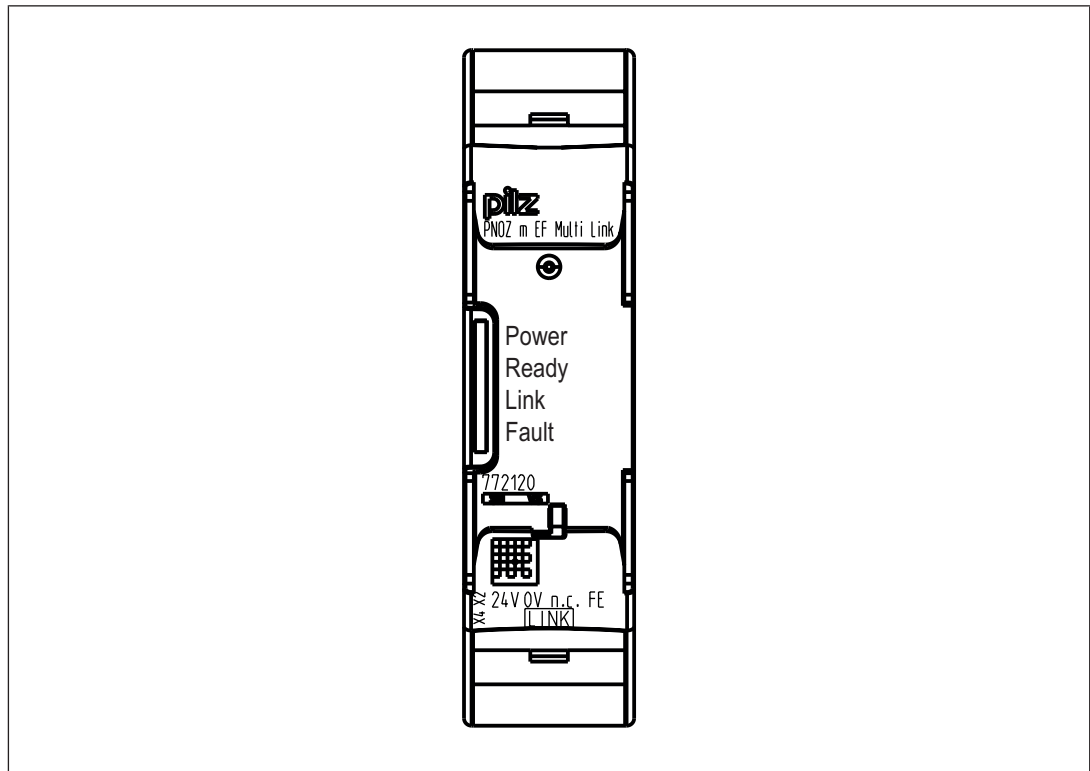

#### Legend:

- ▶ X2:
  - 0 V, 24 V: Supply connections
  - FE: Functional earth
- ▶ Link: Connection
- ▶ LEDs:
  - Power
  - Ready
  - Link
  - Fault

## Link modules

### PNOZ m EF Multi Link

## Function Description

### Functions

The link module PNOZ m EF Multi Link is used to safely transfer the input information from 32 virtual inputs and 32 virtual outputs between two PNOZmulti systems. One link module is assigned to each base unit. Data is exchanged cyclically.

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

#### Data exchange:


- ▶ Data is exchanged cyclically.
- ▶ After the end of a PNOZmulti cycle, each base unit sends its output data to its link module. This output data is immediately sent to the link module on the other base unit.
- ▶ At the same time, the base unit reads the input data from the link module.

#### Connection of multiple base units:

Any number of base units can be connected via link modules. Two link modules are required for a connection between two base units. However, only a maximum of 4 link modules may be connected to any one base unit.

#### Virtual inputs and outputs:

Inputs and outputs for both PNOZmulti systems are assigned in the PNOZmulti Configurator. Inputs and outputs with the same number are assigned to each other, e.g. output o5 on one PNOZmulti system to input i5 on the other PNOZmulti system.

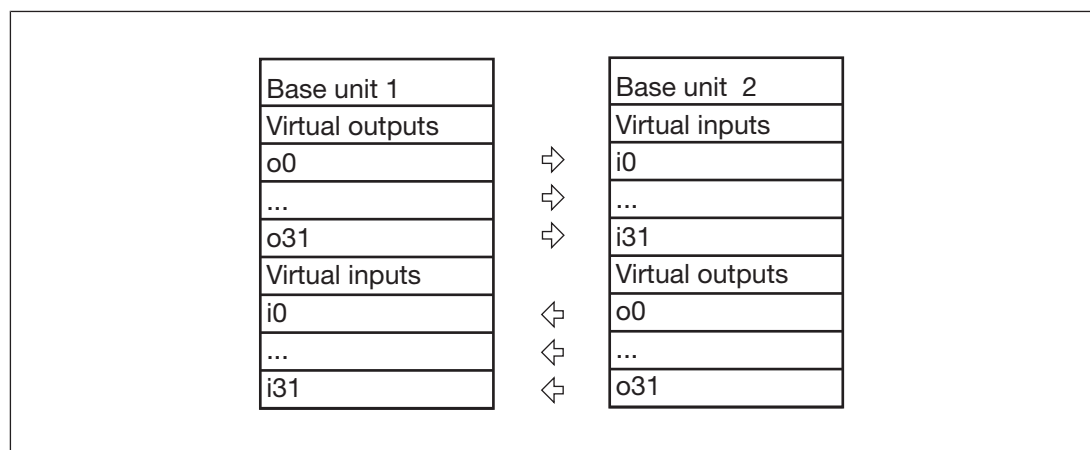


## Link modules

### PNOZ m EF Multi Link

#### System reaction time


Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "System Expansion".

#### Block diagram

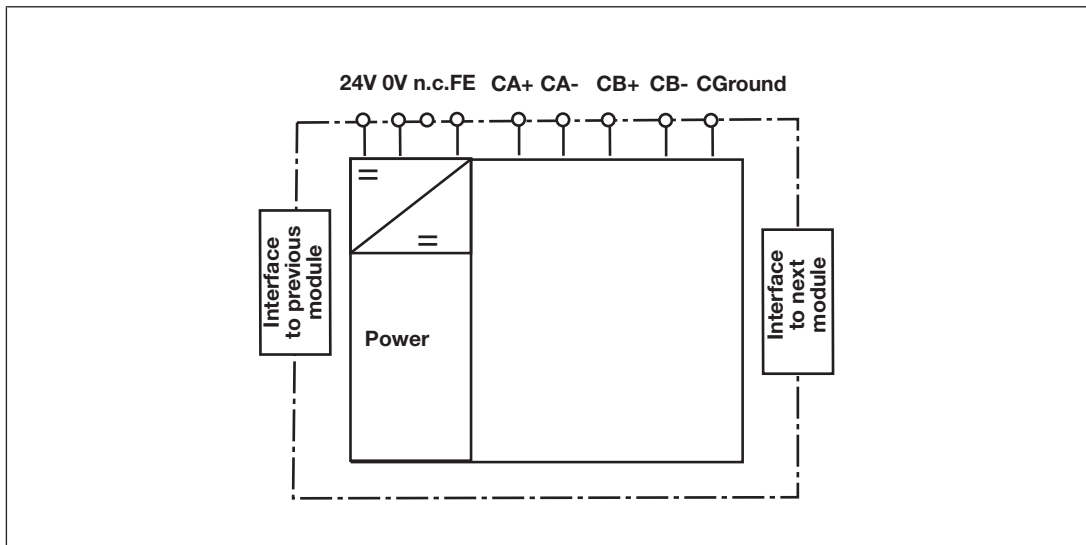

#### Installation

#### Dimensions in mm

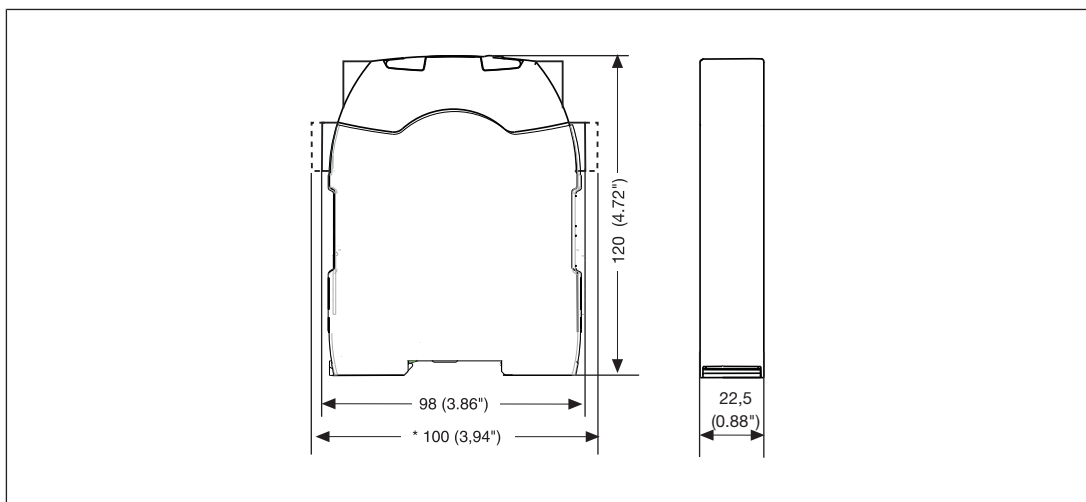

## Link modules

### PNOZ m EF Multi Link

## Commissioning


### Wiring

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[800\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.
- ▶ 2 connection terminals are available for each of the supply connections 24 V and 0 V. This means that the supply voltage can be looped through several connections. The current at each terminal may not exceed 3 A.
- ▶ The max. cable length between two link modules on a connection with one link module
  - PNOZ ml1p <V2.0: 100 m
  - PNOZ ml1p from V2.0, PNOZ mml1p, PNOZ m EF Multi Link: 1000 m
- ▶ Connect the inputs and outputs from two link modules with 4-core shielded cable. The cables must be twisted in pairs (see "Preparing for operation").
- ▶ Note the crossover cabling, e.g. CA+ with CB+.
- ▶ The cables must be classified into a minimum of Category 5 in accordance with ISO/IEC 11801.

### Connection

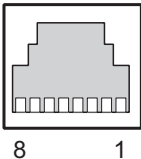
RJ45 socket 8-pin	PIN	Layout
	1	CA+
	2	CA-
	3	CB+
	4	n.c.
	5	n.c.
	6	CB-
	7	n.c.
	8	n.c.
	Shield	CGround

## Link modules

### PNOZ m EF Multi Link

Supply voltage	AC	DC
	/	

#### Connecting 2 base units PNOZmulti 2 via PNOZ m EF Multi Link

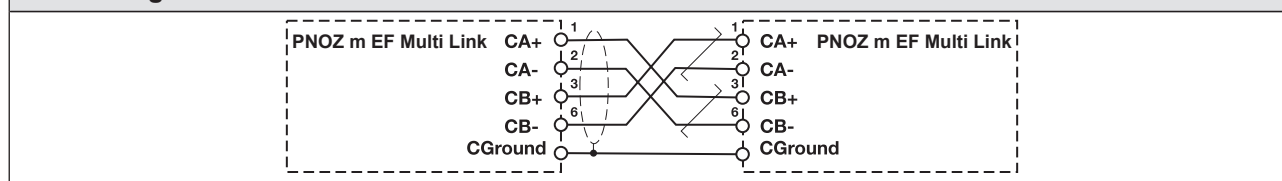

## Technical details

General	
Approvals	<b>BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed</b>
Application range	<b>Failsafe</b>
Electrical data	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>2,5 W</b>
Potential isolation	<b>yes</b>
Status indicator	<b>LED</b>
Fieldbus interface	
Galvanic isolation	<b>yes</b>
Times	
Max. data transmission time	<b>5 ms</b>
Environmental data	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>

## Link modules

### PNOZ m EF Multi Link

<b>Environmental data</b>	
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>5 - 55 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>Module and supply voltage</b>
Type of potential isolation	<b>Functional insulation</b>
Rated surge voltage	<b>2500 V</b>
Potential isolation between	<b>Module and system voltage</b>
Type of potential isolation	<b>Functional insulation</b>
Rated surge voltage	<b>2500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Mounting type	<b>plug-in</b>

## Link modules

### PNOZ m EF Multi Link

#### Mechanical data

Conductor cross section with screw terminals

1 core flexible **0,25 - 2,5 mm<sup>2</sup>, 24 - 12 AWG**

2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors **0,2 - 1,5 mm<sup>2</sup>, 24 - 16 AWG**

Rigid single-core, flexible multi-core or multi-core with crimp connector **0,5 - 1,5 mm<sup>2</sup>**

Torque setting with screw terminals **0,5 Nm**

Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector **0,2 - 2,5 mm<sup>2</sup>, 24 - 12 AWG**

Spring-loaded terminals: Terminal points per connection **2**

Stripping length with spring-loaded terminals **9 mm**

Dimensions

Height **101,4 mm**

Width **22,5 mm**

Depth **120 mm**

Weight **91 g**

Where standards are undated, the 2013-01 latest editions shall apply.

## Safety characteristic data

Operating mode	EN ISO 13849-1: 2008	EN ISO 13849-1: 2008	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
	PL	Category					
2-channel	PL e	Cat. 4	SIL CL 3	8,82E-09	SIL 3	3,86E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.



## Link modules

### PNOZ m EF Multi Link

#### Order reference

#### Product

Product type	Features	Order no.
PNOZ m EF Multi Link	Expansion module	772 120

#### Accessories

#### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmc2p, mml1p 1 pc.	Spring-loaded terminals, 1 pieces	783 538
Spring terminals PNOZ mmc2p,mml1p 10 pcs	Spring-loaded terminals, 10 pieces	783 539
Screw terminals PNOZ mmc2p, mml1p 1 pc.	Screw terminals, 1 piece	793 538
Screw terminals PNOZ mmc2p,mml1p 10 pcs.	Screw terminals, 10 piece	793 539


#### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

## Link modules

### PNOZ m EF PDP Link

---

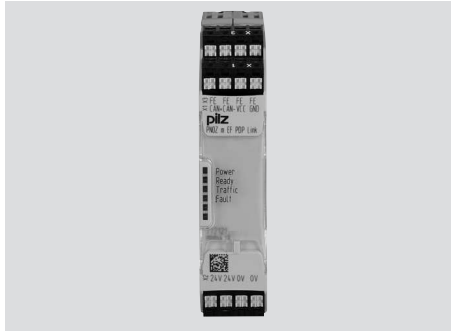

## Overview

### Unit features

Using the product PNOZ m EF PDP Link:

Link module to safely connect decentralised input/output modules to a configurable control system PNOZmulti 2


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Max. 4 PNOZ m EF PDP Link can be connected to the base unit
- ▶ Max. 4 decentralised modules can be connected to the link module PNOZ m EF PDP Link
- ▶ LEDs for
  - Operating state
  - Error
  - Connection status
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)

## Link modules

### PNOZ m EF PDP Link

#### Front view

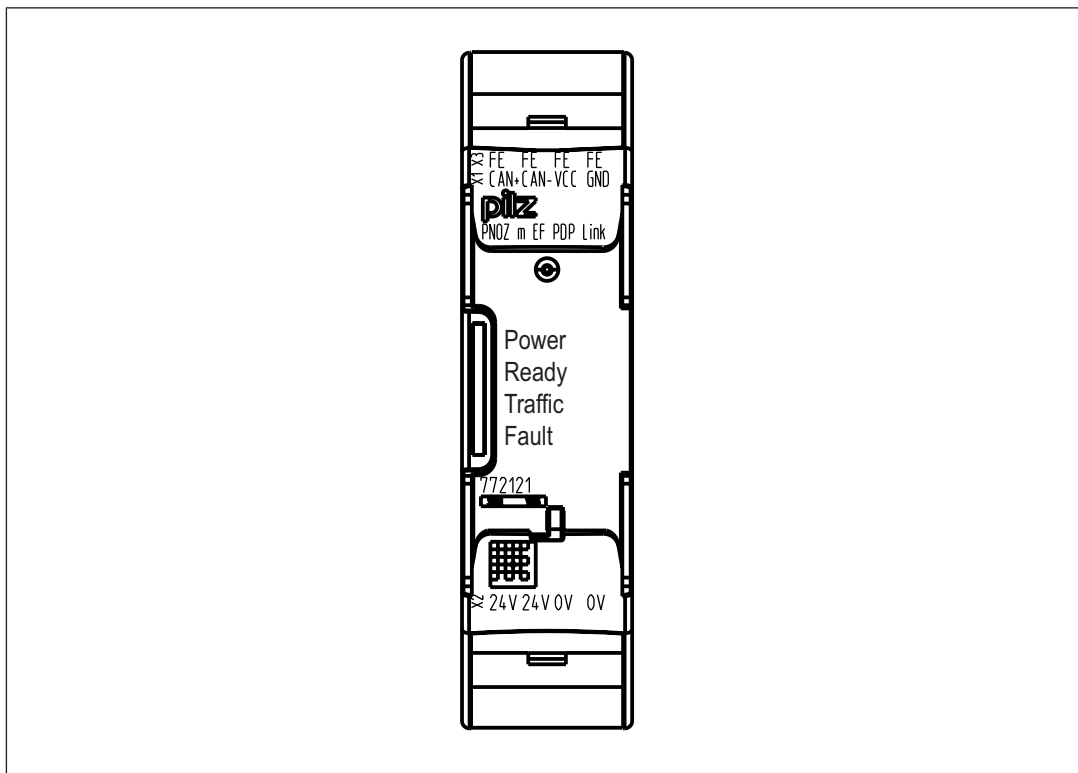

#### Legend:

- ▶ 0 V, 24 V:  
Supply connections
- ▶ CAN+, CAN-, VCC, GND:  
Connection for decentralised modules
- ▶ FE:  
Functional earth

## Function description

### Functions

The link module PNOZ m EF PDP Link is used to safely transfer the input information from decentralised modules to the control system PNOZmulti 2.

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

## Link modules

### PNOZ m EF PDP Link

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

#### Data exchange:

- ▶ Communication with the decentralised modules is via a safe data link.
- ▶ The link module PNOZ m EF PDP Link reads the input information from the decentralised modules as part of each cycle and then forwards it to the base unit.
- ▶ At the end of a PNOZmulti cycle, the base unit sends its output data to its link module. This output data is immediately sent to the decentralised modules.


#### Linking several decentralised modules:

- ▶ A maximum of 4 link modules can be connected to a base unit PNOZmulti 2.
- ▶ A maximum of 4 decentralised modules can be connected to a link module PNOZ m EF PDP Link.
- ▶ If a decentralised module receives data intended for a different decentralised module that is connected, the data is forwarded without being processed.

#### System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti [System Expansion \[📖 29\]](#)".

#### Block diagram

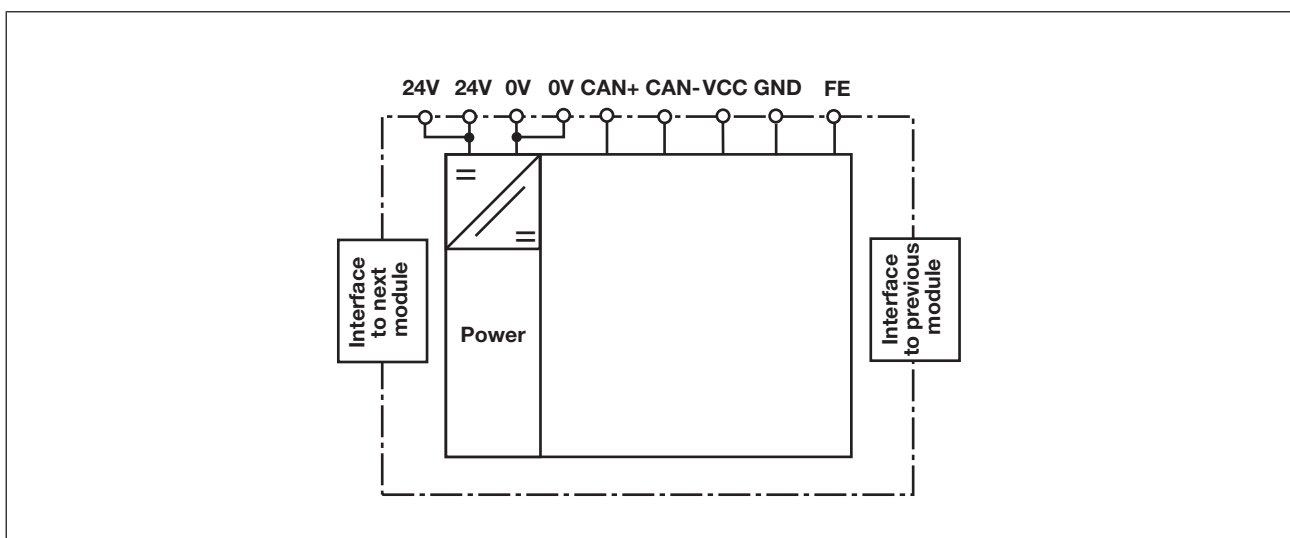


## Link modules

### PNOZ m EF PDP Link

## Installation

### Dimensions in mm

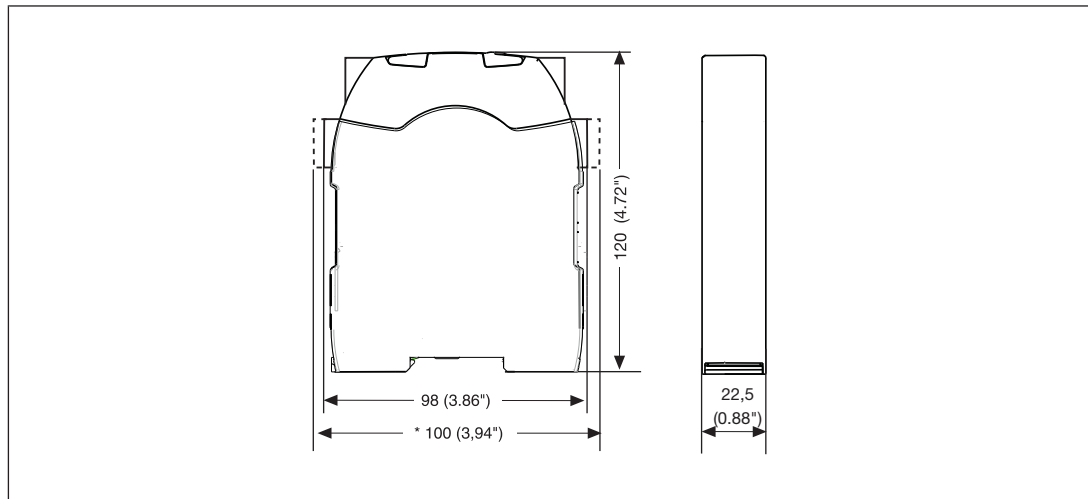

## Commissioning

### Wiring

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Please note:

- ▶ Information given in the [Technical details \[811\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ External measures must be used to connect the FE terminal to the function earth (e.g. mounting rail).
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.
- ▶ 2 connection terminals are available for each of the supply connections 24 V and 0 V. This means that the supply voltage can be looped through several connections. The current at each terminal may not exceed 3 A.
- ▶ Please refer to the technical details for information on the maximum cable length. Please also read the section entitled "Voltage drop".
- ▶ Shielded cable must be used from a cable length of **30 m**.
- ▶ Pilz pre-assembled cable can be used to connect the decentralised modules (see order reference).
- ▶ The plug-in connection terminals are either designed as cage clamp terminals or screw terminals (see order reference).


## Link modules

### PNOZ m EF PDP Link


#### Insulation voltage test

The product PNOZ m EF PDP Link is connected to functional earth  via protection elements on the supply voltage. Insulation voltage tests are only possible with voltages up to ca. 42 V.


#### Connection

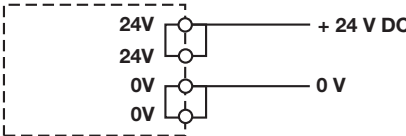Supply voltage	AC	DC
	/	

#### Connection to a decentralised input module PDP67 when using the PSEN op cable axial M12 5-pole from Pilz (see order reference)

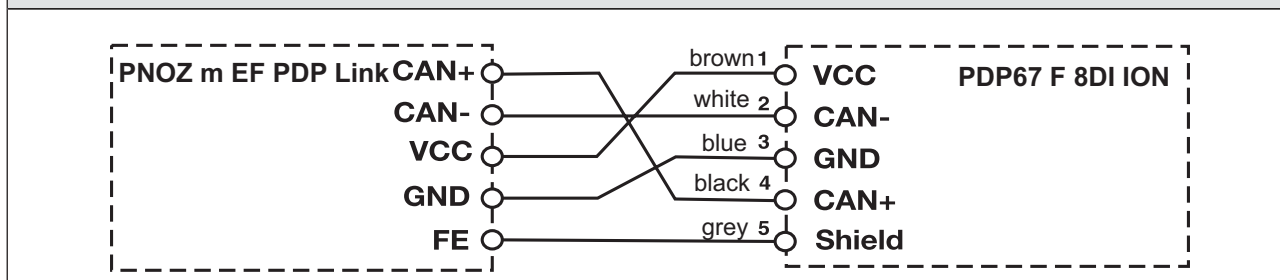

#### Connection when using the PSS SB BUSCABLE LC in conjunction with a Pilz self-assembly "PSS67 M12 connector" (see order reference in the Technical Catalogue)

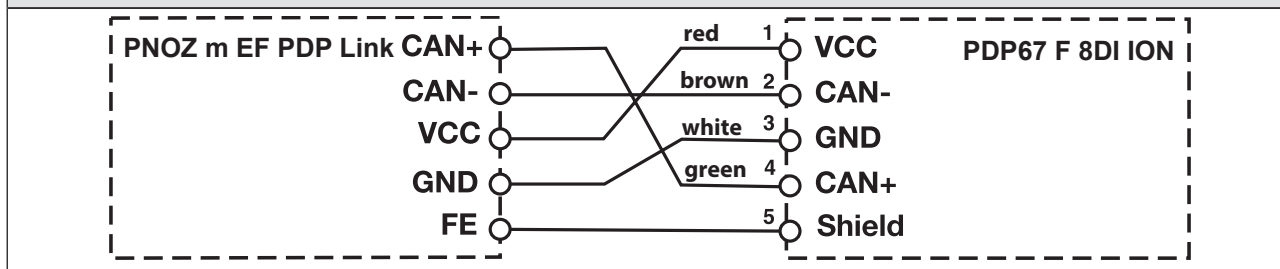

#### Download modified project to the PNOZmulti safety system


As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

## Link modules

### PNOZ m EF PDP Link

#### Series connection of 4 decentralised modules

You can connect up to 4 decentralised modules in series to a PNOZmulti link module.

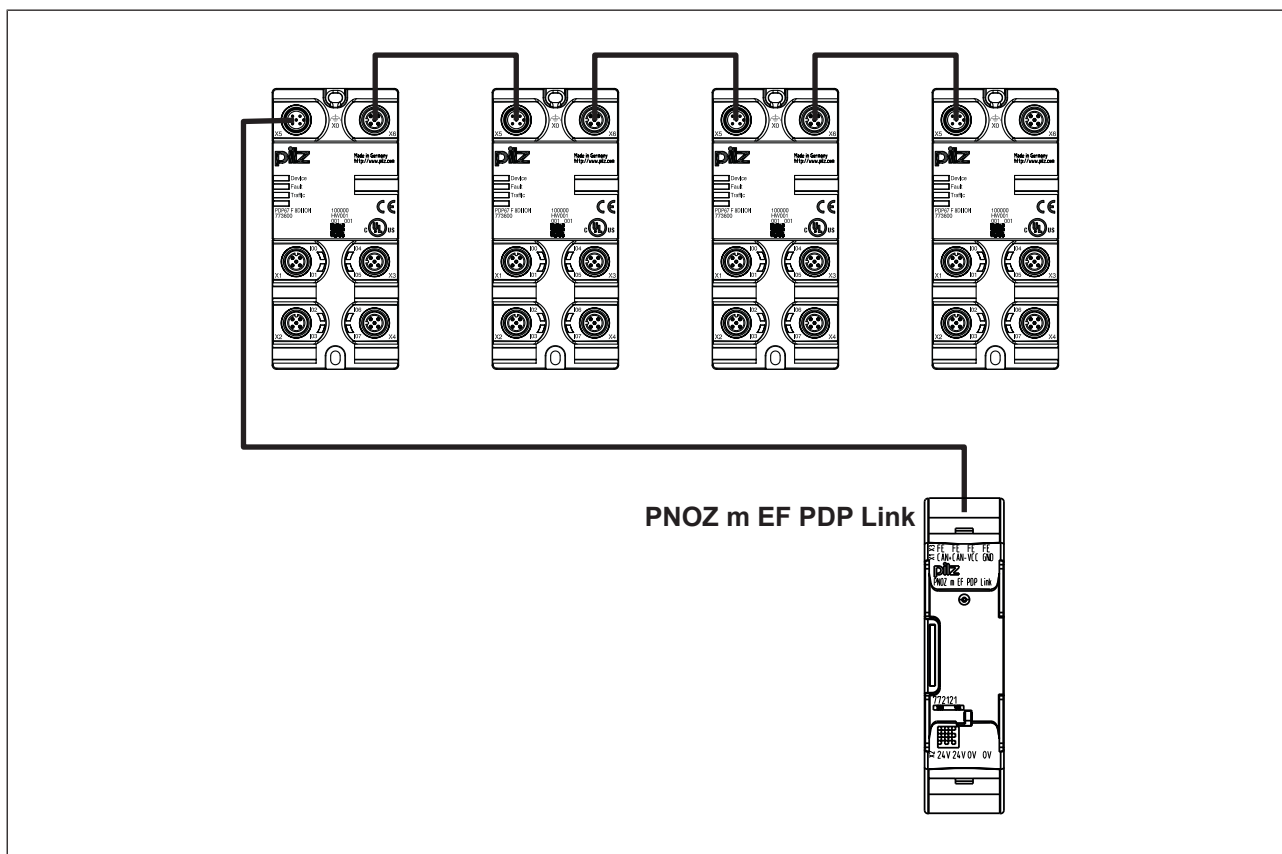

#### Voltage drop

The max. cable length depends on the voltage drop in the supply voltage cables. The level of voltage drop is determined by the:

- ▶ Cable resistance on the supply voltage cables
- ▶ Operating current of the modules
- ▶ Load on the modules

To increase the max. cable length, the input voltage can be permanently increased by the voltage tolerance (see Technical Details).

## Link modules

### PNOZ m EF PDP Link


#### Guidelines for various cable types

Cable type	Voltage drop per 10 m and per 100 mA
PSS SB BUSCABLE LC	0.1 V
Sensor cable 0.25 mm <sup>2</sup>	0.15 V
Sensor cable 0.34 mm <sup>2</sup>	0.11 V
Sensor cable 0.5 mm <sup>2</sup>	0.07 V

#### Calculation example

- ▶ The PSS SB BUSCABLE LC is used in accordance with the pin assignment in section 6.2.2.

Voltage drop per 10 m and per 100 mA: 0.1 V

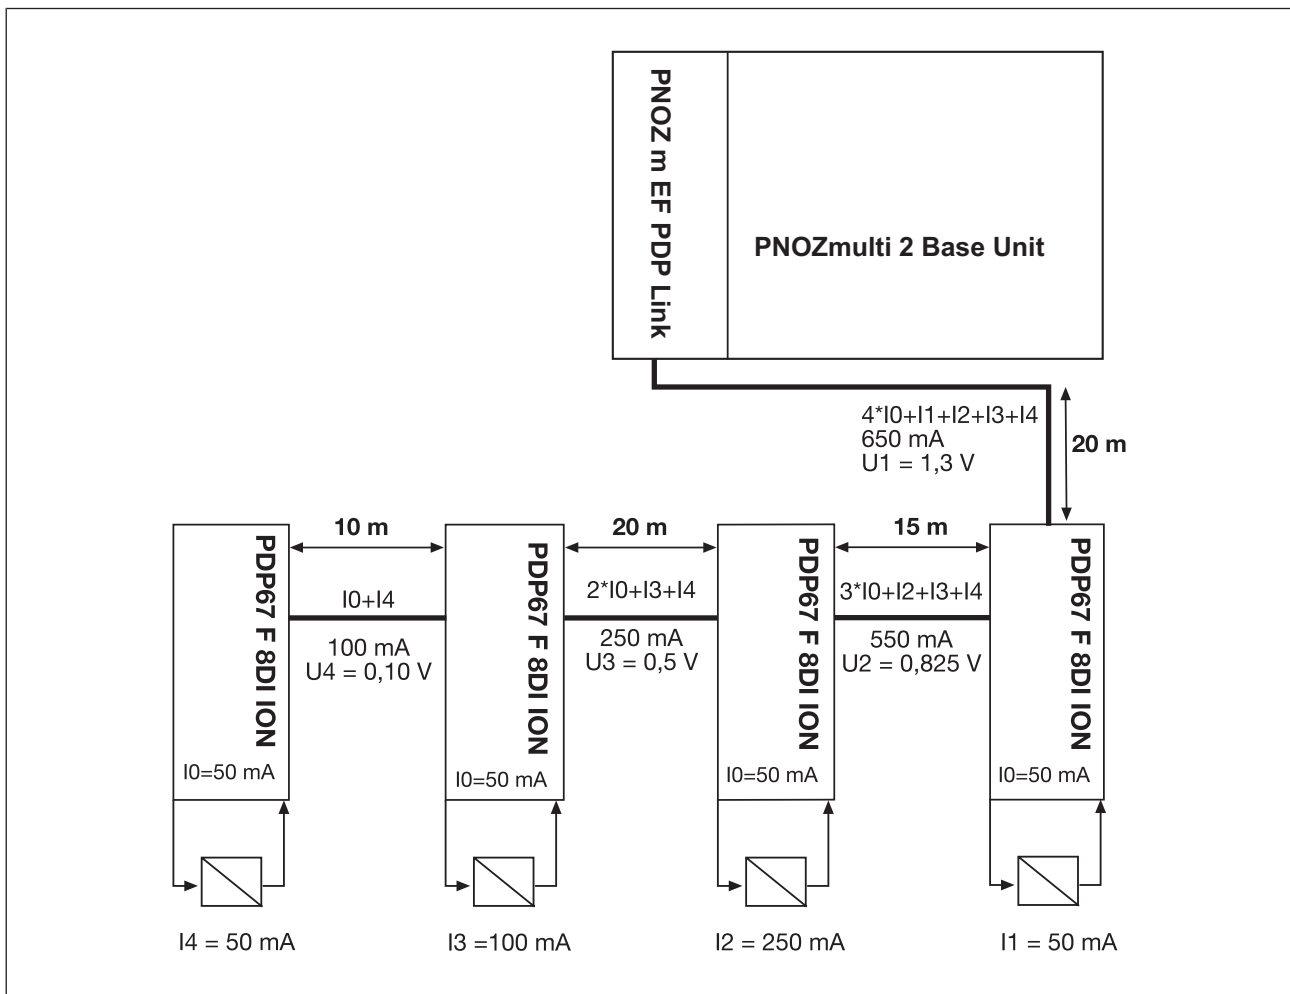

Legend:

- ▶ I0: Module's consumption.



## Link modules

### PNOZ m EF PDP Link

- ▶ I1 ... I5: Load current taken from the module
- ▶ U1 ... U4: Voltage drop on the respective connection path

Total voltage drop from the link module PNOZ m EF PDP Link to the final PDP67 F 8DI ION:

$$U_{\text{total}} = U_1 + U_2 + U_3 + U_4$$

$$U_{\text{total}} = 1.3 \text{ V} + 0.825 \text{ V} + 0.5 \text{ V} + 0.10 \text{ V} = 2.725 \text{ V}$$

## Technical details

General	
Approvals	BG, CCC, CE, EAC (Eurasian), TÜV, cULus Listed
Application range	Failsafe
Electrical data	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-15 %/+20 %</b>
Output of external power supply (DC)	<b>101,0 W</b>
Output of external power supply (DC) at no load	<b>5,0 W</b>
Supply voltage	
for	<b>Supply to the system</b>
internal	<b>Via base unit</b>
Voltage	<b>3,3 V</b>
Kind	<b>DC</b>
Status indicator	<b>LED</b>
Inputs	
Maximum input delay	<b>15 ms</b>
Semiconductor outputs	
Switch-off delay	<b>5 ms</b>
Test pulse outputs	
Maximum output current, decentralised module supply	<b>4 A</b>
Short circuit protection of decentralised module supply	<b>yes</b>
Environmental data	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>

## Link modules

### PNOZ m EF PDP Link

<b>Environmental data</b>	
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>5,0 - 55,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>Module and system voltage</b>
Type of potential isolation	<b>Protective separation</b>
Rated surge voltage	<b>2500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Max. cable length unshielded	<b>30 m</b>
Max. cable length shielded	<b>100 m</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Mounting type	<b>plug-in</b>

## Link modules

### PNOZ m EF PDP Link

#### Mechanical data

Conductor cross section with screw terminals

1 core flexible **0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG**

2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors **0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG**

Torque setting with screw terminals **0,50 Nm**

Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector **0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG**

Spring-loaded terminals: Terminal points per connection

**2**

Stripping length with spring-loaded terminals **9 mm**

Dimensions

Height **101,4 mm**

Width **22,5 mm**

Depth **120,0 mm**

Weight **96 g**

Where standards are undated, the 2013-01 latest editions shall apply.

## Safety characteristic data

Operating mode	EN ISO 13849-1: 2008	EN ISO 13849-1: 2008	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T <sub>M</sub> [year]
	PL	Category					
–	<b>PL e</b>	<b>Cat. 4</b>	<b>SIL CL 3</b>	<b>5,35E-09</b>	<b>SIL 3</b>	<b>3,30E-05</b>	<b>20</b>

All the units used within a safety function must be considered when calculating the safety characteristic data.

## Link modules

### PNOZ m EF PDP Link

#### Order reference

#### Product

Product type	Features	Order no.
PNOZ m EF PDP Link	Link module	772 121

#### Accessories

##### Connection terminals

Product type	Features	Order No.
Spring terminals PNOZ mml2p 1 pc.	Spring-loaded terminals, 1 pieces	783 540
Spring terminals PNOZ mml2p 10 pcs.	Spring-loaded terminals, 10 pieces	783 541
Screw terminals PNOZ mml2p 1 pc.	Screw terminals, 1 piece	793 540
Screw terminals PNOZ mml2p 10 pcs.	Screw terminals, 10 pieces	793 541

##### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

##### Cable

Product type	Features	Order No.
PSS SB BUSCABLE LC	Cable, shielded, 1 - 100 m	311074
PSS67 I/O Cable	Cable, 1 - 30 m	380 320
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 3 m	380 200
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 5 m	380 201
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 10 m	380 202
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 30 m	380 203

## Link modules

### PNOZ m EF PDP Link

Product type	Features	Order No.
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 3m	380 204
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 5 m	380 205
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 10 m	380 206
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 30 m	380 207
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 3m	380 208
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 5 m	380 209
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 10 m	380 210
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 20 m	380 220
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 30 m	380 211
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 3m	380 212
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 5 m	380 213
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 10 m	380 214
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 30 m	380 215
PSEN op cable axial M12 5-pole 3m	Cable, straight, M12, 5-pin, open-ended socket, 3 m	630310
PSEN op cable axial M12 5-pole 5m	Cable, straight, M12, 5-pin, open-ended socket, 5 m	630311
PSEN op cable axial M12 5-pole 10m	Cable, straight, M12, 5-pin, open-ended socket, 10 m	630312
PSEN op cable axial M12 5-pole 20m	Cable, straight, M12, 5-pin, open-ended socket, 20 m	630298
PSEN op cable axial M12 5-pole 30m	Cable, straight, M12, 5-pin, open-ended socket, 30 m	630297

## Link modules

### PNOZ m EF PDP Link

#### Adapter


Product type	Features	Order No.
PSEN ma adapter	Adapter for connection to safety switch PSENmag	380 300
PSEN cs adapter	Adapter for connection to safety switch PSENcode	380 301
PSEN sl adapter	Adapter for connection to safety switch PSENslock	380 325

#### Connector

Product type	Features	Order No.
PSS67 M12 connector	Connector, M12, straight, 5-pin, A-coded	380 308
PSS67 M12 connector	Socket, M12, straight, 5-pin, A-coded	380 309
PSS67 M12 connector	Connector, M12, angled, 5-pin, A-coded	380 310
PSS67 M12 connector	Socket, M12, angled, 5-pin, A-coded	380 311
PSS67 M8 connector	Connector, M8, straight, 4-pin	380 316
PSS67 M8 connector	Socket, M8, straight, 4-pin	380 317
PSS67 M8 connector	Connector, M8, angled, 4-pin	380 318
PSS67 M8 connector	Socket, M8, angled, 4-pin	380 319

## Communication modules PNOZ m ES ETH

---

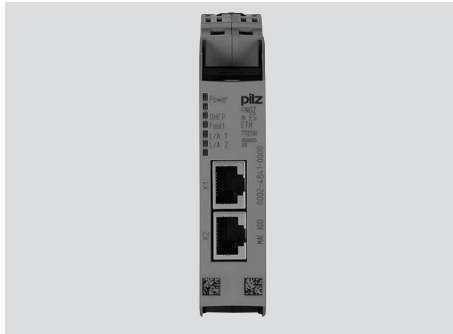

### Overview

#### Unit features

Using the product PNOZ m ES ETH:


Communication module for connection to a base unit from the configurable control system PNOZmulti 2.

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ 2 Ethernet interfaces
- ▶ Status indicators for supply voltage, communication and errors
- ▶ Max. 1 communication module can be connected to the left of the base unit PNOZmulti 2
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

## Communication modules PNOZ m ES ETH

### Front view

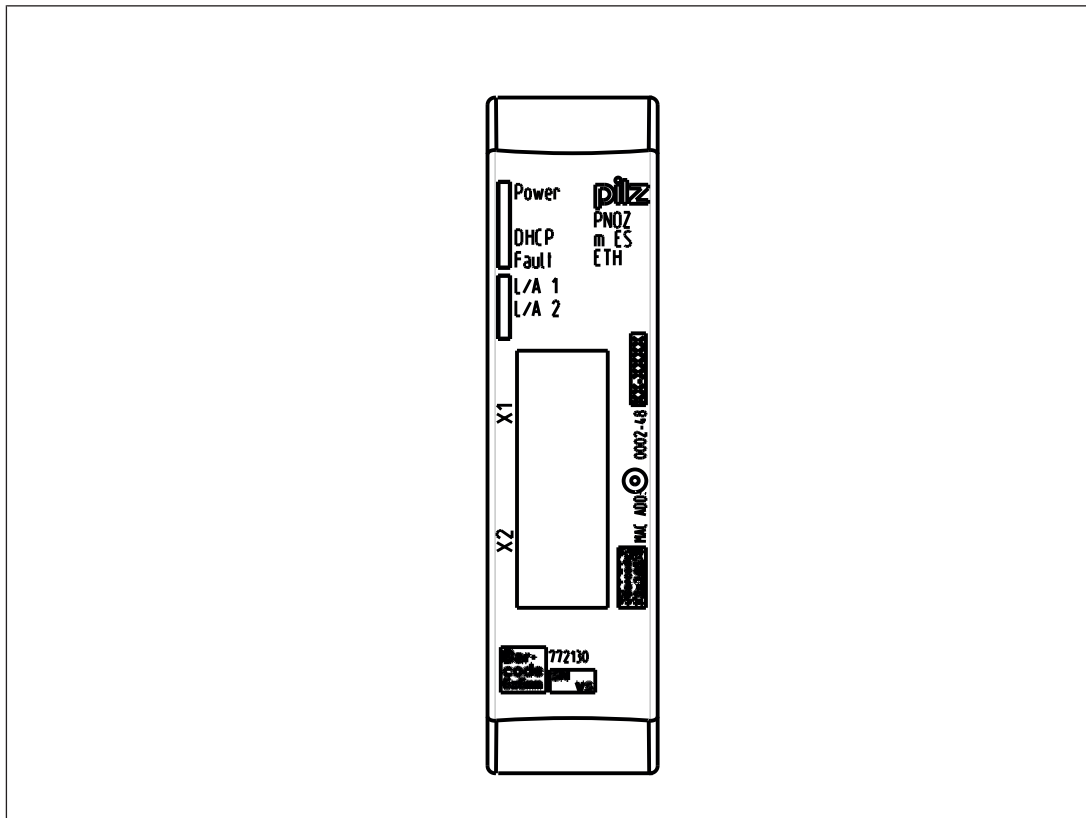

### Legend:

- ▶ X1, X2:  
Ethernet interfaces
- ▶ LEDs:
  - Power
  - DHCP
  - L/A 1 (Link/Act 1)
  - L/A 2 (Link/Act 2)

## Function description

### Unit properties

The product PNOZ m ES ETH has two Ethernet interfaces to

- ▶ Download the project
- ▶ Read the diagnostic data
- ▶ Set virtual inputs for standard functions



## Communication modules PNOZ m ES ETH


- ▶ Read virtual outputs for standard functions via Ethernet (TCP/IP, Modbus/TCP).

Information on diagnostics via the Ethernet interfaces can be found in the document entitled "PNOZmulti 2 communication interfaces".

The connection to Ethernet is made via the two 8-pin RJ45 sockets.


The Ethernet interface is configured in the PNOZmulti Configurator and is described in the online help for the PNOZmulti Configurator.

### Block diagram

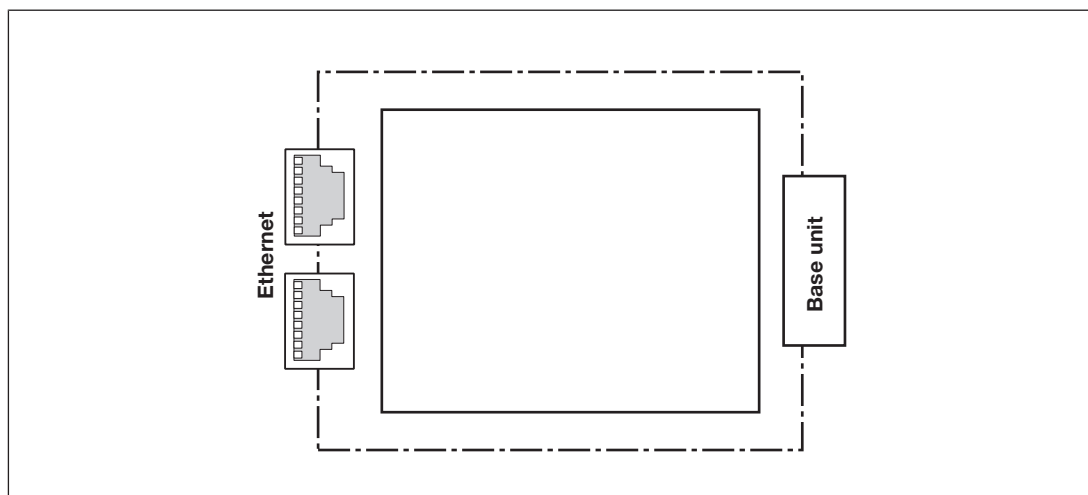

### Installation

#### Dimensions in mm

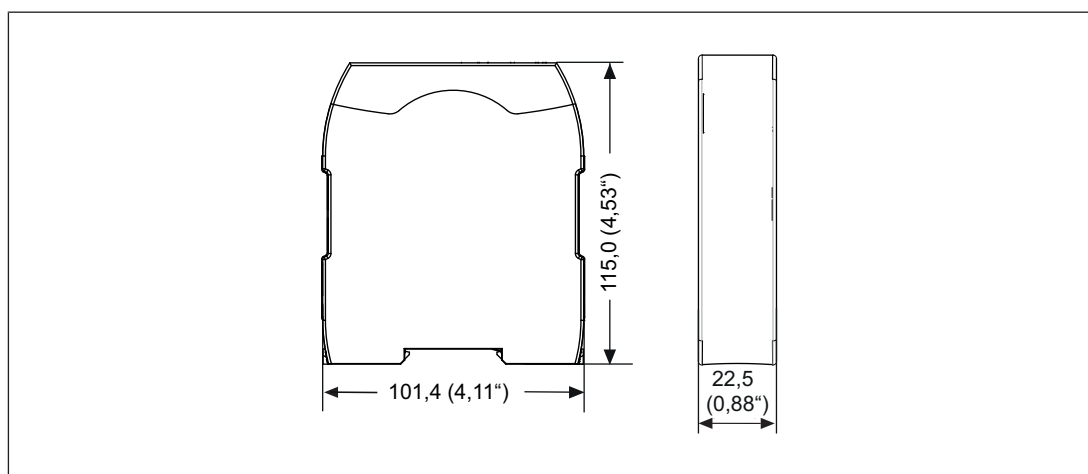

## Communication modules

### PNOZ m ES ETH

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[820\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.

#### Preparing for operation

Detection and activation of the Ethernet interface, depending on the USB interface on the base unit:

- ▶ **USB interface on the base unit not connected**  
If the USB interface on the base unit is not connected, the Ethernet interface will be detected and activated by the base unit as soon as the communication module has been connected to the base unit.
- ▶ **USB interface on the base unit connected**  
If the USB interface on the base unit is already connected, the "Ethernet" interface will first need to be selected on the base unit display to enable the Ethernet interface on the base unit to be detected and activated (see operating manual for the base unit for details of the setting).

### Technical details

General	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
Application range	Standard
Module's device code	1202h
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	3,3 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Current consumption	295 mA
Power consumption	1,0 W
Status indicator	LED
Ethernet interface	
Number	2
IP address (automatically off)	169.254.60.1

## Communication modules PNOZ m ES ETH

<b>Ethernet interface</b>	
Connection type	<b>RJ45</b>
Transmission rate	<b>10 MBit/s, 100 MBit/s</b>
<b>Fieldbus interface</b>	
Fieldbus interface	<b>Modbus TCP</b>
Device type	<b>Slave</b>
Connection	<b>RJ45</b>
Galvanic isolation	<b>yes</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>

## Communication modules PNOZ m ES ETH

Mechanical data	
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Max. cable length	
Max. cable length per input	0,1 km
Material	
Bottom	PC
Front	PC
Top	PC
Dimensions	
Height	101,4 mm
Width	22,5 mm
Depth	111,0 mm
Weight	80 g

Where standards are undated, the 2012-04 latest editions shall apply.

### Order reference

#### Product

Product type	Features	Order no.
PNOZ m ES ETH	Expansion module	772 130

### Accessories

#### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

## Communication modules PNOZ m ES RS232

---



### Overview

#### Unit features

Using the product PNOZ m ES RS232:


Communication module for connection to a base unit from the configurable control system PNOZmulti 2.

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ 1 serial interface RS232
- ▶ Status indicator for supply voltage
- ▶ Max. 1 communication module can be connected to the left of the base unit PNOZmulti 2
- ▶ Plug-in connection terminals (either cage clamp terminals or screw terminals)

## Communication modules PNOZ m ES RS232

### Front view

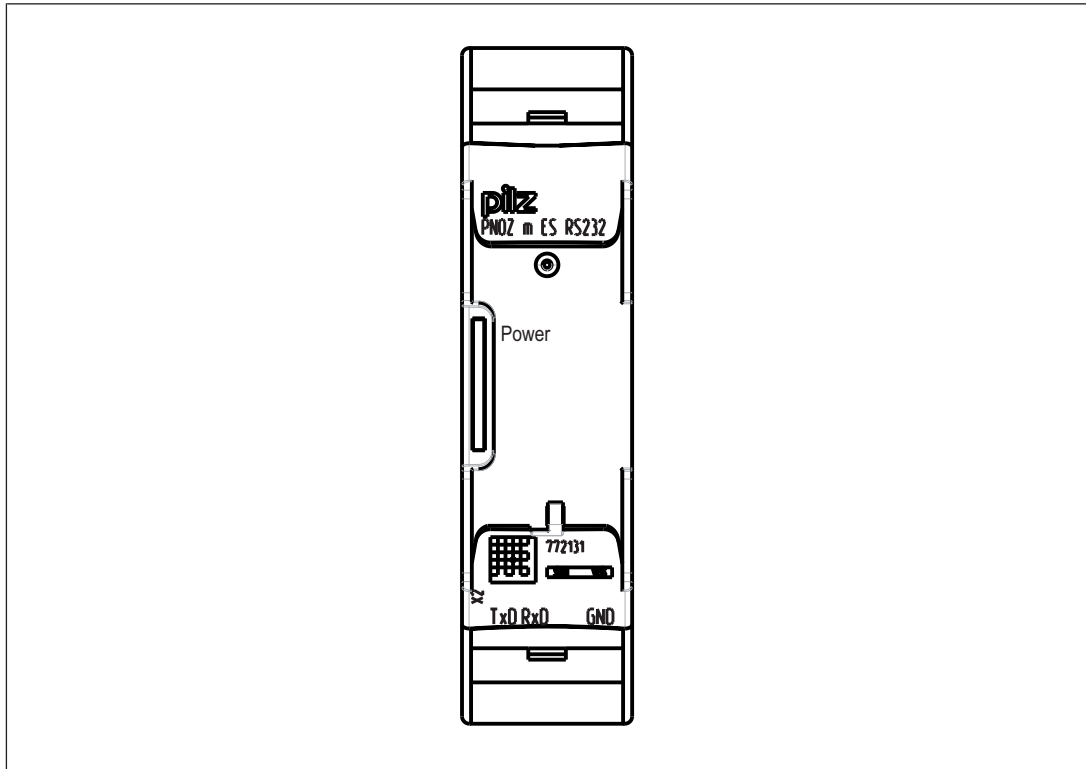

### Key

Key:

- ▶ X2: Serial interface RS 232
- ▶ LED:
  - Power

### Function description

#### Functions


The product PNOZ m ES RS232 has a serial interface RS232 interface to

- ▶ Download the project
- ▶ Read the diagnostic data
- ▶ Set virtual inputs for standard functions
- ▶ Read virtual outputs for standard functions.

Information on diagnostics can be found in the document "Communication Interfaces".


## Communication modules PNOZ m ES RS232

### Block diagram

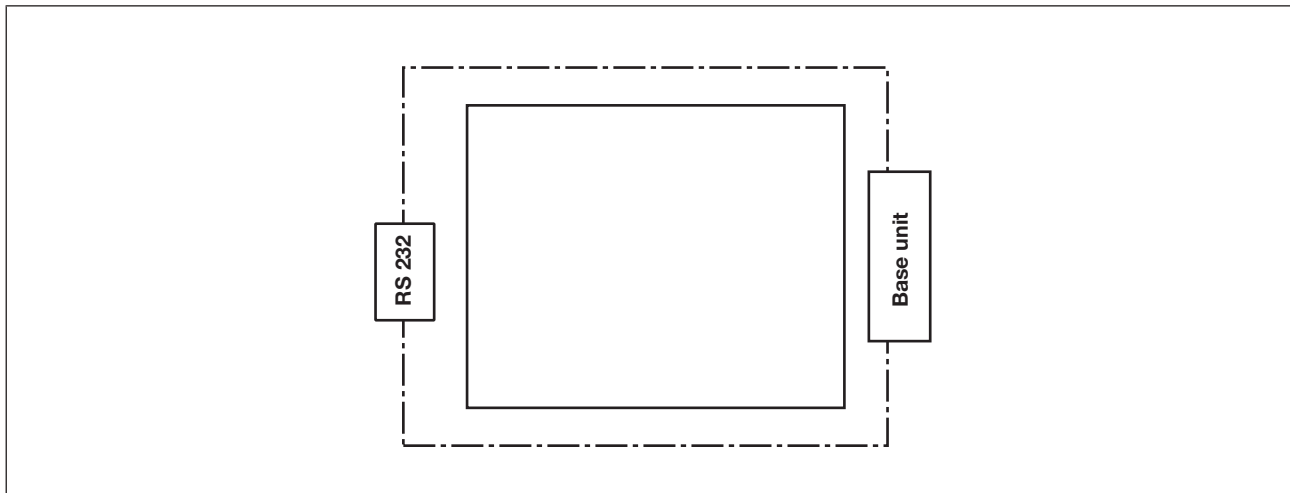

### Installation

#### Dimensions in mm

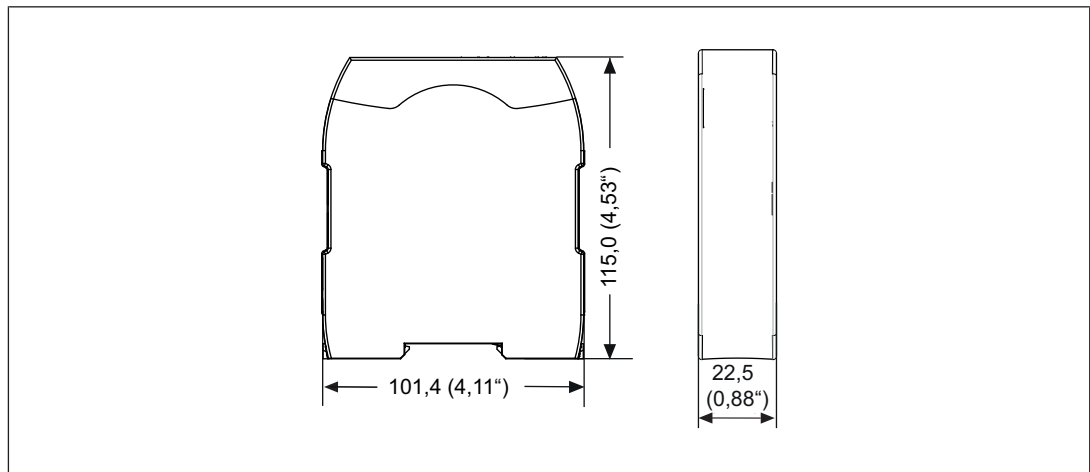


### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Please note:

- ▶ Information given in the [Technical details](#) [ 826] must be followed.
- ▶ Use copper wire that can withstand 75° C.

## Communication modules

### PNOZ m ES RS232

#### Interface configuration

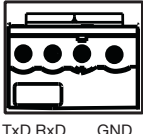Serial interface RS232	Standard
 <p>TxD RxD GND</p>	TxD (Transmit)
	RxD (Receive)
	GND (Ground)

#### Preparing for operation

The serial interface RS 232 is activated and detected depending on the USB interface on the base unit:

- ▶ **USB interface on the base unit not connected**  
In this case, the serial interface RS 232 will be detected and activated by the base unit as soon as the communication module has been connected to the base unit.
- ▶ **USB interface on the base unit connected**  
If the USB interface on the base unit is already connected, the "External" interface will first need to be selected on the base unit display to enable the serial interface RS 232 on the base unit to be detected and activated (see operating manual for the base unit for details of the setting).

#### Technical details

General	
Approvals	CCC, CE, GOST, cULus Listed
Application range	Standard
Electrical data	
Supply voltage	
internal	Via base unit
Current consumption	9 mA
Power consumption	0,3 W
Status indicator	LED
Fieldbus interface	
Galvanic isolation	No
Serial interface	
Number of RS232 interfaces	1
Environmental data	
Ambient temperature	
In accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C



## Communication modules PNOZ m ES RS232

<b>Environmental data</b>	
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Max. cable length	
Max. cable length per input	<b>22,0 m</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Mounting type	<b>plug-in</b>

## Communication modules PNOZ m ES RS232

### Mechanical data

Conductor cross section with screw terminals

1 core flexible **0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG**

2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors **0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG**

Rigid single-core, flexible multi-core or multi-core with crimp connector **0,5 - 1,5 mm<sup>2</sup>**

Torque setting with screw terminals **0,50 Nm**

Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector **0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG**

Spring-loaded terminals: Terminal points per connection **2**

Stripping length with spring-loaded terminals **9 mm**

Dimensions

Height **101,4 mm**

Width **22,5 mm**

Depth **120,0 mm**

Weight **85 g**

Where standards are undated, the 2012-04 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order no.
PNOZ m ES RS232	Expansion module	772 131

### Accessories

#### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

## Communication modules PNOZ m ES RS232

---

### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmc2p, mml1p 1 pc.	Spring-loaded terminals, 1 pieces	783 538
Spring terminals PNOZ mmc2p,mml1p 10 pcs	Spring-loaded terminals, 10 pieces	783 539
Screw terminals PNOZ mmc2p, mml1p 1 pc.	Screw terminals, 1 piece	793 538
Screw terminals PNOZ mmc2p,mml1p 10 pcs.	Screw terminals, 10 piece	793 539

## Fieldbus modules PNOZ m ES Profibus

---



### Overview

#### Unit features

Using the product PNOZ m ES Profibus:


Expansion module for connection to a base unit from the configurable control system PNOZmulti 2 .

The product has the following features:


- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for PROFIBUS-DP
- ▶ Station addresses from 0 ... 99, selected via rotary switch
- ▶ Status indicators for communication with PROFIBUS-DP and for errors
- ▶ In the PNOZmulti Configurator, 128 virtual outputs of the PNOZmulti 2 control system can be defined for communication with the fieldbus PROFIBUS-DP .
- ▶ Max. 1 PNOZ m ES Profibus can be connected to the base unit
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units PNOZmulti 2 that can be connected.

## Fieldbus modules PNOZ m ES Profibus

### Front view

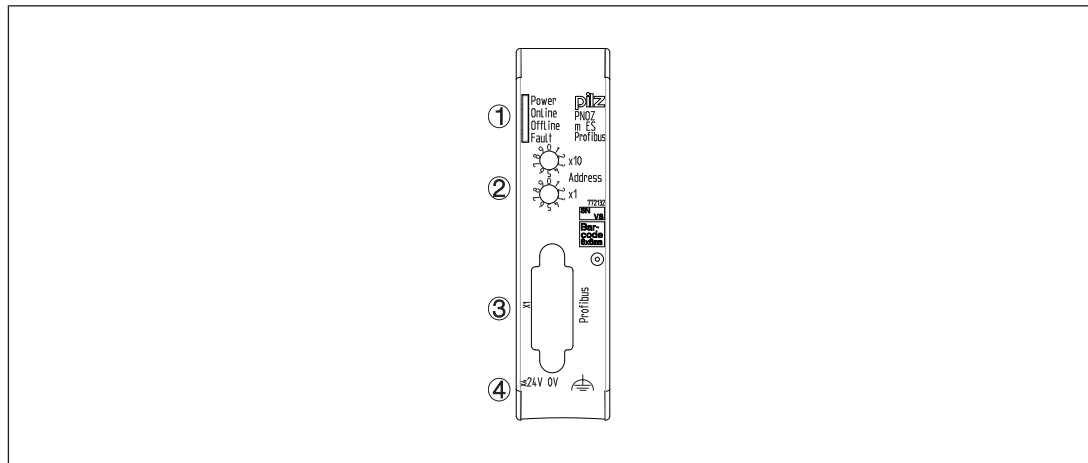

### Legend

- ① LED:
  - Power
  - Online
  - Offline
  - Fault
- ② Rotary switch
  - x10 = Tens digit for the station address
  - x1 = Units digit for the station address
- ③ X1: PROFIBUS-DP interface (female 9-pin D-Sub connector)
- ④ X4: 0 V, 24 V:
  - Supply connections
-  Functional earth

## Function description

### Operation

The virtual inputs and outputs that are to be transferred via PROFIBUS are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ m ES Profibus are connected via a jumper.

The station address is set via rotary switches. After the supply voltage is switched on or the control system PNOZmulti 2 is reset, the expansion module PNOZ m ES Profibus is configured and started automatically.

LEDs indicate the status of the expansion module on PROFIBUS.

The configuration is described in detail in the PNOZmulti Configurator's online help.

## Fieldbus modules PNOZ m ES Profibus

---

### Data access

The data is structured as follows:

- ▶ Virtual data
  - Input area PNOZ m ES Profibus  
The values for the inputs are set in the Master as an output and transferred to the PNOZmulti 2.
  - Output area PNOZ m ES Profibus  
The outputs are configured in the PNOZmulti Configurator and transferred to the Master.
- ▶ Status of LEDs:  
Bits 0 ... 4: Status of LEDs on the PNOZmulti 2
  - Bit 0: OFAULT
  - Bit 1: IFAULT
  - Bit 2: FAULT
  - Bit 3: DIAG
  - Bit 4: RUN
- ▶ Data exchange is displayed in Bit 5.
- ▶ Polling the payload data: 2 Bytes with the table number and segment number are sent by the Master for access to the payload data table (15 Bytes are returned to the Master).

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

### Assigning the inputs/outputs in the PNOZmulti Configurator to the PROFIBUS-DP inputs/outputs

Virtual inputs and outputs can be requested or set directly via the following objects. Each element can be selected individually in the master control system, e.g. virtual inputs i0-31. The data width is also established this way.

## Fieldbus modules PNOZ m ES Profibus

### Input data

The Master writes to the virtual inputs of the PNOZmulti 2.


Description	Input data from PNOZmulti 2
Virtual inputs i0 – i31	4 Input Bytes
Virtual inputs i32 – i63	4 Input Bytes
Virtual inputs i64 – i95	4 Input Bytes
Virtual inputs i96 – i127	4 Input Bytes

### Output data

The Master reads the virtual outputs of the PNOZmulti 2.

Description	Output data from PNOZmulti 2
Virtual outputs o0 – o31	4 Output Bytes
Virtual outputs o32 – o63	4 Output Bytes
Virtual outputs o64 – o95	4 Output Bytes
Virtual outputs o96 – o127	4 Output Bytes

### Block diagram

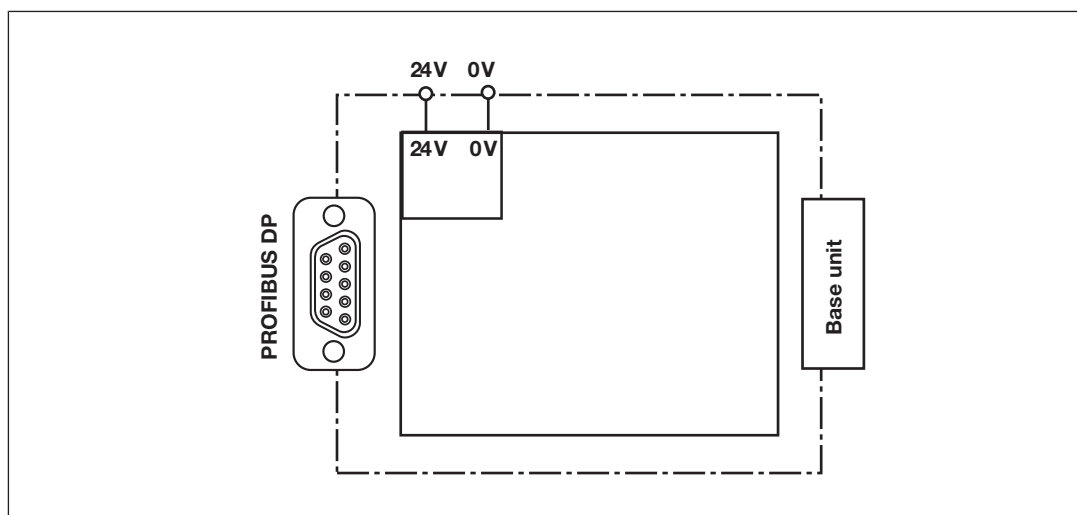


## Fieldbus modules

### PNOZ m ES Profibus

## Installation

### Dimensions in mm

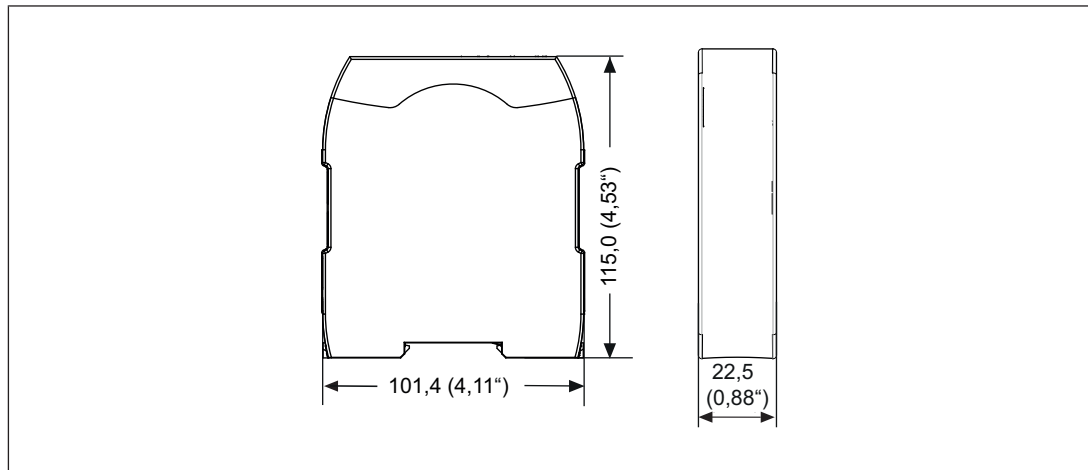


## Commissioning

### Wiring

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[837\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.
- ▶ External measures must be used to connect the terminal  to the functional earth, when the mounting rail is **not** connected to the functional earth.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.

#### Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A



## Fieldbus modules


### PNOZ m ES Profibus

or

- Blow-out fuse, slow, 6A

#### PROFIBUS DP interface

It is possible to define which outputs on the control system will communicate with PROFIBUS-DP. The connection to PROFIBUS-DP is made via a female 9-pin D-Sub connector in accordance with the guidelines of the PROFIBUS User Group (PNO).

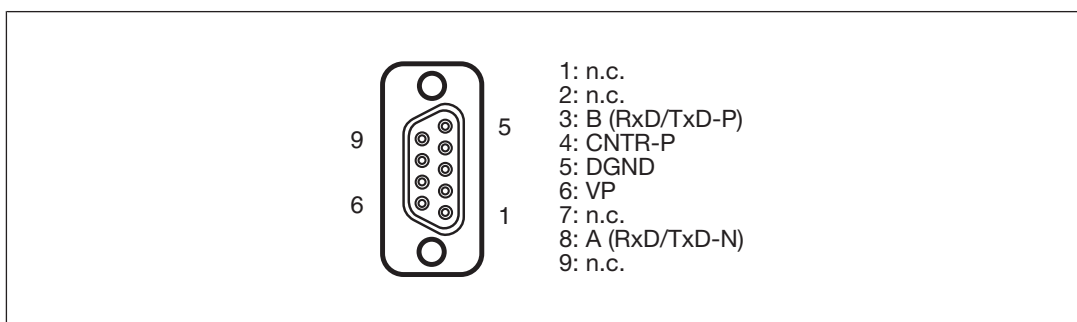

n.c. = not connected

Please note the following when connecting to PROFIBUS-DP:

- ▶ Only use metal plugs or metallised plastic plugs
- ▶ Twisted pair, screened cable must be used to connect the interfaces


## Fieldbus modules

### PNOZ m ES Profibus


#### Preparing for operation

##### Setting the station address

The station address of the expansion module PNOZ m ES Profibus is set between 0 ... 99 (decimal) via two rotary switches x1 and x10.

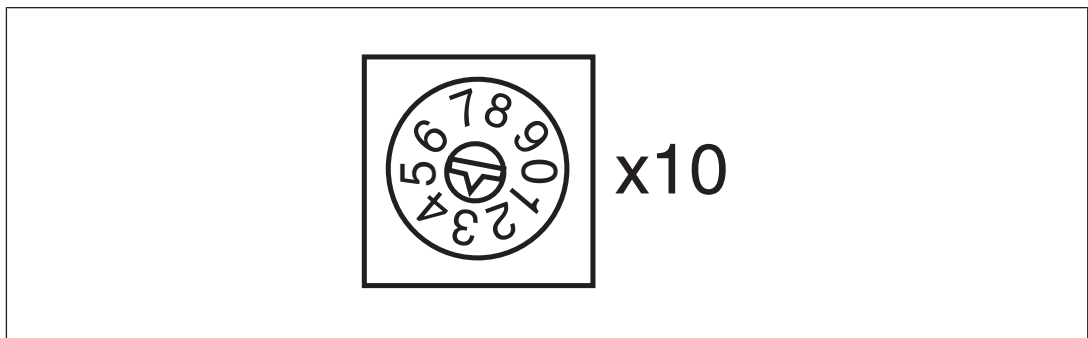

- ▶ On the upper rotary switch x10, use a small screwdriver to set the tens digit for the address ("3" in the example).

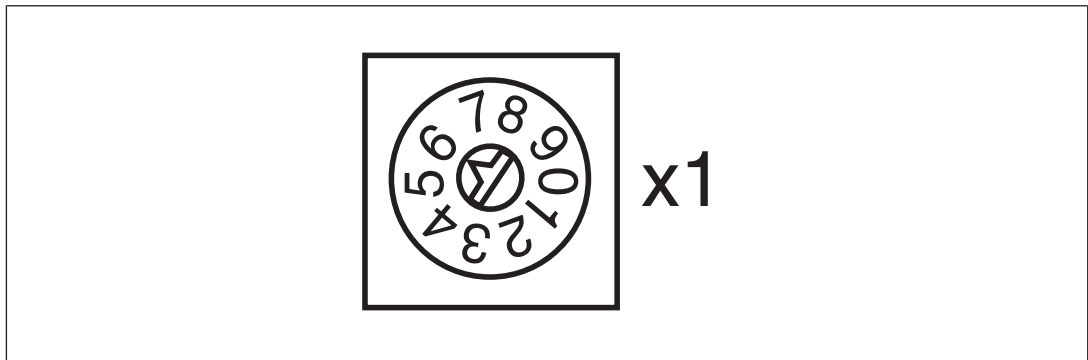


- ▶ On the lower rotary switch x1, set the ones digit for the address ("6" in the example). Station address 36 is set in the diagrams as an example.

##### Download modified project to the control system PNOZmulti

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

## Fieldbus modules PNOZ m ES Profibus

### Connection example

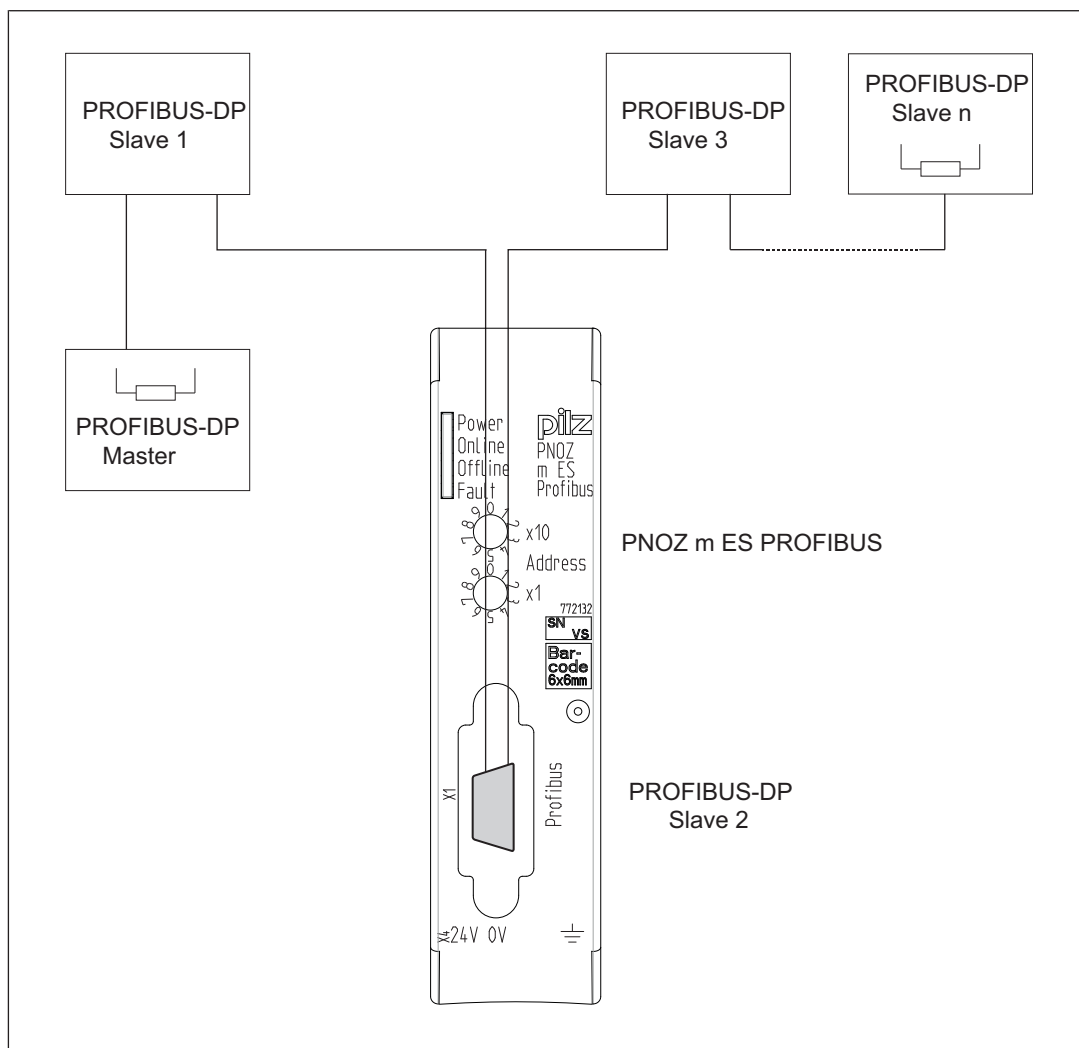

### Technical details

General	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
Electrical data	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Supply voltage	
Current consumption	<b>35 mA</b>
Power consumption	<b>0,9 W</b>

## Fieldbus modules PNOZ m ES Profibus

<b>Electrical data</b>	
Max. power dissipation of module	<b>1,50 W</b>
Status indicator	<b>LED</b>
<b>PROFIBUS-DP interface</b>	
Number	<b>1</b>
<b>Fieldbus interface</b>	
Fieldbus interface	<b>PROFIBUS DP</b>
Device type	<b>Slave DPV0</b>
Station address	<b>0 - 99d</b>
Transmission rate	<b>9,6 kBit/s - 12 MBit/s</b>
Connection	<b>9-pin D-Sub female connector</b>
Galvanic isolation	<b>yes</b>
Test voltage	<b>500 V AC</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>

## Fieldbus modules PNOZ m ES Profibus

### Environmental data

#### Protection type

In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

### Mechanical data

Mounting position **Horizontal on top hat rail**

#### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

#### Material

Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>

Connection type **Spring-loaded terminal, screw terminal**

#### Conductor cross section with screw terminals

1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Rigid single-core, flexible multi-core or multi-core with crimp connector	<b>0,5 - 1,5 mm<sup>2</sup></b>

Torque setting with screw terminals **0,50 Nm**

#### Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector **0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG**

Spring-loaded terminals: Terminal points per connection **2**

Stripping length with spring-loaded terminals **9 mm**

#### Dimensions

Height	<b>101,4 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>115,0 mm</b>

Weight **95 g**

Where standards are undated, the 2012-10 latest editions shall apply.

## Fieldbus modules PNOZ m ES Profibus

### Order reference

#### Product

Product type	Features	Order no.
PNOZ m ES Profibus	Fieldbus module, PROFIBUS for PNOZ m Bx	772 132

#### Accessories

##### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

##### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793 543

## Fieldbus modules PNOZ m ES CANopen

---



### Overview

#### Unit features

Using the product PNOZ m ES CANopen:

Expansion module for connection to a base unit from the configurable control system PNOZmulti 2 .


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for CANopen
- ▶ Station addresses from 0 ... 99, selected via rotary switch
- ▶ Transmission rate selected via rotary switch (1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s)
- ▶ Status indicators for communication with CANopen and for errors
- ▶ 128 virtual inputs and outputs on the control system PNOZmulti 2 can be defined in the PNOZmulti Configurator for communication with the fieldbus CANopen.
- ▶ Max. 1 PNOZ m ES CANopen can be connected to the base unit
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units PNOZmulti 2 that can be connected.


## Fieldbus modules

### PNOZ m ES CANopen

#### Front view

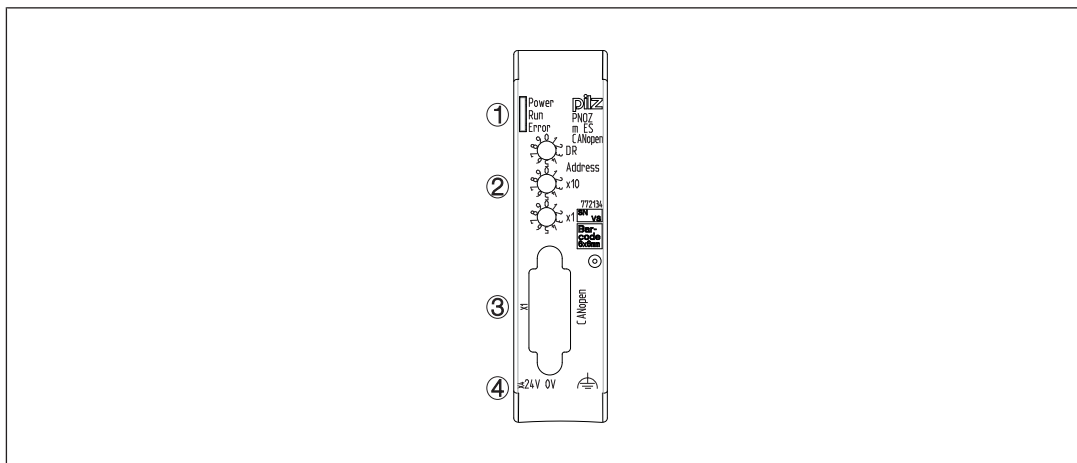

#### Legend

- ① LED
  - Power
  - Run
  - Error
- ② Rotary switch
  - DR = Transmission rate
  - X10 = Tens digit for the station address
  - X1 = Units digit for the station address
- ③ X1: CANopen interface (male 9-pin D-Sub connector)
- ④ X4: 0 V, 24 V:
  - Supply connections
-  Functional earth

## Function description

### Operation

The virtual inputs and outputs that are to be transferred via CANopen are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ m ES CANopen are connected via a jumper. The station address and the transmission rate are set using rotary switches. After the supply voltage is switched on or the control system PNOZmulti 2 is reset, the expansion module PNOZ m ES CANopen is configured and started automatically.

LEDs indicate the status of the expansion module on CANopen.

The configuration is described in detail in the PNOZmulti Configurator's online help.



## Fieldbus modules PNOZ m ES CANopen

---

### Data access

The data is structured as follows:

▶ Virtual data

- Input area PNOZ m ES CANopen

The values for the inputs are set as an output in the Master and transferred to the PNOZmulti 2.

- Output area PNOZ m ES CANopen

The outputs are configured in the PNOZmulti Configurator and transferred to the Master.

▶ Status of LEDs:

- Bits 0 ... 4: Status of LEDs on the PNOZmulti 2

Bit 0: OFAULT

Bit 1: IFAULT

Bit 2: FAULT

Bit 3: DIAG

Bit 4: RUN

▶ Data exchange is displayed in Bit 5.


▶ Polling the payload data: 2 Bytes with the table number and segment number are sent by the Master for access to the payload data table (15 Bytes are returned to the Master).

The document "Communication Interfaces" contains detailed information

- ▶ on data exchange (tables, segments) in the section entitled "Fieldbus modules",
- ▶ and on virtual data in the section entitled "Object directory (Manufacturer Specific Profile Area) for PNOZ m ES CANopen .


## Fieldbus modules PNOZ m ES CANopen

### Block diagram

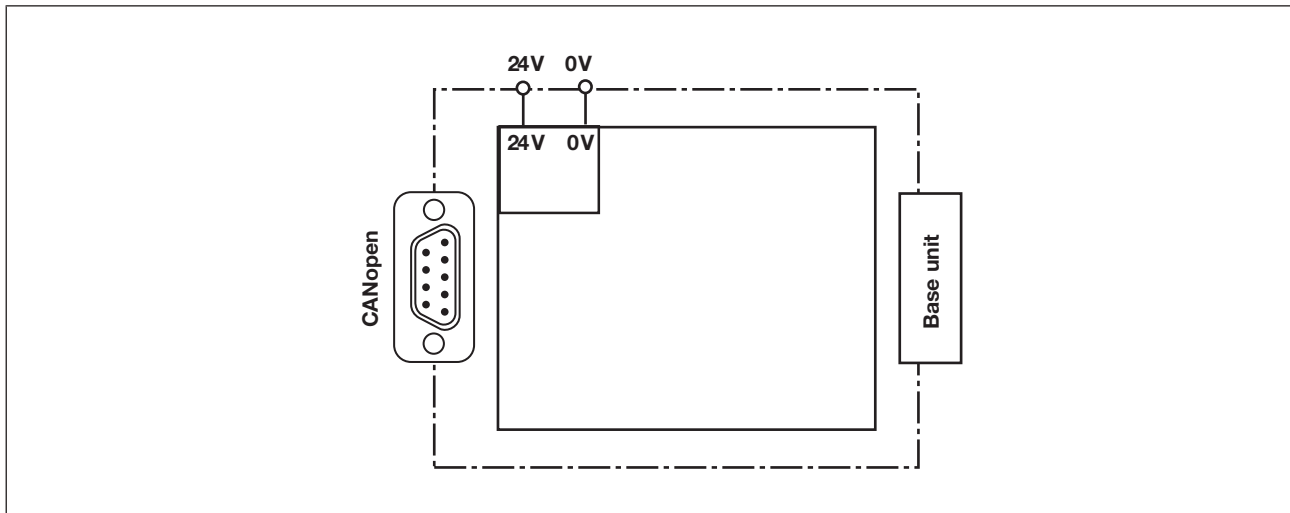

### Installation

#### Dimensions in mm

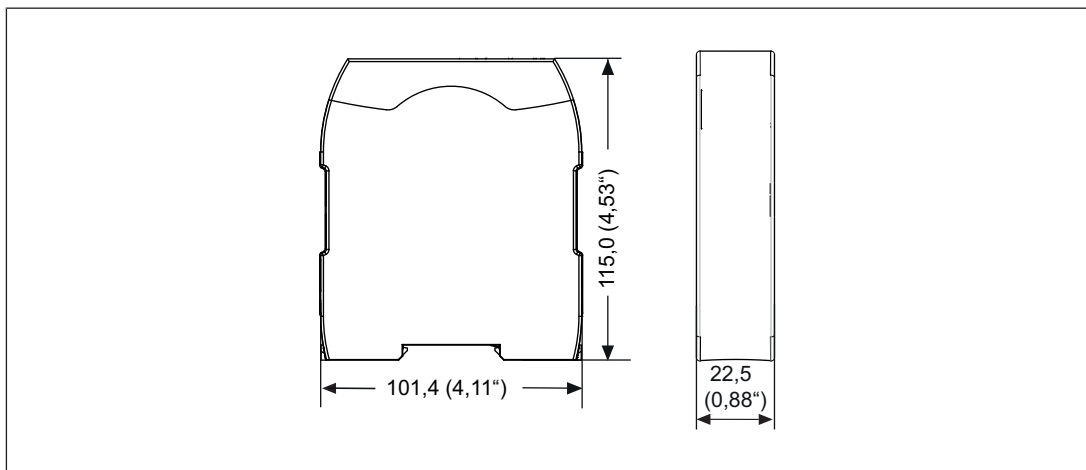

### Commissioning

#### Wiring


##### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details](#) [📖 849] must be followed.

## Fieldbus modules PNOZ m ES CANopen

- ▶ Use copper wire that can withstand 75° C.
- ▶ External measures must be used to connect the terminal  to the functional earth, when the mounting rail is **not** connected to the functional earth.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.


### Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6A

### CANopen interface

The connection to CANopen is made via a male 9-pin D-Sub connector.

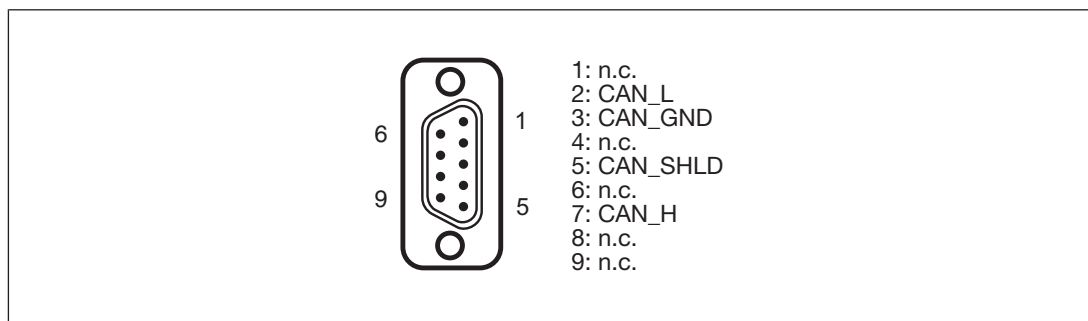

n.c. = not connected

Please note the following when connecting to CANopen:

- ▶ Only use metal plugs or metallised plastic plugs
- ▶ Twisted pair, screened cable must be used to connect the interfaces

### Termination CANopen

To minimise cable reflection and to guarantee a defined rest signal on the transmission line, CANopen must be terminated at both ends.

## Fieldbus modules PNOZ m ES CANopen

### Setting the transmission rate




- ▶ On the upper rotary switch DR, use a small screwdriver to set the transmission rate (in the example, "3" corresponds to 50 kBit/s).

Switch setting	0	1	2	3	4	5	6	7	8	9
Transmission rate	-	10 kBit/s	20 kBit/s	50 kBit/s	125 kBit/s	250 kBit/s	500 kBit/s	800 kBit/s	1 MBit/s	-


### Setting the station address

The station address of the expansion module PNOZ m ES CANopen is set between 0 ... 99 (decimal) via two rotary switches x1 and x10.

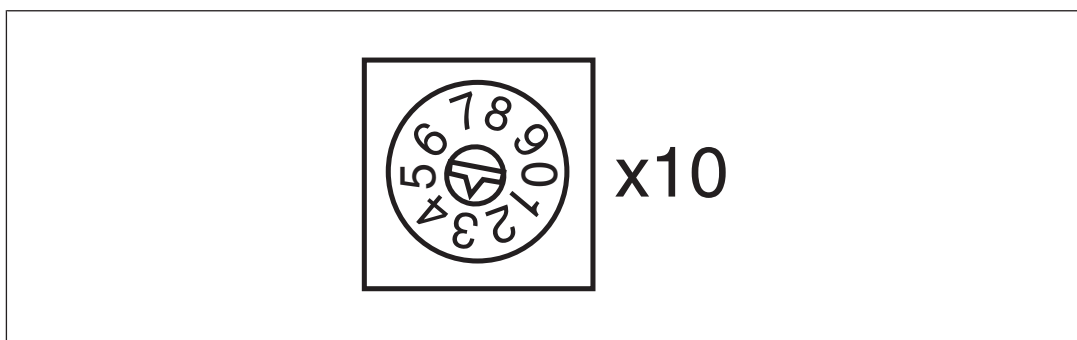

- ▶ On the middle rotary switch x10, use a small screwdriver to set the tens digit for the address ("3" in the example).


## Fieldbus modules PNOZ m ES CANopen

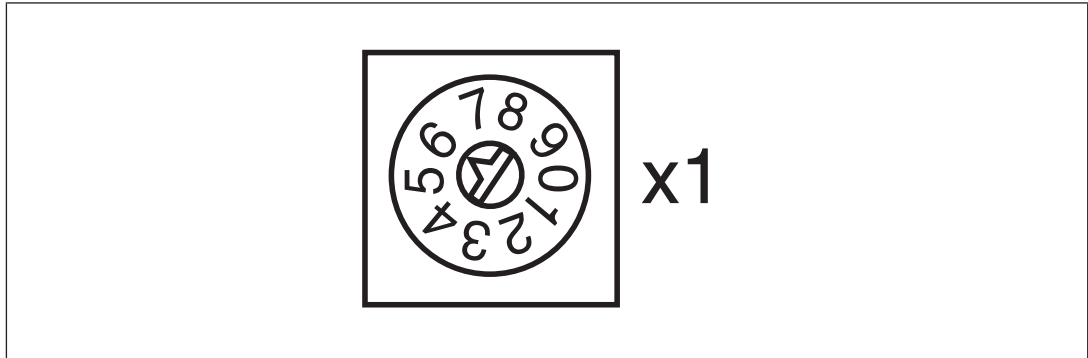

- ▶ On the lower rotary switch x1, set the ones digit for the address ("6" in the example). Station address 36 is set in the diagrams as an example.

## Fieldbus modules PNOZ m ES CANopen

### Connection example

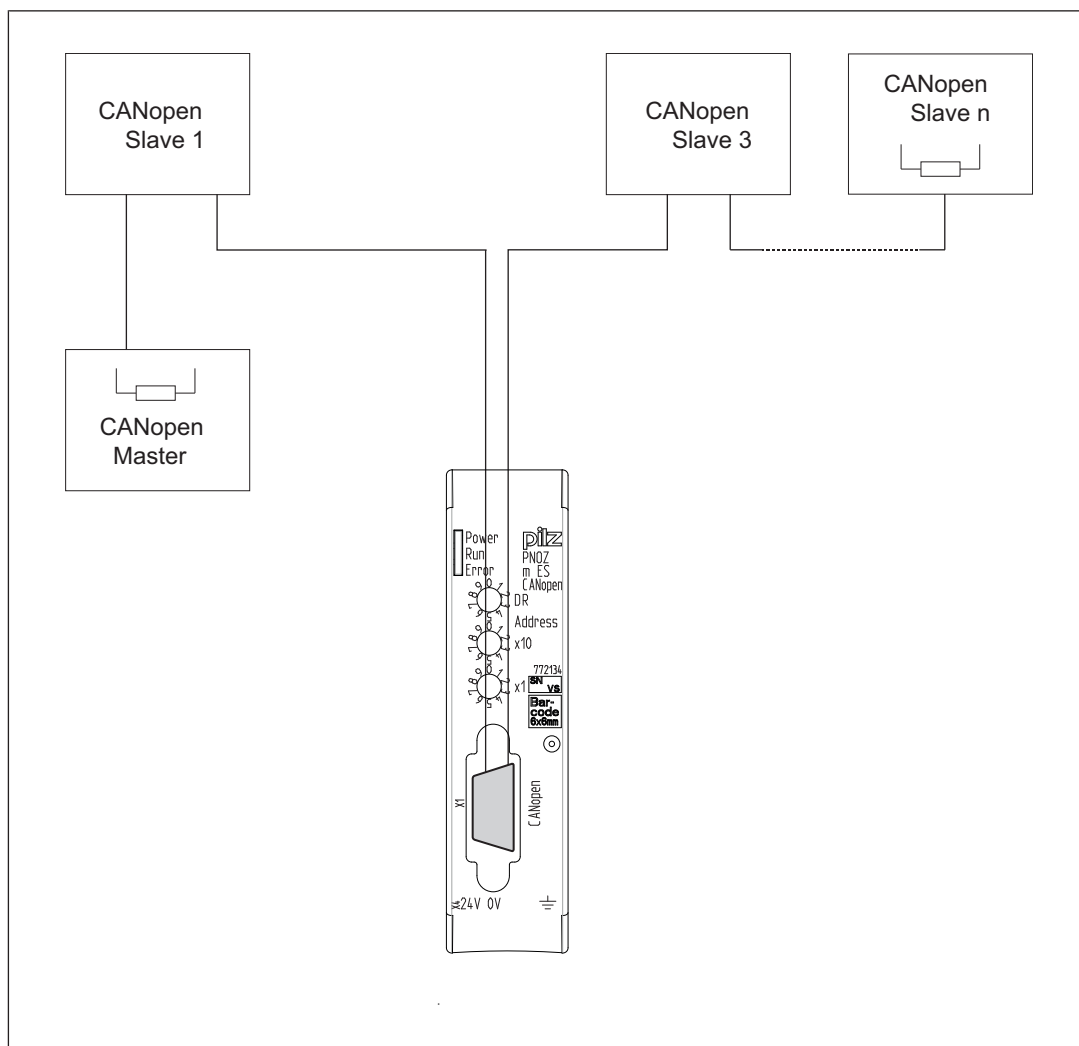

### Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

## Fieldbus modules

### PNOZ m ES CANopen

#### Technical details

<b>General</b>	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
<b>Electrical data</b>	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Supply voltage	
Current consumption	<b>35 mA</b>
Power consumption	<b>0,9 W</b>
Max. power dissipation of module	<b>1,50 W</b>
Status indicator	<b>LED</b>
<b>Fieldbus interface</b>	
Fieldbus interface	<b>CANopen</b>
Device type	<b>Slave</b>
Log	<b>CiA 301 V4.2.0</b>
Station address	<b>0 - 99d</b>
Transmission rates	<b>1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s</b>
Connection	<b>9-pin D-Sub male connector</b>
Galvanic isolation	<b>yes</b>
Test voltage	<b>500 V AC</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>

## Fieldbus modules PNOZ m ES CANopen

### Environmental data

#### Shock stress

In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>

Max. operating height above sea level	<b>2000 m</b>
---------------------------------------	---------------

#### Airgap creepage

In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>

Rated insulation voltage	<b>30 V</b>
--------------------------	-------------

#### Protection type

In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>

### Mechanical data

Mounting position	<b>Horizontal on top hat rail</b>
-------------------	-----------------------------------

#### DIN rail

Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

#### Material

Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>

Connection type	<b>Spring-loaded terminal, screw terminal</b>
-----------------	---

#### Conductor cross section with screw terminals

1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>

Torque setting with screw terminals	<b>0,50 Nm</b>
-------------------------------------	----------------

#### Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector	<b>0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
---------------------------------------	--

Spring-loaded terminals: Terminal points per connection	<b>2</b>
---	----------

Stripping length with spring-loaded terminals	<b>9 mm</b>
---	-------------

#### Dimensions

Height	<b>101,4 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>115,0 mm</b>

Weight	<b>95 g</b>
--------	-------------

Where standards are undated, the 2012-10 latest editions shall apply.



## Fieldbus modules PNOZ m ES CANopen

### Order reference

#### Product

Product type	Features	Order no.
PNOZ m ES CANopen	Fieldbus module, CANopen for PNOZ m Bx	772 134

#### Accessories

##### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

#### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcpx 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcpx 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcpx 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcpx 10 pcs.	Screw terminals, 10 pieces	793 543

## Fieldbus modules PNOZ m ES EtherCAT

---



### Overview

#### Unit features

Using the product PNOZ m ES EtherCAT:


Expansion module for connection to a base unit from the configurable control system PNOZmulti 2 .

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Network protocols: EtherCAT
- ▶ Supports CANopen over EtherCAT (DS301 V4.02 compliant)
- ▶ Status indicators for communication with EtherCAT and for errors
- ▶ 128 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus EtherCAT.
- ▶ Max. 1 PNOZ m ES EtherCAT can be connected to the base unit
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ For details of the PNOZmulti 2 base units that can be connected, please refer to the document "PNOZmulti System Expansion".

## Fieldbus modules PNOZ m ES EtherCAT

### Front view

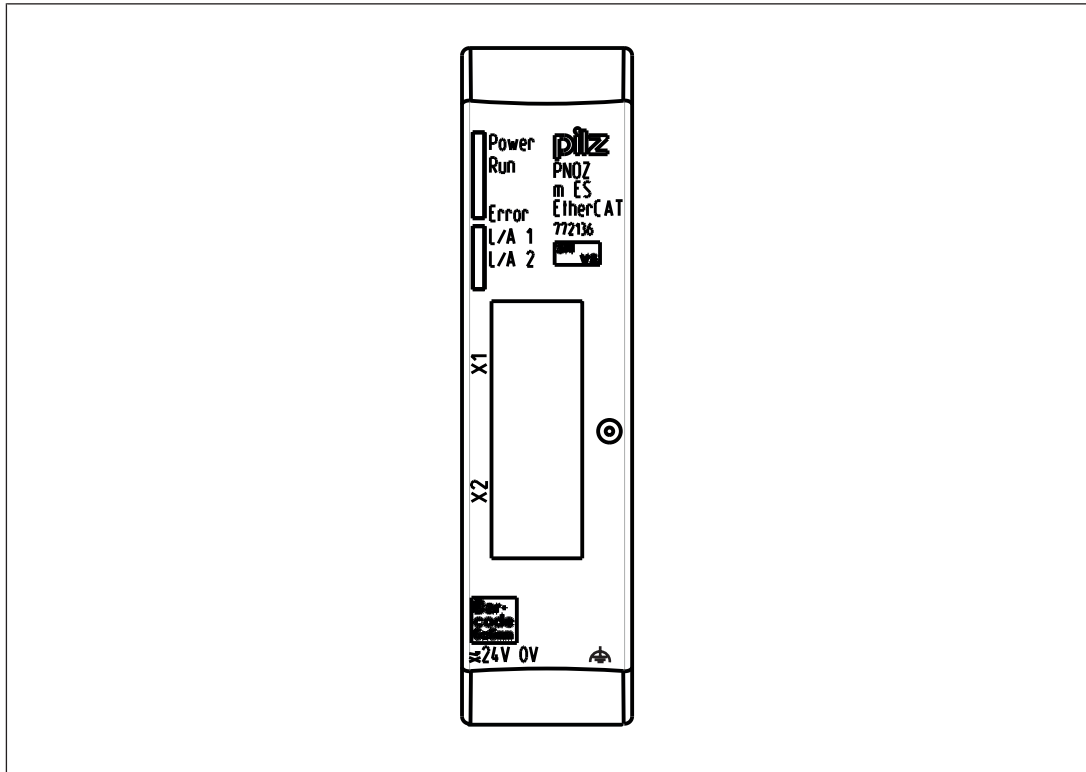


#### Legend:

- ▶ X1: EtherCAT IN
- ▶ X2: EtherCAT OUT
- ▶ X4: 0 V, 24 V:  
Supply connections

⊕ Functional earth

- ▶ LEDs:
  - Power
  - Run
  - Error
  - L/A 1
  - L/A 2

**EtherCAT**  is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany

## Fieldbus modules

### PNOZ m ES EtherCAT

---

### Function description

#### Operation

The virtual inputs and outputs that are to be transferred via EtherCAT are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ m ES EtherCAT are connected via a jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ m ES EtherCAT is configured and started automatically.

The connection to EtherCAT is made via the two RJ45 sockets.

LEDs indicate the status of the expansion module on EtherCAT.

The configuration is described in detail in the PNOZmulti Configurator's online help.

#### Data access

The data is structured as follows:


- ▶ Virtual data
  - Input area PNOZ m ES EtherCAT  
The values for the inputs are set as an output in the Master and transferred to the PNOZmulti 2.
  - Output area PNOZ m ES EtherCAT  
The outputs are configured in the PNOZmulti Configurator and transferred to the Master.
- ▶ Status of LEDs:
  - Bits 0 ... 4: Status of LEDs on the PNOZmulti 2
    - Bit 0: OFAULT
    - Bit 1: IFAULT
    - Bit 2: FAULT
    - Bit 3: DIAG
    - Bit 4: RUN
- ▶ Data exchange is displayed in Bit 5.
- ▶ Polling the payload data: 2 Bytes with the table number and segment number are sent by the Master for access to the payload data table (15 Bytes are returned to the Master).

The document "Communication Interfaces" contains detailed information

- ▶ on data exchange (tables, segments) in the section entitled "Fieldbus modules",
- ▶ and on virtual data in the section entitled "Object directory (Manufacturer Specific Profile Area) for PNOZ m ES EtherCAT .


## Fieldbus modules PNOZ m ES EtherCAT

### Block diagram

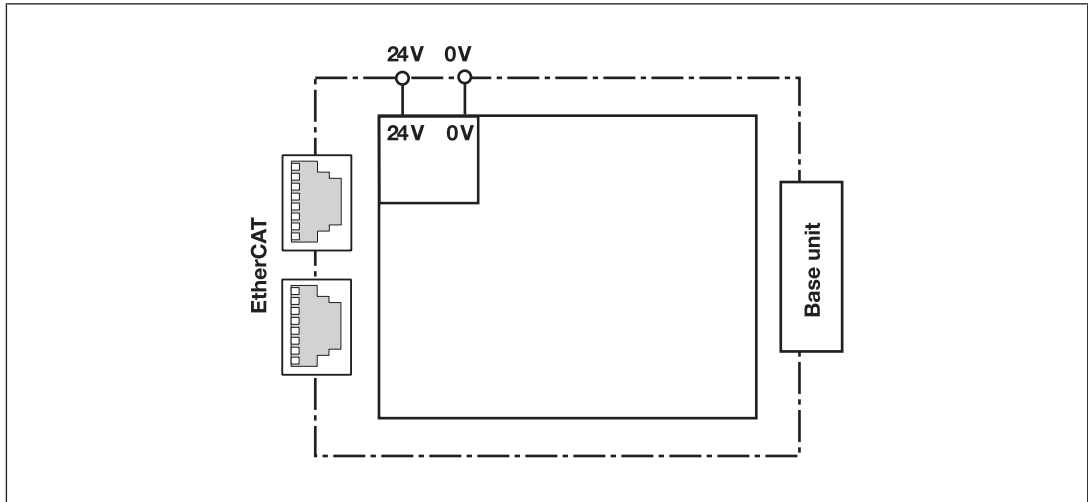

### Installation

#### Dimensions in mm

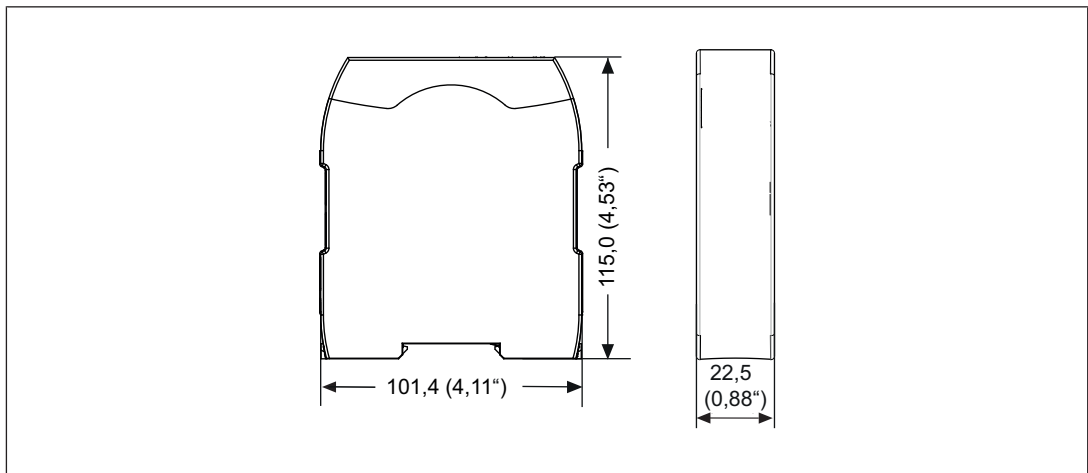

## Fieldbus modules

### PNOZ m ES EtherCAT


## Commissioning

### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

It is possible to define which inputs and outputs on the safety system will communicate with EtherCAT.

Note:

- ▶ Information given in the "Technical details" must be followed.
- ▶ Use copper wire that can withstand 75 °C.
- ▶ External measures must be used to connect the terminal  to the functional earth, when the mounting rail is **not** connected to the functional earth.

Please note the following when connecting to EtherCAT:

- ▶ The following minimum requirements of the connection cable and connector must be met:
  - Only use standard industrial Ethernet cable and connectors.
  - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
  - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:

Ensure the requirements for the industrial use of EtherCAT are met, as stated in the Installation Manual published by the User Group.

### Connecting the supply voltage


Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6A

## Fieldbus modules

### PNOZ m ES EtherCAT

#### Interface assignment

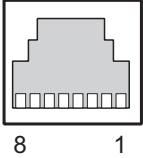RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

#### Download modified project to the PNOZmulti safety system


As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

#### Preparing for operation

- ▶ Install Device Description File  
Install the *Device Description File* in your configuration software. You can only then use the PNOZ m ES EtherCAT.
- ▶ Connect the supply voltage to the base unit:  
Terminals **24 V** and **A1 (+)**: + 24 VDC  
Terminals **0 V** and **A2 (-)**: 0 V

## Fieldbus modules PNOZ m ES EtherCAT

### Connection example

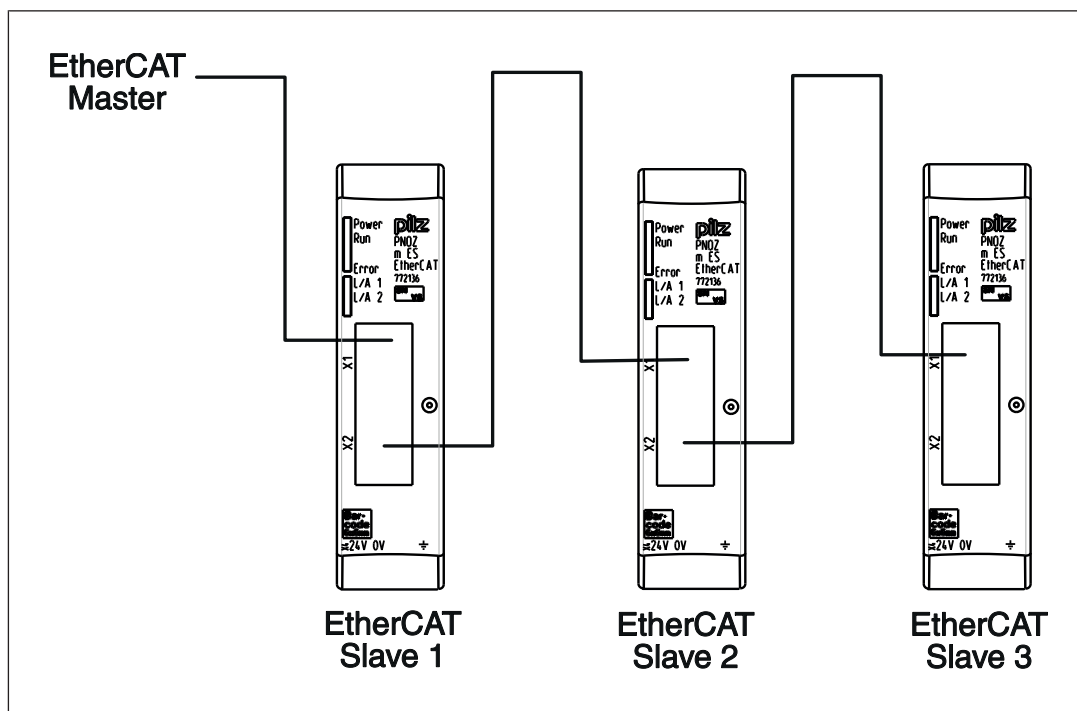

### Technical details

General	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
Electrical data	
Supply voltage	
for	Module supply
Voltage	24 V
Kind	DC
Voltage tolerance	-20 %/+25 %
Supply voltage	
Current consumption	35 mA
Power consumption	0,9 W
Max. power dissipation of module	1,50 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	EtherCAT
Device type	Slave
Log	CANopen over EtherCAT
Transmission rates	100 MBit/s
Connection	RJ45



## Fieldbus modules PNOZ m ES EtherCAT

<b>Fieldbus interface</b>	
Galvanic isolation	yes
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
In accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
In accordance with the standard	EN 60068-2-30, EN 60068-2-78
Condensation during operation	Not permitted
EMC	EN 61131-2
Vibration	
In accordance with the standard	EN 60068-2-6
Frequency	10,0 - 150,0 Hz
Acceleration	1g
Shock stress	
In accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Max. operating height above sea level	2000 m
Airgap creepage	
In accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2
Rated insulation voltage	30 V
Protection type	
In accordance with the standard	EN 60529
Mounting area (e.g. control cabinet)	IP54
Housing	IP20
Terminals	IP20
<b>Potential isolation</b>	
Potential isolation between	Fieldbus and module voltage
Type of potential isolation	Functional insulation
Rated surge voltage	500 V
<b>Mechanical data</b>	
Mounting position	Horizontal on top hat rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

## Fieldbus modules PNOZ m ES EtherCAT

Mechanical data	
Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,20 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
Torque setting with screw terminals	0,50 Nm
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	0,20 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	101,4 mm
Width	22,5 mm
Depth	115,0 mm
Weight	85 g

Where standards are undated, the 2013-06 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order no.
PNOZ m ES EtherCAT	Fieldbus module, EtherCAT	772 136

### Accessories

#### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

## Fieldbus modules PNOZ m ES EtherCAT


---

### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793 543

## Fieldbus modules

### PNOZ m ES EtherNet/IP

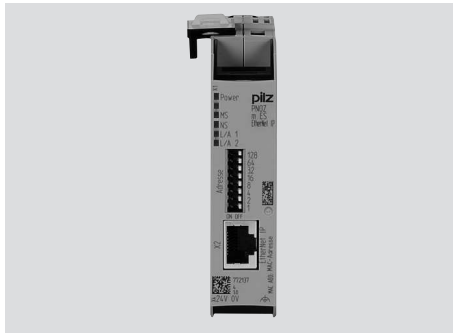

## Overview

### Unit features

Using the product PNOZ m ES EtherNet/IP:


Expansion module for connection to a base unit from the configurable control system PNOZmulti 2 .

The product has the following features:


- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for EtherNet/IP as adapter
- ▶ Transmission rate 10 MBit/s (10BaseT) and 100 MBit/s (100BaseTX)
- ▶ Status indicators for communication and for errors
- ▶ 128 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus EtherNet/IP.
- ▶ Max. 1 PNOZ m ES EtherNet/IP can be connected to the base unit
- ▶ 2-port switch
- ▶ Device Level Ring (DLR)
- ▶ Integrated web server
- ▶ For details of the PNOZmulti 2 base units that can be connected, please refer to the document "PNOZmulti System Expansion".

## Fieldbus modules PNOZ m ES EtherNet/IP

### Front view

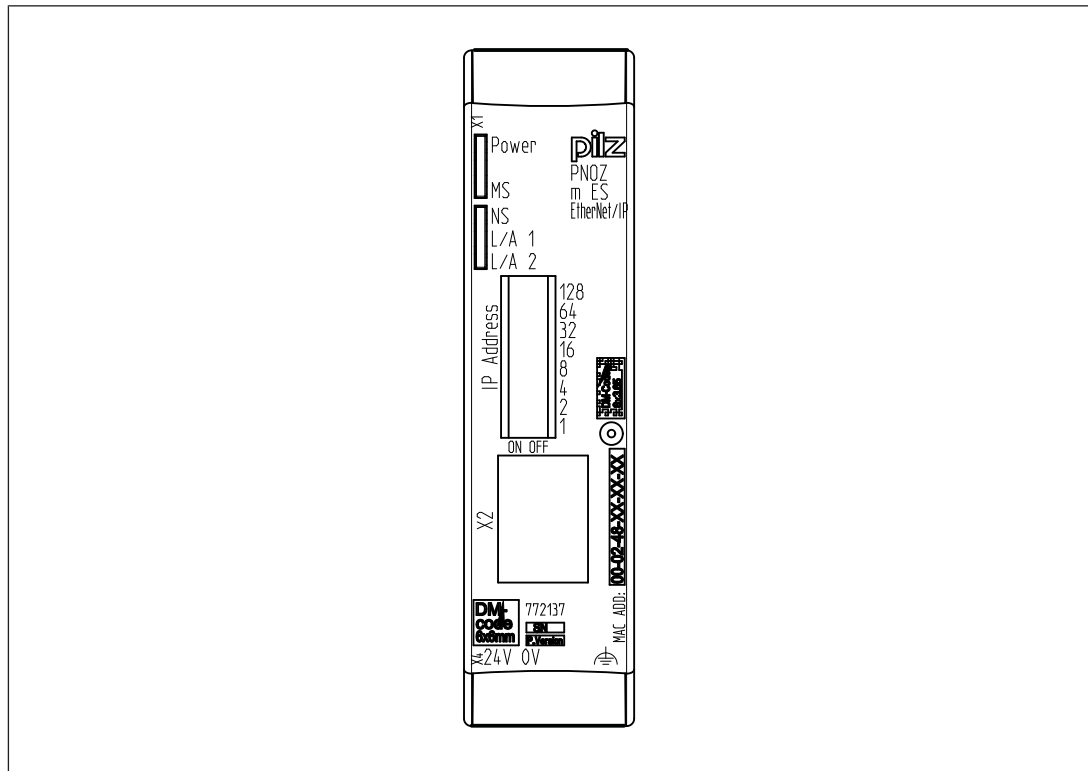

### Legend:

- ▶ X1, X2: EtherNet/IP - Interfaces
- ▶ 0 V, 24 V: Supply connections
- ▶ IP address: for setting the IP address
- ▶ : Functional earth
- ▶ LED:
  - Power
  - MS
  - NS
  - L/A 1
  - L/A 2

EtherNet/IP™ is registered trademark and patented technology, licensed by ODVA.

## Fieldbus modules

### PNOZ m ES EtherNet/IP

### Function description

#### Operation

The virtual inputs and outputs that are to be transferred via the fieldbus EtherNet/IP are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ m ES EtherNet/IP are connected via a jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the fieldbus module PNOZ m ES EtherNet/IP is configured and started automatically.

LEDs indicate the status of the fieldbus module EtherNet/IP.

The configuration is described in detail in the PNOZmulti Configurator's online help.

#### Data exchange

17 or 32 bytes must always be sent and received for communication with the PNOZmulti.

Fixed parameters for the input/output assembly instances are set in the fieldbus module PNOZ m ES EtherNet/IP. The following data lengths can be selected:

Assembly Instance Input	Data length	Description
100	32 Bytes	Inputs, LEDs, tables
101	17 Bytes	Inputs, LEDs

Assembly Instance Output	Data length	Description
150	32 Bytes	Outputs, LEDs, tables
151	17 Bytes	Outputs, LEDs

Assembly Instance Configuration	Data length	Description
4	0 Bytes	-

#### Input and output data

The data is structured as follows:

##### Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number I12.

Virtual inputs PNOZmulti Configurator	I0 ... I7	I8 ... I15	I16 ... I23	...	I120...I127
EtherNet/IP	Byte 0: Bit 0 ... 7	Byte 1: Bit 0 ... 7	Byte 2: Bit 0 ... 7	...	Byte 15: Bit 0 ... 7

## Fieldbus modules PNOZ m ES EtherNet/IP

### Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. O0, O5... .


The status of output O0 is stored in bit 0 of byte 0; the status of output O5 is stored in bit 5 of byte 0 etc.

Virtual inputs PNOZmulti Configurator	O0 ... O7	O8 ... O15	O16 ... O23	...	O120... O127
EtherNet/IP	Byte 0: Bit 0 ... 7	Byte 1: Bit 0 ... 7	Byte 2: Bit 0 ... 7	...	Byte 15: Bit 0 ... 7

- ▶ Bit 0 ... 4: Status of LEDs on the PNOZmulti 2
  - Bit 0: OFAULT
  - Bit 1: IFAULT
  - Bit 2: FAULT
  - Bit 3: DIAG
  - Bit 4: RUN
- ▶ Data exchange is displayed in Bit 5.
- ▶ Polling the payload data: 2 Bytes with the table number and segment number are sent by the Master for access to the payload data table (15 Bytes are returned to the Master).

Detailed information on data exchange is available in the document "Communication Interfaces PNOZmulti 2" in the section entitled "Fieldbus modules".

### Block diagram

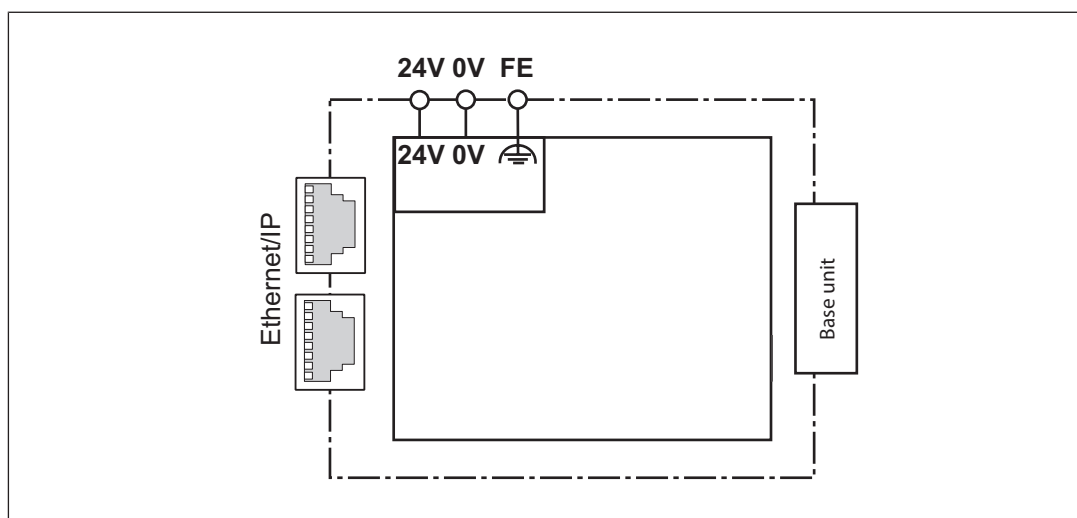


## Fieldbus modules

### PNOZ m ES EtherNet/IP

## Installation

### Dimensions in mm

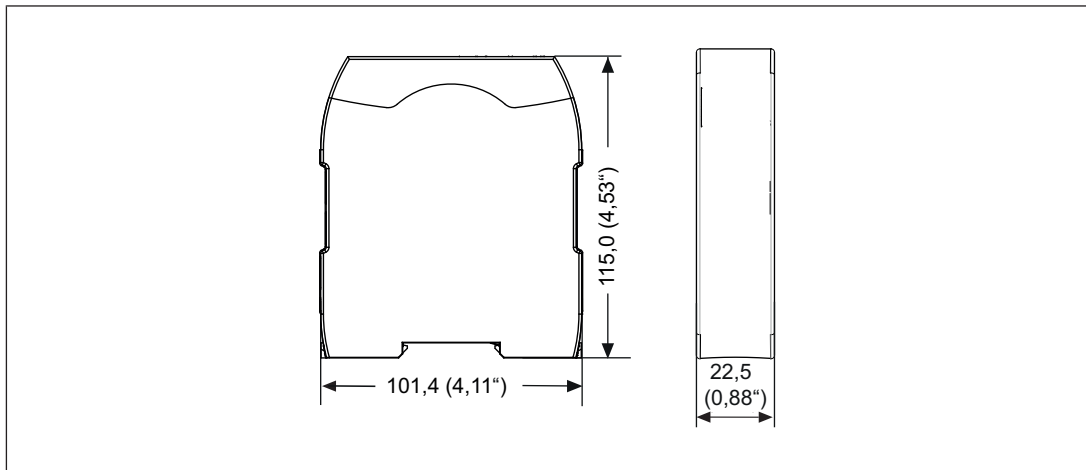

## Commissioning

### General wiring guidelines


The wiring is defined in the circuit diagram of the PNOZmulti Configurator. It is possible to define which inputs and outputs on the safety system will communicate with EtherNet/IP.

Please note:

- ▶ Information given in the "[Technical details \[📖 869\]](#)" must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to EtherNet/IP:

- ▶ The following minimum requirements of the connection cable and connector must be met:
  - Only use standard industrial Ethernet cable and connectors.
  - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
  - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:

Ensure the requirements for the industrial use of EtherNet/IP are met, as stated in the Installation Manual published by the User Group.
- ▶ External measures must be used to connect the terminal  to the functional earth, when the mounting rail is **not** connected to the functional earth.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.



## Fieldbus modules

### PNOZ m ES EtherNet/IP


- ▶ The power supply must meet the regulations for extra low voltages with protective separation.

#### Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6A

#### Interface assignment

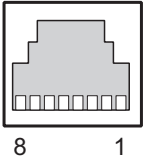RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

#### Set IP address

The IP address of the fieldbus module PNOZ m ES EtherNet/IP is set using the DIP switch on the front.

- ▶ The first three bytes of the IP address are: 192.168.1.
- ▶ Subnet mask: 255.255.255.0.
- ▶ The last byte of the IP address is configured (value range: 1 ...255).

There are various options for setting the IP address.

## Fieldbus modules PNOZ m ES EtherNet/IP

- ▶ Use of the DHCP Server is enabled  
DHCP is automatically enabled on a new module. In this case the IP address is taken from the DHCP Server, if the DIP switch is set to 0. The module waits to receive an address from a DHCP Server.
- ▶ If a fixed IP address has been assigned via the web server or by the EtherNet/IP scanner, then this will be used. The DIP switch must be set to zero for this purpose.
- ▶ Setting via the DIP switch  
The IP address that is set at the DIP switch is used. DHCP is therefore disabled. Set the DIP switch to a value between 1 – 254.
- ▶ Enable DHCP via DIP switch  
If you set the DIP switch to 255, then DHCP will always be used, irrespective of the configuration in the web server.

Example: DIP switch: 00010100 (20 decimal)

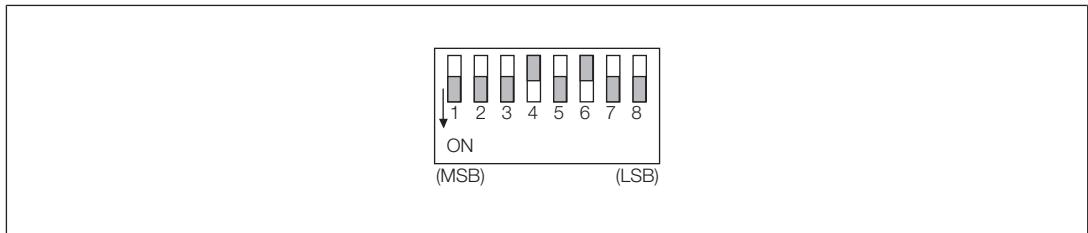



Fig.: DIP switch setting: 20 (decimal) as the value for the last byte of the IP address

DIP switch "IP address"	Meaning		Example: IP address 020 <sub>D</sub>
	OFF	ON	
1	0	128 <sub>D</sub>	
2	0	64 <sub>D</sub>	
3	0	32 <sub>D</sub>	
4	0	16 <sub>D</sub>	
5	0	8 <sub>D</sub>	
6	0	4 <sub>D</sub>	
7	0	2 <sub>D</sub>	
8	0	1 <sub>D</sub>	

DIP switch IP address

## Fieldbus modules PNOZ m ES EtherNet/IP

### Connection example

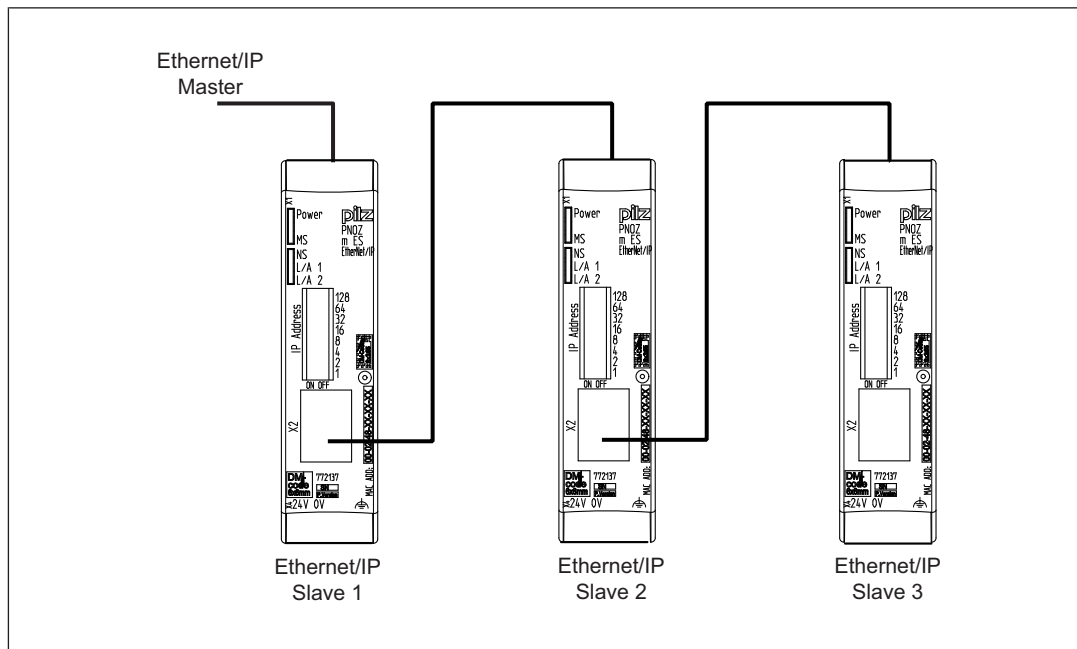

### Technical Details

General	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
Electrical data	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Supply voltage	
Current consumption	<b>50 mA</b>
Power consumption	<b>1,2 W</b>
Max. power dissipation of module	<b>1,50 W</b>
Status indicator	<b>LED</b>
Fieldbus interface	
Fieldbus interface	<b>EtherNet/IP</b>
Device type	<b>Adapter</b>
Transmission rates	<b>10 MBit/s, 100 MBit/s</b>
Connection	<b>2 x RJ45</b>
Galvanic isolation	<b>yes</b>

## Fieldbus modules PNOZ m ES EtherNet/IP

<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>Fieldbus and module voltage</b>
Type of potential isolation	<b>Functional insulation</b>
Rated surge voltage	<b>500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>

## Fieldbus modules PNOZ m ES EtherNet/IP

Mechanical data	
Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,20 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
Torque setting with screw terminals	0,50 Nm
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	0,20 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9,0 mm
Dimensions	
Height	101,4 mm
Width	22,5 mm
Depth	110,4 mm
Weight	90 g

Where standards are undated, the 2014-04 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order no.
PNOZ m ES EtherNet/IP	Fieldbus module, EtherNet/IP	772 137

### Accessories

#### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

## Fieldbus modules

### PNOZ m ES EtherNet/IP


---

#### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793 543

## Fieldbus modules PNOZ m ES Powerlink

---

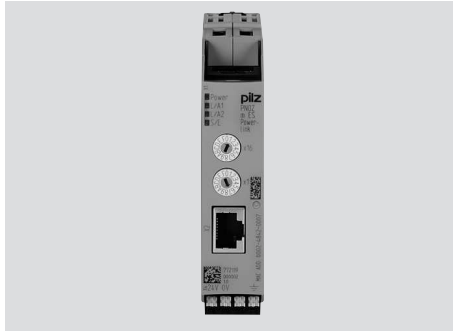

### Overview

#### Unit features

Using the product PNOZ m ES Powerlink:


Expansion module for connection to a base unit from the configurable control system PNOZmulti 2 .

The product has the following features:


- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for Ethernet POWERLINK (Ethernet POWERLINK V 2 protocol)
- ▶ Station addresses from 1 ... 239, selected via rotary switch
- ▶ The minimum cycle time for an application of 32 Byte Output and 32 Byte Input is 275µs. The minimum cycle time is 500 µs at the maximum PDO size of 254 Byte Input and 32 Byte Output. (The inputs and outputs in this case are viewed from the Managing Node.)
- ▶ 128 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus Ethernet POWERLINK.
- ▶ Max. 1 PNOZ m ES Powerlink can be connected to the base unit
- ▶ For details of the PNOZmulti 2 base units that can be connected, please refer to the document "PNOZmulti System Expansion".
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)

## Fieldbus modules PNOZ m ES Powerlink

### Front view

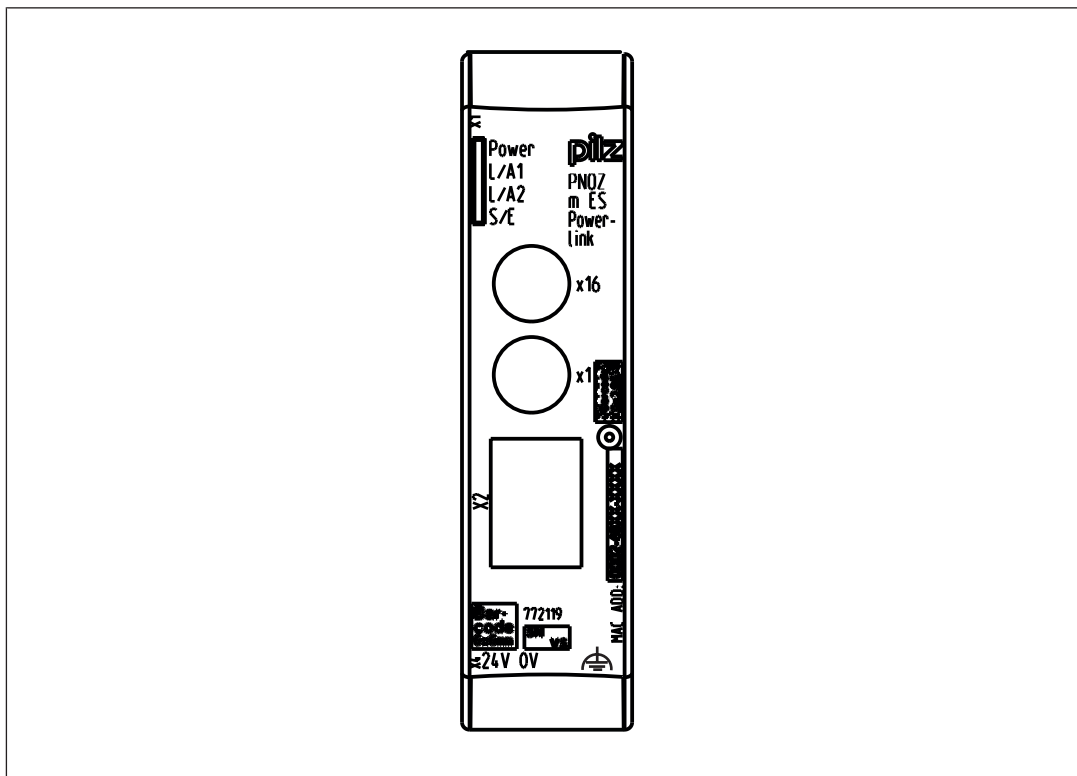

#### Legend:

- ▶ X1, X2: Ethernet POWERLINK interfaces
- ▶ 0 V, 24 V: Supply connections
- ▶ : Functional earth
- ▶ LED:
  - Power
  - L/A1
  - L/A2
  - S/E (Status/Error)

### Function description

#### Functions

The virtual inputs and outputs that are to be transferred via the fieldbus Ethernet POWERLINK are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ m ES Powerlink are connected via a jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the fieldbus module PNOZ m ES Powerlink is configured and started automatically.



## Fieldbus modules

### PNOZ m ES Powerlink

LEDs indicate the status of the fieldbus module Ethernet POWERLINK.

The configuration is described in detail in the PNOZmulti Configurator's online help.

#### Input and output data

The data is structured as follows:

▶ **Input area PNOZ m ES Powerlink**

The values for the virtual inputs are set as an output in the Managing Node and transferred to the PNOZmulti 2. Each input has a number, e.g. input bit 4 of SDO 2100:02 has the number i12.

Virtual inputs PNOZmulti Configurator	I0 ... I7	I8 ... I15	I16 ... I23
Ethernet POWER-LINK	SDO 2100:01: Bit 0 ... 7	SDO 2100:02: Bit 0 ... 7	SDO 2100:03: Bit 0 ... 7

▶ **Output range PNOZ m ES Powerlink**


The virtual outputs are configured in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The state of output o0 is stored in Bit 0 of SDO 2000:01.

Virtual outputs PNOZmulti Configurator	O0 ... O7	O8 ... O15	O16 ... O23
Ethernet POWER-LINK	SDO 2000:01: Bit 0 ... 7	SDO 2000:02: Bit 0 ... 7	SDO 2000:03: Bit 0 ... 7

Detailed information on data exchange is available in the document "Communication Interfaces PNOZmulti 2" in the section entitled "Fieldbus modules".


## Fieldbus modules PNOZ m ES Powerlink

### Block diagram

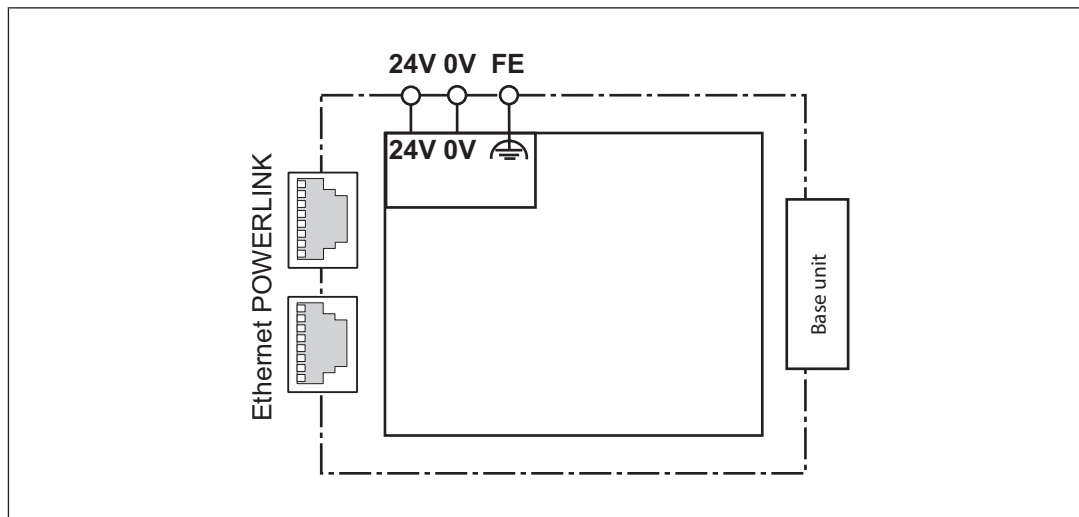

### Installation

#### Dimensions in mm

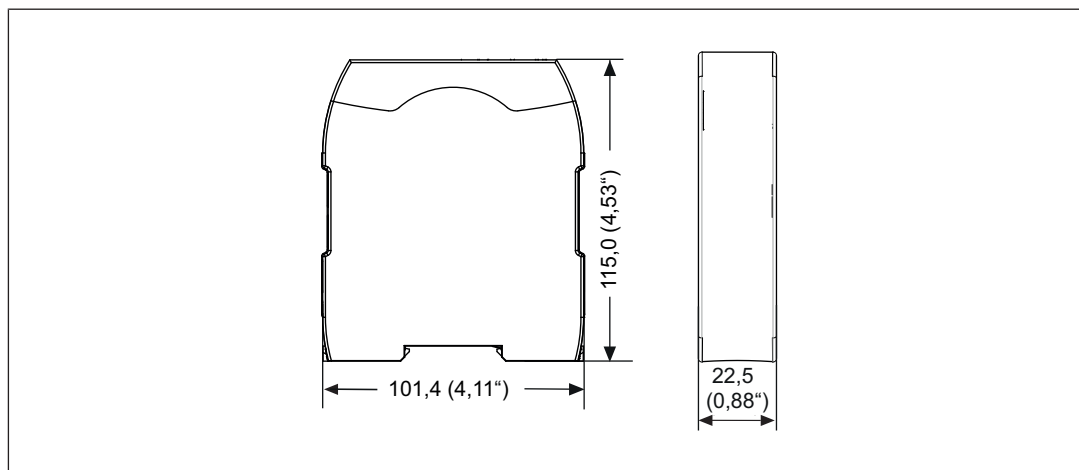

### Commissioning

#### General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator. It is possible to define which inputs and outputs on the safety system will communicate with Ethernet POWERLINK.

Please note:


- ▶ Information given in the "[Technical details \[879\]](#)" must be followed.

## Fieldbus modules PNOZ m ES Powerlink

---

- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to Ethernet POWERLINK:

- ▶ The following minimum requirements of the connection cable and connector must be met:
  - Only use standard industrial Ethernet cable and connectors.
  - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
  - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:  
Ensure the requirements for the industrial use of Ethernet POWERLINK are met, as stated in the Installation Manual published by the User Group.
- ▶ External measures must be used to connect the terminal  to the functional earth, when the mounting rail is **not** connected to the functional earth.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.


### Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6A


## Fieldbus modules PNOZ m ES Powerlink

### Interface assignment

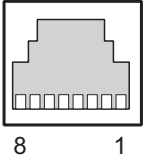RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

### Connection example

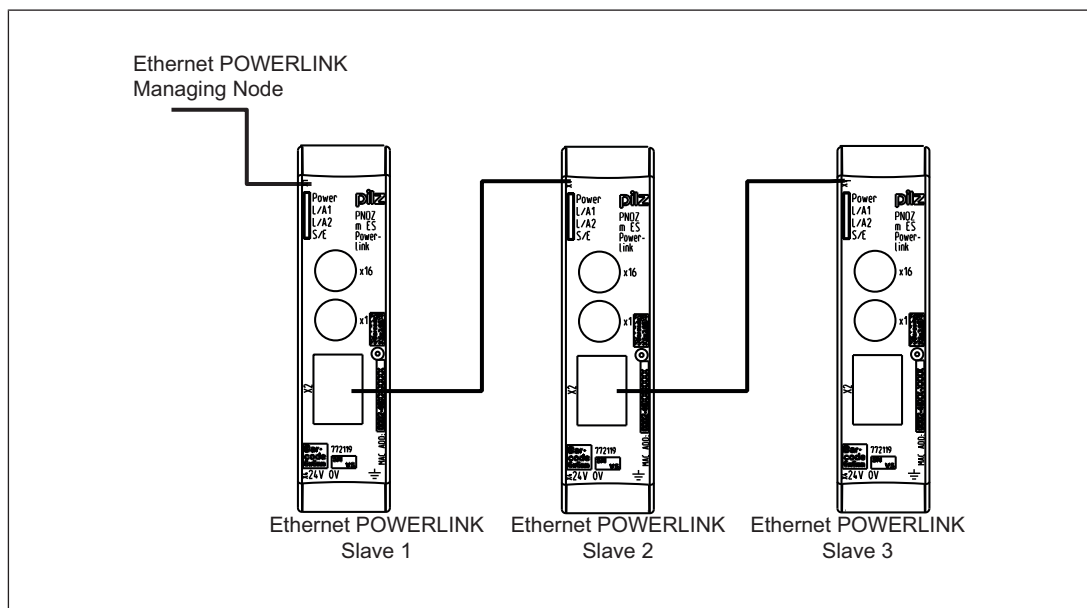

## Fieldbus modules

### PNOZ m ES Powerlink

#### Technical Details

<b>General</b>	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
<b>Electrical data</b>	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24,0 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Supply voltage	
Current consumption	<b>50 mA</b>
Power consumption	<b>1,2 W</b>
Max. power dissipation of module	<b>1,50 W</b>
Status indicator	<b>LED</b>
<b>Fieldbus interface</b>	
Fieldbus interface	<b>Ethernet POWERLINK V2</b>
Device type	<b>Controlled Node</b>
Transmission rates	<b>100 MBit/s</b>
Connection	<b>RJ45</b>
Galvanic isolation	<b>yes</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>

## Fieldbus modules PNOZ m ES Powerlink

<b>Environmental data</b>	
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>Fieldbus and module voltage</b>
Type of potential isolation	<b>Functional insulation</b>
Rated surge voltage	<b>500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,20 - 1,50 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals	<b>0,50 Nm</b>
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	<b>0,20 - 2,50 mm<sup>2</sup>, 24 - 12 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>2</b>
Stripping length with spring-loaded terminals	<b>9,0 mm</b>
Dimensions	
Height	<b>101,4 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>110,4 mm</b>
Weight	<b>90 g</b>

Where standards are undated, the 2013-10 latest editions shall apply.

## Fieldbus modules PNOZ m ES Powerlink

### Order reference

#### Product

Product type	Features	Order no.
PNOZ m ES Powerlink	Fieldbus module, Ethernet POWERLINK	772 119

#### Accessories

##### Terminator, jumper


Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

##### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793 543

## Fieldbus modules PNOZ m ES Profinet

---

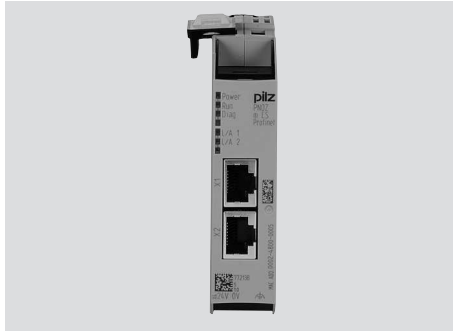

### Overview

#### Unit features

Using the product PNOZ m ES Profinet:

Expansion module for connection to a base unit from the configurable control system PNOZmulti 2 .


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connections for PROFINET
- ▶ status, diagnostic and error displays for communication with PROFINET
- ▶ 128 virtual inputs and outputs on the control system PNOZmulti 2 can be defined in the PNOZmulti Configurator for communication with the fieldbus PROFINET.
- ▶ Transmission rate 100 MBit/s (100BaseTX), full and half duplex
- ▶ Max. 1 PNOZ m ES Profinet can be connected to the base unit
- ▶ Two RJ45 ports
- ▶ Profinet IO device (V2.2) functions in accordance with Conformance Class C
- ▶ Supported functions:
  - RT
  - IRT
  - MRP
  - LLDP
  - I&M 0-4
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units PNOZmulti 2 that can be connected.




## Fieldbus modules PNOZ m ES Profinet

### Front view

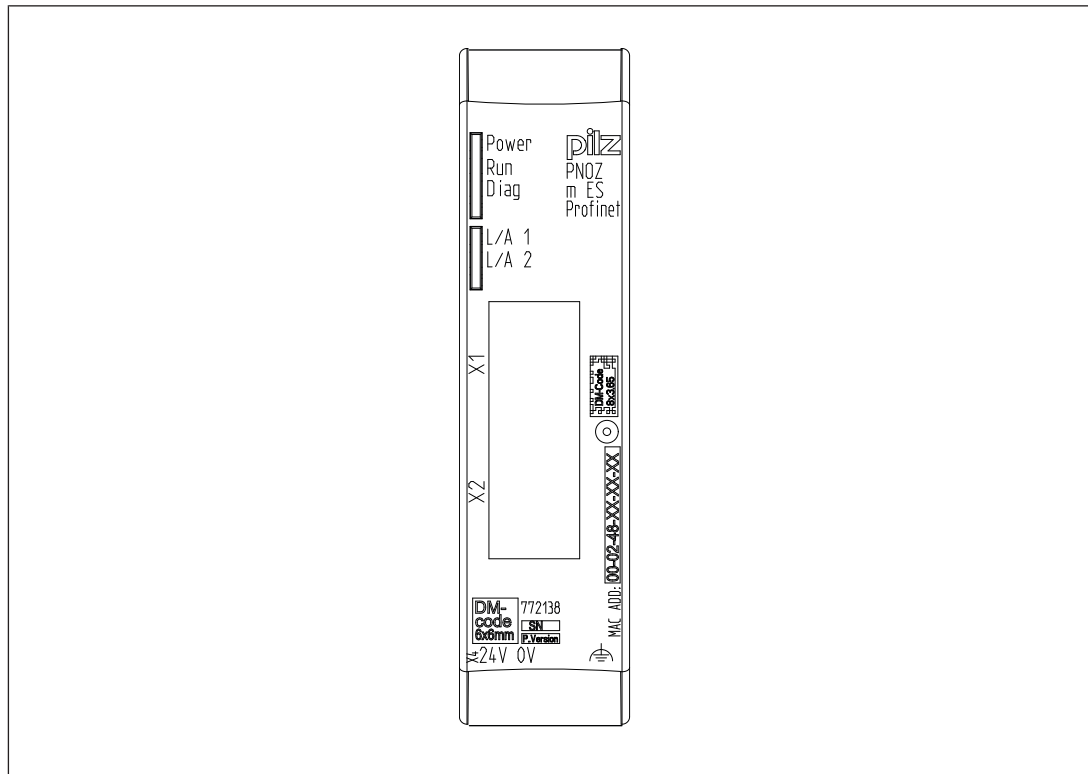

### Legend:

- ▶ X1, X2: Profinet interfaces
- ▶ 0 V, 24 V: Supply connections
- ▶ : Functional earth
- ▶ LED:
  - Power
  - Run
  - Diag
  - L/A 1
  - L/A 2

## Fieldbus modules PNOZ m ES Profinet

---

### Function description

#### Operation

The virtual inputs and outputs that are to be transferred via PROFINET are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ m ES Profinet are connected via a jumper.

After the supply voltage is switched on or the PNOZmulti 2 is reset, the expansion module PNOZ m ES Profinet is configured and started automatically.

LEDs indicate the status of the fieldbus module PROFINET.

The configuration is described in detail in the PNOZmulti Configurator's online help.

#### Data access

The data is structured as follows:

▶ Virtual data

- Input area PNOZ m ES Profinet

The values for the inputs are set in the Master as an output and transferred to the PNOZmulti 2.

- Output area PNOZ m ES Profinet

The outputs are configured in the PNOZmulti Configurator and transferred to the Master.

▶ Status of LEDs:

Bits 0 ... 4: Status of LEDs on the PNOZmulti 2

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

▶ Data exchange is displayed in Bit 5.

▶ Polling the payload data: 2 Bytes with the table number and segment number are sent by the Master for access to the payload data table (15 Bytes are returned to the Master).

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

## Fieldbus modules PNOZ m ES Profinet

### Assigning the inputs/outputs in the PNOZmulti Configurator to the PROFINET inputs/outputs

Virtual inputs and outputs can be requested or set directly via the following objects. Each element can be selected individually in the master control system, e.g. virtual inputs i0-31. The data width is also established this way.

#### Input data

The Master writes to the virtual inputs of the PNOZmulti 2.


Description	Input data from PNOZmulti 2
Virtual inputs i0 – i31	4 Input Bytes
Virtual inputs i32 – i63	4 Input Bytes
Virtual inputs i64 – i95	4 Input Bytes
Virtual inputs i96 – i127	4 Input Bytes

#### Output data

The Master reads the virtual outputs of the PNOZmulti 2.

Description	Output data from PNOZmulti 2
Virtual outputs o0 – o31	4 Output Bytes
Virtual outputs o32 – o63	4 Output Bytes
Virtual outputs o64 – o95	4 Output Bytes
Virtual outputs o96 – o127	4 Output Bytes

### Block diagram

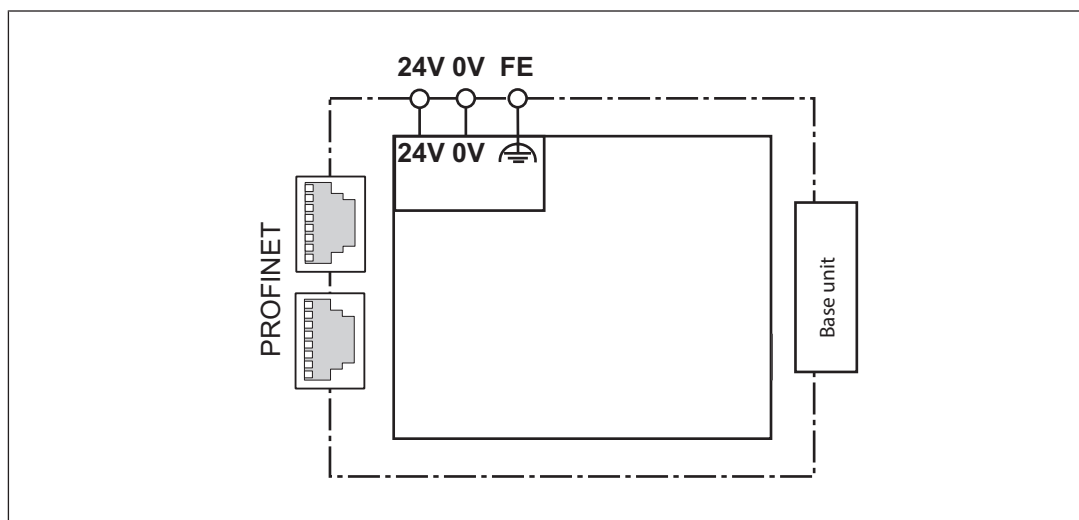


## Fieldbus modules

### PNOZ m ES Profinet

## Installation

### Dimensions in mm

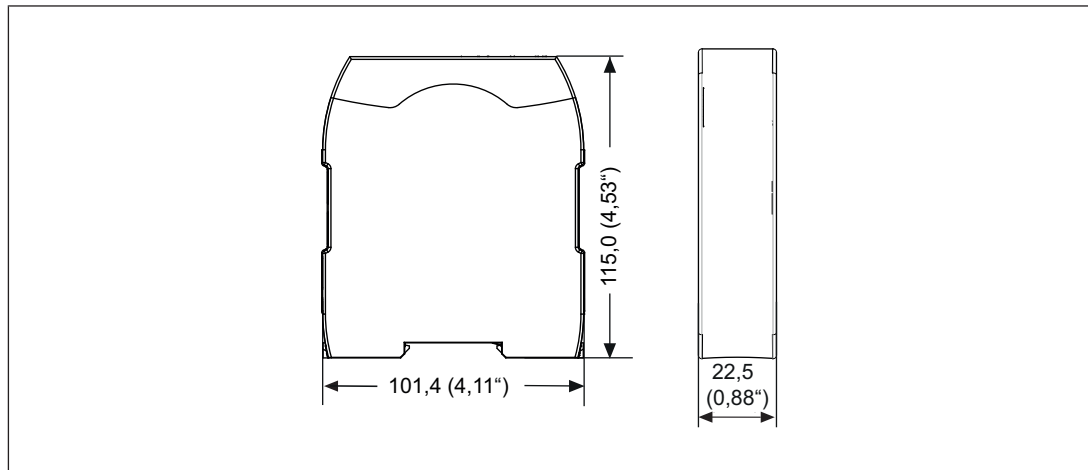

## Commissioning

### General wiring guidelines


The wiring is defined in the circuit diagram of the PNOZmulti Configurator. It is possible to define which inputs and outputs on the safety system will communicate with PROFINET.

Please note:

- ▶ Information given in the "[Technical details \[888\]](#)" must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to PROFINET:

- ▶ The following minimum requirements of the connection cable and connector must be met:
  - Only use standard industrial Ethernet cable and connectors.
  - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
  - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:
 

Ensure the requirements for the industrial use of PROFINET are met, as stated in the Installation Manual published by the User Group.
- ▶ External measures must be used to connect the terminal  to the functional earth, when the mounting rail is **not** connected to the functional earth.

## Fieldbus modules PNOZ m ES Profinet


- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.

### Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6A

### Interface assignment

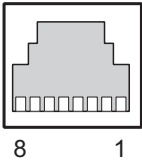RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

### Preparing for operation

#### Set IP address

There are two options:


- ▶ Automatic assignment of the IP address with the Dynamic Host Configuration Protocol (DHCP)
- ▶ Assignment of the IP address by the IO controller before system startup based on the unique unit name.

## Fieldbus modules PNOZ m ES Profinet

### Install GSDLM file

Install the GSDML file. You can find the GSDML file in the Internet at [www.pilz.de](http://www.pilz.de).

### Connection example

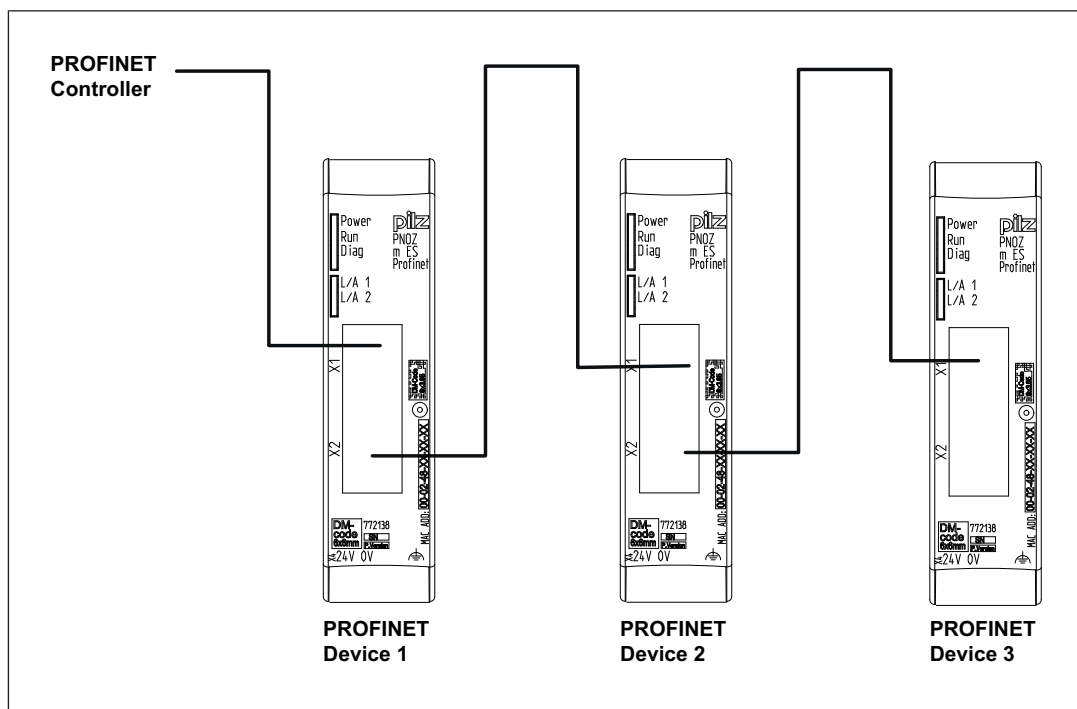

### Technical details

General	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
Electrical data	
Supply voltage	
for	Module supply
Voltage	24,0 V
Kind	DC
Voltage tolerance	-20 %/+25 %
Supply voltage	
Current consumption	60 mA
Power consumption	1,4 W
Max. power dissipation of module	1,50 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	PROFINET
Device type	IO-Device

## Fieldbus modules PNOZ m ES Profinet

<b>Fieldbus interface</b>	
Transmission rates	<b>100 MBit/s</b>
Connection	<b>2 x RJ45</b>
Galvanic isolation	<b>yes</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10,0 - 150,0 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Max. operating height above sea level	<b>2000 m</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Rated insulation voltage	<b>30 V</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
<b>Potential isolation</b>	
Potential isolation between	<b>Fieldbus and module voltage</b>
Type of potential isolation	<b>Functional insulation</b>
Rated surge voltage	<b>500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>

## Fieldbus modules PNOZ m ES Profinet

Mechanical data	
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,20 - 1,50 mm <sup>2</sup> , 24 - 16 AWG
Torque setting with screw terminals	0,50 Nm
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	0,20 - 2,50 mm <sup>2</sup> , 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9,0 mm
Dimensions	
Height	101,4 mm
Width	22,5 mm
Depth	110,4 mm
Weight	86 g

Where standards are undated, the 2014-04 latest editions shall apply.

## Order reference

### Product

Product type	Features	Order no.
PNOZ m ES Profinet	Fieldbus module, PROFINET for PNOZmulti 2	772 138

### Accessories

#### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260




## Fieldbus modules PNOZ m ES Profinet

---

### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793 543

## Fieldbus modules PNOZ m ES CC-Link

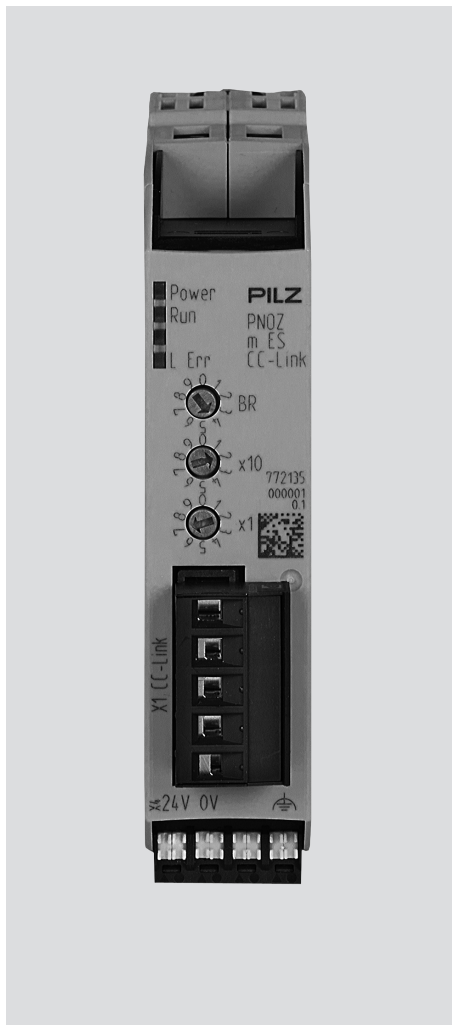

### Overview

#### Unit features

Using the product PNOZ m ES CC-Link:

Expansion module for connection to a base unit from the configurable control system PNOZmulti 2 .

The product has the following features:


- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for CC-Link
- ▶ Station addresses from 1 ... 63, selected via rotary switch
- ▶ Station type: Remote Device
- ▶ Occupied stations: 3

## Fieldbus modules


### PNOZ m ES CC-Link

- ▶ 128 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus CC-Link.
- ▶ Max. 1 PNOZ m ES CC-Link can be connected to the base unit
- ▶ Plug-in connection terminals:  
either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

#### Front view

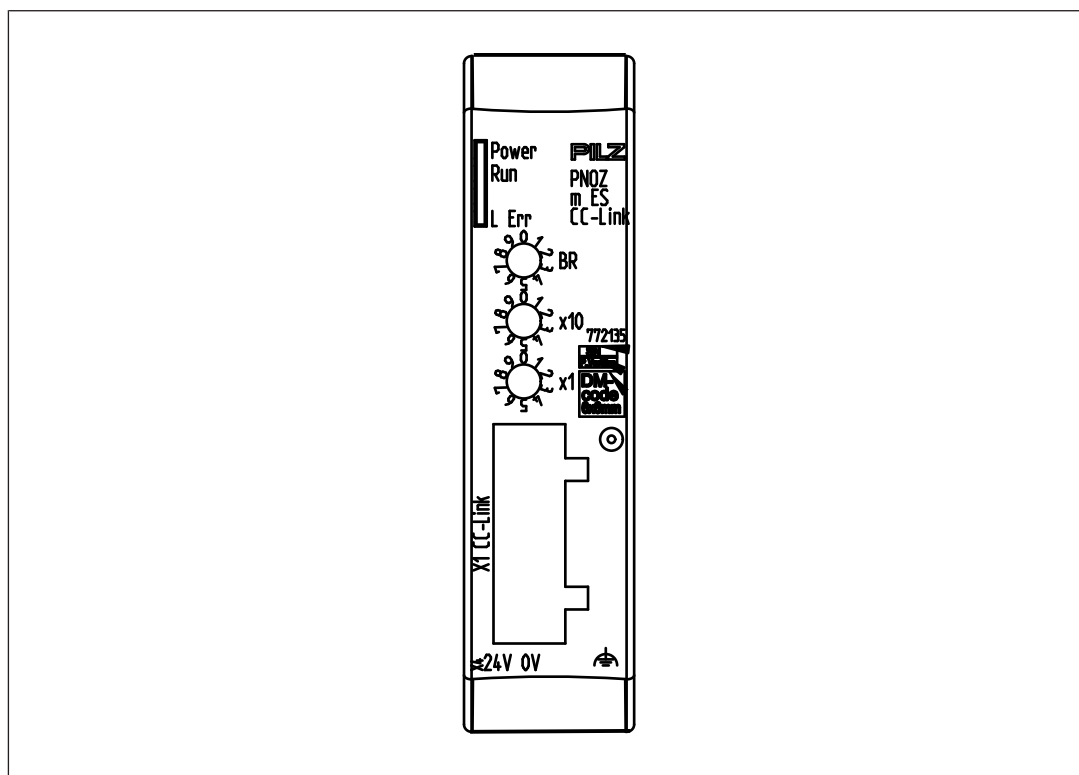

#### Legend:

- |   |                                   |
|---|-----------------------------------|
| X1:   | CC-Link interface                 |
| X4: 0 V, 24 V:  | Supply connections                |
|  | Functional earth                  |
| Rotary switch   | For setting the station addresses |
| LEDs:   | Power, Run, L Err                 |

## Fieldbus modules PNOZ m ES CC-Link

### Function description

#### Functions

The virtual inputs and outputs that are to be transferred via the fieldbus CC-Link are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ m ES CC-Link are connected via a jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the fieldbus module PNOZ m ES CC-Link is configured and started automatically.

LEDs indicate the status of the fieldbus module CC-Link.

The configuration is described in detail in the PNOZmulti Configurator's online help.

To send and receive data three stations have to be created in CC-Link master.

#### Input and output data

Virtual inputs and outputs can be requested or set directly via the following addresses. The implementation to the names of the inputs and outputs in PNOZmulti 2 is performed as in the table listed below.

The data is structured as follows:

##### ▶ Input area

- Inputs on PNOZmulti Configurator: i00 .. i127
- Input data CC-Link: RYmn.. RY(m+50)n, RWw I .. RWw I+2  
with I = address can be set as required on the master side (word address)  
with m = address can be set as required on the master side (Bit address)  
with n = 0 .. F (Bit number)

Example: (with m=100) i23 -> n = 7 -> RY117

Bit addressed input data i00 - i87

n	F	E	D	C	B	A	9	8	7	6	5	4	3	2	1	0
RY m n	i15	i14	i13	i12	i11	i10	i09	i08	i07	i06	i05	i04	i03	i02	i01	i00
RY(m+10)n	i31	i30	i29	i28	i27	i26	i25	i24	i23	i22	i21	i20	i19	i18	i17	i16
RY(m+20)n	i47	i46	i45	i44	i43	i42	i41	i40	i39	i38	i37	i36	i35	i34	i33	i32
RY(m+30)n	i63	i62	i61	i60	i59	i58	i57	i56	i55	i54	i53	i52	i51	i50	i49	i48
RY(m+40)n	i79	i78	i77	i76	i75	i74	i73	i72	i71	i70	i69	i68	i67	i66	i65	i64
RY(m+50)n									i87	i86	i85	i84	i83	i82	i81	i80

## Fieldbus modules PNOZ m ES CC-Link

Word addressed input data i88 - i127

	High byte								Low byte							
Bit no	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
RWw I	i103	i102	i101	i100	i99	i98	i97	i96	i95	i94	i93	i92	i91	i90	i89	i88
RWw I+1	i119	i118	i117	i116	i115	i114	i113	i112	i111	i110	i109	i108	i107	i106	i105	i104
RWw I+2	-	-	-	-	-	-	-	-	i127	i126	i125	i124	i123	i122	i121	i120

► **Output range**

- Outputs on PNOZmulti Configurator: o00 .. o127
- Output data CC-Link: RXmn .. RX(m+50)n, RWr I .. RWr I+2  
with I = address can be set as required on the master side (word address)  
with m = address can be set as required on the master side (Bit address)  
with n = 0 .. F (Bit number)

Example: (with m=100) o22 -> n = 6 -> RX116

Bit addressed output data o00 - o87

n	F	E	D	C	B	A	9	8	7	6	5	4	3	2	1	0
RX m n	o15	o14	o13	o12	o11	o10	o09	o08	o07	o06	o05	o04	o03	o02	o01	o00
RX(m+10)n	o31	o30	o29	o28	o27	o26	o25	o24	o23	o22	o21	o20	o19	o18	o17	o16
RX(m+20)n	o47	o46	o45	o44	o43	o42	o41	o40	o39	o38	o37	o36	o35	o34	o33	o32
RX(m+30)n	o63	o62	o61	o60	o59	o58	o57	o56	o55	o54	o53	o52	o51	o50	o49	o48
RX(m+40)n	o79	o78	o77	o76	o75	o74	o73	o72	o71	o70	o69	o68	o67	o66	o65	o64
RX(m+50)n									o87	o86	o85	o84	o83	o82	o81	o80

Word addressed output data o88 - o127

	High byte								Low byte							
Bit No.	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
RWr I	o10 3	o10 2	o10 1	o10 0	o99	o98	o97	o96	o95	o94	o93	o92	o91	o90	o89	o88
RWr I +1	o11 9	o11 8	o11 7	o11 6	o11 5	o11 4	o11 3	o11 2	o11 1	o11 0	o10 9	o10 8	o10 7	o10 6	o10 5	o10 4
RWr I +2	-	-	-	LED RU N FS	LED DIA G	LED FAU LT	LED IFA ULT	LED OFA ULT	o12 7	o12 6	o12 5	o12 4	o12 3	o12 2	o12 1	o12 0

## Fieldbus modules PNOZ m ES CC-Link

### LED status

The LED status of PNOZmulti 2 can be read out via the following High Byte.

	High Byte								Low Byte							
Bit no	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
RWr (I+2)	LED Byte								Output data o120 - o127							

- ▶ Bit 0 = 1: LED OFAULT is lit or flashes
- ▶ Bit 1 = 1: LED IFAULT is lit or flashes
- ▶ Bit 2 = 1: LED FAULT is lit or flashes
- ▶ Bit 3 = 1: LED DIAG is lit or flashes
- ▶ Bit 4 = 1: LED RUN FS is lit
- ▶ Bit 5-7: Reserved

### Access to table segments

The data in the tables can be requested via the following addresses.

#### Input data

The Master requests a table segment:

	High Byte	Low Byte
RWw (I+3)	Segment number	Table number


#### Output data

PNOZmulti 2 answers as follows:

	High Byte	Low Byte
RWr (I+3)	Segment number	Table number
RWr(I+4)	Segment Byte 1	Segment Byte 0
RWr(I+5)	Segment Byte 3	Segment Byte 2
RWr(I+6)	Segment Byte 5	Segment Byte 4
RWr(I+7)	Segment Byte 7	Segment Byte 6
RWr(I+8)	Segment Byte 9	Segment Byte 8
RWr(I+9)	Segment Byte 11	Segment Byte 10
RWr(I+A)	Reserved	Segment Byte 12
RWr(I+B)	Reserved	Reserved


## Fieldbus modules PNOZ m ES CC-Link

### Block diagram

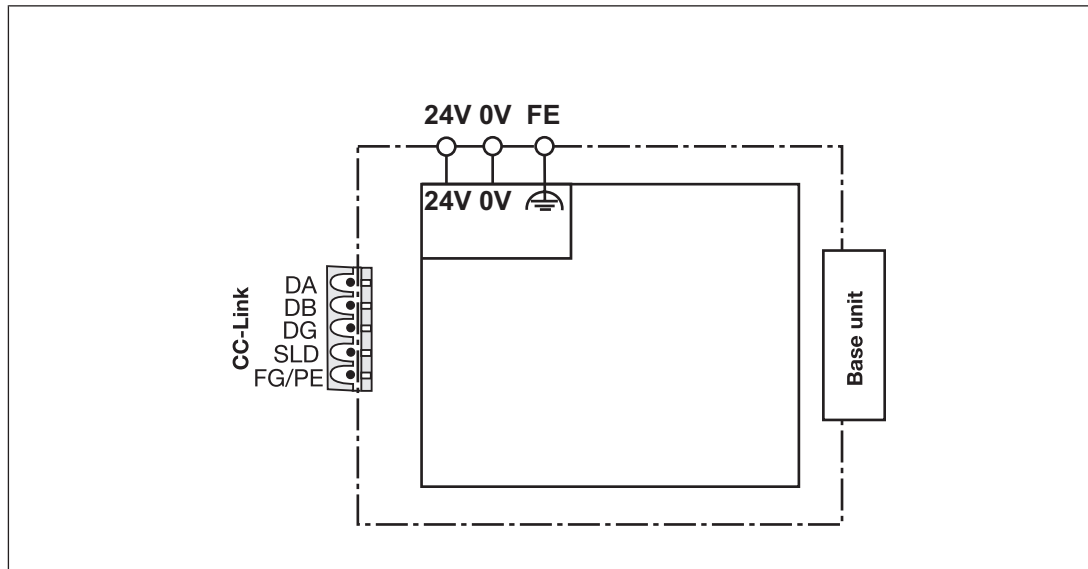

### Installation

#### Dimensions in mm

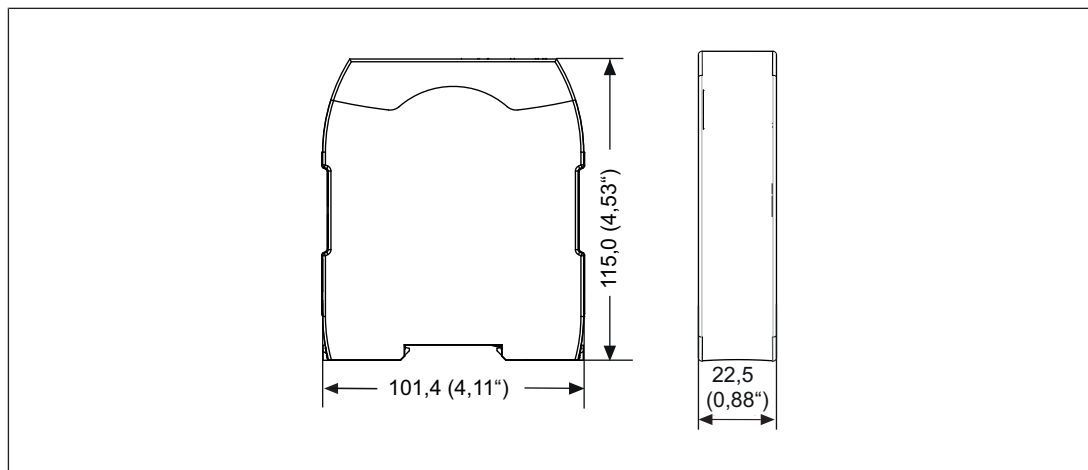

### Commissioning

#### General wiring guidelines


The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[899\]](#) must be followed.
- ▶ Use copper wire that can withstand 75° C.

## Fieldbus modules

### PNOZ m ES CC-Link

- ▶ External measures must be used to connect the terminal  to the functional earth, when the mounting rail is **not** connected to the functional earth.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.


### Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6A

### Interface assignment

It is possible to define which outputs on the safety system will communicate with CC-Link. The connection to CC-Link is made via a 5-pin screw connector.

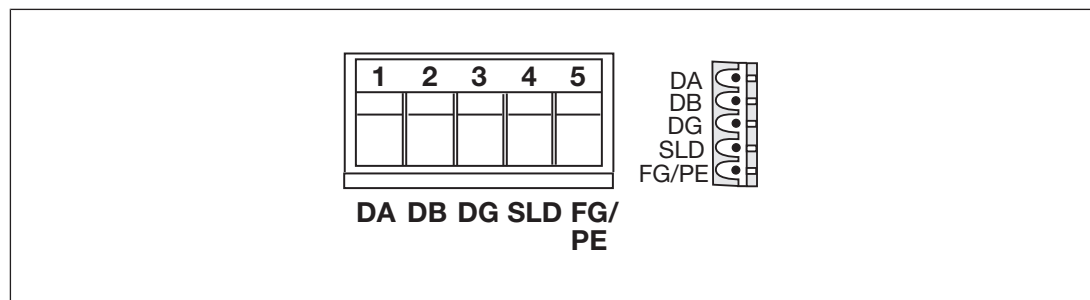


- 1: DA (Channel A)
- 2: DB (Channel B)
- 3: DG (Earth)
- 4: SLD (Cable shield)
- 5: FG/PE (Functional earth)



## Fieldbus modules PNOZ m ES CC-Link

### Connection example

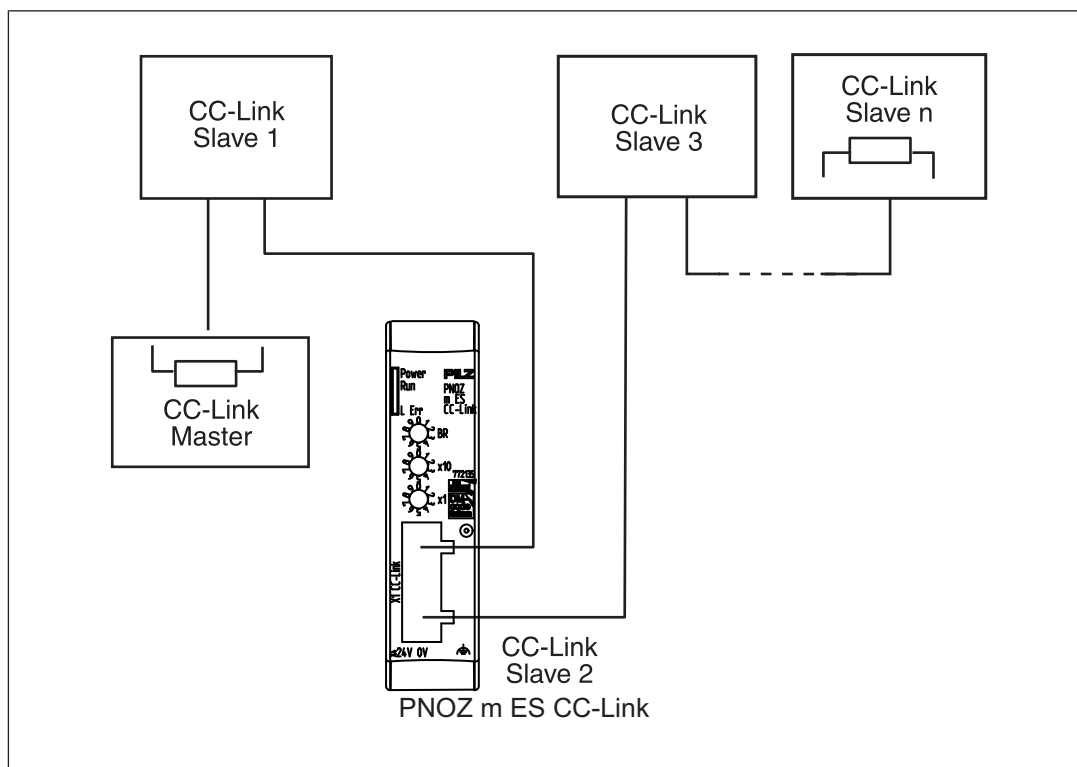

### Technical Details

General	
Approvals	CCC, CE, EAC (Eurasian)
Application range	Standard
Electrical data	
Supply voltage	
for	<b>Module supply</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Supply voltage	
Current consumption	<b>45 mA</b>
Power consumption	<b>1,1 W</b>
Max. power dissipation of module	<b>1,5 W</b>
Status indicator	<b>LED</b>
Fieldbus interface	
Fieldbus interface	<b>CC-Link V1.10</b>
Device type	<b>Slave</b>
Station address	<b>1 ... 63d</b>

## Fieldbus modules PNOZ m ES CC-Link

Fieldbus interface	
Transmission rates	10 MBit/s, 156 kbit/s, 2,5 MBit/s, 5 MBit/s, 625 kbit/s
Connection	5-pin Combicon plug-in connector
Assigned stations	3
Galvanic isolation	yes
Environmental data	
Ambient temperature	
In accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
In accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
In accordance with the standard	EN 60068-2-30, EN 60068-2-78
Condensation during operation	Not permitted
EMC	EN 61131-2
Vibration	
In accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
In accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Max. operating height above sea level	2000 m
Airgap creepage	
In accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2
Rated insulation voltage	30 V
Protection type	
In accordance with the standard	EN 60529
Mounting area (e.g. control cabinet)	IP54
Housing	IP20
Terminals	IP20
Potential isolation	
Potential isolation between	Fieldbus and module voltage
Type of potential isolation	Functional insulation
Rated surge voltage	500 V

## Fieldbus modules PNOZ m ES CC-Link

<b>Mechanical data</b>	
Mounting position	<b>Horizontal on top hat rail</b>
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 2,5 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,2 - 1,5 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals	<b>0,5 Nm</b>
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	<b>0,2 - 2,5 mm<sup>2</sup>, 24 - 12 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>2</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>
Dimensions	
Height	<b>101,4 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>110,4 mm</b>
Weight	<b>90 g</b>

Where standards are undated, the 2015-08 latest editions shall apply.

## Order reference

### Product

<b>Product type</b>	<b>Features</b>	<b>Order No.</b>
PNOZ m ES CC-Link	Fieldbus module, CC-Link	772135

## Fieldbus modules

### PNOZ m ES CC-Link

#### Accessories

##### Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793 543

##### Terminator, jumper

Product type	Features	Order No.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779 260

## PNOZmulti Configurator

### PNOZmulti Configurator

---



### Features

- ▶ Graphic configuration of safety circuit
- ▶ Project configuration, configuration generation, documentation, commissioning
- ▶ Data transfer via integrated interface or chip card
- ▶ User interface in German, English, French, Italian, Spanish, Japanese, Chinese (selectable)

### System requirements

Please refer to the readme file for the PNOZmulti Configurator for details of the current system requirements.

### Description

The PNOZmulti Configurator is a graphic tool for the configuration and programming of the configurable control system PNOZmulti.

The elements of the safety circuit are depicted as icons on the Configurator user interface.

The safety circuit can be created quickly and easily using drag & drop.

The PNOZmulti Configurator downloads the complete safety circuit to the PNOZmulti via a chip card or via the integrated interface.

The safety circuit can also be uploaded from the PNOZmulti to the PNOZmulti Configurator for revision.

Safety functions that can be created using the PNOZmulti Configurator include, for example:

- ▶ E-Stop
- ▶ Two-hand button

## PNOZmulti Configurator PNOZmulti Configurator

---

- ▶ Enabling switch
- ▶ Operating mode selector switches
- ▶ Press functions
- ▶ Light beam device
- ▶ Light grid
- ▶ Pressure sensitive mat
- ▶ Speed monitoring
- ▶ Muting

Users can configure fieldbus inputs and outputs in conjunction with the fieldbus modules. These inputs and outputs can only be used for standard functions.

Virtual inputs and outputs can be configured via the integrated interface. They are handled in exactly the same way as fieldbus inputs and outputs.

Inputs and outputs for standard functions are supported.

The PNOZmulti Configurator contains a wide range of test and diagnostic options, such as:

- ▶ Dynamic program display
- ▶ Diagnostic word for evaluating the element status
- ▶ Display PNOZmulti error stack

The project can be protected through passwords.

### Licences and versions

In order to use the full scope of the PNOZmulti Configurator, you will need a valid licence in addition to the software package.

Without a licence, the PNOZmulti Configurator can only be used in a demo version.

A range of licences are available to meet varying requirements:

- ▶ **Basic Licence**  
Single user licence, issued to one owner (company name and location/project must be stated)
- ▶ **User Licence**  
Discounted licence for an additional workstation, issued to the owner of a basic licence.
- ▶ **Lite Licence**  
Licence limited to the base units PNOZ m0p and the base units PNOZmulti Mini, for use on one workstation.
- ▶ **Multi-user Licence**  
Multi-user licence, graduated according to the number of workstations (up to 25, 50, 100 and over 100)
- ▶ **Project Licence**  
Licence to use the software within a contractually limited framework.

## PNOZmulti Configurator

### PNOZmulti Configurator

▶ **Basic/User/Multi User/Project Upgrade Licence**

Discounted licence enabling owners of a licence to change to a newer version of the software

▶ **Time Limited Licence**

Basic licence restricted to 2, 3 or 4 months

These licence types are available as a full version or service version.

**Full version** The full version provides the whole functional range of a licence.

**Service version:** The service version of a licence is intended for service and maintenance. The service version only offers limited editing features.

The following functions are available on the respective versions:

Functions	Demo version	Service version	Full version
Load and save error stack	x	x	x
Function elements	Max. 10	Infinite	Infinite
Save project		x	x
Load project from hardware		x	x
Save project to hardware		x	x
Dynamic program display		x	x
Print function		x	x
Change project	x		x
Password level 1	x		x
Password level 2	x	x	x
Password level 3	x	x	x
Project write protection	x		x
Project read protection	x		x
Import/export	x		x
Create macro	x		x

## PNOZmulti Configurator

### PNOZmulti Configurator

#### Order reference

PNOZmulti Configurator	Features	Order No.
Software + Manual	CD and manual	773 000
Software	CD	773 000D
Basic Licence	Single user licence, issued to one owner (company name and location/project must be stated), full version	773 010B
User Licence	Discounted licence for an additional workstation, issued to the owner of a basic licence, full version	773 010K
Lite Licence	Licence limited to the PNOZ m0p and the base units PNOZmulti Mini, for use on one workstation, full version	773 010L
Multi User Licence	Multi user licence, graduated according to the number of workstations (up to 25, 50, 100 and over 100), full version	773 010M
Project Licence	Licence issued for a specific project. In contrast to the multi user licence, this licence is not limited to one legal entity. Full Version	773 010G
Basic Upgrade Licence	Discounted licence enabling owners of a basic licence to change to a newer version of the software, full version	773 010U
User Upgrade Licence	Discounted licence enabling owners of a user licence to change to a newer version of the software, full version	773 010V
Multi User Upgrade Licence	Discounted licence enabling owners of a multi user licence to change to a newer version of the software, full version	773 010N
Project Upgrade Licence	Discounted licence enabling owners of a project licence to change to a newer version of the software, full version	773 010W
Time Limited Licence, 2Mth	Basic licence restricted to 2 months, full version	773 010S
Time Limited Licence, 3Mth	Basic licence restricted to 3 months, full version	773 010R
Time Limited Licence, 4Mth	Basic licence restricted to 4 months, full version	773 010Q
Basic Licence, Service	Single user licence, issued to one owner (company name and location/project must be stated), service version	773 011B
User Licence, Service	Discounted licence for an additional workstation, issued to the owner of a basic licence, service version	773 011K
Lite Licence, Service	Licence limited to the PNOZ m0p and the base units PNOZmulti Mini, for use on one workstation, service version	773 011L
Multi User Licence, Service	Multi user licence, graduated according to the number of workstations (up to 25, 50, 100 and over 100), service version	773 011M
Project Licence, Service	Licence issued for a specific project. In contrast to the multi user licence, this licence is not limited to one legal entity. Service Version	773 011G
Basic Upgrade Licence, Service	Discounted licence enabling owners of a basic licence to change to a newer version of the software, service version	773 011U



## **PNOZmulti Configurator** PNOZmulti Configurator

---

<b>PNOZmulti Configurator</b>	<b>Features</b>	<b>Order No.</b>
User Upgrade Licence, Service	Discounted licence enabling owners of a user licence to change to a newer version of the software, service version	773 011V
Multi User Upgrade Licence, Service	Changing a multi user licence to a newer version of the software (discounted), service version	773 011N
Project Upgrade Licence, Service	Discounted licence enabling owners of a project licence to change to a newer version of the software, service version	773 011W



---

---

<b>Contents</b>	<b>Page</b>
Software, chip card	910
Cable, adapter	912
Connectors, terminals	916

## Software, chip card

<b>Tool Kit, chip card</b>	<b>Order No.</b>
Tool Kit, in a carry case, consisting of: PNOZmulti Configurator software and manual, German (773 000), chip card and set of 10 labels, chip card reader, programming cable, magnetic safety switch, 5 m connection cable, bracket	779 000
Chip card 8 kByte, 1 pieces	779 201
Chip card, 8 kByte, 10 pieces	779 200
Chip card 32 kByte, 1 pieces	779 211
Chip card 32 kByte, 10 pieces	779 212
Chip card holder	779 240
Chip card reader	779 230
Labels for chip card, seal, 10 pieces	779 250
<b>Software, licences</b>	<b>Order No.</b>
PNOZmulti Configurator, software on CD plus manual	773 000
PNOZmulti Configurator, software on CD	773 000D
PNOZmulti Configurator, Basic Licence	773 010B
PNOZmulti Configurator, User Licence	773 010K
PNOZmulti Configurator, Lite Licence	773 010L
PNOZmulti Configurator, Project Licence	773 010G
PNOZmulti Configurator, Multi User Licence	773 010M
PNOZmulti Configurator, Basic Upgrade Licence	773 010U
PNOZmulti Configurator, User Upgrade Licence	773 010V
PNOZmulti Configurator, Project Upgrade Licence	773 010W
PNOZmulti Configurator, Multi User Upgrade Licence	773 010N
PNOZmulti Configurator, Time Limited Licence, 2 months	773 010S
PNOZmulti Configurator, Time Limited Licence, 3 months	773 010R
PNOZmulti Configurator, Time Limited Licence, 4 months	773 010Q
PNOZmulti Service Tool, Basic Licence	773 011B
PNOZmulti Service Tool, User Licence	773 011K
PNOZmulti Service Tool, Lite Licence	773 011L
PNOZmulti Service Tool, Project Licence	773 011G
PNOZmulti Service Tool, Multi User Licence	773 011M
PNOZmulti Service Tool, Basic Upgrade Licence	773 011U
PNOZmulti Service Tool, User Upgrade Licence	773 011V
PNOZmulti Service Tool, Project Upgrade Licence	773 011W

## Software, chip card

---

Software, licences	Order No.
PNOZmulti Service Tool, Multi User Upgrade Licence	773 011N

## Cable, adapter

Cable, adapter	Order No.
PSS SB BUSCABLE LC cable, shielded, 1 -100 m	311 074
PSSu A USB-CAB03 Mini-USB cable, 3 m	312 992
PSSu A USB-CAB05 Mini-USB cable, 5 m	312 993
SafetyNET p cable, 1 - 500 m	380 000
PSS67 Cable, M8sf M12sm cable, straight M12 connector, straight M8 socket, 4-pin, 3m	380 200
PSS67 Cable, M8sf M12sm cable, straight M12 connector, straight M8 socket, 4-pin, 5 m	380 201
PSS67 Cable, M8sf M12sm cable, straight M12 connector, straight M8 socket, 4-pin, 10 m	380 202
PSS67 Cable, M8sf M12sm cable, straight M12 connector, straight M8 socket, 4-pin, 30 m	380 203
PSS67 Cable, M8af M12sm cable, straight M12 connector, angled M8 socket, 4-pin, 3m	380 204
PSS67 Cable, M8af M12sm cable, straight M12 connector, angled M8 socket, 4-pin, 5 m	380 205
PSS67 Cable, M8af M12sm cable, straight M12 connector, angled M8 socket, 4-pin, 10 m	380 206
PSS67 Cable, M8af M12sm cable, straight M12 connector, angled M8 socket, 4-pin, 30 m	380 207
PSS67 Cable, M12sf M12sm cable, straight M12 connector, straight M12 socket, 5-pin, 3m	380 208
PSS67 Cable, M12sf M12sm cable, straight M12 connector, straight M12 socket, 5-pin, 5 m	380 209
PSS67 Cable, M12sf M12sm cable, straight M12 connector, straight M12 socket, 5-pin, 10 m	380 210
PSS67 Cable, M12sf M12sm cable, straight M12 connector, straight M12 socket, 5-pin, 30 m	380 211
PSS67 Cable, M12af M12am cable, angled M12 connector, angled M12 socket, 5-pin, 3m	380 212
PSS67 Cable, M12af M12am cable, angled M12 connector, angled M12 socket, 5-pin, 5 m	380 213
PSS67 Cable, M12af M12am cable, angled M12 connector, angled M12 socket, 5-pin, 10 m	380 214
PSS67 Cable, M12af M12am cable, angled M12 connector, angled M12 socket, 5-pin, 30 m	380 215
PSS67 Cable M12sf, M12sm, 20m	380 220
PSS67 Supply Cable IN sf OUT sm, B, 3m	380 250
PSS67 Supply Cable IN sf OUT sm, B, 5m	380 251

## Cable, adapter

Cable, adapter	Order No.
PSS67 Supply Cable IN sf OUT sm, B, 10m	380 252
PSS67 Supply Cable IN sf, B, 3m	380 256
PSS67 Supply Cable IN sf, B, 5m	380 257
PSS67 Supply Cable IN sf, B, 10m	380 258
PSEN ma adapter for connection to safety switch PSENmag	380 300
PSEN cs adapter for connection to safety switch PSENcode	380 301
PSS67 M12 connector, plug, M12, straight, 5-pin, A-coded	380 308
PSS67 M12 connector, socket, M12, straight, 5-pin, A-coded	380 309
PSS67 M12 connector, plug, M12, angled, 5-pin, A-coded	380 310
PSS67 M12 connector, socket, M12, angled, 5-pin, A-coded	380 311
PSS67 M8 connector, plug, M8, straight, 4-pin	380 316
PSS67 M8 connector, socket, M8, straight, 4-pin	380 317
PSS67 M8 connector, plug, M8, angled, 4-pin	380 318
PSS67 M8 connector, socket, M8, angled, 4-pin	380 319
PSS67 I/O Cable, 1 - 30 m	380 320
PSEN sl adapter	380 325
SafetyNET p Connector RJ45 – RJ45 plug-in connector	380 400
PDP67 cable M12-5sm, 5m, open-ended	380 705
PDP67 cable M12-5sm, 10m, open-ended	380 706
PDP67 cable M12-5sm, 10m, open-ended	380 707
PDP67 cable M12-5sm, 30m, open-ended	380 708
PDP67 cable M12-5sm, 3m, open-ended	380 709
MM A MINI-IO-CAB01 1.5m	772 200
MM A MINI-IO-CAB01 2.5m	772 201
MM A MINI-IO-CAB01 5m	772 202
PNOZ msi1Bp adapter and cable, 25-pin, 5.0 m for speed monitor PNOZ msxp	773 839
PNOZ msi1Ap adapter and cable, 25-pin, 2.5 m for speed monitor PNOZ msxp	773 840
PNOZ msi1Bp adapter and cable, 25-pin, 2.5 m for speed monitor PNOZ msxp	773 841
PNOZ msi3Ap adapter and cable, 15-pin, 2.5 m for speed monitor PNOZ msxp	773 842
PNOZ msi3Bp adapter and cable, 15-pin, 2.5 m for speed monitor PNOZ msxp	773 843
PNOZ msi1Ap adapter and cable, 25-pin, 5.0 m for speed monitor PNOZ msxp	773 844
PNOZ msi b4 Box	773 845
PNOZ msi19p connection cable, 1.5 m for PNOZ ms2p/PNOZ ms3p/PNOZ ms4p	773 846
PNOZ msi19p connection cable, 2.5 m for PNOZ ms2p/PNOZ ms3p/PNOZ ms4p	773 847

## Cable, adapter

Cable, adapter	Order No.
PNOZ msi10p adapter cable 2.5 m for speed monitor PNOZ msxp	773 854
PNOZ msi11p adapter cable 1.5 m for speed monitor PNOZ msxp	773 855
PNOZ msi9p adapter cable 5.0 m for speed monitor PNOZ msxp	773 856
PNOZ msi5p adapter and cable, Bos/Rex, 15-pin, 2.5 m for speed monitor PNOZ msxp	773 857
PNOZ msi5p adapter and cable, Bos/Rex, 15-pin, 1.5 m for speed monitor PNOZ msxp	773 858
PNOZ msi6p adapter and cable, Elau, 9-pin, 7.5 m for PNOZ ms2p/PNOZ ms3p/PNOZ ms4p	773 859
PNOZ msi6p adapter and cable, Elau, 9-pin, 2.5 m for PNOZ ms2p/PNOZ ms3p/PNOZ ms4p	773 860
PNOZ msi6p adapter and cable, Elau, 9-pin, 1.5 m for PNOZ ms2p/PNOZ ms3p/PNOZ ms4p	773 861
PNOZ msi8p adapter and cable, Lenze, 9-pin, 2.5 m for speed monitor PNOZ msxp	773 862
PNOZ msi8p adapter and cable, Lenze, 9-pin, 1.5 m for speed monitor PNOZ msxp	773 863
PNOZ msi7p adapter and cable, SEW, 15-pin, 2.5 m for speed monitor PNOZ msxp	773 864
PNOZ msi7p adapter and cable, SEW, 15-pin, 1.5 m for speed monitor PNOZ msxp	773 865
PNOZ msi16p adapter, Baumuell, 15/15 2.5m	773 867
PNOZ msi12p Rockwell 15/15 2.5m	773 868
PNOZ msi13p Fanuc 20/20 2.5m	773 869
PNOZ msi S09 9-pin adapter for speed monitor PNOZ msxp, connector set	773 870
PNOZ msi S15 15-pin adapter for speed monitor PNOZ msxp, connector set	773 871
PNOZ msi S25 25-pin adapter for speed monitor PNOZ msxp, connector set	773 872
PNOZ msi15p adapter, Tendo, 15/15 2.5m	773 874
PNOZ msi17p Bos/Rex 15/15 5.0m	773 875
PNOZ msi14p Leroy 15/15 2.5m	773 878
PNOZ MSI20P PARKER HD 15/15 2.5M	773 879
PNOZ msi b1 Box 15p	773 880
PNOZ msi b0 cable 15/RJ45	773 881
PNOZ msi b1 Box 9p	773 882
PNOZ msi b1 Box 25p	773 883
PNOZ msi b0 cable 25/RJ45	773 884
PNOZ mli1p 5m screw, 5-pin cable, shielded, screw terminal, 5 m	773 890
PNOZ mli1p 10m screw, 5-pin cable, shielded, screw terminal, 10 m	773 891
PNOZ mli1p 50m screw, 5-pin cable, shielded, screw terminal, 50 m	773 892
PNOZ mli1p 5m spring, 5-pin cable, shielded, spring-loaded terminal, 5 m	773 893



## Cable, adapter

---

Cable, adapter	Order No.
PNOZ mli1p 10m spring, 5-pin cable, shielded, spring-loaded terminal, 10 m	773 894
PNOZ mli1p 50m spring, 5-pin cable, shielded, spring-loaded terminal, 50 m	773 895
PNOZ mli1p 50m spring, 5-pin cable, shielded, spring-loaded terminal, 1.5 m	773 896
PNOZ mli1p 50m screw, 5-pin cable, shielded, screw terminal, 5 m	773 897
KOP-XE - Jumper	774 639
PNOZmulti bus terminator	779 110
PNOZmulti bus terminator coated	779112

## Connectors, terminals

---

For details of the respective connection terminals, terminators and jumpers, please refer to the data sheets for the relevant products.

# Support

Technical support is available from Pilz round the clock.

## Americas

**Brazil**  
+55 11 97569-2804

**Canada**  
+1 888-315-PILZ (315-7459)

**Mexico**  
+52 55 5572 1300

**USA (toll-free)**  
+1 877-PILZUSA (745-9872)

## Asia

**China**  
+86 21 60880878-216

**Japan**  
+81 45 471-2281

**South Korea**  
+82 31 450 0680

## Australia

+61 3 95446300

## Europe

**Austria**  
+43 1 7986263-0

**Belgium, Luxembourg**  
+32 9 3217575

**France**  
+33 3 88104000

**Germany**  
+49 711 3409-444

**Ireland**  
+353 21 4804983

**Italy**  
+39 0362 1826711

## Scandinavia

+45 74436332

## Spain

+34 938497433

## Switzerland

+41 62 88979-30

## The Netherlands

+31 347 320477

## Turkey

+90 216 5775552

## United Kingdom

+44 1536 462203

## You can reach our international hotline on:


+49 711 3409-444  
support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.

*Energy saving by Pilz*



### The 4-fold safety of automation

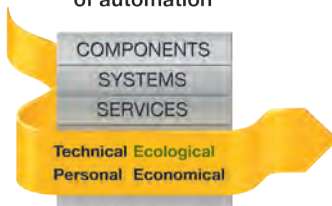

Presented by:



Pilz GmbH & Co. KG  
Felix-Wankel-Straße 2  
73760 Ostfildern, Germany  
Tel.: +49 711 3409-0  
Fax: +49 711 3409-133  
info@pilz.com  
www.pilz.com

**PILZ**  
THE SPIRIT OF SAFETY